



OWNER'S MANUAL

**⚠ Read this manual carefully
before operating this vehicle.**

WR125R

MOTORCYCLE

WR125RT

LIT-11626-39-57

BWN-F8199-10

Location of important labels	1
Safety information	2
Description	3
Smartphone Connectivity System	4
Instrument and control functions	5
For your safety – pre-operation checks	6
Operation and important riding points	7
Periodic maintenance and adjustment	8
Motorcycle care and storage	9
Specifications	10
Consumer information	11
Index	12



WARNING: Operating, servicing and maintaining a passenger vehicle or off-road vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle



Read this manual carefully before operating the vehicle. This manual should stay with the vehicle if it is sold.

Congratulations on your purchase of the Yamaha WR125RT. This model is the result of Yamaha's vast experience in the production of fine sporting, touring, and pacesetting racing machines. It represents the high degree of craftsmanship and reliability that have made Yamaha a leader in these fields.

This manual will give you an understanding of the operation, inspection, and basic maintenance of this motorcycle. If you have any questions concerning the operation or maintenance of your motorcycle, please consult a Yamaha dealer.

The design and manufacture of this Yamaha motorcycle fully comply with the emissions standards for clean air applicable at the date of manufacture. Yamaha has met these standards without reducing the performance or economy of operation of the motorcycle. To maintain these high standards, it is important that you and your Yamaha dealer pay close attention to the recommended maintenance schedules and operating instructions contained within this manual.

Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.

WARNING

Please read this manual and the “YOU AND YOUR MOTORCYCLE: RIDING TIPS” booklet carefully before operating this motorcycle. Do not attempt to operate this motorcycle until you have attained adequate knowledge of its controls and operating features. Regular inspections and careful maintenance, along with good operating techniques, will help ensure that you safely enjoy the capabilities and reliability of this motorcycle.

Important manual information

EAU10134

Particularly important information is distinguished in this manual by the following notations:

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
 WARNING	A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.
TIP	A TIP provides key information to make procedures easier or clearer.

*Product and specifications are subject to change without notice.

EAUN0770

**WR125RT
OWNER'S MANUAL
©2026 by Yamaha Motor Corporation,
U.S.A.
1st edition, July 2025
All rights reserved.
Any reprinting or unauthorized use
without the written permission of
Yamaha Motor Corporation, U.S.A.
is expressly prohibited.
Printed in Indonesia.
P/N LIT-11626-39-57**

Table of contents

Location of important labels	1-1	Tool box	5-16	Cleaning the spark arrester	8-18
Safety information	2-1	Adjusting the shock absorber assembly.....	5-17	Checking the engine idling speed	8-19
Description	3-1	Sidestand	5-18	Adjusting the throttle grip free play.....	8-19
Left view	3-1	Ignition circuit cut-off system	5-18	Valve clearance.....	8-20
Right view	3-2	For your safety – pre-operation checks	6-1	Tires	8-20
Controls and instruments	3-3	Operation and important riding points	7-1	Spoke wheels	8-22
Smartphone Connectivity System	4-1	Engine break-in	7-1	Adjusting the clutch lever free play.....	8-22
CCU (Communication Control Unit).....	4-1	Starting the engine.....	7-2	Checking the brake lever free play.....	8-23
Compliance with FCC rules and regulation	4-3	Shifting	7-3	Brake light switches	8-24
Instrument and control functions ...	5-1	Parking	7-4	Checking the front and rear brake pads	8-24
Main switch/steering lock.....	5-1	Periodic maintenance and adjustment	8-1	Checking the brake fluid level	8-25
Indicator lights and warning light ...	5-2	Tool kit	8-2	Changing the brake fluid	8-26
Multi-function meter unit	5-3	Periodic maintenance chart for the emission control system.....	8-3	Drive chain slack.....	8-27
Handlebar switches	5-9	General maintenance and lubrication chart.....	8-5	Cleaning and lubricating the drive chain	8-28
Clutch lever	5-10	Removing and installing panels	8-9	Checking and lubricating the cables.....	8-29
Shift pedal	5-10	Checking the spark plug	8-10	Checking and lubricating the throttle grip and cable	8-29
Brake lever.....	5-11	Canister.....	8-12	Checking and lubricating the brake and shift pedals.....	8-30
Brake pedal	5-11	Engine oil and oil filter element	8-12	Checking and lubricating the brake and clutch levers	8-30
ABS	5-11	Why Yamalube	8-15	Checking and lubricating the sidestand.....	8-31
Fuel tank cap	5-12	Coolant.....	8-15	Lubricating the rear suspension ...	8-31
Fuel.....	5-13	Replacing the air filter element and cleaning the check hose.....	8-17		
Fuel tank overflow hose	5-14				
Catalytic converter	5-15				
Seat	5-15				

Table of contents


Lubricating the swingarm pivots ...8-32	Maintenance record..... 11-8
Checking the front fork.....8-32	YAMAHA MOTOR CORPORATION,
Checking the steering8-33	U.S.A. 2020 AND LATER MODEL
Checking the wheel bearings8-33	STREET & DUAL-PURPOSE
Battery8-33	MOTORCYCLE LIMITED
Replacing the fuses.....8-35	WARRANTY..... 11-10
Vehicle lights8-36	YAMAHA EXTENDED SERVICE
Replacing the auxiliary	(Y.E.S.)..... 11-12
light bulb8-36	
Replacing a turn signal	Index 12-1
light bulb8-37	
License plate light8-37	
Supporting the motorcycle.....8-37	
Front wheel.....8-38	
Rear wheel.....8-38	
Troubleshooting8-40	
Troubleshooting chart8-41	
Motorcycle care and storage9-1	
Matte color caution9-1	
Care.....9-1	
Storage.....9-4	
Specifications10-1	
Consumer information11-1	
Identification numbers.....11-1	
Emission Regulation (California)....11-3	
Use of your vehicle data.....11-4	
Reporting safety defects11-6	
Motorcycle noise regulation11-7	

Location of important labels

EAU10387

1

Read and understand all of the labels on your vehicle. They contain important information for safe and proper operation of your vehicle. Never remove any labels from your vehicle. If a label becomes difficult to read or comes off, a replacement label is available from your Yamaha dealer.

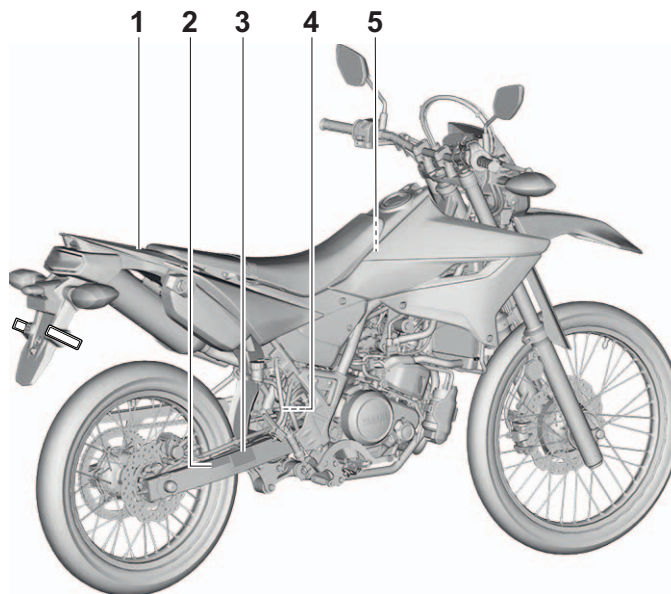

1

WARNING

- BEFORE YOU OPERATE THIS VEHICLE, READ THE OWNER'S MANUAL AND ALL LABELS.
- ALWAYS WEAR AN APPROVED MOTORCYCLE HELMET, eye protection, and protective clothing.

B74-F118K-00

2

WARNING

USE ONLY DOT4 BRAKE FLUID FROM A SEALED CONTAINER. CLEAN FILLER CAP BEFORE REMOVING.

3C5-25839-11

3

TIRE INFORMATION

Cold tire normal pressure should be set as follows.

- Up to 90kg (198lbs) load

FRONT : 150kPa, (1.50 kgf/cm²), 22 psi

REAR : 170kPa, (1.70 kgf/cm²), 25 psi

- 90kg (198lbs)-maximum load

FRONT : 150kPa, (1.50 kgf/cm²), 22 psi

REAR : 170kPa, (1.70 kgf/cm²), 25 psi

BWN-F1668-10

4

WARNING


This unit contains high pressure nitrogen gas. Mishandling can cause explosion.

- Read owner's manual for instructions.
- Do not incinerate, puncture or open.

4AA-22259-80

5

EMISSION HOSE ROUTING

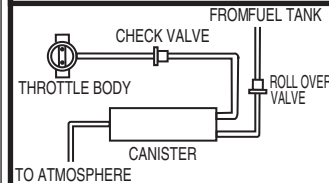

BWN-21686-00

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.

- Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. See page 6-1 for a list of pre-operation checks.

- This motorcycle is designed to carry the operator and a passenger.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous ap-

pears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.

- Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.
 - Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
 - Know your skills and limits. Staying within your limits may help you to avoid an accident.
 - We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
 - Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed).
 - Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
 - Always signal before turning or changing lanes. Make sure that other motorists can see you.
 - The posture of the operator and passenger is important for proper control.
 - The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
 - The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
 - Never ride under the influence of alcohol or other drugs.
 - Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
 - The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
 - Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
 - Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.
 - A passenger should also observe the above precautions.
- Protective Apparel**

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.
 - Always wear an approved helmet.
- Avoid Carbon Monoxide Poisoning**

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Safety information

2

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and **SEEK MEDICAL TREATMENT**.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.
- Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Loading

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use extra care when riding a motorcycle that has added cargo or accessories. Here, along with the information about accessories below, are some general guidelines to follow if loading cargo to your motorcycle:

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit.

Operation of an overloaded vehicle could cause an accident.

Maximum load: 160 kg (353 lb)

When loading within this weight limit, keep the following in mind:

- Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Securely pack your heaviest items as

close to the center of the vehicle as possible and make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.

- Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.
- Properly adjust the suspension for your load (suspension-adjustable models only), and check the condition and pressure of your tires.
- Never attach any large or heavy items to the handlebar, front fork, or front fender. These items, including such cargo as sleeping bags, duffel bags, or tents, can create unstable handling or a slow steering response.
- **This vehicle is not designed to pull a trailer or to be attached to a sidecar.**

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket

products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under "Loading" when mounting accessories.

- Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
- Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or

front fork area, they must be as lightweight as possible and should be kept to a minimum.

- Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when passing or being passed by large vehicles.
- Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability, therefore, such accessories are not recommended.
- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.

Safety information

2

Aftermarket Tires and Rims


The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. Refer to page 8-20 for tire specifications and more information on replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.

- Remove all loose items from the motorcycle.
- Check that the fuel cock (if equipped) is in the “OFF” position and that there are no fuel leaks.
- Point the front wheel straight ahead on the trailer or in the truck bed, and choke it in a rail to prevent movement.
- Shift the transmission in gear (for models with a manual transmission).
- Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or upper front fork triple clamp (and not, for example, to rubber-mounted handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.
- The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

Left view

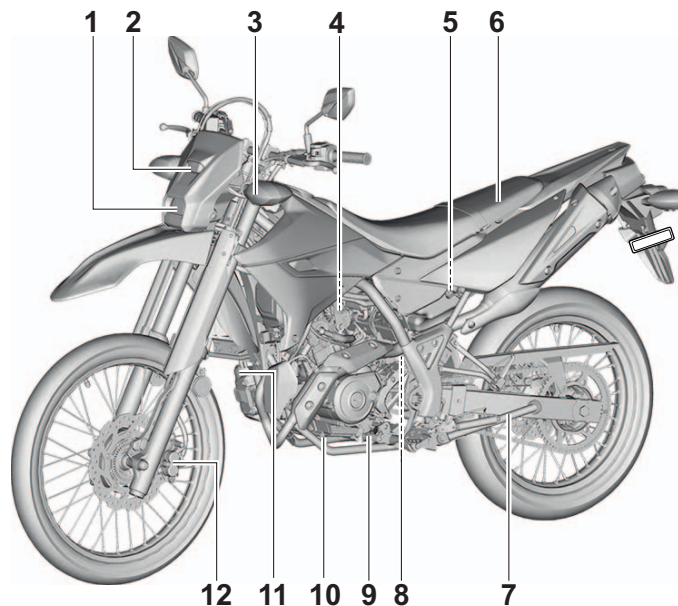

1. Headlight (page 8-36)
2. Auxiliary light (page 8-36/8-36)
3. Front turn signal light (page 8-37)
4. Idle adjusting screw
5. Air filter (page 8-17)
6. Seat (page 5-15)
7. Sidestand (page 5-18)

9. Shift pedal (page 5-10)
10. Engine oil drain bolt (page 8-12)
11. Canister (page 8-12)
12. Front brake pads (page 8-24)


8. Shock absorber assembly spring preload adjusting ring (page 5-17)

Description

EAU10421

Right view

3

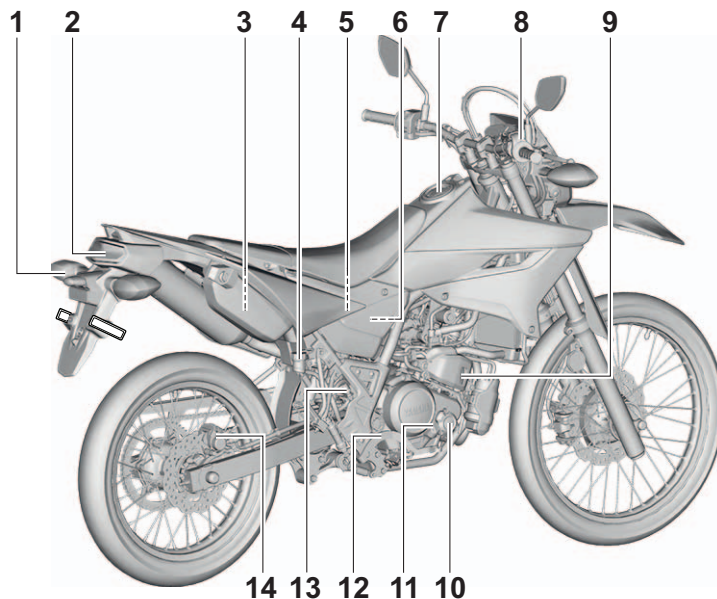

1. Rear turn signal light (page 8-37)

2. Tail/brake light

3. Tool kit (page 8-2)

4. Rear brake fluid reservoir (page 8-25)

5. Fuse box (page 8-35)

6. Battery (page 8-33)

7. Fuel tank cap (page 5-12)

8. Front brake fluid reservoir (page 8-25)

9. Coolant level check window (page 8-15)

10. Engine oil filter element (page 8-12)


11. Dipstick (page 8-12)

12. Brake pedal (page 5-11)

13. Brake light switch (page 8-24)

14. Rear brake pads (page 8-24)

Controls and instruments

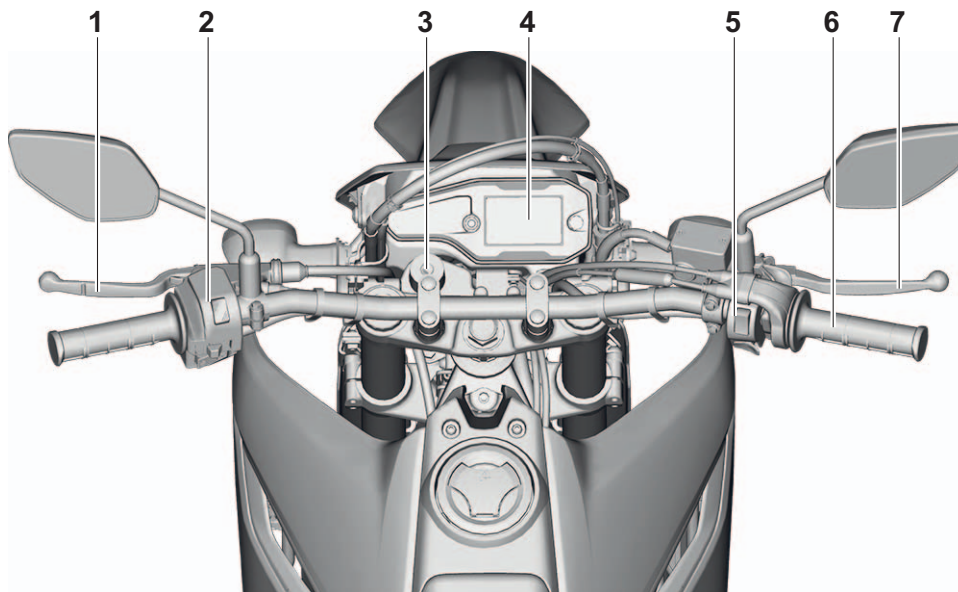

1. Clutch lever (page 5-10)
2. Left handlebar switches (page 5-9)
3. Main switch/steering lock (page 5-1)
4. Multi-function display (page 5-3)
5. Right handlebar switches (page 5-9)
6. Throttle grip (page 8-19)
7. Brake lever (page 5-11)

Smartphone Connectivity System

4

CCU (Communication Control Unit)

EAUA8360

This vehicle is equipped with a CCU (Communication Control Unit) that enables wireless Bluetooth connection between the vehicle and your smartphone via the Yamaha Motorcycle Connect app. Through this connection, you will receive notifications for SNS (social network service) app alerts, incoming calls, and missed calls, as well as the battery status of your smartphone. Additionally, the Yamaha Motorcycle Connect app offers other features, such as displaying your last parked location.

EWA21413

WARNING

- **Failure to pay attention while riding could result in death or serious injury. Always concentrate on riding by keeping your eyes and mind on the road.**
- **Stop the vehicle before making any settings changes or operating your smartphone.**

- **Changing settings while riding can distract the operator and increase the risk of an accident.**
- **Never take your hands off the handlebars while riding.**

TIP

- The CCU takes some time to initiate and stabilize the Bluetooth connection after the vehicle power is turned on or the vehicle battery is reconnected.
- Some connectivity functions need to be activated on the connected smartphone before they become functional in the menu system.
- Some connectivity functions may not be available depending on your smartphone and/or OS (operating system) version.
- The following may interfere with connectivity functions:
 - Smartphone network connection is too busy.
 - Bluetooth connection is unstable.
 - Too many other devices connected to the smartphone at once.

- The Bluetooth connection may not work in the following situations:
 - In locations exposed to strong radio waves or other electromagnetic noise.
 - Near facilities emitting strong radio waves, such as TV and radio towers, power plants, broadcasting stations, airports, etc.
- Only one smartphone can be connected to the CCU at one time.
- If more than one phone has been registered in the CCU, then the first phone within reach will be connected.

Initial setup: Yamaha Motorcycle Connect app



Yamaha Motorcycle Connect is a free app which is needed to complete the connection between the CCU and your smartphone.

After pairing the CCU and the Yamaha Motorcycle Connect app, the smartphone is registered in the CCU. When the app is connected to the CCU, the smartphone battery level indicator “

Scan the QR code below and download the Yamaha Motorcycle Connect app, or search for it by name in an app store.



The CCU can be paired to your smartphone by:

- Entering the VIN (vehicle identification number) in the Yamaha Motorcycle Connect app. (See page 11-1.)
- Use the Yamaha Motorcycle Connect app to scan the QR code on the CCU.
- Some connectivity and/or display functions may change with later updates to the Yamaha Motorcycle Connect app and therefore differ from the contents of this manual.

TIP

- Once paired, the smartphone is registered in the CCU. The next time the vehicle is turned on and the Yamaha Motorcycle Connect app is active, the connection will be automatically established.
- Use of Yamaha Motorcycle Connect is subject to your agreement to the Yamaha Motorcycle Connect terms of use.
- The Yamaha Motorcycle Connect app may not function on all smartphones or OS (operating system) versions.
- Every smartphone operates differently; refer to your individual device instructions regarding connectivity, Bluetooth discovery, app permissions, and other settings.

Smartphone Connectivity System


EAUA8440

EAUA6010

Scanning the CCU QR code

To pair your smartphone with the vehicle by scanning the CCU QR code complete the following procedure:

1. Open the tool box. (See page 5-16.)
2. Find the CCU and scan its QR code with the app.

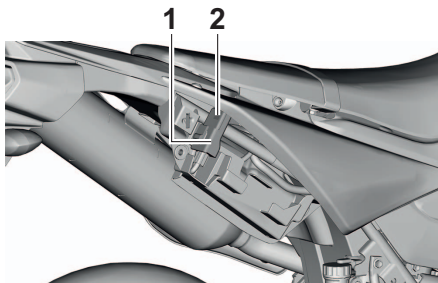

1. CCU (Communication Control Unit)
2. CCU QR Code

Compliance with FCC rules and regulation

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be de-

termined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate the equipment.
- This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
- For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Main switch/steering lock

EAU10462

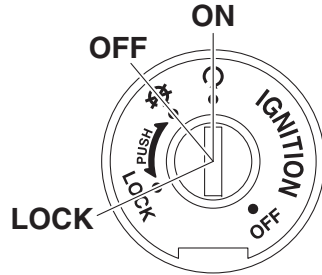

The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various positions are described below.

○ (ON)

EAUN3430

All electrical circuits are supplied with power and the vehicle lights are turned on. The engine can be started. The key cannot be removed.

TIP

- The headlight(s) will turn on when the engine is started.
- To prevent battery drain, do not leave the key in the "ON" position without the engine running.

⊠ (OFF)

EAU54302

All electrical systems are off. The key can be removed.

EWA16371

⚠ WARNING


Never turn the key to "⊠" or "LOCK" while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.

LOCK

EAU73830

The steering is locked and all electrical systems are off. The key can be removed.

To lock the steering

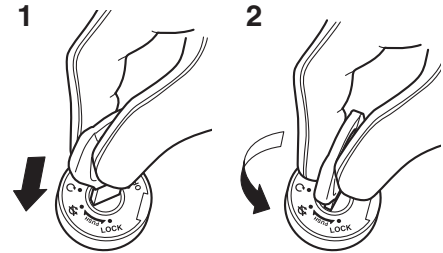

1. Push.
2. Turn.


1. Turn the handlebars all the way to the left.
2. With the key in the "⊠" position, push the key in and turn it to "LOCK".
3. Remove the key.

TIP

If the steering will not lock, try turning the handlebars back to the right slightly.

Instrument and control functions

To unlock the steering

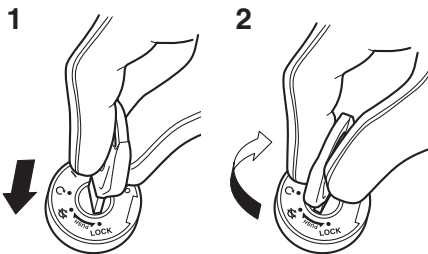


1. Push.
2. Turn.

Push the key in and turn it to “”.

Indicator lights and warning light

EAU1100F

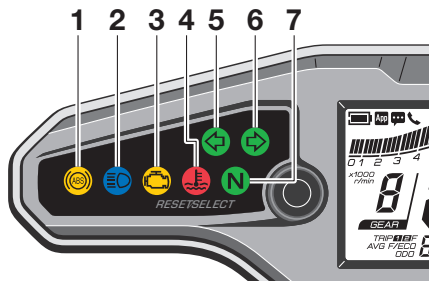

1. ABS warning light “”
2. High beam indicator light “”
3. Engine trouble warning light “”
4. Coolant temperature warning light “”
5. Left turn signal indicator light “”
6. Right turn signal indicator light “”
7. Neutral indicator light “”

Turn signal indicator lights “” and “”

EAU88280

Each indicator light will flash when its corresponding turn signal lights are flashing.

Neutral indicator light “”

EAU88300

This indicator light comes on when the transmission is in the neutral position.

High beam indicator light “”

EAU88310

This indicator light comes on when the high beam of the headlight is switched on.

Coolant temperature warning light “”

EAU4410

This warning light comes on when the engine is overheating. If this occurs, stop the engine immediately and allow the engine to cool. (See page 8-42.)

For vehicles with a radiator fan, the radiator fan(s) automatically switch on or off according to the coolant temperature.

TIP

When the vehicle is turned on, the light will come on for a few seconds, and then go off. If the light does not come on, or if the light remains on, have a Yamaha dealer check the vehicle.

NOTICE

ECA10022

Do not continue to operate the engine if it is overheating.

Engine trouble warning light “”

EAUN4840

This warning light comes on or flashes if a problem is detected in the engine. If this occurs, have a Yamaha dealer check the self-diagnosis system.

TIP

- When the vehicle is turned on, this light should come on for a few seconds and then go off. Otherwise, have a Yamaha dealer check the electrical circuit.
- The engine trouble warning light will come on while the start switch is pushed, but this does not indicate a malfunction.

ABS warning light “”

EAU93230

This warning light comes on when the vehicle is first turned on, and goes off after starting riding. If the warning light comes on while riding, the anti-lock brake system may not work correctly.

! WARNING


EWA21120

If the ABS warning light does not turn off after reaching 5 km/h (3 mi/h), or if the warning light comes on while riding:

- Use extra caution to avoid possible wheel lock during emergency braking.
- Have a Yamaha dealer check the vehicle as soon as possible.

Multi-function meter unit

EAU86814

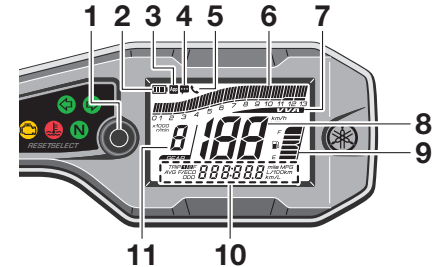

1. “RESET/SELECT” button
2. Smartphone battery level meter
3. Yamaha Motorcycle Connect icon
4. Incoming notification icon “”
5. Incoming call icon “”
6. Tachometer
7. VVA (variable valve actuation) indicator
8. Speedometer
9. Fuel meter
10. Multi-function display
11. Transmission gear display

! WARNING

EAU12423

Be sure to stop the vehicle before making any setting changes to the multi-function meter unit. Changing

Instrument and control functions

settings while riding can distract the operator and increase the risk of an accident.

Incoming call icon “☎”

EAUA3220

This icon flashes when there is an incoming call to the connected smartphone, and stays on for the duration of the call. If you do not answer the call, the icon stays on until you turn the vehicle off.

TIP

This function works only when the smartphone is connected to the vehicle.

Incoming notification icon “📧”

EAUV1002

This icon flashes for 10 seconds when the connected smartphone receives an SNS, E-mail or other notification. After that, the icon stays on until you turn the vehicle off.

TIP

- This function works only when the smartphone is connected to the vehicle.

- Notifications must be setup for each application on the connected smartphone in advance.

Yamaha Motorcycle Connect icon

EAUN2863

This icon comes on when CCU and smartphone are connected via the Yamaha Motorcycle Connect app.

TIP

Even if the smartphone is not connected, when the vehicle is turned on, this icon should come on for a few seconds. Otherwise have a Yamaha dealer check the CCU and the electrical circuit.

Smartphone battery level meter

EAUA3240

This meter indicates the current battery level of the connected smartphone. The display segments of the meter disappear from full to blank as the battery level decreases. When approximately 10% or less of the battery remains, the last segment and frame starts flashing.

TIP

Even if the smartphone is not connected, when the vehicle is turned on, this icon should come on for a few seconds. Otherwise have a Yamaha dealer check the CCU and the electrical circuit.

Switching the display units


EAUN5130

The display units can be switched between kilometers and miles. To switch the display units, set the multi-function display to the odometer and then push the “RESET/SELECT” button until the display units change.

Instrument and control functions

Speedometer

EAU86831

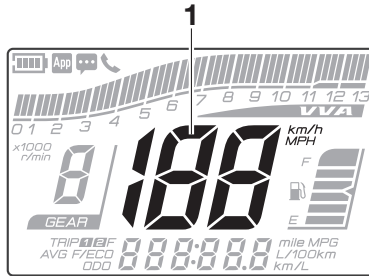


1. Speedometer

The speedometer shows the vehicle's traveling speed.

Tachometer

EAU87180

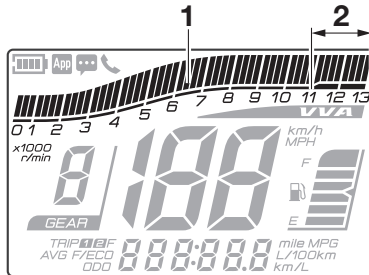

1. Tachometer
2. High-r/min zone

The tachometer allows the rider to monitor the engine speed and keep it within the ideal power range.


ECA23050

NOTICE

Do not operate the engine in the tachometer high-r/min zone.
High-r/min zone: 11000 r/min and above

EAU86842

Fuel meter

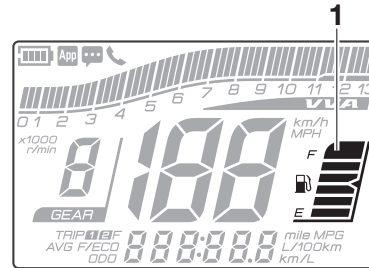

1. Fuel meter

The fuel meter indicates the amount of fuel in the fuel tank. The display segments of the fuel meter disappear from “F” (full) towards “E” (empty) as the fuel level decreases. When approximately

1.6 L (0.42 US gal, 0.35 Imp.gal) of fuel remains, the last segment starts flashing. Refuel as soon as possible.

TIP

If a problem is detected in the electrical circuit, the fuel level segments will flash repeatedly. If this occurs, have a Yamaha dealer check the vehicle.


ECAE01251

NOTICE

Do not let the vehicle run completely out of fuel. This may cause damage to the catalytic converter.

EAU87370

VVA indicator

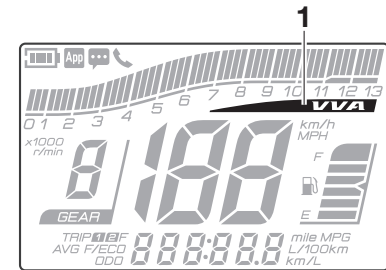


1. VVA (variable valve actuation) indicator

Instrument and control functions

This model is equipped with variable valve actuation (VVA) for good fuel economy and acceleration in both the low-speed and high-speed ranges. The VVA indicator comes on when the variable valve actuation system has switched to the high-speed range.

EAUA3260

Transmission gear display

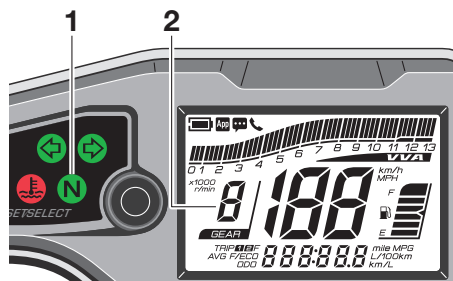


1. Neutral indicator light
2. Transmission gear display

This display shows the selected gear. The neutral position is indicated by “N” and by the neutral indicator light “N”.

Multi-function display

EAUN5140

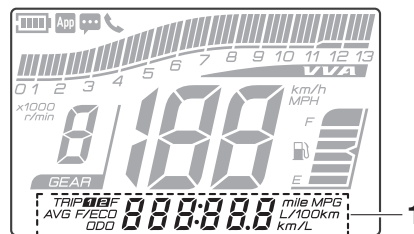

1. Multi-function display

The multi-function display is equipped with the following:

- an odometer (ODO)
- two tripmeters (TRIP 1 and TRIP 2)
- a fuel reserve tripmeter (TRIP F)
- a clock
- an instantaneous fuel consumption display (km/L, L/100 km, or MPG)
- an average fuel consumption display (AVG_ _ km/L, AVG_ _ L/100 km, or AVG_ _ MPG)

Push the “RESET/SELECT” button to change the display in the following order:


ODO → TRIP 1 → TRIP 2 → TRIP F → clock → km/L, L/100 km, or MPG → AVG_ _ km/L, AVG_ _ L/100 km, or AVG_ _ MPG → ODO

TIP

The fuel reserve tripmeter appears only when you are low on fuel.

EAU86891

Odometer

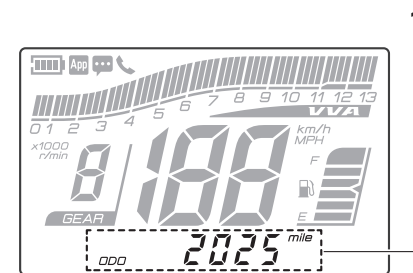

1. Odometer


The odometer shows the total distance traveled by the vehicle.

TIP

The odometer will lock at “999999” and cannot be reset.

Tripmeters

EAU88060

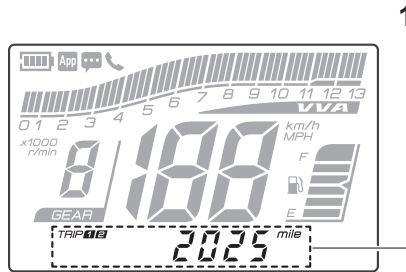

1. Tripmeter


The tripmeters show the distance traveled since they were last reset. To reset a tripmeter, change the display to the tripmeter you want to reset, and then push the “RESET/SELECT” button until it is reset.

TIP

The tripmeters will reset and continue counting after 9999.9 is reached.

Fuel reserve tripmeter

EAU87610

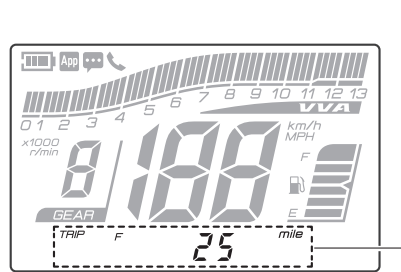

1. Fuel reserve tripmeter


If the last segment of the fuel meter starts flashing, the display automatically changes to the fuel reserve tripmeter “TRIP F” and starts counting the distance traveled from that point. To reset the fuel reserve tripmeter, push the “RESET/SELECT” button until it is reset.

TIP

If you do not reset the fuel reserve tripmeter manually, it will reset automatically and disappear from the display after refueling and traveling 5 km (3 mi).

Clock

EAU8490

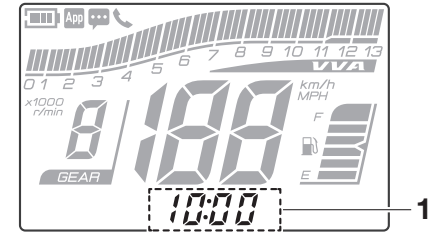

1. Clock

The clock uses a 12-hour time system.

To set the clock


1. Use the “RESET/SELECT” button to change the display to the clock.
2. Hold the “RESET/SELECT” button until the hour digits start flashing.
3. Use the “RESET/SELECT” button to set the hours.
4. Hold the “RESET/SELECT” button until the minute digits start flashing.
5. Use the “RESET/SELECT” button to set the minutes.
6. Hold the “RESET/SELECT” button to confirm the settings.

Instrument and control functions

TIP When the CCU and a smartphone are connected, the clock is automatically updated.

Instantaneous fuel consumption display

EAUN5150

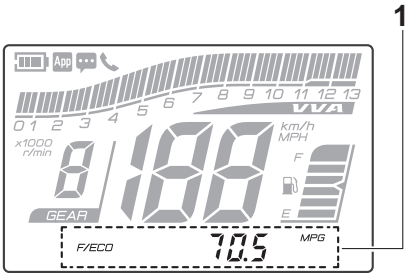

1. Instantaneous fuel consumption display

This display shows the fuel consumption under the current riding conditions. It can be set to either “km/L”, “L/100 km”, or “MPG” when using miles. To switch the fuel consumption measurement units, push the “RE-SET/SELECT” button until the measurement units change.


- “km/L”: the distance that can be traveled on 1.0 L of fuel.

- “L/100 km”: the amount of fuel necessary to travel 100 km.
- “MPG”: the distance that can be traveled on 1.0 Imp. gal of fuel.

TIP When traveling under 10 km/h (6 mi/h), “ _ _ . _ ” is displayed.

Average fuel consumption display

EAUN5160

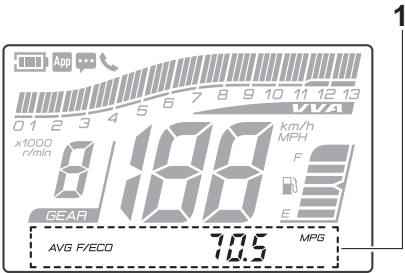

1. Average fuel consumption display

This display shows the average fuel consumption since it was last reset. To reset the display, push the “RE-SET/SELECT” button until it resets.

TIP After resetting, “ _ _ . _ ” is shown until the vehicle has traveled some distance.

- To switch the fuel consumption measurement units between “km/L”, “L/100 km”, or “MPG”, change at the instantaneous fuel consumption display. (See page 5-8.)

Welcome screen

EAUN2890




The welcome screen greets the rider with the message “Hi bro” when they turn the vehicle on. The user name “bro” is set as the factory default, but it can be set to your name.

To set the user name

1. Turn the vehicle off.
2. Push and hold the “RESET/SELECT” button.
3. Turn the vehicle on, and then release the “RESET/SELECT” button after 4 seconds.
4. When the first character starts flashing, push the “RESET/SELECT” button to change the character to the next alphanumeric character.
5. Push the “RESET/SELECT” button until the character stops flashing. The selected character is confirmed and the second character starts flashing. Repeat this process for all 6 characters. After the sixth character is set, all characters will flash twice and the display will automatically exit the setting mode.


Handlebar switches

Left

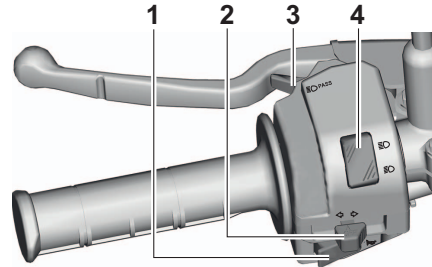

1. Horn switch “”
2. Turn signal switch “/”
3. Pass switch “PASS”
4. Dimmer switch “/”

Right

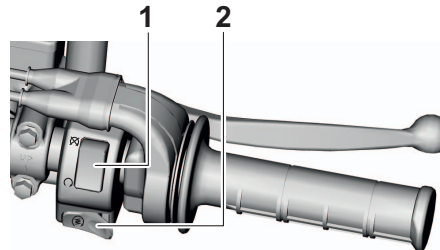

1. Engine stop switch “/”
2. Start switch “”

EAU1234U

Pass switch “PASS”

Press this switch to flash the headlight.

TIP


When the dimmer switch is set to “”, the passing switch has no effect.

EAU12362

Dimmer switch “/”

Set this switch to “” for the high beam and to “” for the low beam.

EAU12402

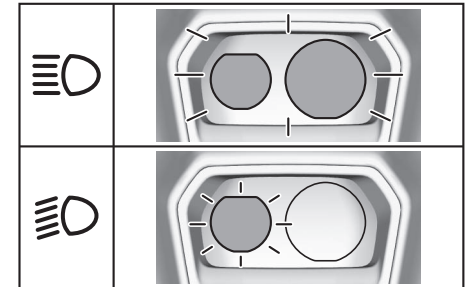

Turn signal switch “/”

To signal a right-hand turn, push this switch to “”. To signal a left-hand turn, push this switch to “”. When released, the switch returns to the cen-

EAU12461

Instrument and control functions

ter position. To cancel the turn signal lights, push the switch in after it has returned to the center position.

Horn switch “”

Press this switch to sound the horn.

EAU12501

Engine stop switch “/”

Set this switch to “” (run) before starting the engine. Set this switch to “” (stop) to stop the engine in case of an emergency, such as in the event of an overturn or if the throttle is stuck.

EAU12664


Start switch “”

Push this switch to crank the engine with the starter. See page 7-2 for starting instructions prior to starting the engine.

EAU12713

Clutch lever

EAU12823

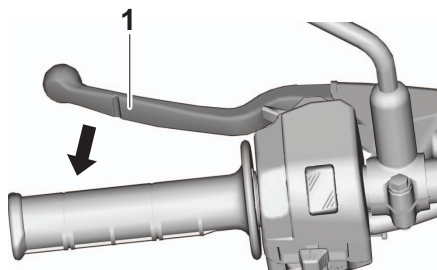

1. Clutch lever


To disengage the drivetrain from the engine, such as when shifting gears, pull the clutch lever toward the handlebar. Release the lever to engage the clutch and transmit power to the rear wheel.

TIP

The lever should be pulled rapidly and released slowly for smooth shifting. (See page 7-3.)

Shift pedal

EAU12876

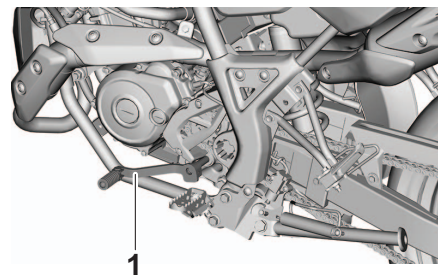


1. Shift pedal

The shift pedal is located on the left side of the motorcycle. To shift the transmission to a higher gear, move the shift pedal up. To shift the transmission to a lower gear, move the shift pedal down. (See page 7-3.)

Brake lever

EAU12892

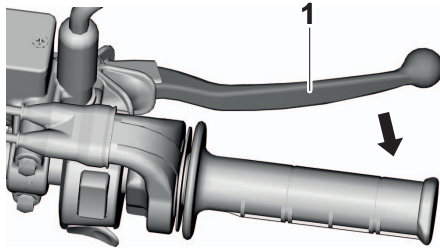


1. Brake lever

The brake lever is located on the right side of the handlebar. To apply the front brake, pull the lever toward the throttle grip.

Brake pedal

EAU12944

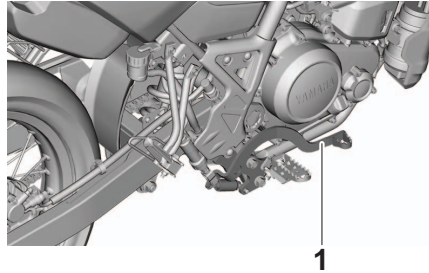

1. Brake pedal

The brake pedal is located on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

ABS

EAUN5170

This model's ABS (anti-lock brake system) acts on the front brake system. Operate the brakes as you normally would with a conventional brake system. If the ABS is activated, a pulsating sensation may be felt at the front brake lever. In this situation, continue to apply the brakes and let the ABS work; do not release and re-apply the brakes (i.e., pump the brakes) as this will reduce braking effectiveness.

5

EWA16051

WARNING

Always keep a sufficient distance from the vehicle ahead to match the riding speed even with ABS.

- **The ABS performs best with long braking distances.**
- **On certain surfaces, such as rough or gravel roads, the braking distance may be longer with the ABS than without.**

The ABS is monitored by an ECU, which will revert the system to conventional braking if a malfunction occurs.

Instrument and control functions

TIP


The ABS performs a self-diagnosis test each time the vehicle first starts off after the main switch is turned on and the vehicle has traveled at a speed of 5 km/h (3 mi/h) or higher. During this test, a clicking noise may be audible, and a vibration may be felt at the brake lever, but these do not indicate a malfunction.

5

NOTICE

Be careful not to damage the wheel sensor or wheel sensor rotor; otherwise, improper performance of the ABS will result.


ECA20100

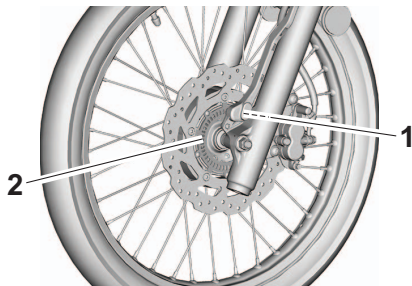

1. Front wheel sensor
2. Front wheel sensor rotor

Fuel tank cap

EAUM2083

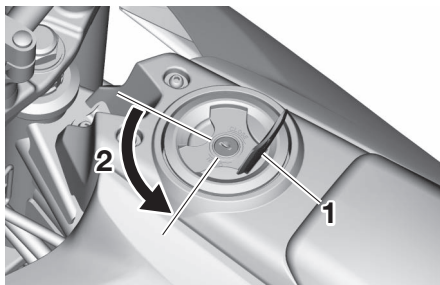

1. Fuel tank cap lock cover
2. Unlock.

To remove the fuel tank cap

1. Open the fuel tank cap lock cover.
2. Insert the key and turn it 1/4 turn counterclockwise. The lock will be released and the fuel tank cap can be removed.

To install the fuel tank cap

1. Push the fuel tank cap into position with the key inserted.
2. Turn the key clockwise to the original position, and then remove it.
3. Close the lock cover.

TIP

The fuel tank cap cannot be installed unless the key is in the lock. In addition, the key cannot be removed if the cap is not properly installed and locked.

EWA11142

WARNING

Make sure that the fuel tank cap is properly installed before riding. Leaking fuel is a fire hazard.

Fuel

Make sure there is sufficient gasoline in the tank.


EAU13213

EWA10882

WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.
2. Do not overfill the fuel tank. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.

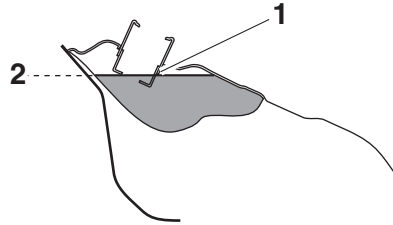

1. Fuel tank filler tube
2. Maximum fuel level
3. Wipe up any spilled fuel immediately. **NOTICE:** Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts. [ECA10072]
4. Be sure to securely close the fuel tank cap.

EWA15152

WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immedi-

ately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.

EAU13315

Recommended fuel:

Unleaded gasoline (E10 acceptable)

Fuel tank capacity:

8.1 L (2.1 US gal, 1.8 Imp.gal)

Fuel reserve amount:

1.6 L (0.42 US gal, 0.35 Imp.gal)

ECA11401

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.

Your Yamaha engine has been designed to use regular unleaded gasoline with a pump octane number $[(R+M)/2]$ of 86 or higher, or a research octane number of 91 or higher. If knocking (or pinging) occurs, use a gasoline of a different brand or premi-

Instrument and control functions


um unleaded fuel. Use of unleaded fuel will extend spark plug life and reduce maintenance costs.

Gasohol

There are two types of gasohol: gasohol containing ethanol and that containing methanol. Gasohol containing ethanol can be used if the ethanol content does not exceed 10% (E10). Gasohol containing methanol is not recommended by Yamaha because it can cause damage to the fuel system or vehicle performance problems.

Fuel tank overflow hose

EAU86161

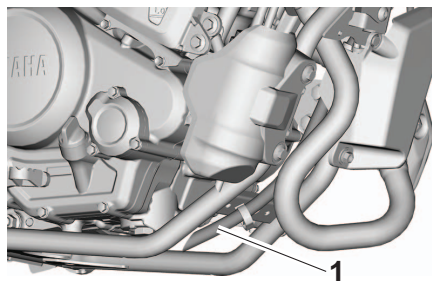

1. Fuel tank overflow hose

The overflow hose drains excess gasoline and directs it safely away from the vehicle.

Before operating the vehicle:

- Check the fuel tank overflow hose connection.
- Check the fuel tank overflow hose for cracks or damage, and replace it if necessary.
- Make sure that the fuel tank overflow hose is not blocked, and clean it if necessary.
- Make sure that the fuel tank overflow hose is positioned as shown.

TIP

See page 8-12 for canister information.

Catalytic converter

EAU13435

The exhaust system contains catalytic converter(s) to reduce harmful exhaust emissions.

EWA10863

WARNING

The exhaust system is hot after operation. To prevent a fire hazard or burns:


- Do not park the vehicle near possible fire hazards such as grass or other materials that easily burn.
- Park the vehicle in a place where pedestrians or children are not likely to touch the hot exhaust system.
- Make sure that the exhaust system has cooled down before doing any maintenance work.
- Do not allow the engine to idle more than a few minutes. Long idling can cause a build-up of heat.

Seat

EAU13962

To remove the seat


Remove the bolts, and then pull the seat off.

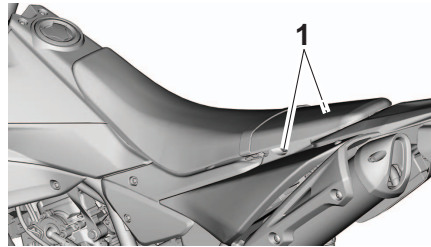

1. Bolt

To install the seat

1. Insert the projections on the front of the seat into the seat holders as shown.

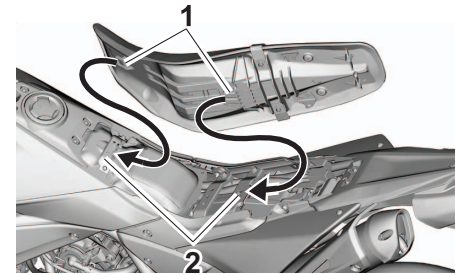

1. Projection
2. Seat holder

2. Place the seat in the original position, and then tighten the bolts.

TIP


Make sure that the seat is properly secured before riding.

Instrument and control functions

EAUN5183

Tool box


The tool box is located as shown.

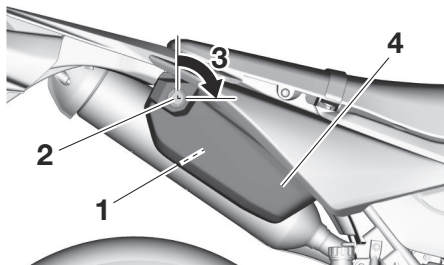

1. Tool box
2. Lock cover
3. Unlock.
4. Tool box cover


To open the tool box

1. Slide the lock cover open.
2. Insert the key into the lock, and then turn it 1/4 turn clockwise.
3. Pull the tool box cover outward and then slide it toward the front of the vehicle.

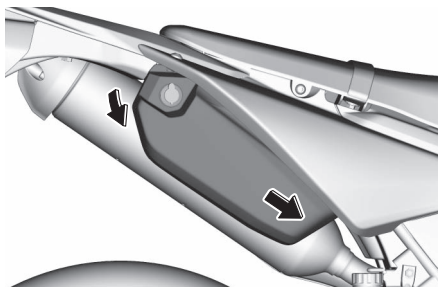

To close the tool box

1. Insert the projection on the tool box cover into the hole as shown, and then place the tool box cover in its original position.
2. Insert the key into the lock, and then turn it 1/4 turn counterclockwise.
3. Remove the key, and then slide the lock cover close.

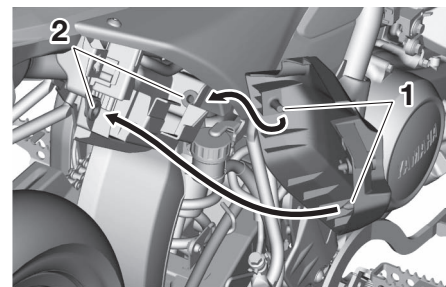

1. Projection
2. Hole

ECA23690

NOTICE

Do not place heat-sensitive items in the accessory box. The accessory box can get hot when the vehicle is in direct sunlight.

Adjusting the shock absorber assembly

EAU14835


This shock absorber assembly is equipped with a spring preload adjusting ring.

ECA10102

NOTICE

To avoid damaging the mechanism, do not attempt to turn beyond the maximum or minimum settings.

Adjust the spring preload as follows.
Turn the adjusting ring in direction (a) to increase the spring preload.
Turn the adjusting ring in direction (b) to decrease the spring preload.

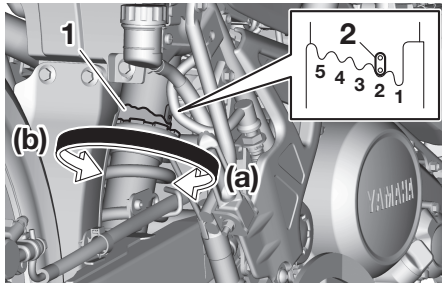

1. Spring preload adjusting ring
2. Position indicator

Align the appropriate notch in the adjusting ring with the position indicator on the shock absorber.

Spring preload setting:

Minimum (soft):

1

Standard:

2

Maximum (hard):

5

EWA10222

WARNING

This shock absorber assembly contains highly pressurized nitrogen gas. Read and understand the following information before handling the shock absorber assembly.

- Do not tamper with or attempt to open the cylinder assembly.
- Do not subject the shock absorber assembly to an open flame or other high heat source. This may cause the unit to explode due to excessive gas pressure.

- Do not deform or damage the cylinder in any way. Cylinder damage will result in poor damping performance.
- Do not dispose of a damaged or worn-out shock absorber assembly yourself. Take the shock absorber assembly to a Yamaha dealer for any service.

Instrument and control functions

Sidestand

EAU15306

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the vehicle upright.

TIP

The built-in sidestand switch is part of the ignition circuit cut-off system, which cuts the ignition in certain situations. (See the following section for an explanation of the ignition circuit cut-off system.)

WARNING

EWA10242

The vehicle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha's ignition circuit cut-off system has been designed to assist the operator in fulfilling the responsibility of raising the sidestand before starting off. Therefore, check

this system regularly and have a Yamaha dealer repair it if it does not function properly.

Ignition circuit cut-off system

EAU44895

This system prevents in-gear engine starts unless the clutch lever is pulled and the sidestand is up. Also, it will stop the running engine should the sidestand be lowered while the transmission is in gear.

Periodically check the system via the following procedure.

TIP

- This check is most reliable if performed with a warmed-up engine.
 - See pages 5-1 and 5-9 for switch operation information.
-

With the engine turned off:

1. Move the sidestand down.
2. Set engine stop switch to run position.
3. Turn main switch to on position.
4. Shift transmission into neutral.
5. Push the start switch.

Does the engine start?

YES

NO

With the engine still running:

6. Move the sidestand up.
7. Pull the clutch lever.
8. Shift transmission into gear.
9. Move the sidestand down.

Does the engine stall?

YES

NO

After the engine has stalled:

10. Move the sidestand up.
11. Pull the clutch lever.
12. Push the start switch.

Does the engine start?

YES

NO

The system is OK. **The motorcycle can be ridden.**



WARNING

If a malfunction is found, have the vehicle inspected before riding.

The neutral switch may not be working.

The motorcycle should not be ridden until checked by a Yamaha dealer.

The sidestand switch may not be working.

The motorcycle should not be ridden until checked by a Yamaha dealer.

The clutch switch may not be working.

The motorcycle should not be ridden until checked by a Yamaha dealer.

For your safety – pre-operation checks

EAU1559B

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11152

WARNING

Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

ITEM	CHECKS	PAGE
Fuel	• Check fuel level in fuel tank. • Refuel if necessary. • Check fuel line for leakage. • Check fuel tank overflow hose for obstructions, cracks or damage, and check hose connection.	5-13, 5-14
Engine oil	• Check oil level in engine. • If necessary, add recommended oil to specified level. • Check vehicle for oil leakage.	8-12
Coolant	• Check coolant level in reservoir. • If necessary, add recommended coolant to specified level. • Check cooling system for leakage.	8-15
Front brake	• Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage.	8-24, 8-25

For your safety – pre-operation checks

ITEM	CHECKS	PAGE
Rear brake	• Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage.	8-24, 8-25
Clutch	• Check operation. • Lubricate cable end if necessary. • Check lever free play. • Adjust if necessary.	8-22
Throttle grip	• Make sure that operation is smooth. • Check throttle grip free play. • If necessary, have Yamaha dealer adjust throttle grip free play and lubricate cable and grip housing.	8-19, 8-29
Control cables	• Make sure that operation is smooth. • Lubricate if necessary.	8-29
Drive chain	• Check chain slack. • Adjust if necessary. • Check chain condition. • Lubricate if necessary.	8-27, 8-28
Wheels and tires	• Check for damage. • Check tire condition and tread depth. • Check air pressure. • Correct if necessary.	8-20, 8-22
Brake pedal	• Make sure that operation is smooth. • Lubricate pedal pivoting point if necessary.	8-30
Brake and clutch levers	• Make sure that operation is smooth. • Lubricate lever pivoting points if necessary.	8-30
Sidestand	• Make sure that operation is smooth. • Lubricate pivot if necessary.	8-31

For your safety – pre-operation checks

ITEM	CHECKS	PAGE
Chassis fasteners	• Make sure that all nuts, bolts and screws are properly tightened. • Tighten if necessary.	—
Instruments, lights, signals and switches	• Check operation. • Correct if necessary.	—
Sidestand switch	• Check operation of ignition circuit cut-off system. • If system is not working correctly, have Yamaha dealer check vehicle.	5-18

Operation and important riding points

EAU15952

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

EWA10272

WARNING

Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1000 km (600 mi). For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1000 km (600 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAU16831

500–1000 km (300–600 mi)

Avoid prolonged operation above 7200 r/min.

Rev the engine freely through the gears, but do not use full throttle at any time. **NOTICE: After 1000 km (600 mi) of operation, the engine oil must be changed, the oil filter cartridge or element replaced, and the oil strainer cleaned.** [ECA10322]

1000 km (600 mi) and beyond

The vehicle can now be operated normally.

ECA23060

NOTICE

- Keep the engine speed out of the tachometer high-r/min zone.
- If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.

EAUE4121

0–500 km (0–300 mi)

Avoid prolonged operation above 5000 r/min.

After every hour of operation, stop the engine, and then let it cool for five to ten minutes.

Vary the engine speed from time to time. Do not operate the engine at one set throttle position.

Operation and important riding points

EAUN5200

ECA24110

EAU45312

Starting the engine

The ignition circuit cut-off system will enable starting when:

- the transmission is in the neutral position or
- the transmission is in gear, the sidestand is up, and the clutch lever is pulled.

To start the engine

1. Turn the main switch on and set the engine stop switch to the run position.
2. Confirm the indicator and warning light(s) come on for a few seconds, and then go off. (See page 5-2.)

TIP

- Do not start the engine if the malfunction indicator light remains on.
- The ABS warning light should come on and stay on until the vehicle reaches a speed of 5 km/h (3 mi/h).

NOTICE

If a warning or indicator light does not work as described above, have a Yamaha dealer check the vehicle.

3. Shift the transmission into the neutral position.
4. Start the engine by pushing the start switch.
5. Release the start switch when the engine starts, or after 5 seconds. Wait 10 seconds before pressing the switch again to allow battery voltage to restore.

ECA11043

NOTICE

For maximum engine life, never accelerate hard when the engine is cold!


TIP

This model is equipped with a lean angle sensor to stop the engine in case of a turnover. In this case, turn the main switch off and then on. Failing to do so will prevent the engine from starting even though the engine will crank when pushing the start switch.

Shifting

EAUJ2191

ECA10262

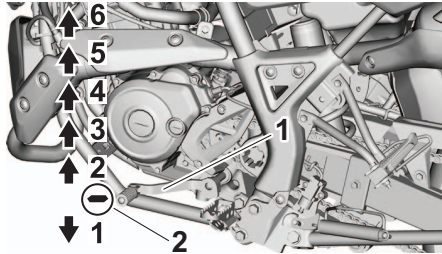

1. Shift pedal
2. Neutral position

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc.

TIP

To shift the transmission into the neutral position (–), press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it.

NOTICE

- When shifting, press the shift pedal firmly until you feel the gear shift is complete.
- Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, nor tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.
- Always use the clutch while changing gears to avoid damaging the engine, transmission, and drive train, which are not designed to withstand the shock of forced shifting.

EAU16682

To start out and accelerate

1. Pull the clutch lever to disengage the clutch.
2. Shift the transmission into first gear. The neutral indicator light should go out.

3. Open the throttle gradually, and at the same time, release the clutch lever slowly.
4. At the recommended shift points shown in the following table, close the throttle, and at the same time, quickly pull the clutch lever in.
5. Shift the transmission into second gear. (Make sure not to shift the transmission into the neutral position.)
6. Open the throttle part way and gradually release the clutch lever.
7. Follow the same procedure when shifting to the next higher gear.

TIP

When shifting gears in normal operating conditions, use the recommended shift points.

EAU85380

To decelerate

1. Release the throttle and apply both the front and the rear brakes smoothly to slow the motorcycle.
2. As the vehicle decelerates, shift to a lower gear.

Operation and important riding points

3. When the engine is about to stall or runs roughly, pull the clutch lever in, use the brakes to slow the motorcycle, and continue to downshift as necessary.
4. Once the motorcycle has stopped, the transmission can be shifted into the neutral position. The neutral indicator light should come on and then the clutch lever can be released.

EWA17380

WARNING

- **Improper braking can cause loss of control or traction. Always use both brakes and apply them smoothly.**
- **Make sure that the motorcycle and the engine have sufficiently slowed before shifting to a lower gear. Engaging a lower gear when the vehicle or engine speed is too high could make the rear wheel lose traction or the engine to over-rev. This could cause loss of control, an**

accident and injury. It could also cause engine or drive train damage.

EAU64150

Recommended shift points

The recommended shift points during acceleration and deceleration are shown in the table below.

Shift up points:

1st → 2nd: 20 km/h (12 mph)
2nd → 3rd: 30 km/h (19 mph)
3rd → 4th: 40 km/h (25 mph)
4th → 5th: 50 km/h (31 mph)
5th → 6th: 60 km/h (37 mph)

Shift down points:

6th → 5th: 45 km/h (28 mph)
5th → 4th: 35 km/h (22 mph)
4th → 3rd: 25 km/h (16 mph)

EAU17214

Parking

When parking, stop the engine, and then remove the key from the main switch.

EWA10312

WARNING

- **Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them and be burned.**
- **Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the risk of a fuel leak and fire.**
- **Do not park near grass or other flammable materials which might catch fire.**

EAU17246

EWA15123

EAU17303

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance charts should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10322

EWA15461

WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- **A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.**
- **Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to death. See page 2-2 for more information about carbon monoxide.**

WARNING


Brake discs, calipers, drums, and linings can become very hot during use. To avoid possible burns, let brake components cool before touching them.

Emission controls not only function to ensure cleaner air, but are also vital to proper engine operation and maximum performance. In the following periodic maintenance charts, the services related to emissions control are grouped separately. These services require specialized data, knowledge, and equipment. Maintenance, replacement, or repair of the emission control devices and systems may be performed by any repair establishment or individual that is certified (if applicable). Yamaha dealers are trained and equipped to perform these particular services.

Periodic maintenance and adjustment

EAU59371

Tool kit

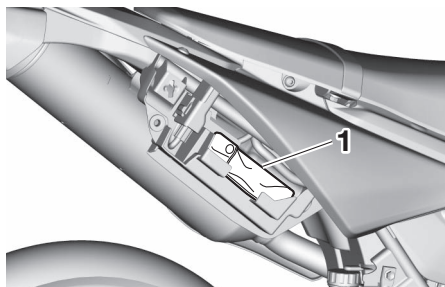

1. Tool kit

TIP

If you do not have the tools or experience required for a particular job, have your Yamaha dealer perform it for you.

8

The tool kit is located inside the tool box. To access the tool kit, slide the lock cover open, insert the key into the lock, and then turn it 1/4 turn clockwise.

The information included in this manual and the tools provided in the tool kit are intended to assist you in the performance of preventive maintenance and minor repairs. However, a torque wrench and other tools are necessary to perform certain maintenance work correctly.

Periodic maintenance and adjustment

EAU48451

TIP

- From 12000 mi (19000 km) or 36 months, repeat the maintenance intervals starting from 4000 mi (7000 km) or 12 months.
- Items marked with an asterisk require special tools, data and technical skills, have a Yamaha dealer perform the service.

EAU17562

Periodic maintenance chart for the emission control system

No.		ITEM	ROUTINE	INITIAL	ODOMETER READINGS				
				600 mi (1000 km) or 1 month	2000 mi (4000 km) or 6 months	4000 mi (7000 km) or 12 months	6000 mi (10000 km) or 18 months	8000 mi (13000 km) or 24 months	10000 mi (16000 km) or 30 months
1	*	Fuel line	• Check fuel hoses for cracks or damage. • Replace if necessary.		✓	✓	✓	✓	✓
2		Spark plug	• Check condition. • Adjust gap and clean. • Replace at 7000 mi (11000 km) or 12 months and thereafter every 6000 mi (10000 km) or 12 months.		✓	Replace.	✓	Replace.	✓
3		Spark arrester	• Clean.		✓	✓	✓	✓	✓
4	*	Valve clearance	• Check and adjust.	Every 12000 mi (19000 km)					
5	*	Idle speed	• Check and adjust engine idle speed.	✓	✓	✓	✓	✓	✓
6	*	Fuel injection	• Check and adjust engine idle speed.	✓	✓	✓	✓	✓	✓

Periodic maintenance and adjustment

No.	ITEM	ROUTINE	INITIAL	ODOMETER READINGS					
			600 mi (1000 km) or 1 month	2000 mi (4000 km) or 6 months	4000 mi (7000 km) or 12 months	6000 mi (10000 km) or 18 months	8000 mi (13000 km) or 24 months	10000 mi (16000 km) or 30 months	
7	*	Exhaust system	• Check for leakage. • Tighten if necessary. • Replace gasket(s) if necessary.		√	√	√	√	√
8	*	Evaporative emission control system	• Check control system for damage. • Replace if necessary.			√		√	

Periodic maintenance and adjustment

EAU3212B

General maintenance and lubrication chart

No.		ITEM	ROUTINE	INITIAL	ODOMETER READINGS					
				600 mi (1000 km) or 1 month	2000 mi (4000 km) or 6 months	4000 mi (7000 km) or 12 months	6000 mi (10000 km) or 18 months	8000 mi (13000 km) or 24 months	10000 mi (16000 km) or 30 months	
1	*	Diagnostic system check	• Perform dynamic inspection using Yamaha diagnostic tool. • Check the error codes.	√	√	√	√	√	√	
2	*	Air filter element	• Check condition and for damage, and replace if necessary.		√	√	√	√	√	
			• Replace.					√		
3		Air filter check hose	• Clean.	√	√	√	√	√	√	
4	*	Clutch	• Check operation. • Adjust or replace cable.	√	√	√	√	√	√	
5	*	Front brake	• Check operation, fluid level, and for fluid leakage. • Replace brake pads if necessary.	√	√	√	√	√	√	
6	*	Rear brake	• Check operation, fluid level, and for fluid leakage. • Replace brake pads if necessary.	√	√	√	√	√	√	
7	*	Brake hose	• Check for cracks or damage. • Check for correct routing and clamping.		√	√	√	√	√	
			• Replace.	Every 4 years						
8	*	Brake fluid	• Change.	Every 2 years						
9	*	Wheels	• Check runout, spoke tightness and for damage. • Tighten spokes if necessary.	√	√	√	√	√	√	

Periodic maintenance and adjustment

No.	ITEM	ROUTINE	INITIAL	ODOMETER READINGS					
			600 mi (1000 km) or 1 month	2000 mi (4000 km) or 6 months	4000 mi (7000 km) or 12 months	6000 mi (10000 km) or 18 months	8000 mi (13000 km) or 24 months	10000 mi (16000 km) or 30 months	
10	*	Tires	• Check tread depth and for damage. • Replace if necessary. • Check air pressure. • Correct if necessary.		√	√	√	√	√
11	*	Wheel bearings	• Check bearings for smooth operation. • Replace if necessary.		√	√	√	√	√
12	*	Swingarm pivot bearings	• Check bearing assemblies for looseness.			√			
			• Moderately repack with lithium-soap-based grease.					√	
13		Drive chain	• Check chain slack, alignment and condition. • Adjust and lubricate chain with a special O-ring chain lubricant thoroughly.	Every 300 mi (500 km) and after washing the motorcycle, riding in the rain or riding in wet areas					
14	*	Steering bearings	• Check bearing assemblies for looseness. • Moderately repack with lithium-soap-based grease.	√	√	√	√	Repack.	√
15	*	Chassis fasteners	• Check all chassis fitting and fasteners. • Correct if necessary.		√	√	√	√	√
16		Front brake lever pivot shaft	• Apply silicone grease lightly.		√	√	√	√	√

Periodic maintenance and adjustment

No.	ITEM	ROUTINE	INITIAL	ODOMETER READINGS					
			600 mi (1000 km) or 1 month	2000 mi (4000 km) or 6 months	4000 mi (7000 km) or 12 months	6000 mi (10000 km) or 18 months	8000 mi (13000 km) or 24 months	10000 mi (16000 km) or 30 months	
17	Brake pedal pivot shaft	• Apply lithium-soap-based grease lightly.		√	√	√	√	√	
18	Clutch lever pivot shaft	• Apply lithium-soap-based grease lightly.		√	√	√	√	√	
19	Shift pedal pivot shaft	• Apply lithium-soap-based grease lightly.		√	√	√	√	√	
20	Sidestand pivot	• Check operation. • Apply lithium-soap-based grease lightly.		√	√	√	√	√	
21	* Sidestand switch	• Check operation and replace if necessary.	√	√	√	√	√	√	
22	* Front fork	• Check operation and for oil leakage. • Replace if necessary.		√	√	√	√	√	
23	* Shock absorber as- sembly	• Check operation and for oil leak- age. • Replace if necessary.		√	√	√	√	√	
24	Engine oil	• Change (warm engine before draining). • Check oil level and vehicle for oil leakage.	√	√	√	√	√	√	
25	Engine oil filter ele- ment	• Replace.	√		√		√		
26	* Cooling system	• Check coolant level and vehicle for coolant leakage.		√	√	√	√	√	
		• Change coolant.	Every 3 years						

Periodic maintenance and adjustment

No.	ITEM	ROUTINE	INITIAL	ODOMETER READINGS				
			600 mi (1000 km) or 1 month	2000 mi (4000 km) or 6 months	4000 mi (7000 km) or 12 months	6000 mi (10000 km) or 18 months	8000 mi (13000 km) or 24 months	10000 mi (16000 km) or 30 months
27	* Front and rear brake switches	• Check operation.	√	√	√	√	√	√
28	* Moving parts and cables	• Lubricate with Yamaha cable lubricant or other suitable cable lubricant thoroughly.		√	√	√	√	√
29	* Throttle grip	• Check operation. • Check throttle grip free play, and adjust if necessary. • Lubricate cable and grip housing.		√	√	√	√	√
30	* Lights, signals and switches	• Check operation. • Adjust headlight beam.	√	√	√	√	√	√


TIP

- Air filter
 - This model uses a disposable oil-coated paper element. This element cannot be cleaned with compressed air, doing so will only damage it.
 - Replace the air filter more frequently if you often ride in the rain or dusty conditions.
- Hydraulic brake service
 - Regularly check the brake fluid levels. Replenish as necessary.
 - Every two years replace the internal components of the brake master cylinders and calipers, and change the brake fluid.
 - Replace the brake hoses every four years or sooner if cracked or damaged.


Removing and installing panels

EAU18773

The panels shown need to be removed to perform some of the maintenance jobs described in this chapter. Refer to this section each time a panel needs to be removed and installed.

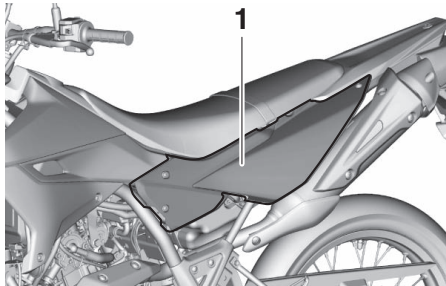

1. Panel A

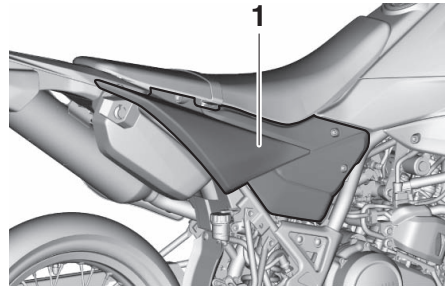


1. Panel B

EAU8460

Panel A

To remove the panel


1. Remove the seat. (See page 5-15.)
2. Remove the bolts and washers, and then take the panel off.

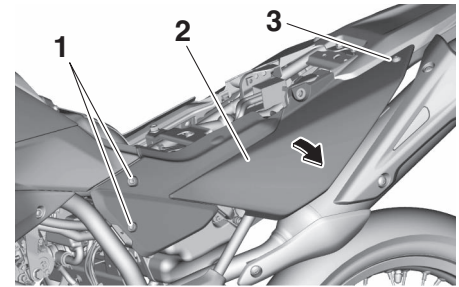

1. Bolt and washer
2. Panel A
3. Bolt

To install the panel

1. Place the panel and washers in the original position, and then install the bolts.

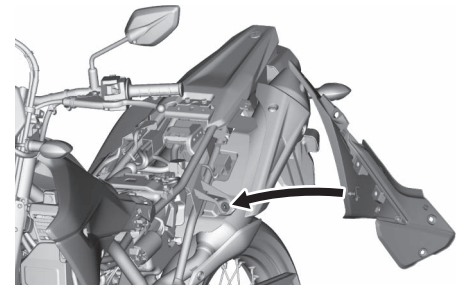


2. Install the seat.

Periodic maintenance and adjustment

Panel B

To remove the panel


1. Remove the seat. (See page 5-15.)
2. Remove the bolts and washers. Pull the rear of the panel off, and then slide the panel backward to remove it.

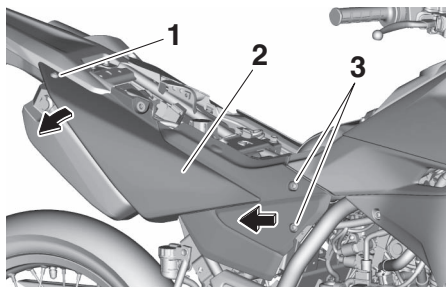

1. Bolt
2. Panel B
3. Bolt and washer

To install the panel

1. Insert the hole on the front of the panel into the projection as shown, and then place the panel and washers in the original position.

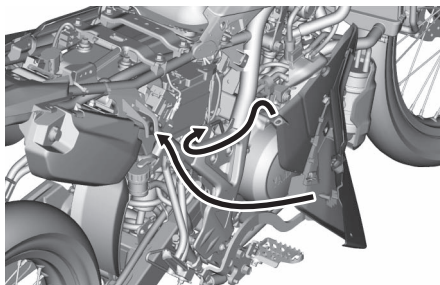

2. Install the bolts.
3. Install the seat.


Checking the spark plug

EAU19614

The spark plug is an important engine component, which is easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plug should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plug can reveal the condition of the engine.

To remove the spark plug

1. Remove the spark plug cap.

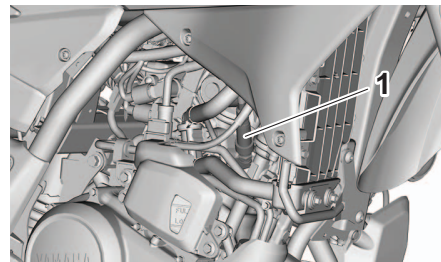

1. Spark plug cap
2. Remove the spark plug as shown, with a spark plug wrench available at a Yamaha dealer.

Periodic maintenance and adjustment

To check the spark plug

1. Check that the porcelain insulator around the center electrode of the spark plug is a medium-to-light tan (the ideal color when the vehicle is ridden normally).


TIP

If the spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.

2. Check the spark plug for electrode erosion and excessive carbon or other deposits, and replace it if necessary.

Specified spark plug:
NGK/MR8E-9

3. Measure the spark plug gap with a wire thickness gauge and, if necessary, adjust the gap to specification.

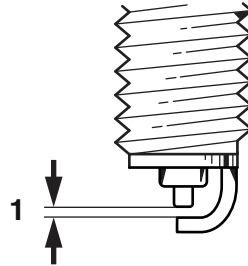

1. Spark plug gap

Spark plug gap:
0.8–0.9 mm (0.031–0.035 in)

To install the spark plug

1. Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.
2. Install the spark plug with the spark plug wrench, and then tighten it to the specified torque.

Tightening torque:
Spark plug:
12.5 N·m (1.25 kgf·m, 9.2 lb·ft)

TIP


If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

3. Install the spark plug cap.

Periodic maintenance and adjustment

EAU36114

Canister

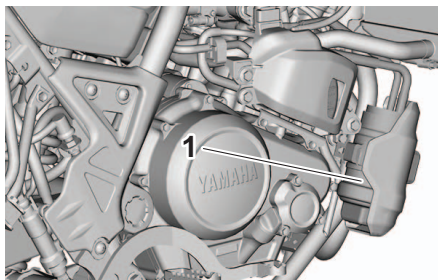

1. Canister

This model is equipped with a canister to prevent the discharging of fuel vapor into the atmosphere. Before operating this vehicle, make sure to check the following:

- Check each hose connection.
- Check each hose and canister for cracks or damage. Replace if damaged.
- Make sure that the canister breather is not blocked, and if necessary, clean it.

EAUM2584

Engine oil and oil filter element

The engine oil level should be checked before each ride. In addition, the oil must be changed and the oil filter element replaced at the intervals specified in the periodic maintenance and lubrication chart.


To check the engine oil level

1. Place the vehicle on a level surface and hold it in an upright position. A slight tilt to the side can result in a false reading.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Wait a few minutes until the oil settles, remove the oil filler cap, wipe the dipstick clean, insert it back into the oil filler hole (without screwing it in), and then remove it again to check the oil level.


NOTICE: Do not operate the vehicle until you know that the engine oil level is sufficient. [ECA10012]

TIP

The engine oil should be between the minimum and maximum level marks.

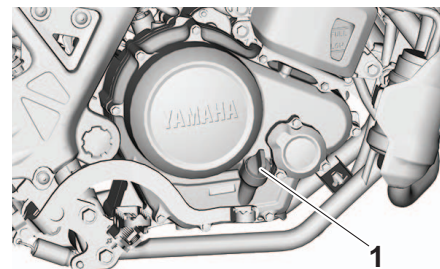

1. Engine oil filler cap

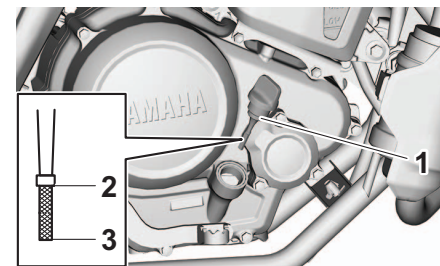


1. Dipstick
2. Maximum level mark
3. Minimum level mark

Periodic maintenance and adjustment

4. If the engine oil is below the minimum level mark, add sufficient oil of the recommended type to raise it to the correct level.
5. Install the oil filler cap.

To change the engine oil (with or without oil filter element replacement)

1. Start the engine, warm it up for several minutes, and then turn it off.
2. Place an oil pan under the engine to collect the used oil.
3. Remove the engine oil filler cap and the drain bolt along with the O-ring, compression spring, and engine oil strainer, to drain the oil from the crankcase. **NOTICE:** When removing the engine oil drain bolt, the O-ring, compression spring, and oil strainer will fall out. Take care not to lose these parts. [ECA11002]

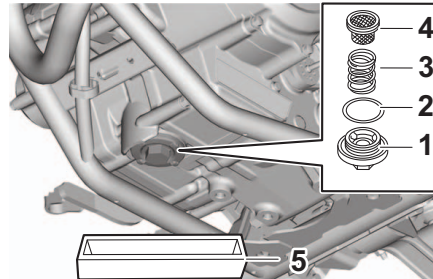


1. Engine oil drain bolt
2. O-ring
3. Compression spring
4. Strainer
5. Oil pan

4. Clean the engine oil strainer with solvent.


TIP _____
Skip steps 5–7 if the oil filter element is not being replaced.

5. Remove the oil filter element cover by removing the bolts.

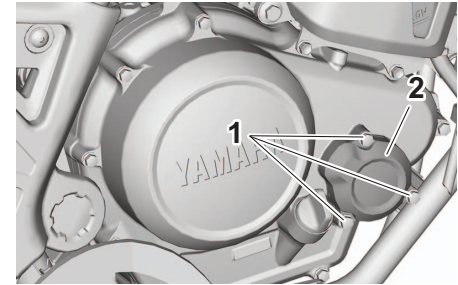

1. Bolt
2. Oil filter element cover

6. Remove and replace the oil filter element and O-ring.

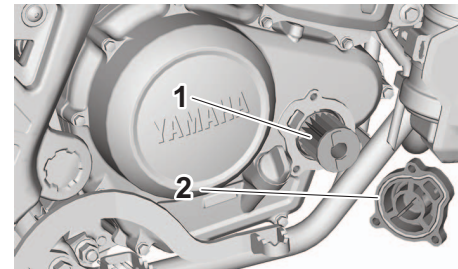

1. Oil filter element
2. O-ring

Periodic maintenance and adjustment

7. Install the oil filter element cover by installing the bolts, then tightening them to the specified torque.

Tightening torque:

Oil filter element cover bolt:
10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP

Make sure that the O-ring is properly seated.

8. Install the engine oil strainer, compression spring, O-ring and the engine oil drain bolt, and then tighten it to the specified torque.

NOTICE: Before installing the engine oil drain bolt, do not forget to install the O-ring, compression spring, and oil strainer in position. [ECA10422]

Tightening torque:

Engine oil drain bolt:
32 N·m (3.2 kgf·m, 24 lb·ft)

9. Refill with the specified amount of the recommended engine oil, and then install and tighten the oil filler cap.

Recommended engine oil:

See page 10-1.

Oil quantity:

Oil change:

0.85 L (0.90 US qt, 0.75 Imp.qt)

With oil filter removal:

0.95 L (1.00 US qt, 0.84 Imp.qt)

ECA11621

NOTICE

- In order to prevent clutch slip-page (since the engine oil also lubricates the clutch), do not mix any chemical additives. Do not use oils with a diesel specification of “CD” or oils of a higher quality than specified. In addition, do not use oils labeled “ENERGY CONSERVING II” or higher.
- Make sure that no foreign material enters the crankcase.

10. Start the engine, and then let it idle for several minutes while checking it for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause.
11. Turn the engine off, and then check the oil level and correct it if necessary.

Why Yamalube

YAMALUBE oil is a Genuine YAMAHA Part born of the engineers' passion and belief that engine oil is an important liquid engine component. We form teams of specialists in the fields of mechanical engineering, chemistry, electronics and track testing, and have them develop the engine together with the oil it will use. Yamalube oils take full advantage of the base oil's qualities and blend in the ideal balance of additives to make sure the final oil clears our performance standards. Thus, Yamalube mineral, semisynthetic and synthetic oils have their own distinct characters and value. Yamaha's experience gained over many years of research and development into oil since the 1960's helps make Yamalube the best choice for your Yamaha engine.

YAMALUBE®

EAU85450

Coolant

The coolant level should be checked regularly. In addition, the coolant must be changed at the intervals specified in the periodic maintenance chart.

Recommended coolant:

YAMALUBE coolant

Coolant quantity:

Coolant reservoir (max level mark):
0.15 L (0.16 US qt, 0.14 Imp.qt)


Radiator (including all routes):
0.60 L (0.63 US qt, 0.53 Imp.qt)

TIP

If genuine Yamaha coolant is not available, use an ethylene glycol antifreeze containing corrosion inhibitors for aluminum engines and mix with distilled water at a 1:1 ratio.

EAUS1203

2. With the vehicle in an upright position, look at the coolant level in the reservoir.

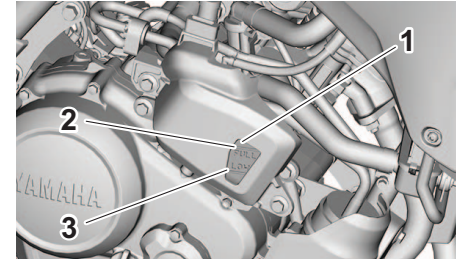

1. Coolant reservoir
2. Maximum level mark
3. Minimum level mark

3. Check the coolant level in the coolant reservoir.

TIP

The coolant should be between the minimum and maximum level marks.

4. If the coolant is at or below the minimum level mark, remove the coolant reservoir cover.


EAUN4600

To check the coolant level

Since the coolant level varies with engine temperature, check when the engine is cold.

1. Park the vehicle on a level surface.


Periodic maintenance and adjustment

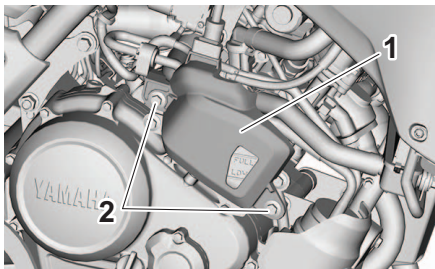

1. Coolant reservoir cover
2. Bolt

5. Remove the coolant reservoir cap.
WARNING! Remove only the coolant reservoir cap. Never attempt to remove the radiator cap when the engine is hot.

[EWA15162]

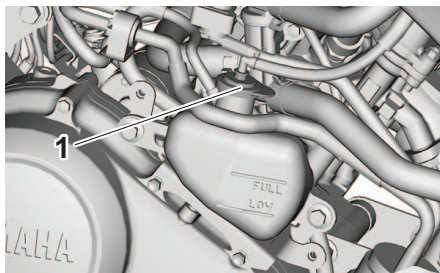

1. Coolant reservoir cap

6. Add coolant to the maximum level mark. **NOTICE:** If coolant is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine. If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the cooling system will not be protected against frost and corrosion. If water has been added to the coolant, have a Yamaha dealer check the anti-freeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced. [ECA10473]
7. Install the coolant reservoir cap and coolant reservoir cover.

WARNING! Never attempt to remove the radiator cap when the engine is hot. [EWA10382]

EAU33032

Changing the coolant

The coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart. Have a Yamaha dealer change the coolant.


EAUM1835

Replacing the air filter element and cleaning the check hose

The air filter element should be replaced at the intervals specified in the periodic maintenance and lubrication chart. Replace the air filter element more frequently if you are riding in unusually wet or dusty areas. In addition, the air filter check hose must be frequently checked and cleaned if necessary.


To replace the air filter element

1. Remove the seat. (See page 5-15.)
2. Remove panel A. (See page 8-9.)
3. Remove the air filter case cover by removing the screws.

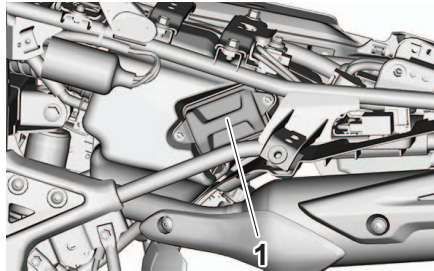

1. Air filter case cover

4. Pull the air filter element out.

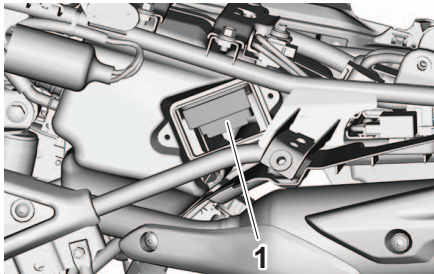

1. Air filter element


5. Insert a new air filter element into the air filter case as shown.
NOTICE: Make sure that the air filter element is properly seated in the air filter case. The engine should never be operated with-

out the air filter element installed, otherwise the piston(s) and/or cylinder(s) may become excessively worn. [ECA10482]

6. Install the air filter case cover by installing the screws.
7. Install the panel.
8. Install the seat.

To clean the air filter check hose

1. Check the hose on the side of the air filter case for accumulated dirt or water.

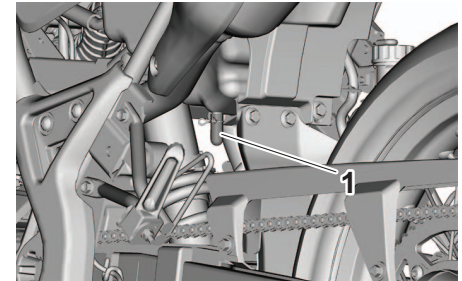

1. Air filter check hose

2. If dirt or water is visible, remove the hose, clean it, and then install it.

Periodic maintenance and adjustment

Cleaning the spark arrester

EAUN5320

The spark arrester should be cleaned at the intervals specified in the periodic maintenance chart.

EWA10981


WARNING

- Always let the exhaust system cool prior to touching exhaust components.
- Do not start the engine when cleaning the exhaust system.

TIP


Make sure to select a well-ventilated area free of combustible materials to clean the spark arrester.

1. Remove the spark arrester cap by removing the bolts.

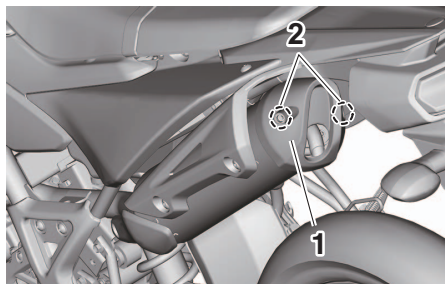


1. Spark arrester cap
2. Bolt

2. Remove the spark arrester bolts, and then pull the spark arrester out of the muffler.

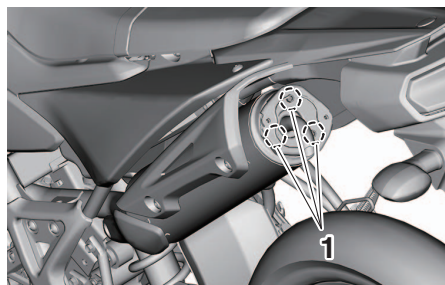

1. Spark arrester bolt

3. Tap the spark arrester lightly, and then use a wire brush to remove any carbon deposits, then clean the inside of the spark arrester.

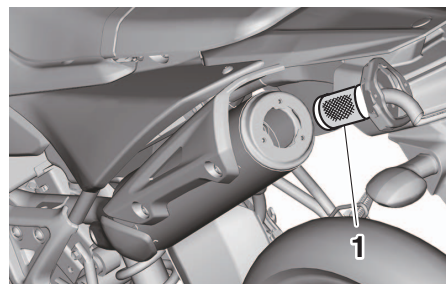

1. Spark arrester

4. Insert the spark arrester into the muffler, and then install the spark arrester bolts.
5. Install the spark arrester cap and the bolts, and then tighten the bolts to the specified torque.

Tightening torque:

Spark arrester cap bolt:
28 N·m (2.8 kgf·m, 20.6 lb·ft)

TIP

Make sure to align the bolt holes when installing the spark arrester cap.

Periodic maintenance and adjustment

Checking the engine idling speed

EAU44735


Check the engine idling speed and, if necessary, have it corrected by a Yamaha dealer.

Engine idling speed:
1250–1550 r/min

Adjusting the throttle grip free play

EAU21377

Measure the throttle grip free play as shown.

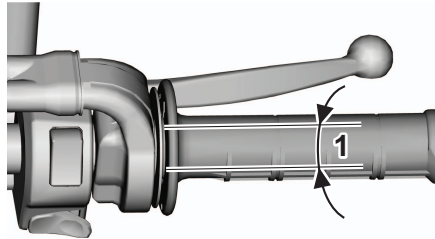

1. Throttle grip free play

Throttle grip free play:
3.0–5.0 mm (0.12–0.20 in)


Periodically check the throttle grip free play and, if necessary, adjust it as follows.

TIP

The engine idling speed must be correctly adjusted before checking and adjusting the throttle grip free play.

1. Loosen the locknut.

2. To increase the throttle grip free play, turn the throttle grip free play adjusting nut in direction (a). To decrease the throttle grip free play, turn the adjusting nut in direction (b).

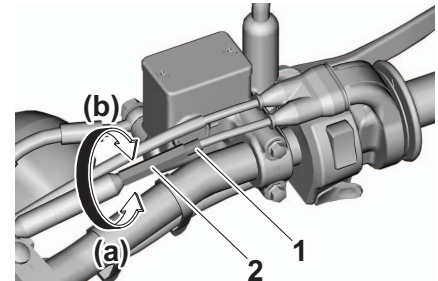

1. Locknut
2. Adjusting nut
3. Tighten the locknut.

Periodic maintenance and adjustment

EAU21403

Valve clearance

The valves are an important engine component, and since valve clearance changes with use, they must be checked and adjusted at the intervals specified in the periodic maintenance chart. Unadjusted valves can result in improper air-fuel mixture, engine noise, and eventually engine damage. To prevent this from occurring, have your Yamaha dealer check and adjust the valve clearance at regular intervals.

TIP

This service must be performed when the engine is cold.

EAU64222

Tires

Tires are the only contact between the vehicle and the road. Safety in all conditions of riding depends on a relatively small area of road contact. Therefore, it is essential to maintain the tires in good condition at all times and replace them at the appropriate time with the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EWA10504



Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).
- The tire air pressure must be adjusted in accordance with the riding speed and with the total

weight of rider, passenger, cargo, and accessories approved for this model.

Cold tire air pressure:

Up to 90 kg (198 lb) load:

Front:

150 kPa (1.50 kgf/cm², 22 psi)

Rear:

170 kPa (1.70 kgf/cm², 25 psi)

90 kg (198 lb) to maximum load:

Front:

150 kPa (1.50 kgf/cm², 22 psi)

Rear:

170 kPa (1.70 kgf/cm², 25 psi)

Maximum load:

Vehicle:

160 kg (353 lb)

The vehicle's maximum load is the combined weight of the rider, passenger, cargo, and any accessories.

EWA10512




Never overload your vehicle. Operation of an overloaded vehicle could cause an accident.

Periodic maintenance and adjustment

EWA10462

Tire inspection

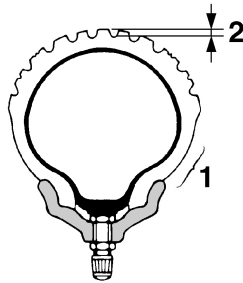

1. Tire sidewall
2. Tire tread depth

The tires must be checked before each ride. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the sidewall is cracked, contact a Yamaha dealer immediately and have the tire replaced.

Minimum tire tread depth (front and rear):
1.0 mm (0.04 in)

EWA10523

WARNING

- It is dangerous to ride with a worn-out tire. When a tire tread begins to show crosswise lines,

have a Yamaha dealer replace the tire immediately. Brakes, tires and related wheel parts replacement should also be left to a Yamaha dealer.

- Ride at moderate speeds after changing a tire since the tire surface must first be “broken in” for it to develop its optimal characteristics.

Tire information

This model is equipped with tubeless tires and tire air valves.

Tires age, even if they have not been used or have only been used occasionally. Cracking of the tread and sidewall rubber, sometimes accompanied by carcass deformation, is an evidence of ageing. Old and aged tires shall be checked by tire specialists to ascertain their suitability for further use.

WARNING

The front and rear tires should be of the same make and design, otherwise the handling characteristics of the vehicle may be different, which could lead to an accident.

After extensive tests, only the tires listed below have been approved for this model by Yamaha.

Front tire:

Size:
2.75-21 45P
Manufacturer/model:
DUNLOP/D605FJ

Rear tire:

Size:
4.10-18 59P
Manufacturer/model:
DUNLOP/D605J

Periodic maintenance and adjustment

Spoke wheels

To maximize the performance, durability, and safe operation of the vehicle, note the following points.

- Check each wheel for cracks, deformation and other damage. If any damage is found, have the wheel inspected by your Yamaha dealer. Do not attempt to repair or straighten a bent or damaged wheel.
- Check the spokes for looseness. If any loose spokes are found, have the wheel adjusted by your Yamaha dealer. Improperly tightened spokes can cause wheel misalignment.
- Have the wheel balanced whenever the tire or tube has been replaced. An unbalanced wheel can result in adverse handling characteristics and shortened tire life.

EAU21945

EWA10611




WARNING

The wheels on this model are not designed for use with tubeless tires. Do not attempt to use tubeless tires on this model.

Adjusting the clutch lever free play

Measure the clutch lever free play as shown.

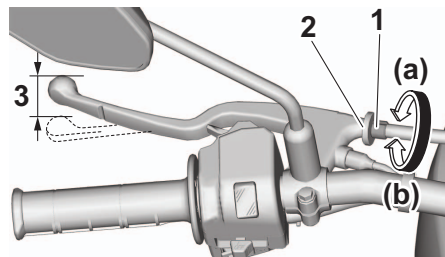

1. Clutch lever free play adjusting bolt
2. Locknut (clutch lever)
3. Clutch lever free play

Clutch lever free play:
10.0–15.0 mm (0.39–0.59 in)

Periodically check the clutch lever free play and, if necessary, adjust it as follows.

1. Slide the rubber cover back at the clutch lever.
2. Loosen the locknut.


EAU22047

3. To increase the clutch lever free play, turn the clutch lever free play adjusting bolt in direction (a). To decrease the clutch lever free play, turn the adjusting bolt in direction (b).

TIP

If the specified clutch lever free play could be obtained as described above, skip steps 4–7.

4. Fully turn the adjusting bolt at the clutch lever in direction (a) to loosen the clutch cable.
5. Loosen the locknut at the crankcase.

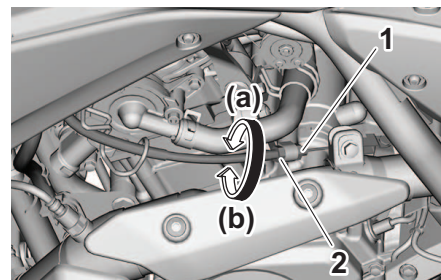


1. Locknut
2. Clutch lever free play adjusting nut (crankcase)

6. To increase the clutch lever free play, turn the clutch lever free play adjusting nut in direction (a). To decrease the clutch lever free play, turn the adjusting nut in direction (b).
7. Tighten the locknut at the crankcase.
8. Tighten the locknut at the clutch lever and then slide the rubber cover to its original position.

Checking the brake lever free play

EAU37914

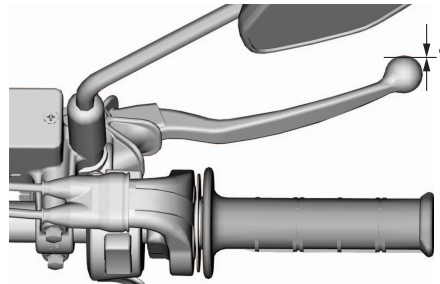

1. No brake lever free play

There should be no free play at the brake lever end. If there is free play, have a Yamaha dealer inspect the brake system.

EWA14212

WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a Yamaha dealer bleed the system before operating the vehicle. Air in the hydraulic system will diminish the


braking performance, which may result in loss of control and an accident.

Periodic maintenance and adjustment

Brake light switches

EAU22275

The brake light is activated by switches connected to the brake lever and brake pedal. Check that the brake light comes on just before braking takes effect. If necessary, adjust the rear brake light switch as follows.

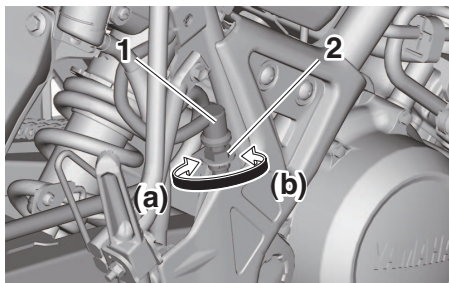

1. Rear brake light switch
2. Rear brake light switch adjusting nut

Turn the rear brake light switch adjusting nut while holding the rear brake light switch in place. To make the brake light come on earlier, turn the adjusting nut in direction (a). To make the brake light come on later, turn the adjusting nut in direction (b).

TIP

The front brake light switch should be serviced by a Yamaha dealer.


Checking the front and rear brake pads

EAU22393

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

Front brake pads

EAU22434

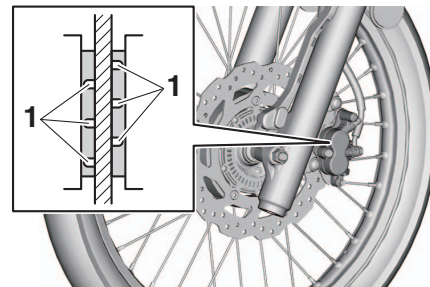


1. Brake pad wear indicator groove

Each front brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear

indicator grooves have almost disappeared, have a Yamaha dealer replace the brake pads as a set.

Rear brake pads

EAU36721

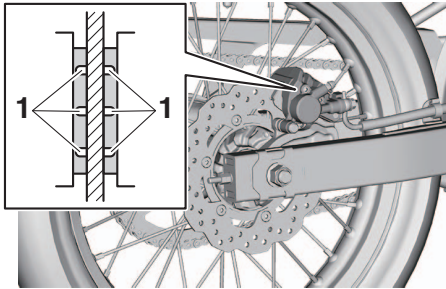

1. Brake pad wear indicator groove


Each rear brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear indicator grooves have almost disappeared, have a Yamaha dealer replace the brake pads as a set.

Checking the brake fluid level

EAU40262


Before riding, check that the brake fluid is above the minimum level mark. Check the brake fluid level with the top of the reservoir level. Replenish the brake fluid if necessary.

Front brake

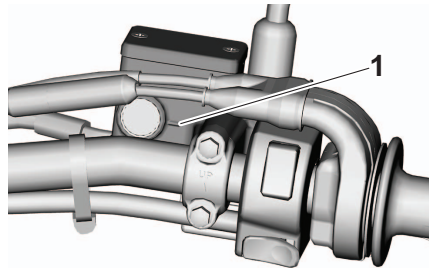

1. Minimum level mark

Rear brake

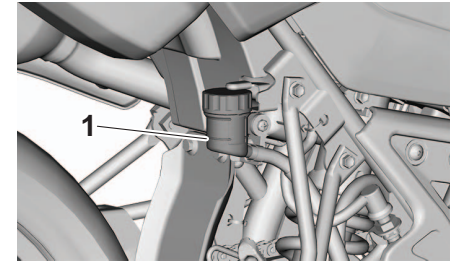

1. Minimum level mark

Specified brake fluid:
DOT 4

EWA16011

⚠ WARNING

Improper maintenance can result in loss of braking ability. Observe these precautions:

- Insufficient brake fluid may allow air to enter the brake system, reducing braking performance.
- Clean the filler cap before removing. Use only DOT 4 brake fluid from a sealed container.

Periodic maintenance and adjustment

- **Use only the specified brake fluid; otherwise, the rubber seals may deteriorate, causing leakage.**
- **Refill with the same type of brake fluid. Adding a brake fluid other than DOT 4 may result in a harmful chemical reaction.**
- **Be careful that water or dust does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock, and dirt may clog the ABS hydraulic unit valves.**

fluid level goes down suddenly, have a Yamaha dealer check the cause before further riding.

Changing the brake fluid

EAU22734

Have a Yamaha dealer change the brake fluid every 2 years. In addition, have the seals of the master cylinders and brake calipers, as well as the brake hoses replaced at the intervals listed below or sooner if they are damaged or leaking.

- Brake seals: every 2 years
- Brake hoses: every 4 years

NOTICE

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled fluid immediately.

As the brake pads wear, it is normal for the brake fluid level to gradually go down. A low brake fluid level may indicate worn brake pads and/or brake system leakage; therefore, be sure to check the brake pads for wear and the brake system for leakage. If the brake

Periodic maintenance and adjustment

Drive chain slack

The drive chain slack should be checked before each ride and adjusted if necessary.

EAU22762

To check the drive chain slack


EAUN5330

1. Place the motorcycle on the side-stand.

TIP


When checking and adjusting the drive chain slack, there should be no weight on the motorcycle.

2. Shift the transmission into the neutral position.
3. Find the center point of the drive chain (position A) by measuring (approx. 80 mm) rearward from the seal guard edge as shown.

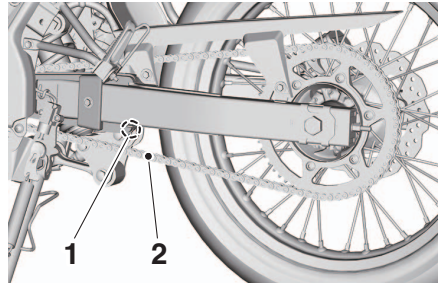

1. Seal guard edge
2. Position A

4. Push down on the center of the drive chain (position A) and then measure the drive chain slack as shown.

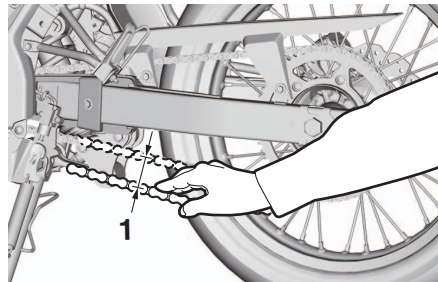

1. Drive chain slack

Drive chain slack:
35.0–45.0 mm (1.38–1.77 in)

5. If the drive chain slack is incorrect, adjust it as follows. **NOTICE: Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slip-page or breakage. To prevent this from occurring, keep the drive chain slack within the specified limits.** [ECA10572]


EAU3431B

To adjust the drive chain slack

Consult a Yamaha dealer before adjusting the drive chain slack.

1. Loosen the axle nut and the lock-nut on each side of the swingarm.
2. To tighten the drive chain, turn the drive chain slack adjusting bolt on each side of the swingarm in direction (a). To loosen the drive chain, turn the adjusting bolt on each side of the swingarm in direction (b), and then push the rear wheel forward.

Periodic maintenance and adjustment

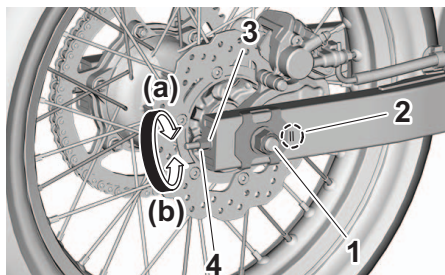

1. Axle nut
2. Alignment mark
3. Drive chain slack adjusting nut
4. Locknut

TIP

8

Using the alignment marks on each side of the swingarm, make sure that both drive chain pullers are in the same position for proper wheel alignment.

3. Tighten the axle nut, then the locknuts to their specified torques.

Tightening torques:

Axle nut:

69 N·m (6.9 kgf·m, 51 lb·ft)

Locknut:

16 N·m (1.6 kgf·m, 12 lb·ft)

4. Make sure that the drive chain pullers are in the same position, the drive chain slack is correct, and the drive chain moves smoothly.

Cleaning and lubricating the drive chain

EAU23027

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

ECA10584

NOTICE

The drive chain must be lubricated after washing the motorcycle, riding in the rain or riding in wet areas.

1. Clean the drive chain with a drive chain cleaner and a small soft brush. **NOTICE: To prevent damaging the O-rings, do not clean the drive chain with steam cleaners, high-pressure washers or inappropriate solvents.**

[ECA11122]

2. Wipe the drive chain dry.
3. Thoroughly lubricate the drive chain with a special O-ring chain lubricant. **NOTICE: Do not use engine oil or any other lubri-**

cants for the drive chain, as they may contain substances that could damage the O-rings.

[ECA11112]

Checking and lubricating the cables

EAU23098

The operation of all control cables and the condition of the cables should be checked before each ride, and the cables and cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. **WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.** [EWA10712]

Recommended lubricant:

Yamaha cable lubricant or other suitable cable lubricant

Checking and lubricating the throttle grip and cable

EAU23115

The operation of the throttle grip should be checked before each ride. In addition, the cable should be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance chart.

The throttle cable is equipped with a rubber cover. Make sure that the cover is securely installed. Even though the cover is installed correctly, it does not completely protect the cable from water entry. Therefore, use care not to pour water directly onto the cover or cable when washing the vehicle. If the cable or cover becomes dirty, wipe clean with a moist cloth.


Periodic maintenance and adjustment

Checking and lubricating the brake and shift pedals


EAU44276

The operation of the brake and shift pedals should be checked before each ride, and the pedal pivots should be lubricated if necessary.

Brake pedal

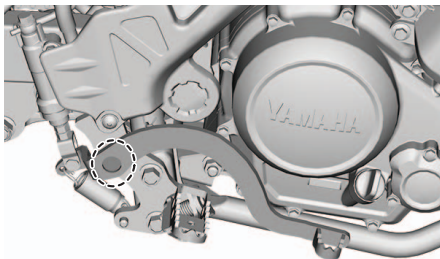

Shift pedal

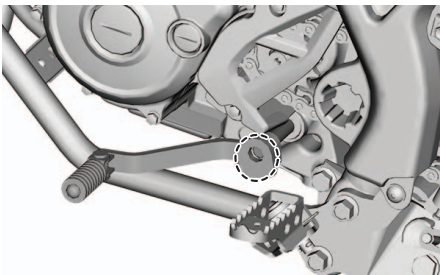


Recommended lubricant:
Lithium-soap-based grease

Checking and lubricating the brake and clutch levers

EAU23146


The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.

Brake lever

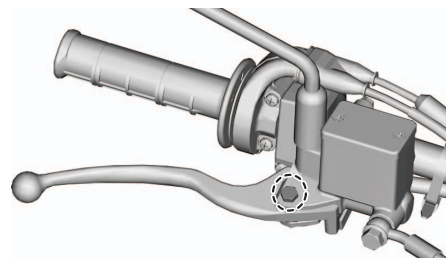

Periodic maintenance and adjustment

Clutch lever

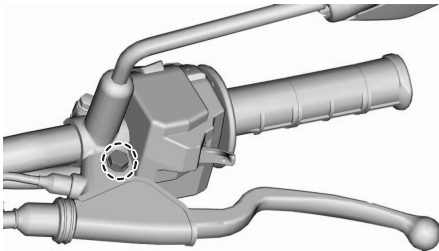

Recommended lubricants:

Brake lever:


Silicone grease

Clutch lever:

Lithium-soap-based grease

Checking and lubricating the sidestand

EAU23203

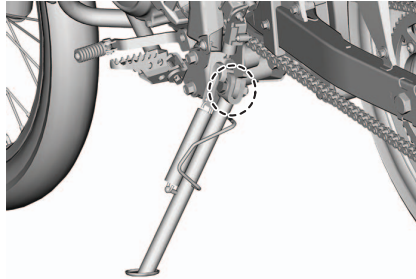

The operation of the sidestand should be checked before each ride, and the sidestand pivot and metal-to-metal contact surfaces should be lubricated if necessary.

EWA10732

WARNING


If the sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it. Otherwise, the sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

Recommended lubricant:

Lithium-soap-based grease

Lubricating the rear suspension

EAU23252

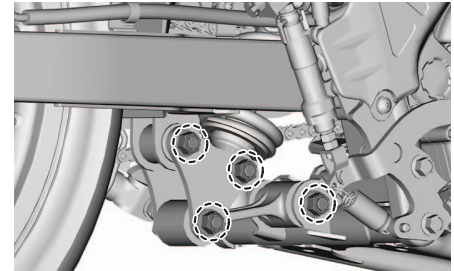

The pivoting points of the rear suspension must be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.


Recommended lubricant:

Lithium-soap-based grease

Periodic maintenance and adjustment

Lubricating the swingarm pivots

EAUM1653

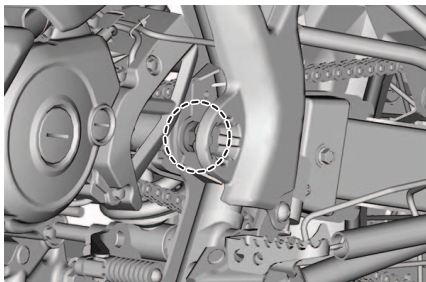

The swingarm pivots must be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Recommended lubricant:
Lithium-soap-based grease

Checking the front fork

EAU23273


The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.

To check the operation

1. Place the vehicle on a level surface and hold it in an upright position. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.

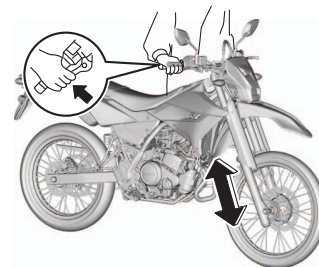

ECA10591

NOTICE


If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.

EAU23285

Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Raise the front wheel off the ground. (See page 8-37.)
WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over. [EWA10752]
2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

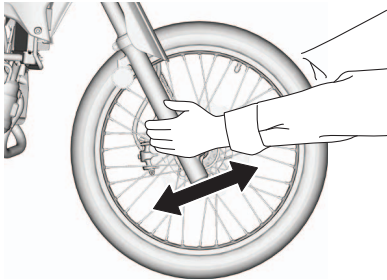


EAU23292

Checking the wheel bearings

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

EAU23377

Battery

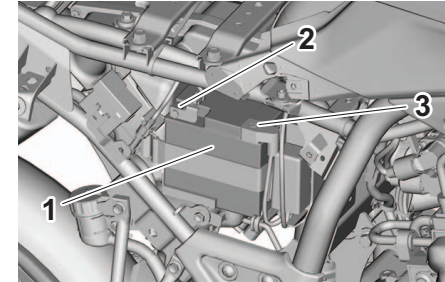

1. Battery
2. Negative battery lead (black)
3. Positive battery lead (red)

This model is equipped with a VRLA (Valve Regulated Lead Acid) battery. There is no need to check the electrolyte or to add distilled water. However, the battery lead connections need to be checked and, if necessary, tightened.

EWA10761

WARNING

- **Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe burns. Avoid any contact with skin, eyes or clothing and al-**

Periodic maintenance and adjustment

8

ways shield your eyes when working near batteries. In case of contact, administer the following **FIRST AID**.

- **EXTERNAL:** Flush with plenty of water.
- **INTERNAL:** Drink large quantities of water or milk and immediately call a physician.
- **EYES:** Flush with water for 15 minutes and seek prompt medical attention.
- Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.
- **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**

ECA10621

NOTICE

Never attempt to remove the battery cell seals, as this would permanently damage the battery.

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to have discharged. Keep in mind that the battery tends to discharge more quickly if the vehicle is equipped with optional electrical accessories.

ECA16522

NOTICE

To charge a VRLA (Valve Regulated Lead Acid) battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery.

To store the battery

1. If the vehicle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place.
NOTICE: When removing the battery, be sure to turn the main switch off, then disconnect the negative lead before disconnecting the positive lead. [ECA16304]
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary.

3. Fully charge the battery before installation. **NOTICE:** When installing the battery, be sure to turn the main switch off, then connect the positive lead before connecting the negative lead.

[ECA16842]

4. After installation, make sure that the battery leads are properly connected to the battery terminals.

ECA16531

NOTICE


Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.

EAUN5290

Replacing the fuses


The fuse boxes and individual fuses are located under the seat (See page 5-15.) and behind panel A (See page 8-9.)

To access fuse box 1, remove the seat. (See page 5-15.)

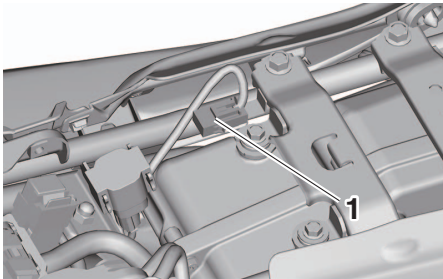

1. Headlight fuse

To access fuse box 2, remove panel A. (See page 8-9.)

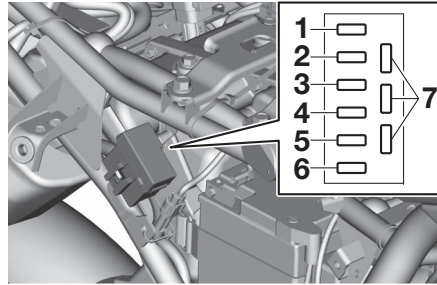

1. Ignition fuse
2. Signaling system fuse
3. Backup fuse
4. ABS solenoid fuse
5. ABS motor fuse
6. Main fuse
7. Spare fuse

If a fuse is blown, replace it as follows.

1. Turn the key to "OFF" and turn off the electrical circuit in question.
2. Remove the blown fuse, and then install a new fuse of the specified amperage. **WARNING! Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.** [EWA15132]

Specified fuses:

- Main fuse:
20.0 A
- Headlight fuse:
5.0 A
- Signaling system fuse:
15.0 A
- Ignition fuse:
15.0 A
- ABS motor fuse:
15.0 A
- ABS solenoid fuse:
5.0 A
- Backup fuse:
5.0 A


3. Turn the key to "ON" and turn on the electrical circuit in question to check if the device operates.
4. If the fuse immediately blows again, have a Yamaha dealer check the electrical system.

Periodic maintenance and adjustment

Vehicle lights

This model is equipped with LED lights for headlights and brake/tail light. If a light does not come on, check the fuse and then have a Yamaha dealer check the vehicle.

EAU97660

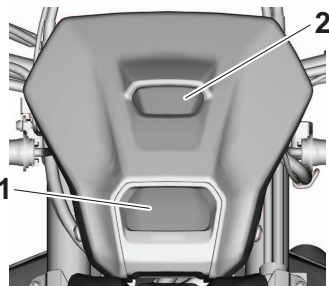

1. Headlight
2. Auxiliary light

NOTICE

Do not affix any type of tinted film or stickers to the headlight lens.


ECA16581

Replacing the auxiliary light bulb

EAUN5241


If the auxiliary light bulb burns out, replace it as follows.

1. Remove the headlight cowling by removing the bolts.

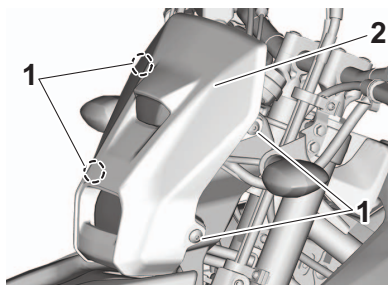

1. Bolt
2. Headlight cowling

2. Remove the auxiliary light bulb socket (together with the bulb) by pulling it out.

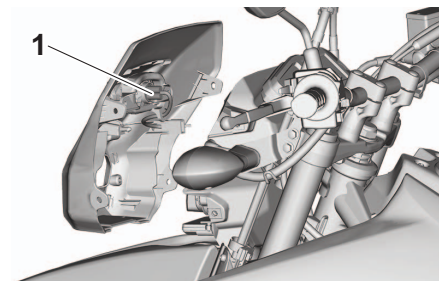


1. Auxiliary light bulb socket

3. Remove the burnt-out bulb by pulling it out.
4. Insert a new bulb into the socket.
5. Install the socket (together with the bulb) by pushing it in.
6. Install the headlight cowling by placing it in the original position, and then installing the bolts.

EAU24205

Replacing a turn signal light bulb

1. Remove the turn signal light lens by removing the screw.

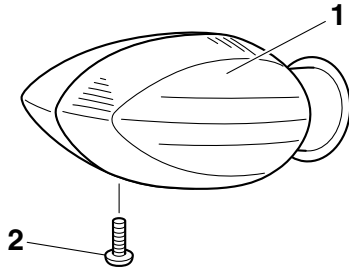

1. Turn signal light lens
2. Screw

2. Remove the burnt-out bulb by pushing it in and turning it counterclockwise.
3. Insert a new bulb into the socket, push it in, and then turn it clockwise until it stops.
4. Install the lens by installing the screw. **NOTICE: Do not over-tighten the screw, otherwise the lens may break.** [ECA11192]


EAU24331

License plate light

If the license plate light does not come on, have a Yamaha dealer check the electrical circuit or replace the bulb.

EAU67131

Supporting the motorcycle

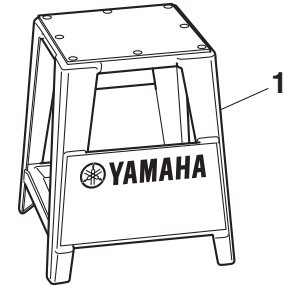

1. Maintenance stand (example)

Since this model is not equipped with a centerstand, use maintenance stands when removing the front or rear wheel or when performing other maintenance that requires the motorcycle to stand up right.

Check that the motorcycle is in a stable and level position before starting any maintenance.

Periodic maintenance and adjustment

Front wheel

EAUE3880

The front wheel contains components that are part of the anti-lock brake system. To prevent ABS malfunction due to wheel damage or improper installation, Yamaha recommends the wheel be professionally serviced.

EWAE0050



WARNING

Have a Yamaha dealer remove and install the wheel.

Rear wheel

EAU25081

EAU57901

EWA10822


To remove the rear wheel



WARNING

To avoid injury, securely support the vehicle so there is no danger of it falling over.

1. Loosen the locknut and drive chain slack adjusting nut on each side of the swingarm.
2. Remove the cap from the axle nut. (See page 8-27.)
3. Loosen the axle nut.

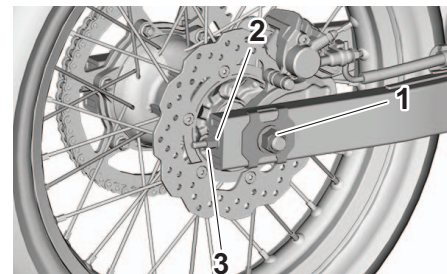

1. Axle nut
2. Drive chain slack adjusting nut
3. Locknut

4. Lift the rear wheel off the ground according to the procedure on page 8-37.
5. Remove the axle nut.
6. Push the wheel forward, and then remove the drive chain from the rear sprocket.


TIP

- If the drive chain is difficult to remove, remove the wheel axle first, and then lift the wheel upward enough to remove the drive chain from the rear sprocket.

Periodic maintenance and adjustment

- The drive chain does not need to be disassembled in order to remove and install the rear wheel.

7. While supporting the brake caliper and slightly lifting the wheel, pull the wheel axle out.

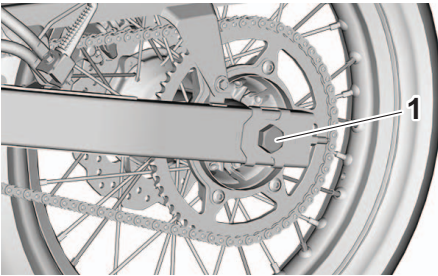

1. Wheel axle

TIP

A rubber mallet may be useful to tap the wheel axle out.


8. Remove the wheel. **NOTICE: Do not apply the brake after the wheel and brake disc have been removed, otherwise the brake pads will be forced shut.** [ECA11073]

To install the rear wheel

1. Install the wheel and the brake caliper bracket by inserting the wheel axle from the left-hand side.

TIP

- Make sure that the slot in the brake caliper bracket is fit over the retainer on the swingarm.
- Make sure that there is enough space between the brake pads before installing the wheel.

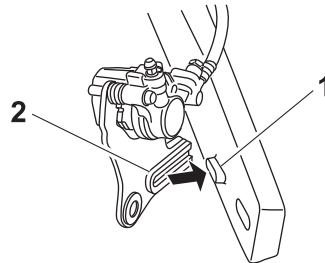

1. Retainer
2. Slot

2. Install the drive chain onto the rear sprocket.
3. Install the axle nut.

4. Lower the rear wheel so that it is on the ground, and then put the sidestand down.
5. Adjust the drive chain slack. (See page 8-27.)
6. Tighten the axle nut, and then tighten the locknuts to the specified torques.

Tightening torques:

Axle nut:

69 N·m (6.9 kgf·m, 51 lb·ft)

Locknut:

16 N·m (1.6 kgf·m, 12 lb·ft)

7. Install the cap to covering the axle nut.

Periodic maintenance and adjustment

EAU25873

Troubleshooting

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15142




When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water


heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.

Troubleshooting chart


1. Fuel

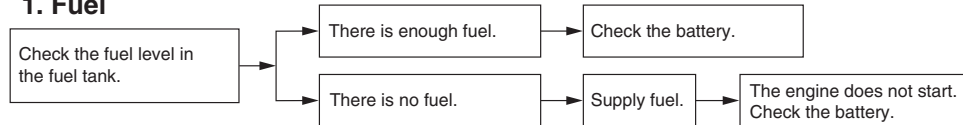


2. Battery

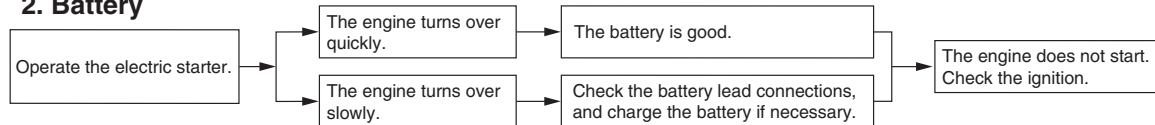

3. Ignition

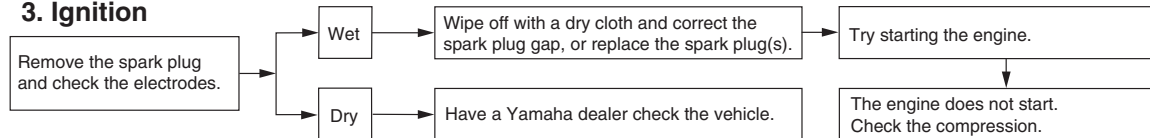

4. Compression

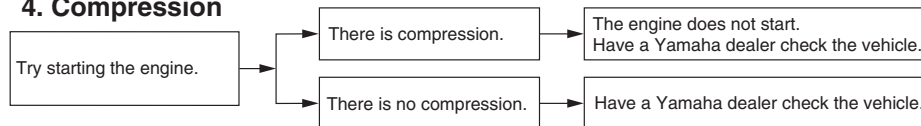

Periodic maintenance and adjustment


Engine overheating

EAU86420

EWAT1041

WARNING

- Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.
- Place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.

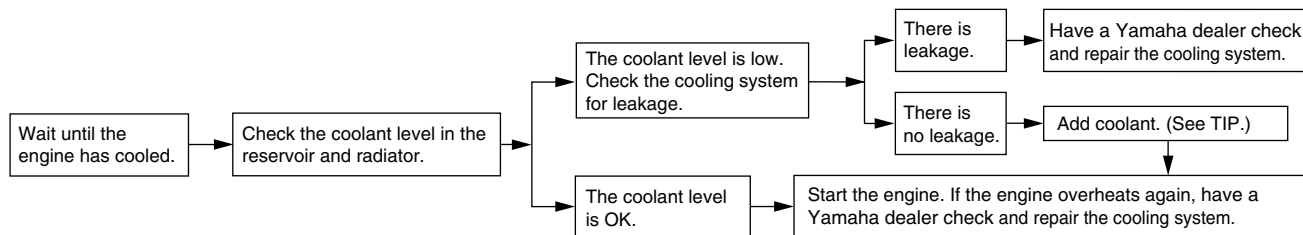

TIP

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible.

Matte color caution

EAU37834

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

ECA15193

Care

Frequent, thorough cleaning of the vehicle will not only enhance its appearance but also will improve its general performance and extend the useful life of many components. Washing, cleaning, and polishing will also give you a chance to inspect the condition of the vehicle more frequently. Be sure to wash the vehicle after riding in the rain or near the sea, because salt is corrosive to metals.

Special care in winter

NOTICE

In cold weather, when roads may be salted as a de-icing method, it's important to clean the vehicle thoroughly to remove road salt and avoid corrosion. Wheel spokes, bolts/nuts and other unpainted metal parts can be especially vulnerable to corrosion from road salt. Apply an anti-corrosion product to any vulnerable parts after washing and drying the vehicle.

EAU83914

ECA28181

TIP

- The roads of heavy snowfall areas may be sprayed with salt as a de-icing method. This salt can stay on the roads well into spring, so be sure to wash the underside and chassis parts after riding in such areas.
- Genuine Yamaha care and maintenance products are sold under the YAMALUBE brand.
- See your Yamaha dealer for additional cleaning tips.

ECA26280

NOTICE

Improper cleaning can cause cosmetic and mechanical damage. Do not use:

- high-pressure washers or steam-jet cleaners. Excessive water pressure may cause water seepage and deterioration of wheel bearings, brakes, transmission seals and electrical devices. Avoid high-pressure detergent applications such as those available in coin-operated car washers.

Motorcycle care and storage

- harsh chemicals, including strong acidic wheel cleaners, especially on spoke or magnesium wheels.
 - harsh chemicals, abrasive cleaning compounds, or wax on matte-finished parts. Brushes can scratch and damage the matte-finish, use soft sponge or towel only.
 - towels, sponges, or brushes contaminated with abrasive cleaning products or strong chemicals such as, solvents, gasoline, rust removers, brake fluid, or antifreeze, etc.
5. Remove road grime and oil stains with a biodegradable degreaser (YAMACLEAN Pro-Wash Spray) and a plastic-bristle brush or sponge. **NOTICE: Do not use degreasing agent on areas requiring lubrication such as seals, gaskets, and wheel axles. Follow product instructions.**

[ECA26290]

Washing

1. Rinse off any degreaser and spray down the vehicle with a garden hose. Use only enough pressure to do the job. Avoid spraying water directly into the muffler, instrument panel, air inlet, or other inner areas such as underseat storage compartments.
2. Wash the vehicle with a quality automotive-type detergent (YAMALUBE Wash & Wax) mixed with cool water and a soft, clean towel or sponge. Use an old toothbrush or plastic-bristle brush for hard-to-reach places. **NOTICE: Use cold water if the vehicle has**

been exposed to salt. Warm water will increase salt's corrosive properties. [ECA26301]

3. For windshield-equipped vehicles: Clean the windshield with a soft towel or sponge dampened with water and a pH neutral detergent. If necessary, use a high-quality windshield cleaner (YAMACLEAN Glass Cleaner) or windshield polish. **NOTICE: Never use any strong chemicals to clean the windshield. Additionally, some cleaning compounds for plastic may scratch the windshield, so be sure to test all cleaning products before general application.**

[ECA26310]

4. Rinse off thoroughly with clean water. Be sure to remove all detergent residues, as they can be harmful to plastic parts.

After washing

1. Dry the vehicle with a chamois or absorbent towel, preferably microfiber terrycloth.

Before washing

1. Park the vehicle out of direct sunlight and allow it to cool. This will help avoid water spots.
2. Make sure all caps, covers, electrical couplers and connectors are tightly installed.
3. Cover the muffler end with a plastic bag and a strong rubber band.
4. Pre-soak stubborn stains like insects or bird droppings with a wet towel for a few minutes.

2. For drive chain-equipped models, dry and then lubricate it to prevent rust.
 3. Use a chrome polish to shine chrome, aluminum, and stainless steel parts. Often the thermally induced discoloring of stainless steel exhaust systems can be removed through polishing.
 4. Apply a corrosion protection spray (YAMALUBE Silicone Protectant & Lubricant) on all metal parts including chrome or nickel-plated surfaces. **WARNING! Do not apply silicone or oil spray to seats, hand grips, rubber foot pegs or tire treads. Otherwise these parts will become slippery, which could cause loss of control. Thoroughly clean the surfaces of these parts before operating the vehicle.** [EWA20651]
 5. Treat rubber, vinyl, and unpainted plastic parts with a suitable care product (YAMACLEAN Vinyl Dressing).
 6. Touch up minor paint damage caused by stones, etc.
 7. Wax all painted surfaces using a non-abrasive wax or use a detail spray for motorcycles (YAMALUBE Spray Polish & Instant Detailer).
 8. When finished cleaning, start the engine and let it idle for several minutes to help dry any remaining moisture.
 9. If the headlight lens has fogged up, start the engine and turn on the headlight to help remove the moisture.
 10. Let the vehicle dry completely before storing or covering it.
- ECA26320
- NOTICE**
- Do not apply wax to rubber or unpainted plastic parts.
 - Do not use abrasive polishing compounds as they will wear away the paint.
 - Apply sprays and wax sparingly. Wipe off excess afterwards.
- EWA20660
- ! WARNING**
- Contaminants left on the brakes or tires can cause loss of control.**
- Make sure there is no lubricant or wax on the brakes or tires.
 - If necessary, wash the tires with warm water and a mild detergent.
 - If necessary, clean the brake discs and pads with brake cleaner or acetone.
 - Before riding at higher speeds, test the vehicle's braking performance and cornering behavior.

Motorcycle care and storage

Storage

Always store the vehicle in a cool, dry place. If necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the vehicle. If the vehicle often sits for weeks at a time between uses, the use of a quality fuel stabilizer (Fuel Med RX) is recommended after each fill-up.

EAU84141

ECA21170

NOTICE

- **Storing the vehicle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.**
- **To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.**

Long term storage

Before storing the vehicle long term (60 days or more):

1. Make all necessary repairs and perform any outstanding maintenance.
2. Follow all instructions in the Care section of this chapter.
3. Fill up the fuel tank, adding fuel stabilizer according to product instructions. Run the engine for 5 minutes to distribute treated fuel through the fuel system.
4. For vehicles equipped with a fuel cock: Turn the fuel cock lever to the off position.
5. For vehicles with a carburetor: To prevent fuel deposits from building up, drain the fuel in the carburetor float chamber into a clean container. Retighten the drain bolt and pour the fuel back into the fuel tank.
6. Use a quality engine fogging oil (YAMALUBE Stor-Rite Engine Fogging Oil) according to product instructions to protect internal engine components from corrosion. If engine fogging oil is not available, perform the following steps for each cylinder:
 - a. Remove the spark plug cap and spark plug.
 - b. Pour a teaspoonful of engine oil into the spark plug bore.
 - c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
 - d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.)
WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.
7. Lubricate all control cables, pivots, levers and pedals, as well as the sidestand and centerstand (if equipped).

[EWA10952]

8. Check and correct the tire air pressure, and then lift the vehicle so that all wheels are off the ground. Otherwise, turn the wheels a little once a month in order to prevent the tires from becoming degraded in one spot.
9. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
10. Remove the battery and fully charge it, or attach a maintenance charger to keep the battery optimally charged. **NOTICE: Confirm that the battery and its charger are compatible. Do not charge a VRLA battery with a conventional charger.** [ECA26330]

TIP

- If the battery will be removed, charge it once a month and store it in a temperate location between 32-90 °F (0-30 °C).
 - See page 8-33 for more information on charging and storing the battery.
-

Specifications

Dimensions:

Overall length:
2160 mm (85.0 in)
Overall width:
840 mm (33.1 in)
Overall height:
1195 mm (47.0 in)
Seat height:
875 mm (34.4 in)
Wheelbase:
1430 mm (56.3 in)
Ground clearance:
240 mm (9.45 in)
Minimum turning radius:
2.4 m (7.87 ft)

Weight:

Curb weight:
138 kg (304 lb)

Engine:

Combustion cycle:
4-stroke
Cooling system:
Liquid cooled
Valve train:
SOHC
Number of cylinders:
Single cylinder
Displacement:
125 cm³
Bore × stroke:
52.0 × 58.7 mm (2.05 × 2.31 in)
Starting system:
Electric starter

Engine oil:

Recommended brand:



SAE viscosity grades:
10W-40
Recommended engine oil grade:
API service SG type or higher, JASO
standard MA
Engine oil quantity:
Oil change:
0.85 L (0.90 US qt, 0.75 Imp.qt)
With oil filter removal:
0.95 L (1.00 US qt, 0.84 Imp.qt)

Coolant quantity:

Coolant reservoir (up to the maximum level
mark):
0.15 L (0.16 US qt, 0.14 Imp.qt)
Radiator (including all routes):
0.60 L (0.63 US qt, 0.53 Imp.qt)

Fuel:

Recommended fuel:
Unleaded gasoline (E10 acceptable)
Octane number (RON):
90
Fuel tank capacity:
8.1 L (2.1 US gal, 1.8 Imp.gal)
Fuel reserve amount:
1.6 L (0.42 US gal, 0.35 Imp.gal)

Fuel injection:

Throttle body:
ID mark:
BWN1

Drivetrain:

Gear ratio:
1st:
2.833 (34/12)
2nd:
1.875 (30/16)
3rd:
1.364 (30/22)
4th:
1.143 (24/21)
5th:
0.957 (22/23)
6th:
0.840 (21/25)

Front tire:

Type:
With tube
Size:
2.75-21 45P
Manufacturer/model:
DUNLOP/D605FJ

Rear tire:

Type:
With tube
Size:
4.10-18 59P
Manufacturer/model:
DUNLOP/D605J

Loading:

Maximum load:

160 kg (353 lb)

(Total weight of rider, passenger, cargo and accessories)

Auxiliary light:

5.0 W

License plate light:

5.0 W

Front brake:

Type:

Hydraulic single disc brake

Rear brake:

Type:

Hydraulic single disc brake

Front suspension:

Type:

Telescopic fork

Rear suspension:

Type:

Swingarm (link suspension)

Electrical system:

System voltage:

12 V

Battery:

Model:

YTZ6V

Voltage, capacity:

12 V, 5.0 Ah (10 HR)

Bulb wattage:

Headlight:

LED

Brake/tail light:

LED

Front turn signal light:

10.0 W

Rear turn signal light:

10.0 W

Consumer information

Identification numbers

Record the vehicle identification number, engine serial number, model label information, and the key identification number in the spaces provided below. These identification numbers are needed when registering the vehicle with the authorities in your area and when ordering spare parts from a Yamaha dealer.

VEHICLE IDENTIFICATION NUMBER:

ENGINE SERIAL NUMBER:


MODEL LABEL INFORMATION:

EAU26357

KEY IDENTIFICATION NUMBER:

Vehicle identification number

EAU26401

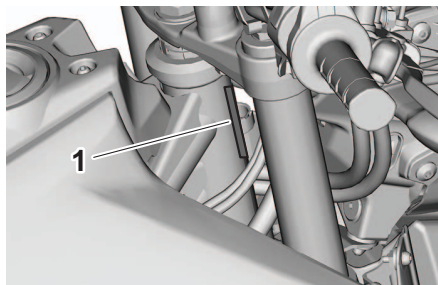

1. Vehicle identification number


The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.

TIP

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

Engine serial number

EAUU1221

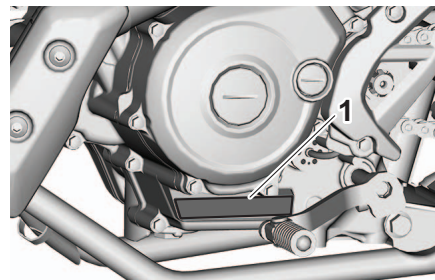


1. Engine serial number

The engine serial number is stamped on the bottom left side of the crankcase.

Model label

EAU26542

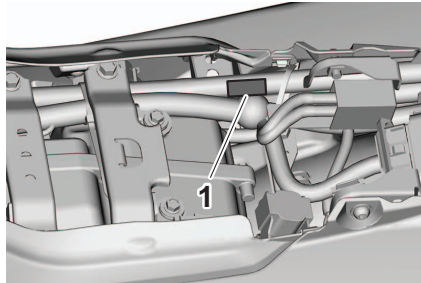


1. Model label

The model label is affixed to the frame under the seat. (See page 5-15.) Record the information on this label in the space provided. This information will be needed when ordering spare parts from a Yamaha dealer.

Key identification number

EAU26382

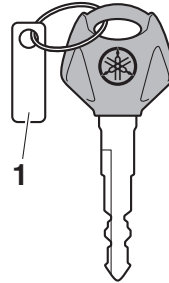


1. Key identification number

The key identification number is stamped into the key tag. Record this number in the space provided and use it for reference when ordering a new key.

Vehicle Emission Control Information label

EAU48271

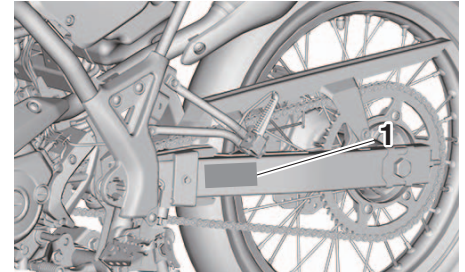

1. Vehicle Emission Control Information label

The Vehicle Emission Control Information label is affixed at the location in the illustration. This label shows specifications related to exhaust emissions as required by federal law, state law and Environment Canada.

Consumer information

EAUA3050

Emission Regulation (California)

An add-on or modified part must be compliant with applicable ARB evaporative emission control standards. A violation of this requirement is punishable by civil and/or criminal punishment.

Use of your vehicle data

This is a brief summary of how Yamaha (Yamaha Motor Co., Ltd., and Yamaha Motor Corporation, U.S.A.) uses your vehicle data. For more details, please review our Privacy Policy.

<https://yamaha-motor.com/privacy-policy>

What vehicle data we collect? and How we collect your vehicle data?

This vehicle collects three types of vehicle data through integrated Engine Control Units (ECU).:

(1) Vehicle Identification Number (VIN); (2) live data showing the performance of the vehicle such as engine/motor operating state, vehicle speed, mileage; and (3) other data showing the status of the vehicle such as diagnostic trouble code (DTC). The collected data will be uploaded to server at Yamaha Motor Co., Ltd. by attaching a special Yamaha diagnostic tool to the vehicle, only when maintenance checks or service procedures are performed.

How will we use your vehicle data?

Yamaha use collected data from your vehicle, (1) to conduct adequate maintenance service including diagnostics, (2) to implement proper warranty claim judgement, (3) to conduct research and development of vehicle, (4) to provide and improve quality of products, features, and services, (5) to ensure our business purpose, and (6) to comply with legal obligations or lawful orders, and to establish or defend legal claims.

How we disclose your vehicle data?

We may make your vehicle data available with: (i) our subsidiaries, affiliates, and business partners; (ii) dealers in your country or region, and (iii) contractors within the scope necessary to achieve the purpose of use described above.

How long will we retain your vehicle data?

We will retain your vehicle data for the shortest period of time possible/the time necessary to achieve the above listed purposes.

Consumer information

How to contact us?

Any questions or complaints regarding the processing of your vehicle data can be submitted in writing to:

Yamaha Motor Corporation, U.S.A.

Attn: Privacy Office

6555 Katella Avenue Cypress, California 90630-5101

The SOLE PURPOSE of above provided contact information is TO RESPOND DATA PROCESSING INQUIRY AND OTHER KINDS OF INQUIRIES WILL NOT BE RESPONDED. Please provide the following information for the proper handling of your inquiry: **(1) Your Name; (2) Your Email Address; (3) Your Country of Residence; and (4) Your VIN.** We will use your personal information provided only for the purpose of supporting your data processing inquiry.

Reporting safety defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Yamaha Motor Corporation, U.S.A. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Yamaha Motor Corporation, U.S.A.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to <http://www.safercar.gov>; or write to: Administrator, NHTSA, 1200 New Jersey Avenue, SE, West Building, Washington, DC 20590. You can also obtain other information about motor vehicle safety from <http://www.safercar.gov>.

Motorcycle noise regulation

TAMPERING WITH NOISE CONTROL SYSTEM PROHIBITED:

Federal law prohibits the following acts or the causing thereof: (1) The removal or rendering inoperative by any person other than for purposes of maintenance, repair, or replacement of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use or (2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

“AMONG THOSE ACTS PRESUMED TO CONSTITUTE TAMPERING ARE THE ACTS LISTED BELOW”.

These acts include tampering with the following systems; i.e., modification, removal, etc.

Exhaust system

- Muffler
- Exhaust pipe
- Silencer

Intake system

- Air cleaner case
- Air cleaner element
- Intake duct

Maintenance record

Copies of work orders and/or receipts for parts purchased and installed on your motorcycle will be required to document that maintenance has been completed in accordance with the emissions warranty. The chart below is printed only as a reminder that maintenance work is required. It is not acceptable proof of maintenance work.

Maintenance interval	Date of service	Mileage	Servicing dealer name and address	Remarks
600 mi (1000 km) or 1 month				
2000 mi (4000 km) or 6 months				
4000 mi (7000 km) or 12 months				
6000 mi (10000 km) or 18 months				
8000 mi (13000 km) or 24 months				
10000 mi (16000 km) or 30 months				
12000 mi (19000 km) or 36 months				
14000 mi (22000 km) or 42 months				
16000 mi (25000 km) or 48 months				

Consumer information

Maintenance interval	Date of service	Mileage	Servicing dealer name and address	Remarks
18000 mi (28000 km) or 54 months				
20000 mi (31000 km) or 60 months				

YAMAHA MOTOR CORPORATION, U.S.A. 2020 AND LATER MODEL STREET & DUAL-PURPOSE MOTORCYCLE LIMITED WARRANTY

Yamaha Motor Corporation, U.S.A. hereby warrants that each new Yamaha motorcycle purchased from an authorized Yamaha motorcycle dealer in the continental United States will be free from defects in material and workmanship for the period of time stated herein, subject to certain stated limitations.

THE PERIOD OF WARRANTY for Yamaha motorcycles originally equipped with headlight, stoplight, and turn signals shall be one (1) year from the date of purchase, with no mileage limitation, except for the battery, which is warranted for thirty (30) days from the date of purchase.

DURING THE PERIOD OF WARRANTY any authorized Yamaha motorcycle dealer will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. All parts replaced under warranty become the property of Yamaha Motor Corporation, U.S.A.

GENERAL EXCLUSIONS from this warranty shall include any failures caused by:

- Competition or racing use.
- Installation of parts or accessories that are not qualitatively equivalent to genuine Yamaha parts.
- Abnormal strain, neglect, or abuse.
- Lack of proper maintenance and off-season storage as described in the Owner's Manual.
- Accident or collision damage.
- Modification to original parts.
- Damage due to improper transportation

SPECIFIC EXCLUSIONS from this warranty shall include parts replaced due to normal wear or routine maintenance.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to:

- Operate and maintain the motorcycle as specified in the appropriate Owner's Manual, and

- Give notice to an authorized Yamaha motorcycle dealer of any and all apparent defects within ten (10) days after discovery, and make the machine available at that time for inspection and repairs at such dealer's place of business.

WARRANTY TRANSFER: To transfer the warranty from the original purchaser to any subsequent purchaser, it is imperative that the machine be inspected and registered for warranty by an authorized Yamaha motorcycle dealer. In order for this warranty to remain in effect, this inspection and registration must take place within ten (10) days after transfer. A reasonable dealer-imposed fee may be charged for the inspection.

EMISSIONS CONTROL SYSTEM WARRANTY

Yamaha Motor Corporation, U.S.A. also warrants to the ultimate purchaser and each subsequent purchaser of each Yamaha motorcycle covered by this warranty that the vehicle is designed, built, and equipped so as to conform at the time of sale with all U.S. emissions standards applicable at the time of manufacture and that it is free from defects in materials and workmanship which would cause it not to meet these standards within the periods listed immediately below. Failures other than those resulting from defects in material or workmanship which arise solely as a result of owner abuse and/or lack of proper maintenance are not covered by this warranty.

ENGINE DISPLACEMENT

DISPLACEMENT	PERIOD
Under 50cc	6,000 km (3,750 miles) or five years, whichever occurs first
50cc to 169cc	12,000 km (7,465 miles) or five years, whichever occurs first
170cc to 279cc	18,000 km (11,185 miles) or five years, whichever occurs first
280cc or over	30,000 km (18,641 miles) or five years, whichever occurs first

YAMAHA MOTOR CORPORATION, U.S.A. MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITS STATED IN THIS WARRANTY ARE HEREBY DISCLAIMED BY YAMAHA MOTOR CORPORATION, U.S.A. AND EXCLUDED FROM THIS WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. ALSO EXCLUDED FROM THIS WARRANTY ARE ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING LOSS OF USE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

YAMAHA MOTOR CORPORATION, U.S.A.
Post Office Box 6555
Cypress, California 90630
1-800-962-7926

Consumer information

WARRANTY QUESTIONS AND ANSWERS

- Q. What costs are my responsibility during the warranty period?
- A. The customer's responsibility includes all costs of normal maintenance services, non-warranty repairs, accident and collision damages, and oil, oil filters, air filters, spark plugs, and brake shoes.
- Q. What are some examples of "abnormal" strain, neglect, or abuse?
- A. These terms are general and overlap each other in areas. Specific examples include: Running the machine out of oil, sustained high rpm, full-throttle, operating the machine with a broken or damaged part which causes another part to fail, damage or failure due to improper or careless transportation and/or tie-down. If you have any specific questions on operation or maintenance, please contact your dealer for advice.
- Q. Does the warranty cover incidental costs such as towing or transportation due to a failure?
- A. No. The warranty is limited to repair of the machine itself.
- Q. May I perform any or all of the recommended maintenance shown in the Owner's Manual instead of having the dealer do them?
- A. Yes, if you are a qualified mechanic and follow the procedures specified in the Owner's and Service Manual. We do recommend, however, that items requiring special tools or equipment be done by a Yamaha motorcycle dealer.
- Q. Will the warranty be void or cancelled if I do not operate or maintain my new motorcycle exactly as specified in the Owner's Manual?
- A. No. The warranty on a new motorcycle cannot be "voided" or "cancelled." **However, if a particular failure is caused by operation or maintenance other than as described in the Owner's Manual, that failure may not be covered under warranty.**
- Q. What responsibility does my dealer have under this warranty?
- A. Each Yamaha motorcycle dealer is expected to:
1. Completely set up every new machine before sale.
 2. Explain the operation, maintenance, and warranty requirements to your satisfaction at the time of sale, and upon your request at any later date.
 3. Each Yamaha motorcycle dealer is held responsible for his setup, service and warranty repair work.
- Q. Is the warranty transferable to second owners?
- A. Yes. The remainder of the existing warranty can be transferred upon request. The unit has to be inspected and re-registered by an authorized Yamaha motorcycle dealer for the policy to remain effective.

CUSTOMER SERVICE

If your machine requires warranty service, you must take it to any authorized Yamaha motorcycle dealer within the continental United States. Be sure to bring your warranty registration card or other valid proof of the original date of purchase. If a question or problem arises regarding the warranty, first contact the owner of the dealership. Since all warranty matters are handled at the dealer level, this person is in the best position to help you. If you are still not satisfied and require additional assistance, please write to:

YAMAHA MOTOR CORPORATION, U.S.A.
CUSTOMER RELATIONS DEPARTMENT
P.O. Box 6555
Cypress, California 90630

When contacting Yamaha Motor Corporation, U.S.A., don't forget to include any important information such as names, addresses, model, VIN (vehicle identification number), dates, and receipts.

CHANGE OF ADDRESS

The federal government requires each manufacturer of a motor vehicle to maintain a complete, up-to-date list of all first purchasers against the possibility of a safety-related defect and recall. This list is compiled from the purchase registrations sent to Yamaha Motor Corporation, U.S.A. by the selling dealer at the time of your purchase.

If you should move after you have purchased your new motorcycle, please advise us of your new address by sending a postcard listing your motorcycle model name, VIN number, dealer number (or dealer's name) as it is shown on your warranty card, your name and new mailing address. Mail to:

YAMAHA MOTOR CORPORATION, U.S.A.
1270 Chastain Road
Kennesaw, GA 30144
Attention: Warranty Department

This will ensure that Yamaha Motor Corporation, U.S.A. has an up-to-date registration record in accordance with federal law.

YAMAHA EXTENDED SERVICE (Y.E.S.)

Keep your Yamaha protected even after your limited warranty expires with genuine Yamaha Extended Service (Y.E.S.).

- Y.E.S. is designed and administered by Yamaha Motor Corporation to provide maximum owner satisfaction. It provides uninterrupted factory-backed coverage for extra peace of mind.
- Y.E.S. is flexible. You choose the plan that's right for you: 12 months, 24 months, 36 months or, on certain models, even 48 months beyond your warranty period.
- Y.E.S. is designed and administered by the same Yamaha people who handle your warranty – and it shows in the comprehensive coverage benefits. There are no mileage limitations. Coverage isn't limited to "moving parts" or the "drivetrain" like many other plans. And Y.E.S. covers manufacturing defects just like the warranty. See the sample contract at your Yamaha dealer to see how comforting uninterrupted factory-backed protection can be.
- You don't have to pay anything for covered repairs. There's no deductible to pay, and repairs aren't "pro-rated." You don't have any "out-of-pocket" expenses for covered repairs.

- In addition, Travel and Recreation Interruption Protection (TRIP) is included at no extra cost. TRIP gives you up to \$250 reimbursement per occurrence for any reasonable expenses you incur because your Yamaha needs covered service: replacement vehicle rental, emergency towing, phone calls, even food and lodging when you are away from home. This superb coverage goes into effect when you purchase Y.E.S., so it applies to any warranty repairs as well as covered repairs during your entire Y.E.S. plan period.
- Y.E.S. coverage is honored at any authorized Yamaha dealer nationwide.
- Y.E.S. coverage is transferable to a new owner if you sell or trade-in. That can make your Yamaha much more valuable!

This excellent Y.E.S. plan coverage is only available to Yamaha owners like you, and only while your Yamaha is still within the Yamaha Limited Warranty period. So visit your authorized Yamaha dealer to get all the facts. They can show you how easy it is to protect your investment with Yamaha Extended Service.

Consumer information

We urge you to act now. You'll get the excellent benefits of TRIP coverage right away, and you'll rest easy knowing you'll have strong factory-backed protection even after your Yamaha Limited Warranty expires.

A special note:

If visiting your dealer isn't convenient, contact Yamaha with your VIN number and we'll be happy to help you get the Y.E.S. coverage you need.

Yamaha Service Marketing
P.O. Box 6555
Cypress, CA 90630
1-(866)-YES-EXTD (1-866-937-3983)



YAMAHA



EXTENDED



SERVICE

- A**
- ABS..... 5-11
 - ABS warning light..... 5-3
 - Air filter element and check hose, replacing and cleaning 8-17
 - Auxiliary light bulb, replacing 8-36
- B**
- Battery 8-33
 - Brake and clutch levers, checking and lubricating 8-30
 - Brake and shift pedals, checking and lubricating 8-30
 - Brake fluid, changing..... 8-26
 - Brake fluid level, checking..... 8-25
 - Brake lever..... 5-11
 - Brake lever free play, checking 8-23
 - Brake light switches 8-24
 - Brake pedal 5-11
- C**
- Cables, checking and lubricating 8-29
 - Canister 8-12
 - Care 9-1
 - Catalytic converter 5-15
 - CCU (Communication Control Unit) 4-1
 - Clock 5-7
 - Clutch lever..... 5-10
 - Clutch lever free play, adjusting 8-22
 - Coolant..... 8-15
 - Coolant temperature warning light..... 5-2
- D**
- Dimmer switch..... 5-9
 - Display units, switching 5-4
 - Drive chain, cleaning and lubricating ... 8-28
 - Drive chain slack 8-27
- E**
- Emission Regulation (California) 11-3
 - Engine break-in 7-1
 - Engine idling speed, checking 8-19
 - Engine oil and oil filter element 8-12
 - Engine overheating 8-42
 - Engine serial number 11-1
 - Engine stop switch..... 5-10
 - Engine trouble warning light 5-3
- F**
- FCC rules and regulation 4-3
 - Front and rear brake pads, checking ... 8-24
 - Front fork, checking 8-32
 - Fuel 5-13
 - Fuel meter 5-5
 - Fuel tank cap..... 5-12
 - Fuel tank overflow hose 5-14
 - Fuses, replacing 8-35
- H**
- Handlebar switches 5-9
 - High beam indicator light..... 5-2
 - Horn switch 5-10
- I**
- Identification numbers 11-1
 - Ignition circuit cut-off system 5-18
 - Incoming call icon 5-4
 - Incoming notification icon..... 5-4
 - Indicator lights and warning light 5-2
 - Initial setup: Yamaha Motorcycle Connect app 4-1
- K**
- Key identification number 11-2
- L**
- Labels, location 1-1
- License plate light..... 8-37
- M**
- Main switch/steering lock..... 5-1
 - Maintenance and lubrication, periodic ... 8-5
 - Maintenance, emission control system 8-3
 - Maintenance record..... 11-8
 - Matte color, caution..... 9-1
 - Model label 11-2
 - Multi-function display 5-6
 - Multi-function meter unit 5-3
- N**
- Neutral indicator light 5-2
 - Noise regulation..... 11-7
- P**
- Panels, removing and installing 8-9
 - Parking..... 7-4
 - Part locations..... 3-1
 - Pass switch..... 5-9
- R**
- Rear suspension, lubricating 8-31
- S**
- Safety defects, reporting 11-6
 - Safety information..... 2-1
 - Scanning the CCU QR code..... 4-3
 - Seat..... 5-15
 - Shifting..... 7-3
 - Shift pedal..... 5-10
 - Shock absorber assembly, adjusting ... 5-17
 - Sidestand..... 5-18
 - Sidestand, checking and lubricating 8-31
 - Smartphone battery level meter 5-4
 - Spark arrester, cleaning..... 8-18
 - Spark plug, checking..... 8-10

Index

Specifications	10-1
Speedometer	5-5
Starting the engine.....	7-2
Start switch.....	5-10
Steering, checking	8-33
Storage	9-4
Supporting the motorcycle	8-37
Swingarm pivots, lubricating	8-32

T

Tachometer.....	5-5
Throttle grip and cable, checking and lubricating	8-29
Throttle grip free play, adjusting	8-19
Tires	8-20
Tool box.....	5-16
Tool kit	8-2
Transmission gear display	5-6
Troubleshooting	8-40
Troubleshooting chart.....	8-41
Turn signal indicator lights.....	5-2
Turn signal light bulb, replacing.....	8-37
Turn signal switch	5-9

U

Use, your vehicle data	11-4
------------------------------	------

V

Valve clearance.....	8-20
Vehicle Emission Control Information label	11-2
Vehicle identification number	11-1
Vehicle lights.....	8-36
VVA indicator	5-5

W

Warranty, extended	11-12
Warranty, limited.....	11-10

Welcome screen.....	5-8
Wheel bearings, checking	8-33
Wheel (front)	8-38
Wheel (rear)	8-38
Wheels.....	8-22

Y

Yamaha Motorcycle Connect icon	5-4
Yamalube	8-15

For your best ownership experience, think **Genuine Yamaha!**

Genuine Yamaha Parts – Genuine Yamaha replacement parts are the exact same parts as the ones originally equipped on your vehicle, providing you with the performance and durability you have come to expect. Why settle for aftermarket parts that may not provide full confidence and satisfaction?

Genuine Yamaha Accessories – Yamaha only offers accessories that meet our high standards for quality and performance. Buy with confidence, knowing your Genuine Yamaha Accessories will fit right and perform right – right out of the box.

Yamalube – Take care of your Yamaha with legendary Yamalube oils, lubricants, and care products. They're formulated and approved by the toughest judges we know: the Yamaha engineering teams that know your Yamaha from the inside out.

Genuine Yamaha Service Manuals – Get the same factory manual for your vehicle that the technicians at your authorized Yamaha dealer use. Service manuals are available through your Yamaha dealer or you can order them directly through yamahapubs.com (for US consumers only).

Genuine Yamaha products are available only from your Yamaha dealer.

Find out more at:

For US consumers, please visit yamaha-motor.com

For Canadian consumers, please visit yamaha-motor.ca



This Owner's manual is also available online at the
Yamaha Owner's Manual Library.
<https://www.yamahamotorsports.com/yamaha-manuals>

