



2026

OWNER'S SERVICE MANUAL

YZ450F

 **Read this manual carefully before operating this vehicle.**

YZ450FT

LIT-11626-39-20

D03-2819U-10



WARNING: Operating, servicing and maintaining a passenger vehicle or off-road vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle



Read this manual carefully before operating this vehicle. This manual should stay with this vehicle if it is sold.

Part 15 of FCC Rules

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this device.

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE).

YZ450FT
OWNER'S SERVICE MANUAL
©2026 by Yamaha Motor Corporation, U.S.A.
First edition, April 2025
All rights reserved.
Any reproduction or unauthorized use
without the written permission of
Yamaha Motor Corporation, U.S.A.
is expressly prohibited.
P/N. LIT-11626-39-20

IMPORTANT

Congratulations on your purchase of a Yamaha YZ series. This model is the culmination of Yamaha's vast experience in the production of pacesetting racing machines. It represents the highest grade of craftsmanship and reliability that have made Yamaha a leader.

This manual explains operation, inspection, basic maintenance and tuning of your machine. If you have any questions about this manual or your machine, please contact your Yamaha dealer.

TIP

- Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your machine and this manual. If you have any questions concerning this manual, please consult your Yamaha dealer.
- This manual is intended for those who have basic knowledge and skill concerning the servicing of Yamaha motorcycles (e.g., Yamaha dealers, service engineers, etc.). Those who have little knowledge and skill concerning servicing are requested not to undertake inspection, adjustment, disassembly, or reassembly only by reference to this manual. It may lead to servicing trouble and mechanical damage.



WARNING

PLEASE READ THIS MANUAL CAREFULLY AND COMPLETELY BEFORE OPERATING THIS MACHINE. DO NOT ATTEMPT TO OPERATE THIS MACHINE UNTIL YOU HAVE ATTAINED A SATISFACTORY KNOWLEDGE OF ITS CONTROLS AND OPERATING FEATURES AND UNTIL YOU HAVE BEEN TRAINED IN SAFE AND PROPER RIDING TECHNIQUES. REGULAR INSPECTIONS AND CAREFUL MAINTENANCE, ALONG WITH GOOD RIDING SKILLS, WILL ENSURE THAT YOU SAFELY ENJOY THE CAPABILITIES AND THE RELIABILITY OF THIS MACHINE.

IMPORTANT MANUAL INFORMATION

Particularly important information is distinguished in this manual by the following notations.

	This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.
WARNING	A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
NOTICE	A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.
TIP	A TIP provides key information to make procedures easier or clearer.

YAMAHA MOTOR CORPORATION, U.S.A. 2020 AND LATER MODEL YZ/WR MOTORCYCLE LIMITED WARRANTY

Yamaha Motor Corporation, U.S.A. hereby warrants to the original retail purchaser that the following components equipped on new Yamaha YZ or WR motorcycles purchased from an authorized Yamaha motorcycle dealer in the continental United States will be free from defects in material and workmanship for the period of time stated herein, subject to certain stated limitations. YZ or WR components included under this warranty are the engine, frame, swingarm, and monoshock. It is understood that the balance of the YZ or WR components are not covered by any warranty, expressed or implied. The balance of the components equipped on the unit are sold on an "as is" basis. This warranty applies to the original purchaser only and is not transferable.

THE PERIOD OF WARRANTY for the above-listed Yamaha YZ or WR components as originally installed on the unit shall be thirty (30) days from the date of purchase.

DURING THE PERIOD OF WARRANTY any authorized Yamaha motorcycle dealer will, free of charge, repair or replace, at Yamaha's option, any part adjudged defective by Yamaha due to faulty workmanship or material from the factory. Parts used in warranty repairs will be warranted for the balance of the product's warranty period. All parts replaced under warranty become property of Yamaha Motor Corporation, U.S.A.

GENERAL EXCLUSIONS from this warranty shall include any failures caused by:

- Installation of parts or accessories that are not qualitatively equivalent to genuine Yamaha parts.
- Abnormal strain, neglect, or abuse.
- Accident or collision damage.
- Modification to original parts.
- Lack of proper maintenance.
- Damage due to improper transportation.

SPECIFIC EXCLUSIONS from this warranty shall include parts replaced due to normal wear or routine maintenance.

THE CUSTOMER'S RESPONSIBILITY under this warranty shall be to:

- Operate and maintain the YZ or WR as specified in the appropriate Owner's Service Manual, and
- Give notice to an authorized Yamaha motorcycle dealer of any and all apparent defects within ten (10) days after discovery, and make the machine available at that time for inspection and repairs at such dealer's place of business.

EMISSION CONTROL SYSTEM WARRANTY

Yamaha Motor Corporation, U.S.A. also warrants to the ultimate purchaser and each subsequent purchaser of each 2006 and later model Yamaha WR motorcycle covered by this warranty that the vehicle is designed, built, and equipped so as to conform at the time of sale with all U.S. emissions standards applicable at the time of manufacture and that it is free from defects in materials and workmanship which would cause it not to meet these standards within the period listed immediately below. Failures other than those resulting from defects in material or workmanship which arise solely as a result of owner abuse and/or lack of proper maintenance are not covered by this warranty. YZ models are closed-course use only and are not regulated, and are therefore not covered by this Emission Control System warranty.

All 2006 and Later WR Models

Thirty (30) months from the original purchase date

YAMAHA MOTOR CORPORATION, U.S.A. MAKES NO OTHER WARRANTY OF ANY KIND, EXPRESSED OR IMPLIED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH EXCEED THE OBLIGATIONS AND TIME LIMITS STATED IN THIS WARRANTY ARE HEREBY DISCLAIMED BY YAMAHA MOTOR CORPORATION, U.S.A. AND EXCLUDED FROM THIS WARRANTY.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALSO EXCLUDED FROM THIS WARRANTY ARE ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING LOSS OF USE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

YAMAHA MOTOR CORPORATION, U.S.A.
Post Office Box 6555
Cypress, California 90630
1-800-962-7926

WARRANTY QUESTIONS AND ANSWERS

- Q. What costs are my responsibility during the warranty period?
- A. The customer's responsibility includes all costs of normal maintenance services, non warranty repairs, accident and collision damage, and oil, oil filters, air filters, spark plugs, and brake shoes or pads.
- Q. What are some examples of "abnormal" strain, neglect, or abuse?
- A. These terms are general and overlap each other in areas. Specific examples include: Running the machine without oil; operating the machine with a broken or damaged part which causes another part to fail, damage or failure due to improper or, careless transportation and or tie down; and so on. If you have any specific questions on operation or maintenance, please contact your dealer for advice.
- Q. Does the warranty cover incidental costs such as towing or transportation due to a failure?
- A. No. The warranty is limited to repair of the machine itself.
- Q. May I perform any or all of the recommended maintenance shown in the Owner's Service Manual instead of having the dealer do them?
- A. Yes, if you are a qualified mechanic and follow the procedures specified in the Owner's Service Manual. We do recommend, however, that items requiring special tools or equipment be done by a Yamaha motorcycle dealer.
- Q. Will the warranty be void or cancelled if I do not operate or maintain my new YZ or WR exactly as specified in the Owner's Service Manual?
- A. No. The warranty on a new motorcycle cannot be "voided" or "cancelled." **However, if a particular failure is caused by operation or maintenance other than as shown in the Owner's Service Manual, that failure may not be covered under warranty.**
- Q. What responsibility does my dealer have under this warranty?
- A. Each Yamaha motorcycle dealer is expected to:
- Completely set up every new machine before sale.
 - Explain the operation, maintenance, and warranty requirements to your satisfaction at the time of sale, and upon your request at any later date. In addition, each Yamaha motorcycle dealer is held responsible for his setup, service and warranty repair work.
- Q. Does the warranty on the engine include the carburetor, air filter, air box, and exhaust pipe?
- A. No. The warranty covers only the engine components.

CUSTOMER SERVICE

If your machine requires warranty service, you must take it to any authorized Yamaha motorcycle dealer within the continental United States. Be sure to bring your warranty registration identification or other valid proof of the original date of purchase. If a question or problem arises regarding warranty, first contact the owner of the dealer-ship. Since all warranty matters are handled at the dealer level, this person is in the best position to help you. If you are still not satisfied and require additional assistance, please write:

YAMAHA MOTOR CORPORATION U.S.A.
CUSTOMER RELATIONS DEPARTMENT
P.O. Box 6555
Cypress, California 90630

When contacting Yamaha Motor Corporation, U.S.A. don't forget to include any important information such as names, addresses, model, VIN (vehicle identification number), dates, and receipts.

CHANGE OF ADDRESS

The federal government requires each manufacturer of a motor vehicle to maintain a complete, up-to-date list of all first purchasers against the possibility of a safety-related defect and recall. This list is compiled from the purchase registrations sent to Yamaha Motor Corporation, U.S.A. by the selling dealer at the time of your purchase.

If you should move after you have purchased your new motorcycle, please advise us of your new address by sending a postcard listing your motorcycle model name, VIN number, dealer number (or dealer's name) as it is shown on your warranty identification, your name and new mailing address. Mail to:

YAMAHA MOTOR CORPORATION, U.S.A.
WARRANTY DEPARTMENT
1270 Chastain Road
Kennesaw, GA 30144

This will ensure that Yamaha Motor Corporation, U.S.A. has an up-to-date registration record in accordance with federal law.

HOW TO USE THIS MANUAL

In this manual, descriptions of installation, removal, disassembly, assembly, check, and adjustment procedures are laid out with the individual steps in sequential order.

- The manual is divided into chapters and each chapter is divided into sections. The current section title “1” is shown at the top of each page.
- Sub-section titles “2” appear in smaller print than the section title.
- To help identify parts and clarify procedure steps, there are exploded diagrams “3” at the start of each removal and disassembly section.
- Numbers “4” are given in the order of the jobs in the exploded diagram. A number indicates a removal or a disassembly step.
- Symbols “5” indicate parts to be lubricated or replaced.
- Refer to “SYMBOLS”.
- A job instruction chart “6” accompanies the exploded diagram, providing the order of jobs, the names of parts, the notes in jobs, etc. This step explains removal and disassembly procedure only. For installation and assembly procedure, reverse the steps.
- Jobs “7” requiring more information (such as special tools and technical data) are described sequentially.

1
↓
CLUTCH

CLUTCH

Removing the clutch cover

3

4

5

6

Order	Job/Parts to remove	Q'ty	Remarks
	Front side cowl assembly/Bottom cowl		Refer to "GENERAL CHASSIS (5)" on page 4-5.
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-25.
	Coolant		Drain. Refer to "CHANGING THE COOLANT" on page 3-25.
1	Water pump breather hose	1	Disconnect.
2	Clutch cable	1	Disconnect.
3	Pull lever	1	
4	Pull lever spring	1	
5	Clutch cover	1	
6	Clutch cover gasket	1	
7	Dowel pin	2	

5-46

CLUTCH

REMOVING THE CLUTCH

1. Remove:

- Oil strainer
Refer to "OIL PUMP" on page 5-59.
- Water pump
Refer to "WATER PUMP" on page 6-12.
- Friction plates
- Clutch plates

TIP
Be sure to mark the friction plates and clutch plates or note the position of each part so that they are installed in their original positions.

2. Straighten the clutch boss nut rib "a".

3. Loosen:

- Clutch boss nut "1"

TIP
While holding the clutch boss "2" with the universal clutch holder "3", loosen the clutch boss nut.

Universal clutch holder
90890-04086
Universal clutch holder
YM-91042

4. Remove:

- Spacer "1"
- Bearing
- Clutch housing "2"
- Oil pump drive chain

TIP
Remove the spacer and bearing from the main axle, then remove the oil pump drive chain from the oil pump driven sprocket, and then remove the clutch housing and oil pump drive chain from the main axle.

CHECKING THE FRICTION PLATES
The following procedure applies to all of the friction plates.

1. Check:

- Friction plate
Damage/wear → Replace the friction plates as a set.

2. Measure:

- Friction plate thickness
Out of specification → Replace the friction plates as a set.

TIP
Measure the friction plate at four places.

Friction plate thickness
2.92-3.08 mm (0.115-0.121 in)
Wear limit
2.80 mm (0.110 in)

CHECKING THE CLUTCH PLATES
The following procedure applies to all of the clutch plates.

SYMBOLS

The following symbols are used in this manual for easier understanding.

TIP

The following symbols are not relevant to every vehicle.


SYMBOL	DEFINITION	SYMBOL	DEFINITION
	Serviceable with engine mounted		Gear oil
	Filling fluid		Molybdenum disulfide oil
	Lubricant		Brake fluid
	Special tool		Lithium-soap-based grease
	Tightening torque		Molybdenum disulfide grease
	Wear limit, clearance		Silicone grease
	Engine speed		Apply locking agent (LOCTITE®).
	Electrical data		Replace the part with a new one.
	Engine oil		

TABLE OF CONTENTS

GENERAL INFORMATION	1
SPECIFICATIONS	2
PERIODIC CHECKS AND ADJUSTMENTS	3
CHASSIS	4
ENGINE	5
COOLING SYSTEM	6
FUEL SYSTEM	7
ELECTRICAL SYSTEM	8
TROUBLESHOOTING	9
TUNING	10

GENERAL INFORMATION

SAFETY INFORMATION	1-1
FOR SAFETY, BE SURE TO OBEY THE FOLLOWING:.....	1-1
ABOUT THE BATTERY	1-4
LITHIUM-ION BATTERY.....	1-4
LITHIUM-ION BATTERY DEGRADATION.....	1-4
LOCATION OF IMPORTANT LABELS	1-5
DESCRIPTION	1-6
IDENTIFICATION	1-8
VEHICLE IDENTIFICATION NUMBER.....	1-8
ENGINE SERIAL NUMBER.....	1-8
INCLUDED PARTS	1-9
SIDE STAND.....	1-9
NIPPLE WRENCH.....	1-9
HANDLEBAR PROTECTOR.....	1-9
FUEL HOSE JOINT COVER.....	1-9
COUPLER (1P) AND COUPLER (4P).....	1-9
POWER TUNER.....	1-10
IMPORTANT INFORMATION	1-12
PREPARATION FOR REMOVAL AND DISASSEMBLY.....	1-12
REPLACEMENT PARTS.....	1-12
GASKETS, OIL SEALS AND O-RINGS.....	1-12
LOCK WASHERS/PLATES AND COTTER PINS.....	1-13
BEARINGS AND OIL SEALS.....	1-13
CIRCLIPS.....	1-13
BASIC SERVICE INFORMATION	1-14
ELECTRICAL SYSTEM.....	1-14
SPECIAL TOOLS	1-18
INSTRUMENT AND CONTROL FUNCTIONS	1-23
ENGINE STOP SWITCH.....	1-23
STARTER SWITCH.....	1-23
LAUNCH CONTROL SYSTEM.....	1-23
LAP TIME MEASUREMENT.....	1-24
MAP CHANGE.....	1-24
SHIFT PEDAL.....	1-25
FRONT BRAKE LEVER.....	1-25
REAR BRAKE PEDAL.....	1-25

STARTER KNOB.....	1-25
FUEL TANK CAP.....	1-26
ECU LOCK FUNCTION.....	1-26
STARTING AND BREAK-IN.....	1-27
FUEL.....	1-27
STARTING A COLD ENGINE.....	1-27
STARTING A WARM ENGINE.....	1-28
BREAK-IN PROCEDURES.....	1-28
ENGINE STARTING PRECAUTION.....	1-28
MAINTENANCE AFTER BREAK-IN.....	1-29
MAJOR MAINTENANCE.....	1-29
AIR FILTER MAINTENANCE.....	1-29
TORQUE-CHECK POINTS.....	1-30
MOTORCYCLE CARE AND STORAGE.....	1-32
CARE.....	1-32
STORAGE.....	1-33

EAM20168

SAFETY INFORMATION

Be sure to read this manual carefully and completely in order to operate the machine safely and correctly prior to riding the Yamaha machine, and take care to maintain it properly and operate it safely.

EAM30401

FOR SAFETY, BE SURE TO OBEY THE FOLLOWING:

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles.

Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

1. Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
2. Observe the warnings and maintenance requirements in this manual.
3. Obtain qualified training in safe and proper riding techniques.
4. Obtain professional technical service as indicated in this manual and/or when made necessary by mechanical conditions.
5. Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Refer to "PRE-OPERATION INSPECTION AND MAINTENANCE" on page 3-6 for a list of pre-operation checks.

1. This motorcycle is designed for off-road use only, therefore, it is illegal to operate it on public streets, roads, or highways, even a dirt or gravel one. Off-road use on public lands may be illegal. Please check local regulations before riding.
2. This motorcycle is designed to carry the op-

erator only. No passengers.

3. The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
 - Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
 - Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
 - Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.
4. Many accidents involve inexperienced operators.
 - Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
 - Know your skills and limits. Staying within your limits may help you to avoid an accident.
 - We recommend that you practice riding your motorcycle until you have become thoroughly familiar with the motorcycle and all of its controls.
 5. Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or under cornering (insufficient lean angle for the speed). Never travel faster than warranted by conditions.
 6. Ride cautiously in unfamiliar areas. You may encounter hidden obstacles that could cause an accident.
 7. The posture of the operator is important for proper control. The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
 8. Never ride under the influence of alcohol or other drugs.
 9. Be sure the transmission is in neutral before starting the engine.

Protective Apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

1. Always wear an approved helmet.
2. Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
3. The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
4. Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
5. Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

1. Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
2. Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.
3. Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle. Keep the following guidelines in mind when mounting accessories.

1. Never install accessories that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation.
 - Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.
 - Bulky or large accessories may seriously affect the stability of the motorcycle. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds.
 - Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the operator and may limit control ability, therefore, such accessories are not recommended.
2. Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine

power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. Refer to “CHECKING THE TIRES” on page 3-34 for tire specifications and more information on replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.

1. Remove all loose items from the motorcycle.
2. Check that the fuel cock (if equipped) is in the “OFF” position and that there are no fuel leaks.
3. Point the front wheel straight ahead on the trailer or in the truck bed, and choke it in a rail to prevent movement.
4. Shift the transmission in gear (for models with a manual transmission).
5. Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or upper front fork triple clamp (and not, for example, to rubber-mounted handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.
6. The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

EAM20203

ABOUT THE BATTERY

EAM30642

LITHIUM-ION BATTERY

The lithium-ion battery used in the vehicle features high energy density and has a high voltage (approximately three times that of nickel-cadmium (Ni-Cd) or nickel-hydrogen (Ni-MH) batteries), meaning it can be made both compact and lightweight.

Nickel-cadmium and nickel-hydrogen batteries have a memory effect that causes their capacity to degrade quickly as a result of repeated partial discharging and charging, so that they need to be completely discharged periodically. Lithium-ion batteries can be repeatedly partially charged without needing to be fully discharged.

EAM30644

LITHIUM-ION BATTERY DEGRADATION

The charge capacity of the lithium-ion battery gradually decreases over time and usage. The rate of capacity degradation varies based on the usage conditions.

TIP


- It is not necessary to use up the battery before charging.
 - Storing the vehicle in an extremely hot or cold place could degrade the lithium-ion battery capacity more quickly.
 - Even if the lithium-ion battery is not used, it discharges and degrades gradually over time.
-

LOCATION OF IMPORTANT LABELS


EAM20085

LOCATION OF IMPORTANT LABELS


Please read the following important labels carefully before operating this vehicle.

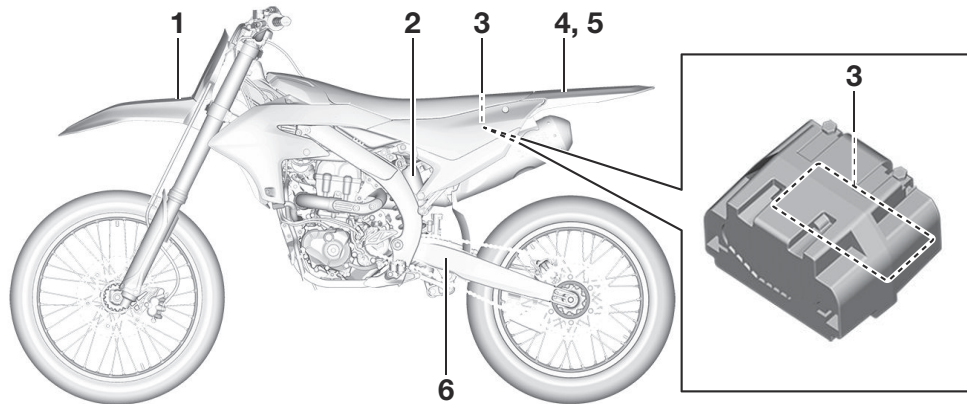


1



2

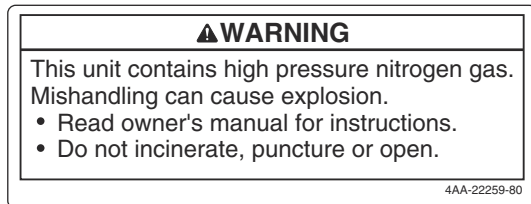


3

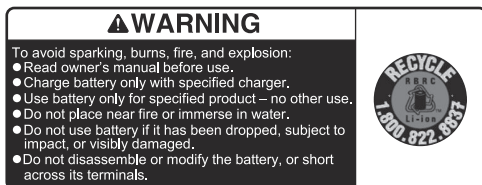


4



5

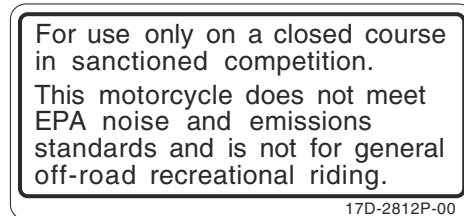


6

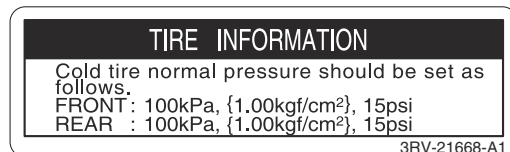

EAM20086

DESCRIPTION

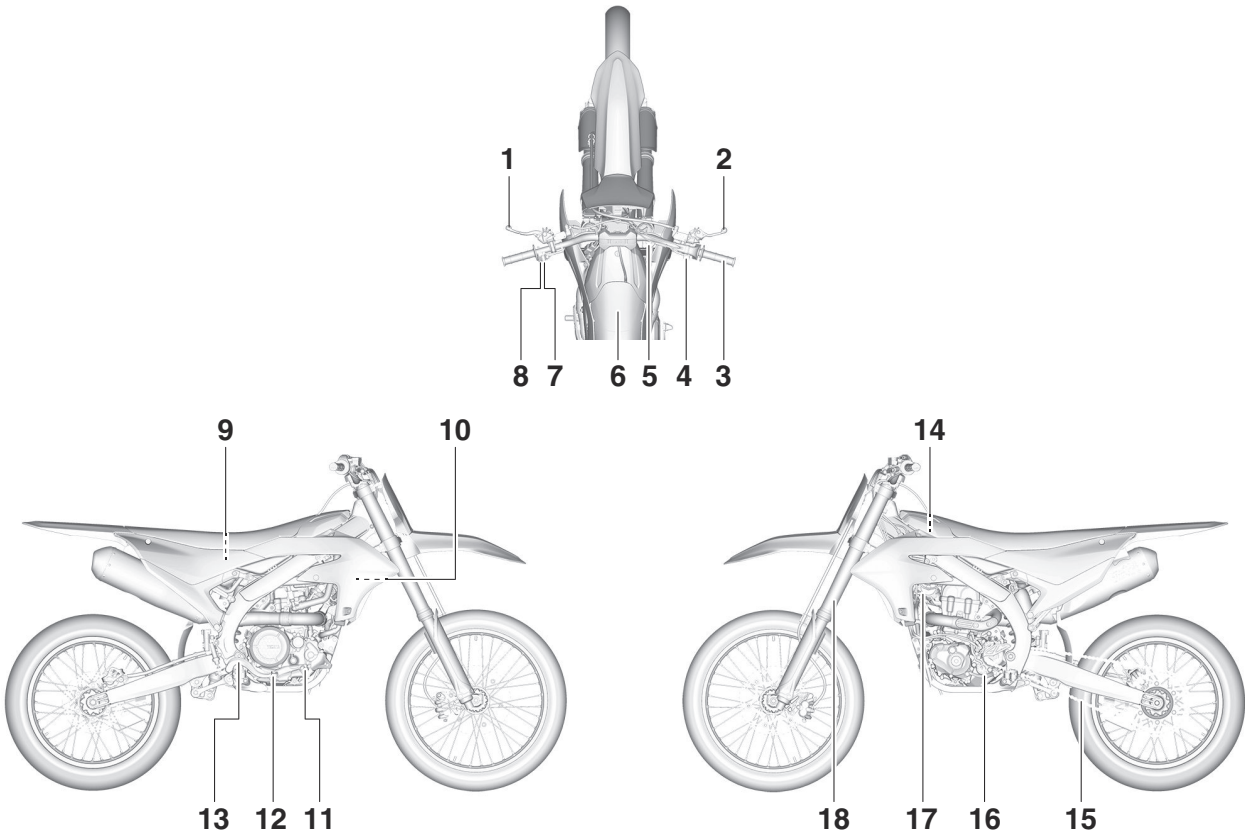

1. Clutch lever
2. Front brake lever
3. Throttle grip
4. Starter switch
5. Radiator cap
6. Fuel tank cap
7. Engine stop switch
8. Multi-function button
9. Fuel tank
10. Radiator
11. Coolant drain bolt
12. Oil level check window
13. Rear brake pedal
14. Air filter
15. Drive chain
16. Shift pedal
17. Starter knob
18. Front fork

TIP

Designs and specifications of the vehicle are subject to change without notice. Therefore, please note that the descriptions in this manual may be different from those for the vehicle you have purchased.

EAM20087

IDENTIFICATION


There are two significant reasons for knowing the serial number of your vehicle:

1. When ordering parts, you can give the number to your Yamaha dealer for positive identification of the model you own.
2. If your vehicle is stolen, the authorities will need the number to search for and identify your vehicle.

EAM30002

VEHICLE IDENTIFICATION NUMBER


The vehicle identification number “1” is stamped into the right side of the frame.

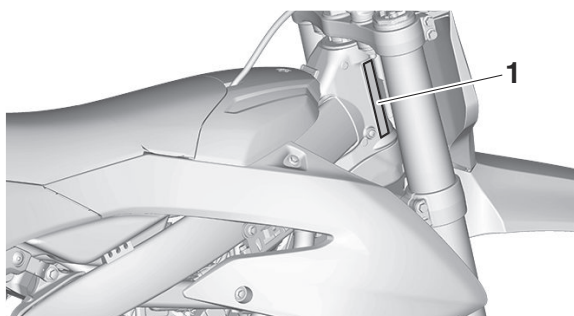

EAM30003

ENGINE SERIAL NUMBER

The engine serial number “1” is stamped into the elevated part of the right-side of the engine.

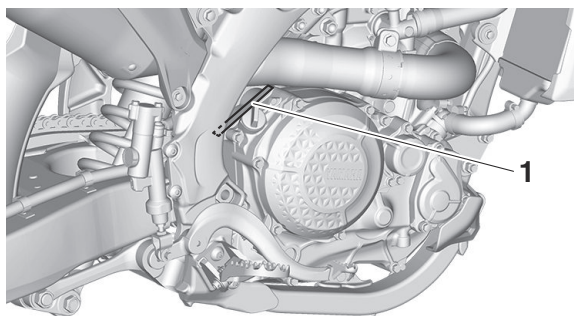

EAM20088

INCLUDED PARTS

EAM30190


SIDESTAND

This sidestand “1” is used to support only the machine when standing or transporting it.

EWA20260

WARNING


- Never apply additional force to the side-stand.
- Remove this sidestand before starting out.

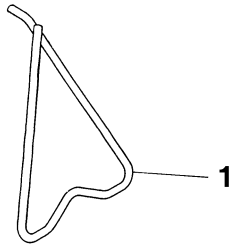

EAM30005

NIPPLE WRENCH



The nipple wrench “1” is used to tighten the spoke.

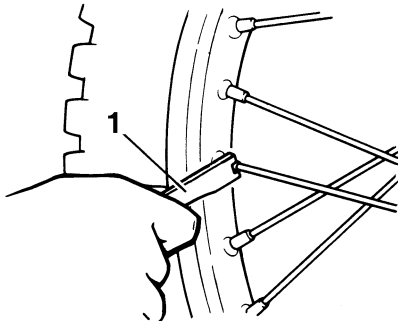

EAM30006

HANDLEBAR PROTECTOR


Install the handlebar protector “1” so that the mark “a” is facing the direction shown in the illustration.

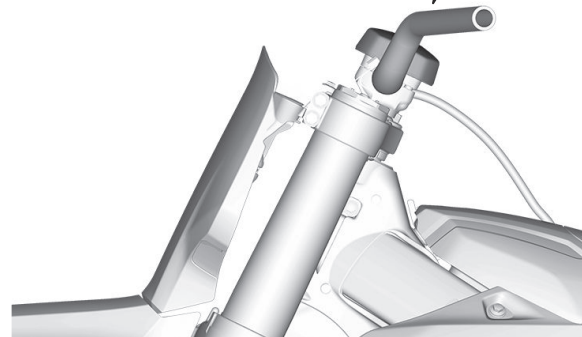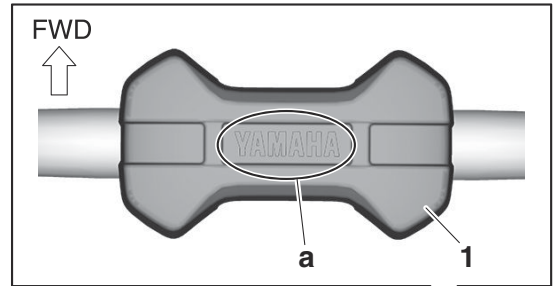

EAM30007

FUEL HOSE JOINT COVER


The fuel hose joint covers “1” are used to prevent mud, dust, and other foreign materials from entering the inside when the fuel hose is disconnected.

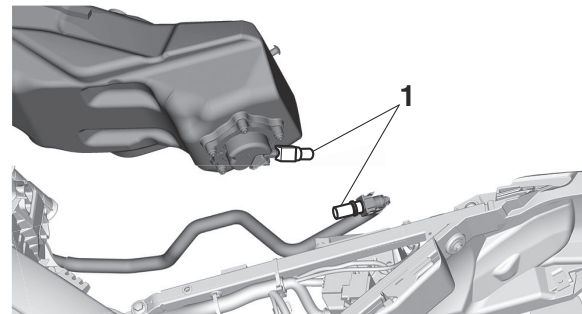

EAM30653

COUPLER (1P) AND COUPLER (4P)

The coupler (1P) “1” and coupler (4P) “2” should be connected so that after removing the CCU, neither mud nor dust enters the couplers (on the side of the wire harness) that have been connected to the CCU sub-lead.

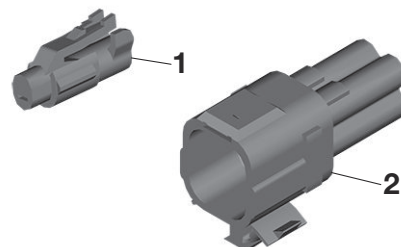

EAM30443

POWER TUNER

By downloading the Power Tuner app to your smartphone and wirelessly connecting to the CCU wireless network, you can adjust various vehicle settings.

EWA20460

WARNING

- Do not operate the engine in a closed area. The exhaust gas is poisonous.
- Never let flames near the servicing area.

ECA26050

NOTICE


- This application is designed for adjusting the settings on a standard vehicle. In case the engine specifications (muffler, compression ratio, etc.) have been changed, the performance may not match to the actual settings.
- Do not run the engine with the smartphone carried with you. Otherwise, the smartphone could be damaged.

TIP

- Download the Power Tuner app from the Google® or Apple® store.
- For details about handling the smartphone, read the owner's manual of the smartphone.


Before connecting to the CCU wireless network (in case of initial use of the Power Tuner app)

1. Remove the bolts and side cover (left).

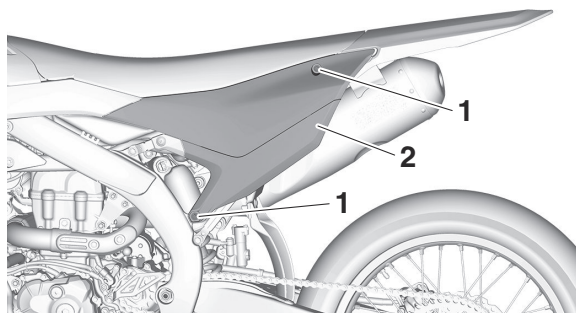


1. Bolt
2. Side cover (left)

2. Remove the CCU and record the CCU serial number.

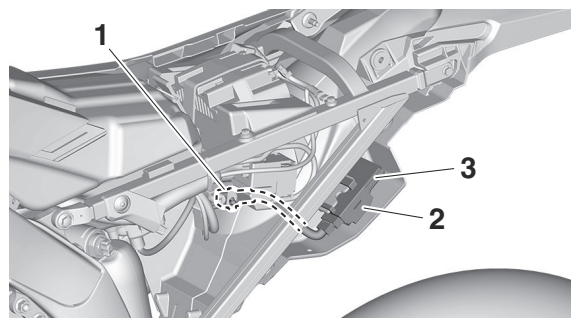

1. CCU coupler
2. Holder
3. CCU (Communication Control Unit)

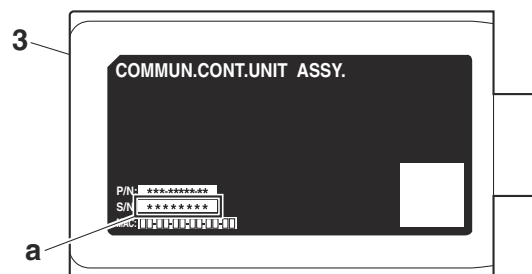

3. CCU (Communication Control Unit)
- a. CCU serial number

3. Install the removed CCU and side cover (left).
Connecting to the CCU wireless network

ECA26060

NOTICE

The CCU (Communication Control Unit) uses weak radio waves. The CCU may not work in the following situations.

- The CCU is placed in a location exposed to strong radio waves or other electromagnetic noise
- There are facilities nearby that are emitting strong radio waves (TV or radio towers, power plants, broadcasting stations, airports, etc.)
- You are carrying or using communication equipment such as radios or mobile phones in close proximity of the CCU
- The CCU is in contact with or covered by a metallic object
- Other vehicles equipped with a CCU are nearby

In such situations, move the CCU to another location and perform the operation again.

1. Turn on the smartphone.
2. For two minutes after the starter switch is pressed or while the engine is running (the

CCU is activated), input the CCU serial number into your smartphone and establish a wireless connection.

TIP

If the ECU has been activated while the engine is stopped:

In case of map 1, the indicator light on the handlebar switch (left) will blink light in blue once every 4 seconds.

In case of map 2, the indicator light on the handlebar switch (left) will light in blue.

3. Activate the Power Tuner app.

TIP

If the CCU wireless network cannot be detected, operate the starter switch again.

EAM20089

IMPORTANT INFORMATION


EAM30009

PREPARATION FOR REMOVAL AND DISASSEMBLY


1. Before the jobs, completely remove mud, dust, and the like in order to prevent the entry of them into the inside during the jobs. Refer to "CARE" on page 1-32.



2. Use proper special tools and equipment. Refer to "SPECIAL TOOLS" on page 1-18.

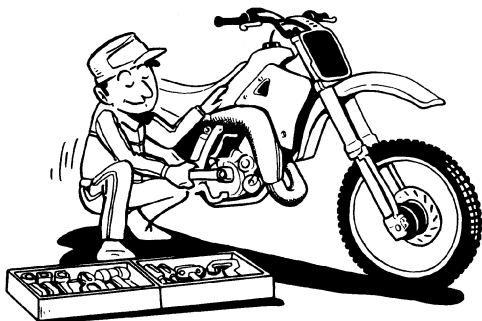

3. During disassembly, check and measure the required parts, and make a record of them so that you may refer to the record when installing them. Moreover, arrange gears, cylinders, pistons, and other parts for each section so as not to confuse or lose them.

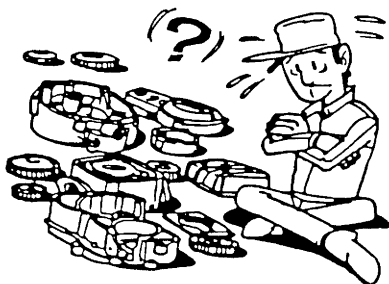

4. During disassembly, clean each of the parts, and store them in trays for each section.
5. Flammable. Keep servicing areas away from any source of fire.
6. During servicing, take special care not to receive an injury or a burn on the engine, the

exhaust pipe, the silencer, or the like.

7. If coolant is left adhered to the chassis, paint and plating will be damaged. Therefore, rinse it out with water in good time.

EWA18970

⚠ WARNING

Coolant is potentially harmful and should be handled with special care.


- If it enters your eyes, wash it away with water enough and then get medical attention
- If it splashes on your skin or clothes, quickly wash it away with water and then with soapy water.
- If it is swallowed, immediately induce vomiting and get medical attention.

EAM30010

REPLACEMENT PARTS

Make sure that the parts and grease or oil to be used for repair of the vehicle, including periodic replacement parts, are new YAMAHA genuine parts and recommended parts.


Do not use any used parts, because these may not be genuine though they have similar appearances or because the quality may be changed by aging.

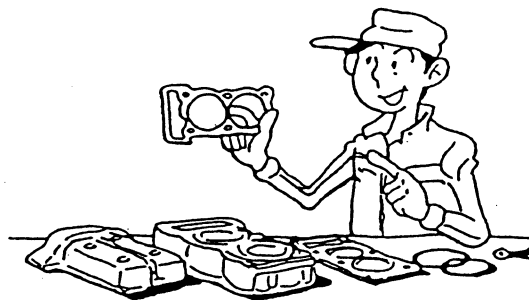

EAM30011

GASKETS, OIL SEALS AND O-RINGS

1. When overhauling the engine, replace all gaskets and O-rings. All gasket surfaces, oil seal lips, and O-rings must be cleaned so that there may be no dust on them.
2. During assembly, always apply proper oil to bearings and proper grease to oil seal lips before installation.

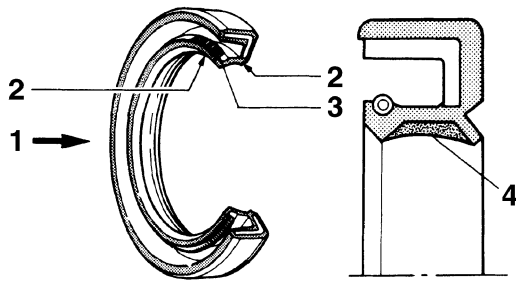


1. Oil
2. Lip
3. Spring
4. Grease

EAM30012

LOCK WASHERS/PLATES AND COTTER PINS

After removal, replace lock washers/plates "1" and cotter pins with new ones. After the bolt or nut has been tightened to specification, firmly bend the lock tabs along a flat of the bolt or nut.

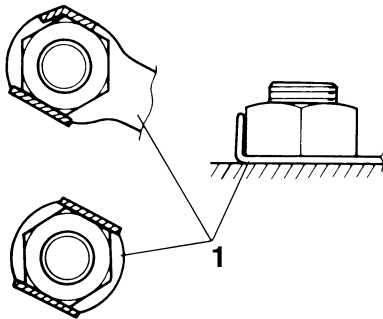

EAM30013



BEARINGS AND OIL SEALS

Install bearings "1" and oil seals "2" with their manufacturer's marks or size symbols facing outward. During installation of an oil seal, make sure that its main lip faces the oil chamber (the target to be sealed). Before installation, always apply a light coat of grease to the oil seal lip.

ECA13300

NOTICE


Do not spin the bearing with compressed air because this will damage the bearing surfaces.

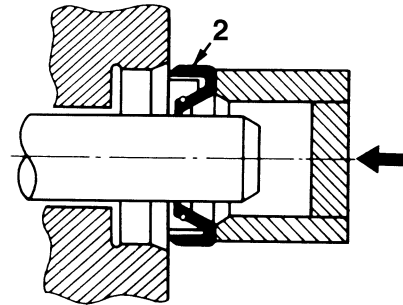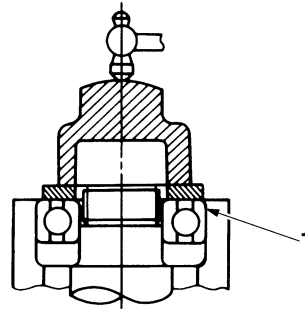

EAM30014

CIRCLIPS

When assembling parts, always use new circlips. During installation of a circlip, make sure that the edge "2" of the circlip "1" is positioned opposite to the force "3" that the circlip receives. Install the circlip with its end aligned with the center of the spline, without opening the circlip more than necessary.

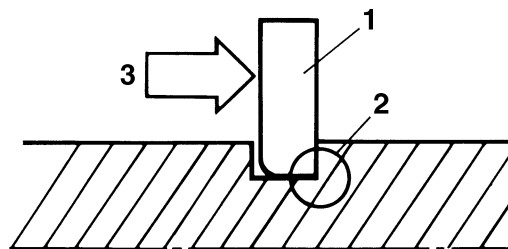

EAM20120

BASIC SERVICE INFORMATION

EAM30181


ELECTRICAL SYSTEM

Electrical parts handling

ECA16600

NOTICE


Never disconnect a battery lead while the engine is running; otherwise, the electrical components could be damaged.

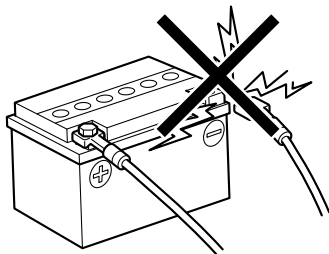

ECA16751


NOTICE

When disconnecting the battery leads from the battery, be sure to disconnect the negative battery lead first, then the positive battery lead. If the positive battery lead is disconnected first and a tool or similar item contacts the vehicle, a spark could be generated, which is extremely dangerous.

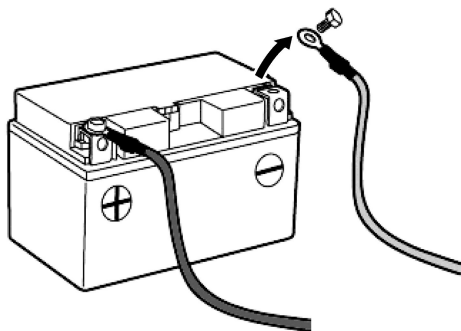

TIP


If a battery lead is difficult to disconnect due to rust on the battery terminal, remove the rust using hot water.

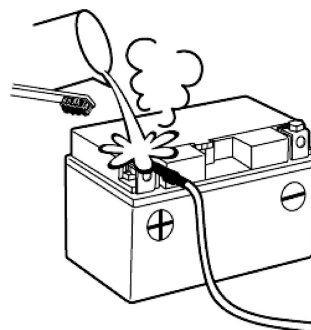

ECA16760

NOTICE


Be sure to connect the battery leads to the correct battery terminals. Reversing the battery lead connections could damage the electrical components.

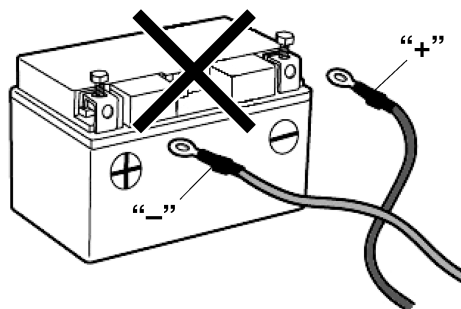

ECA16771

NOTICE


When connecting the battery leads to the battery, be sure to connect the positive battery lead first, then the negative battery lead. If the negative battery lead is connected first and a tool or similar item contacts the vehicle while the positive battery lead is being connected, a spark could be generated, which is extremely dangerous.

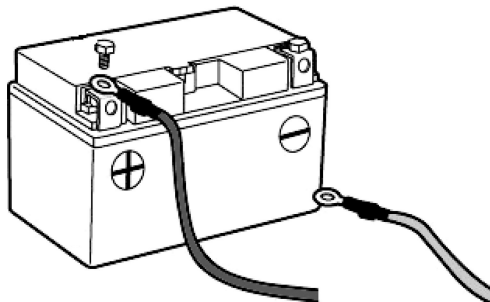

ECA16620

NOTICE


Handle electrical components with special care, and do not subject them to strong shocks.

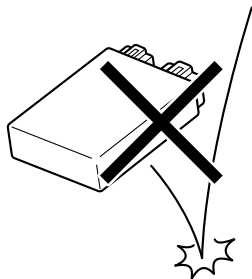

ECA16630

NOTICE


Electrical components are very sensitive to and can be damaged by static electricity. Therefore, never touch the terminals and be sure to keep the contacts clean.

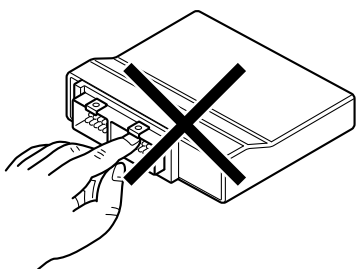

TIP

To restart the ECU (Engine Control Unit):


- Hold the engine stop switch pressed for 1 second or longer.
- The ECU will shut down 3 seconds after holding the engine stop switch pressed.
- Press the starter switch to restart the ECU.

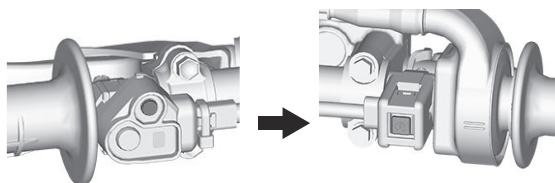

Checking the electrical system

TIP


Before checking the electrical system, make sure that the battery voltage is at least 12 V.

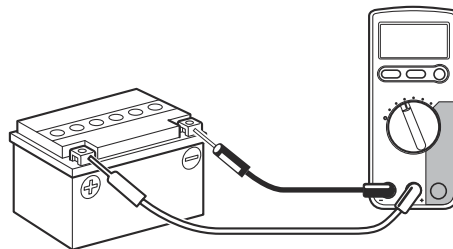

ECA14371

NOTICE


Never insert the tester probes into the coupler terminal slots. Always insert the probes from the opposite end "a" of the coupler, taking care not to loosen or damage the leads.

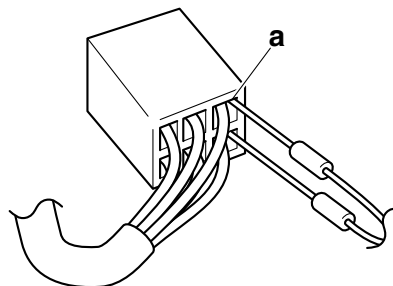

ECA16640

NOTICE

For waterproof couplers, never insert the tester probes directly into the coupler. When performing any checks using a waterproof coupler, use the specified test harness or a suitable commercially available test harness.

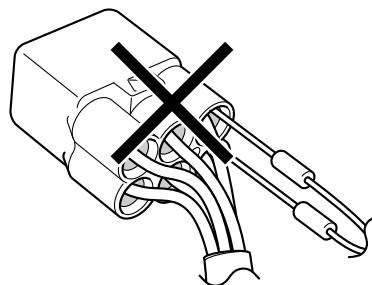

Checking the connections

Check the leads, couplers, and connectors for stains, rust, moisture, etc.

1. Disconnect:

- Lead
- Coupler
- Connector


ECA16780

NOTICE

- When disconnecting a coupler, release the

coupler lock, hold both sections of the coupler securely, and then disconnect the coupler.


- There are many types of coupler locks; therefore, be sure to check the type of coupler lock before disconnecting the coupler.

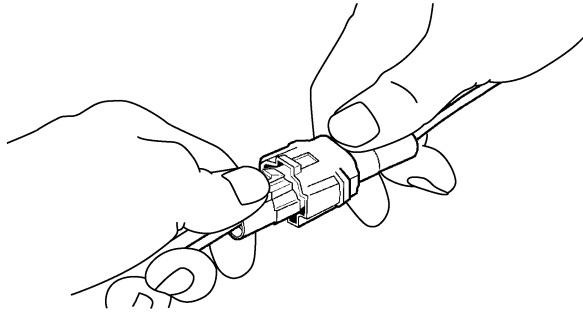

ECA16790

NOTICE

When disconnecting a connector, do not pull the leads. Hold both sections of the connector securely, and then disconnect the connector.

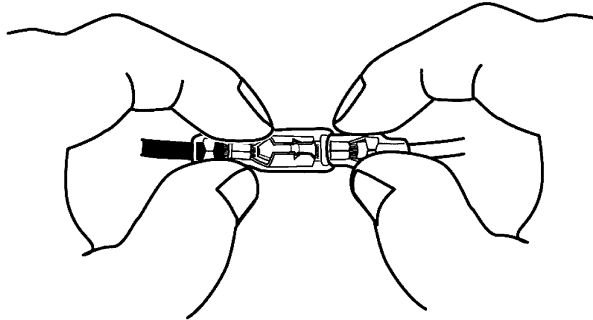


2. Check:

- Lead
- Coupler
- Connector

Moisture → Dry with compressed air.

Rust/stains → Connect and disconnect several times.

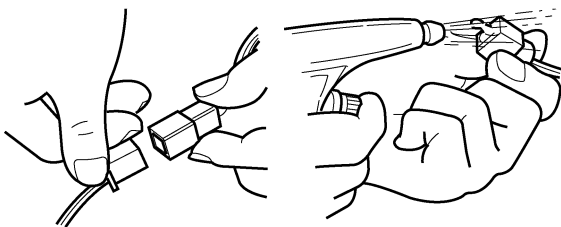



3. Check:

- All connections

Loose connection → Connect properly.

TIP

- If the pin "1" on the terminal is flattened, bend it up.
- After disassembling or assembling a coupler, pull on the leads to make sure that they are installed securely.

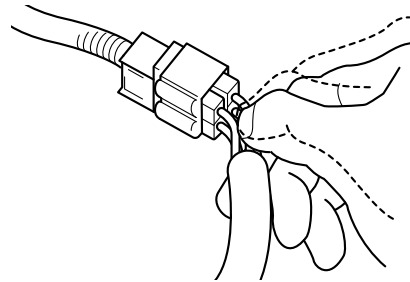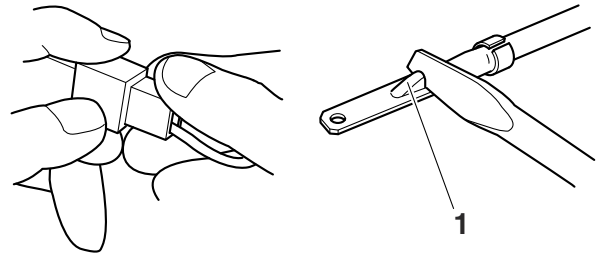



4. Connect:

- Lead
- Coupler
- Connector

TIP

- When connecting a coupler or connector, make sure that both terminals are connected securely.
- Make sure all connections are tight.

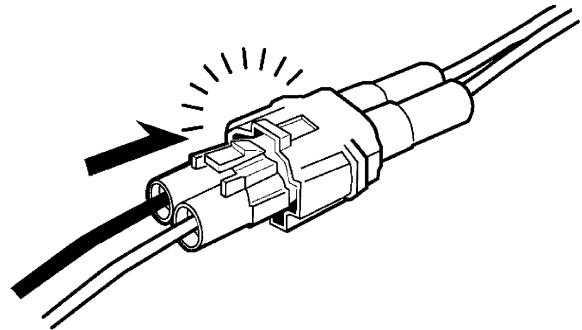

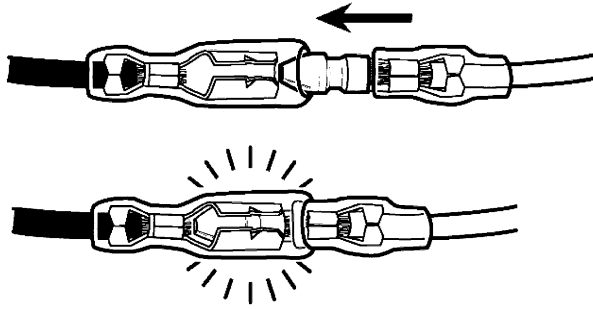



5. Check:

- No continuity

	Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tach- ometer YU-A1927
---	--

TIP

- If there is no continuity, clean the terminals.
- When checking the wire harness, perform steps (1) to (4).
- As a quick remedy, use a contact revitalizer available at most part stores.

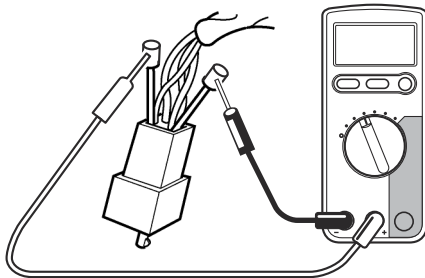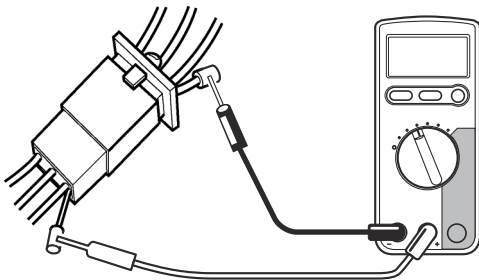






EAM20121









SPECIAL TOOLS









The following special tools are required for accurate and complete adjustment and assembly. Using the correct special tool will help prevent damage caused by the use of improper tools or improvised techniques. The shape and tool number used for the special tool differ by country, so two types are provided. Refer to the list provided to avoid errors when placing an order.







TIP







- For U.S.A. and Canada, use tool number starting with “YM-”, “YU-”, or “ACC-”.
- For others, use tool number starting with “90890-”.

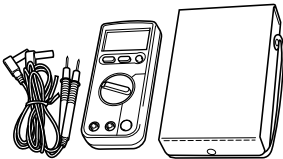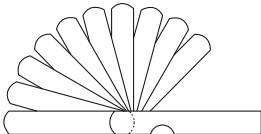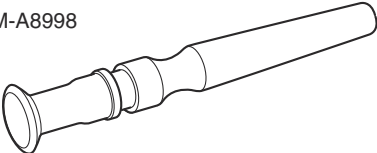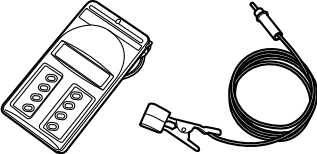Tool name/Tool No.	Illustration	Reference pages
Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927		1-17, 5-44, 8-50, 8-52, 8-54, 8-55, 8-55, 8-55, 8-56, 8-57, 8-57, 8-57, 8-58, 8-59, 8-59, 8-60
Thickness gauge 90890-03268 Feeler gauge set YU-26900-9		3-7, 5-52
Valve lapper (ø14) 90890-04101 Valve lapper (ø14) YM-A8998	90890-04101  YM-A8998 	3-8, 5-26
Yamaha diagnostic tool USB (US) 90890-03275		3-12, 7-8, 8-22
Yamaha diagnostic tool (A/I) 90890-03273		3-12, 7-8, 8-22
Digital tachometer 90890-06760 Digital tachometer YU-39951-B		3-12, 8-57

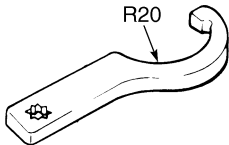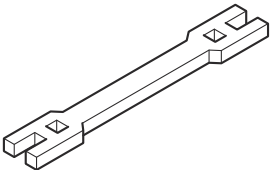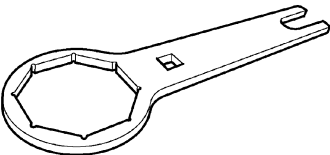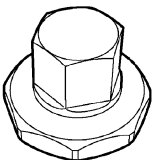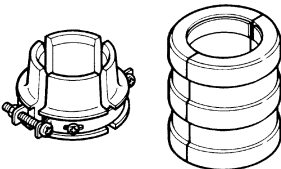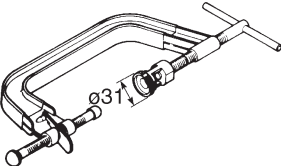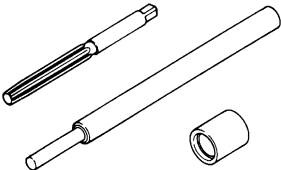Tool name/Tool No.	Illustration	Reference pages
Steering nut wrench 90890-01403 Exhaust flange nut wrench YU-A9472		3-28, 4-60
Spoke nipple wrench (6-7) 90890-01521 Spoke nipple wrench (6-7) YM-01521		3-34
Cap bolt ring wrench 90890-01501 Cap bolt ring wrench YM-01501		4-47, 4-47, 4-48, 4-51, 4-54, 4-56
Cap bolt wrench 90890-01911		4-48, 4-51
Fork seal driver 90890-01917 Fork seal driver (48) YM-A0948		4-52, 4-53
Valve spring compressor 90890-04200 Valve spring compressor YM-04019		5-26, 5-30
Valve spring compressor attachment 90890-04108 Valve spring compressor adapter 22 mm YM-04108		5-26, 5-30
Valve guide remover & installer set (ø5.5) 90890-04016 Valve guide remover (5.5 mm) YM-01122		5-28

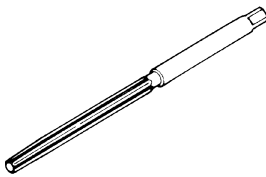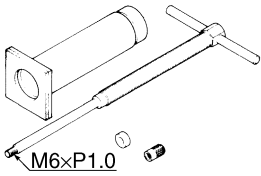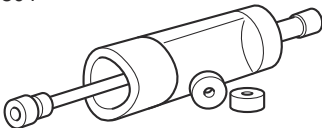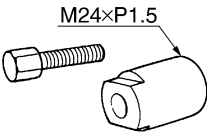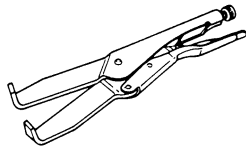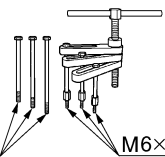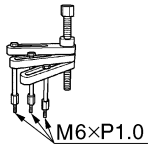Tool name/Tool No.	Illustration	Reference pages
Valve guide reamer (5.5 mm) 90890-01196 Valve guide reamer (5.5 mm) YM-01196		5-28
Piston pin puller set 90890-01304 Piston pin puller YU-01304	90890-01304  M6×P1.0 YU-01304 	5-33
Rotor puller 90890-04151 Rotor puller YM-04151	M24×P1.5 	5-40
Yamaha bond No. 1215 90890-85505 Three bond No. 1215®		5-40, 5-78
Clutch holder 90890-04199 Universal clutch holder YM-91042	M8×P1.25 30° 119 156 YM-91042 	5-52, 5-56
Crankcase separating tool 90890-04152 Crankcase separating tool YU-A9642	90890-04152  M8×P1.25 M6×P1.0 YU-A9642  M6×P1.0	5-81

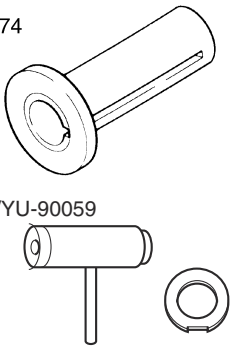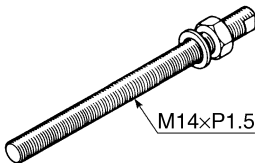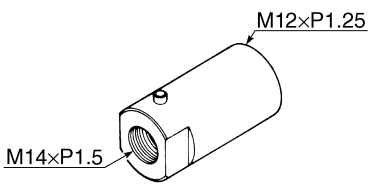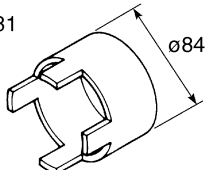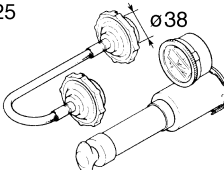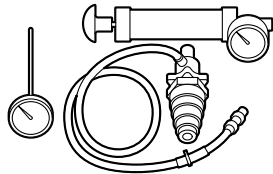Tool name/Tool No.	Illustration	Reference pages
Crankshaft installer pot 90890-01274 Installing pot YU-90058	90890-01274  YU-90058/YU-90059	5-82
Crankshaft installer bolt 90890-01275 Bolt YU-90060	 M14xP1.5	5-82
Adapter (M12) 90890-01278 Adapter #3 YU-90063	 M12xP1.25 M14xP1.5	5-82
Spacer (crankshaft installer) 90890-04081 Pot spacer YM-91044	90890-04081  ø84 YM-91044 	5-82
Radiator cap tester 90890-01325 Mityvac cooling system tester kit YU-24460-A	90890-01325  ø38 YU-24460-A 	6-5, 6-5

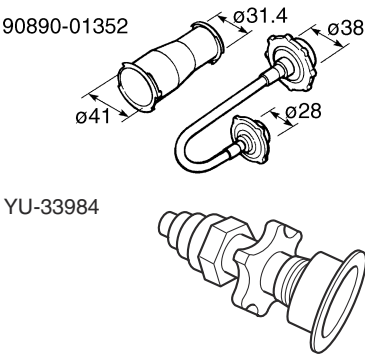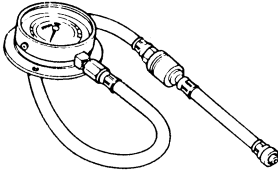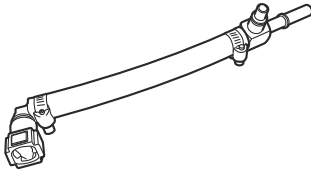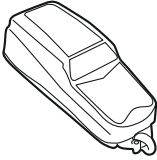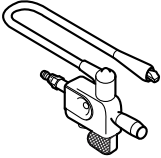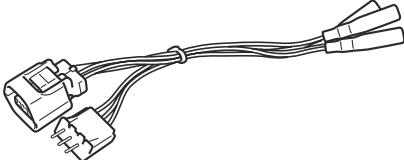Tool name/Tool No.	Illustration	Reference pages
Radiator cap tester adapter 90890-01352 Pressure tester adapter YU-33984		6-5, 6-5
Pressure gauge 90890-03153 Pressure gauge YU-03153		7-8
Fuel pressure adapter 90890-03186 Fuel pressure adapter YM-03186		7-8
Lithium battery charger 90890-05376 Lithium battery charger DBY-ACC51-70-02		8-53, 8-53
Ignition checker 90890-06754 Oppama pet-4000 spark checker YM-34487		8-54
Test harness (3P) – sub throttle position sensor 90890-03214		8-58


EAM20181

INSTRUMENT AND CONTROL FUNCTIONS

EAM30182

ENGINE STOP SWITCH

The engine stop switch “1” is located on the left handlebar. Continue pushing the engine stop switch till the engine comes to a stop.

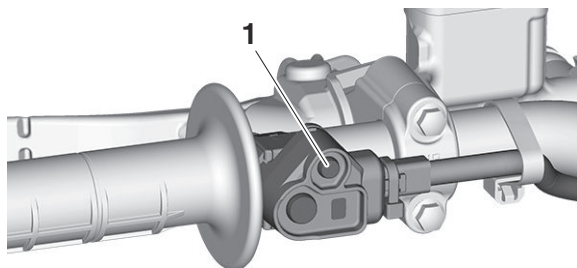


EAM30663

STARTER SWITCH

The starter switch “1” is located on the right handlebar. Push this switch to crank the engine with the starter.

TIP

- When the starter switch is pushed, the indicator light on the handlebar switch (left) may illuminate orange for approx. 2 seconds as a self-check, but this is not a malfunction.
- Indicator light on the handlebar switch (left) flashes orange → Check or replace any faulty electrical part(s). Refer to “CHECKING THE INDICATOR LIGHT” on page 8-21.
- Indicator light on the handlebar switch (left) blinks in blue twice → The engine has been cranked while the ECU was locked. Refer to “ECU LOCK FUNCTION” on page 1-26.

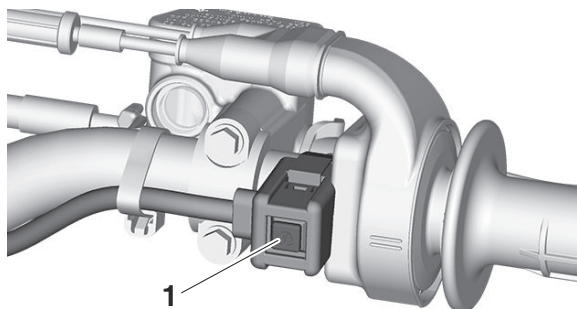

EAM30626

LAUNCH CONTROL SYSTEM

When the launch control system is operated, the ignition timing is delayed to reduce slipping at

the rear wheel which occurs when the vehicle accelerates from a stationary position.

This can be used to starting off in a stable manner on a slippery road surface.



However, the effect may not be adequate depending on the rider’s operations and road surface conditions.

How to operate

1. Put the gear into the neutral position.
2. Start the engine.
3. Push the multi-function button “1” for more than one second to turn on the launch control system.

TIP

- When the launch control system is turned on, it automatically enters Rev. clip mode, and then the indicator light “2” will flash.
- The map change can be changed even when the launch control system is operating.
- When the indicator light flashes alternately purple and blue, map 2 is selected.
- If the engine speed reaches the set rev limit speed, the indicator light will blink about 4 times per second.

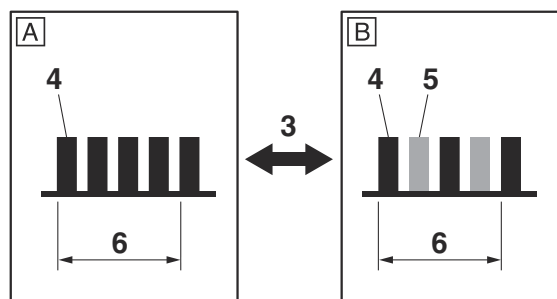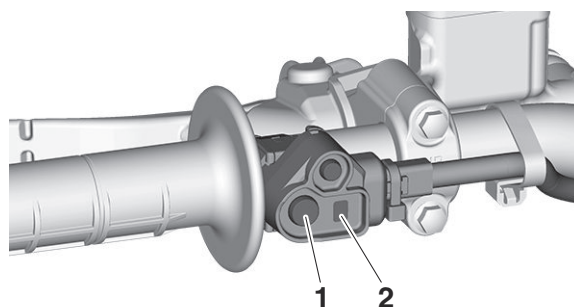


- Map 1
- Map 2

3. Push the multi-function button
4. Purple
5. Blue
6. Approx. 1 second (4 flashes/second)

4. Put the gear into the 1st or 2nd gear for starting off.

TIP

- When starting off, the system automatically controls the launch.
- The map change can be changed even when the launch control system is operating.
- When the indicator light flashes alternately purple and blue, map 2 is selected.

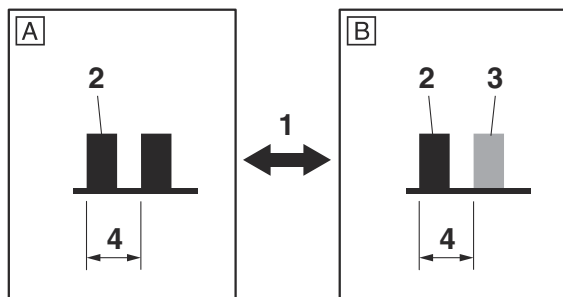


- A. Map 1
B. Map 2

1. Push the multi-function button
 2. Purple
 3. Blue
 4. 1 second (1 flash/second)
5. After starting off, the launch control system will turn off automatically when the gear is shifted into the 3rd gear.
The launch control system will also turn off when the engine is stopped or the gear is shifted into the 3rd gear or higher.

TIP

- When the launch control system is turned off, the indicator light “2” will stop flashing.
- In case the map 1 is set, the indicator light blinks in blue once every 4 seconds if the ECU has been activated while the engine is stopped even if the launch control system is off.
- Indicator light on the handlebar switch (left) flashes orange → Check or replace any faulty electrical part(s).
Refer to “CHECKING THE INDICATOR LIGHT” on page 8-21.
- Indicator light on the handlebar switch (left) blinks in blue twice → The engine has been cranked while the ECU was locked.
Refer to “ECU LOCK FUNCTION” on page 1-26.

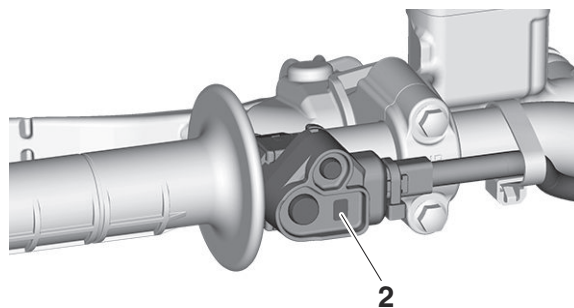

EAM30664


LAP TIME MEASUREMENT

Lap time records can be measured by activating from the Power Tuner app.

When the multi-function button “1” is pressed, the indicator light “2” will blink in blue and the measurement will start.

TIP

- When pressing the multi-function button “1” again, the indicator light “2” will blink in blue and shift to the next lap time.
- Map change cannot be changed while in lap time measurement.
- Measurement results can be received and saved on the app.
- After the ECU has shut down, the lap time measurement will finish.

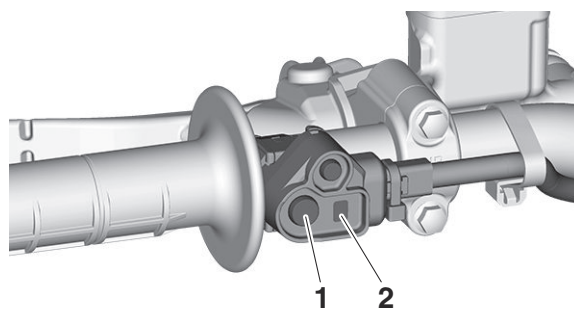


EAM30665

MAP CHANGE

Push the multi-function button “1” to change between map 1 and map 2.

TIP

Indicator light on the handlebar switch (left) flashes orange → Check or replace any faulty electrical part(s).
Refer to “CHECKING THE INDICATOR LIGHT” on page 8-21.

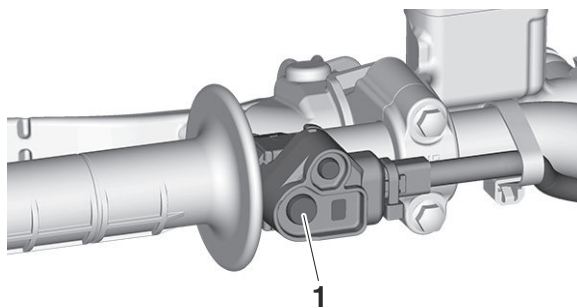


To change the map

1. Shift to neutral.
2. Start the engine.
3. Push the multi-function button “1”.

TIP


- As shipped from the factory, map 1 and 2 are the same.
- You must use the Power Tuner app to adjust the map settings.
- When the indicator light “2” illuminates blue, map 2 is selected.

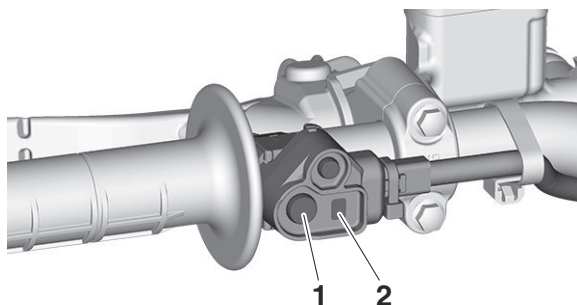

EAM30185

SHIFT PEDAL


The shift pedal “1” has adopted a method of 1 down & 4 ups (press-down & kick-ups). Press it down for N (neutral) to 1st, and kick it up for 2nd to 5th.

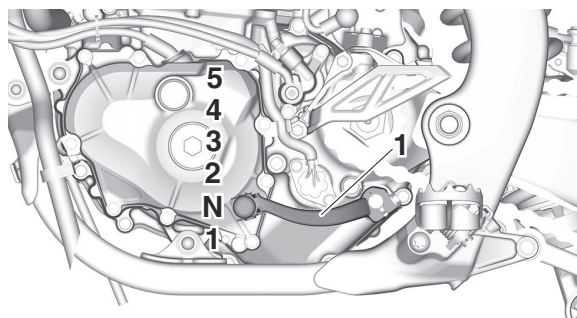

EAM30188

FRONT BRAKE LEVER


The front brake lever “1” is located on the right handlebar. Pull it toward the handlebar to activate the front brake.

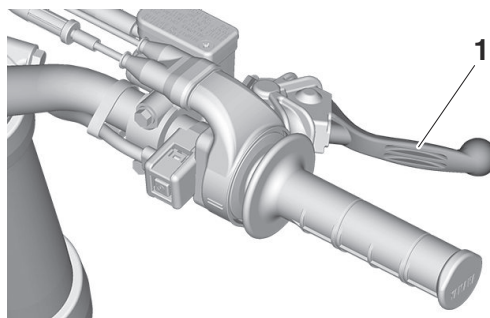

EAM30189

REAR BRAKE PEDAL

The rear brake pedal “1” is in the right of the chassis. Press down on the brake pedal to activate the rear brake.

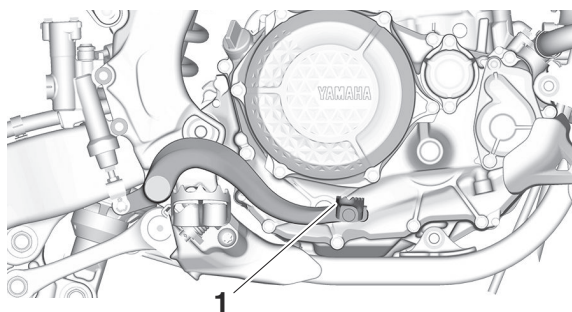

EAM30444

STARTER KNOB

Starting a cold engine requires a larger amount of intake air, which is supplied by the starter knob “1”.

Pushing the knob toward “a” turns ON the starter, resulting in a larger angle of throttle valve.


TIP

When operating the throttle grip in the closing direction, the starter knob “1” moves in the direction “b” as shown and returns to its original position.

EWA20470



WARNING
While handling the starter knob, take care not to burn yourself on exhaust pipes.

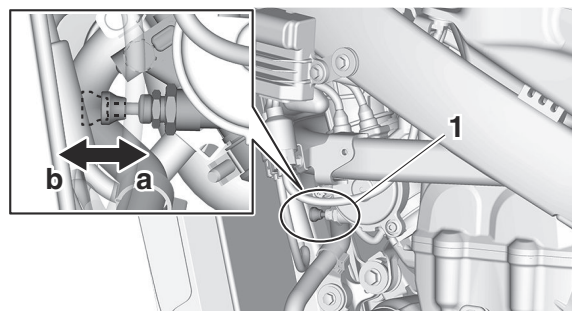


EAM30192

FUEL TANK CAP

Fuel tank cap is located under the sub-seat.


1. Loosen:
 - Quick fastener “1”

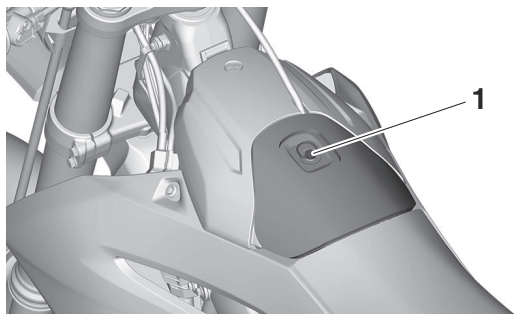

2. Remove the sub-seat “1” to open the fuel tank cap “2”.

TIP

- When installing the sub-seat, make sure that the plastic band is not twisted.
- When installing the sub-seat, push down the quick fastener, rotate it, and then secure the sub-seat with the quick fastener.

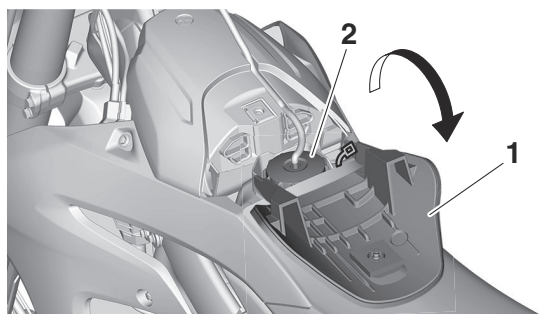

EAM30666

ECU LOCK FUNCTION

The vehicle is not equipped with a physical key. The ECU lock function locking the ECU from the Power Tuner app can immobilize the vehicle. The lock condition can be checked from the Power Tuner app.

TIP

- The lock status cannot be checked from the vehicle without attempting to start the engine.
- If an attempt is made to start the engine while the ECU is locked, the indicator light on the handlebar switch (left) blinks in blue twice.
- When starting the engine, if only the starter motor is turning but the engine does not crank, this might be due to the ECU being locked. Continuing to starting the engine in this state could cause the battery to run flat.

Setting of the ECU management password

From the Power Tuner app, the password can be set for the ECU using 8 to 20 letters including (upper and lower case), numbers, and symbols.

TIP

- For security reasons, it is recommended to set a password consisting of 10 digits or more, including 3 kinds of letters or more.
- If the password is not set from the Power Tuner app, for example if a smartphone is not used, there is a risk that someone could set a password without your permission.
- If you forget the password, the ECU needs to be replaced for a fee. Please do not forget the password.

ECU lock and unlock, password removal

When the password meets the password input requirements from the Power Tuner app, locking or unlocking the ECU and removal of the password is possible.

Anyone who does not know the password cannot start the engine if the ECU is locked.

TIP

- Anyone who does not know the password, including the YAMAHA dealer, cannot remove or change the password.
- When the vehicle is transferred to another person, the password should be removed before the transfer.

EAM20123

STARTING AND BREAK-IN

EAM30193

FUEL

Always use the recommended fuel as stated below. Also, be sure to use new gasoline the day of a race.

	Recommended fuel Unleaded gasoline (E10 acceptable) Octane number (R+M)/2 91 or higher Fuel tank capacity 6.2 L (1.6 US gal, 1.4 Imp.gal)
---	---

ECA24180

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to the engine internal parts such as valves, piston rings, and exhaust system, etc.

TIP

Your Yamaha engine has been designed to use unleaded gasoline with a pump octane number [(R+M)/2] of 91 or higher, or a research octane number of 95 or higher. If knocking (or pinging) occurs, use a gasoline of a different brand.

EWA19010

WARNING

- For refueling, be sure to stop the engine and use enough care not to spill any fuel. Also be sure to avoid refueling close to a fire.
- Refuel after the engine, exhaust pipe, etc. have cooled off.

Gasohol

There are two types of gasohol: gasohol containing ethanol and that containing methanol. Gasohol containing ethanol can be used if the ethanol content does not exceed 10 %. Gasohol containing methanol is not recommended by Yamaha because it can cause damage to the fuel system or vehicle performance problems.


EAM30196

STARTING A COLD ENGINE

1. Press the shift pedal to neutral.
2. Push the starter knob "1" completely.

TIP

- When the ambient temperature is 15 °C (59 °F) or below, use the starter knob.
- Do not operate the throttle grip when operating the starter knob.

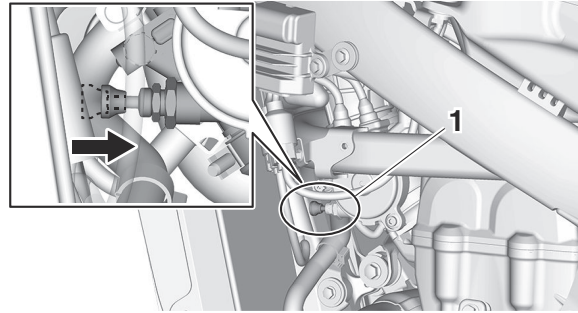

3. Start the engine by pushing the starter switch.


If the engine fails to start when using the starter switch, release it, wait a few seconds, and then try again.

Each starting attempt should be as short as possible to preserve the battery. Do not crank the engine more than 10 seconds on any one attempt.

4. When the engine starts running, warm this up one or two minutes at a steady speed (of 3000 to 5000 r/min), and then return the starter knob to its original position.

TIP

When operating the throttle grip in the closing direction, the starter knob "1" moves in the direction as shown and returns to its original position.

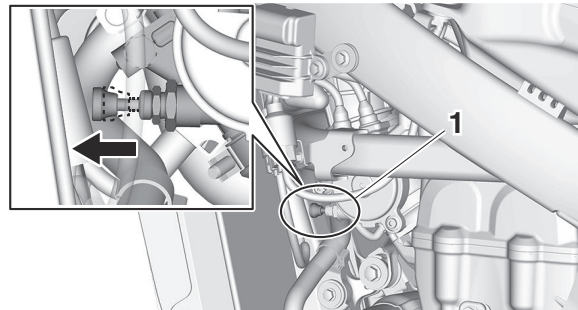

EWA19030


WARNING

Since exhaust gas contains harmful ingredients, do not start or warm it up at an illventilated place or a closed narrow place.

5. To stop the engine, push the engine stop switch "1".

TIP

Continue pushing the engine stop switch till the engine comes to a full stop.

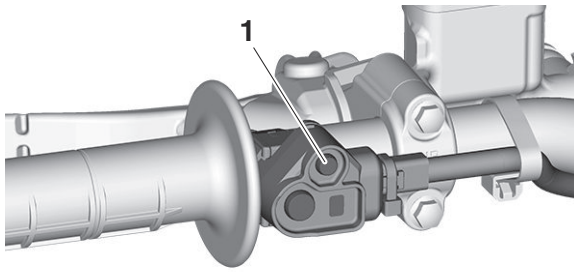

EAM30197

STARTING A WARM ENGINE

Follow the same procedure as for starting a cold engine with the exception that the starter is not required when the engine is warm.

TIP

If the engine fail to start, fully open the throttle grip and push the starter switch few seconds to clear the engine of the rich air-fuel mixture retained in it.

EAM30198

BREAK-IN PROCEDURES

A break-in is important so that rotating portion, sliding surfaces, and mounted areas may fit one another, and that the rider may become accustomed to the machine.

ECA25811

NOTICE

Before running, do maintenance on the air filter element.

1. After warming up the engine, drive it for about 20 minutes at a throttle opening of 1/2 or less.

TIP

This model is equipped with an engine auto-stop system. The engine stops automatically if left idling for 7 minutes. If the engine stops, push the starter switch to restart the engine.

2. Make a pit stop, and check mounted areas for looseness, oil leaks, or other problems.
3. Then, drive it for about 40 minutes at a throttle opening of 3/4 or less.
4. Make a pit stop again, and thoroughly check mounted areas for looseness, oil leaks, or other problems. Thorough checks and adjustments are required in particular for stretch of cables, free play of the brake, stretch of the drive chain, looseness of the spoke, and so on.

ECA25821

NOTICE

After a break-in or after each race, always

check the points shown in “TORQUE-CHECK POINTS” for tightening torques and retighten them.

Also when the following parts are replaced, a break-in is required.

- **Cylinder and Crankshaft:** A break-in is required for about an hour.
- **Piston, Piston ring, Valve, Camshaft, and Gear:** A break-in is required for about 30 minutes at a throttle opening of 1/2 or less.

Observe the condition of the engine carefully during a break-in.

For checkpoints for a break-in, see “MAINTENANCE AFTER BREAK-IN”. If any problem is found, immediately stop the engine and make a checkup.

EAM30468

ENGINE STARTING PRECAUTION

Make sure the transmission is in neutral or be sure to pull the clutch lever before pressing the starter switch.

EWA23110

WARNING

If the clutch lever is not pulled and the starter switch is pressed with the transmission in gear, the starter motor will cause the rear wheel to spin, which may cause injury.

EAM20124

MAINTENANCE AFTER BREAK-IN

After a break-in, perform careful maintenance to get ready for the next practice or race.

Refer to “PRE-OPERATION INSPECTION AND MAINTENANCE” on page 3-6.

EAM30199

MAJOR MAINTENANCE

1. For the engine

- Leaks around the engine
Check for pressure leaks from the cylinder head or the cylinder, oil leaks from the crankcase or the case cover, leaks from the coolant system, and other leaks.
- Check that the valve, the cylinder head, the cylinder, the piston, and the piston ring fit one another, and that contact between the valve and the cylinder head, and that between the cylinder and the piston are correct.
- Engine oil change
Drain the oil, and check for dirt and foreign materials such as metal chips. (If any foreign material is mixed, disassemble and check the crankcase.)
Pour the specified amount of the recommended oil.
- Clutch
Check for clutch fluid leaks.
- Generator
Check for looseness in mounted areas of the generator rotor and the stator coil assembly. Check that the connector is not being disconnected.
- Silencer
Check the main body and stay for cracks. Check for leaks.
- Mounting bolts and nuts
Check for looseness in mounted areas of parts, as well as engine mounting bolts and engine brackets.

2. For the chassis

- Check welds and mounted areas of the frame, the swingarm, the link, the bracket, and so on, for looseness and cracks.
- Wheel(s)
Check the wheel for runout. Check the spoke for looseness.
- Brake(s)
Check the brake disc mounting bolt for looseness.
Check that the reservoir contains the specified amount of brake fluid. Check for leaks.
- Cable

Grease and adjust cables.

- Drive chain
Lubricate the drive chain and adjust its tension.
- Fuel tank
Clean the inside of the fuel tank. Check for leaks.
- Suspension
Check for oil leaks in the front fork or the rear shock absorber. Check that the mounted conditions are good.
- Sprocket
Check for looseness in the sprocket mounted on the rear wheel.
- Mounting bolts and nuts
Check mounted areas for looseness.

ECA25831

NOTICE

After a break-in or before each race, always check the points shown in “TORQUE-CHECK POINTS” for tightening torques and retighten them.

- Greasing and oiling
Always grease or oil the specified points.

EAM30195

AIR FILTER MAINTENANCE

Apply the Yamaha foam air filter oil or other quality foam air filter oil to the element. (Excess oil in the element may adversely affect engine starting.) Refer to “CLEANING THE AIR FILTER ELEMENT” on page 3-17.

EAM20125

TORQUE-CHECK POINTS

Frame construction			Fuel tank to frame		
			Frame to rear frame		
			Frame to engine protector		
Engine mounting			Frame to engine		
			Engine bracket to engine		
			Engine bracket to frame		
Seat			Seat to rear fender		
Steering		Steering stem to handlebar		Steering stem to frame	
				Steering stem to upper bracket	
				Upper bracket to handlebar	
Suspension	Front	Steering stem to front fork		Front fork to upper bracket	
				Front fork to lower bracket	
	Rear	Link		Assembly of links	
				Link to frame	
				Link to rear shock absorber	
				Link to swingarm	
		Mounting of rear shock absorber		Rear shock absorber and frame	
		Mounting of swingarm		Tightening of pivot shaft	
Wheel(s)		Mounting of wheel		Front	Tightening of wheel axle
					Tightening of axle holder
					Tightening of spoke nipple
				Rear	Tightening of wheel axle
					Wheel to rear wheel sprocket
					Tightening of spoke nipple
Brake(s)				Front	Brake caliper to front fork
					Brake disc to wheel
					Tightening of union bolt
					Brake master cylinder to handlebar
					Tightening of bleed screw
					Tightening of brake hose holder
				Rear	Brake pedal to frame
					Brake disc to wheel
					Tightening of union bolt
					Brake master cylinder to frame
				Tightening of bleed screw	

TORQUE-CHECK POINTS

Clutch	Tightening of union bolt
	Clutch master cylinder to handlebar
	Tightening of bleed screw
Fuel system	Fuel pump to fuel tank
Shift pedal	Shift pedal to shift shaft
Plastic cover	Tightening of front fender
	Tightening of fork leg protector
	Tightening of shroud
	Tightening of side cover
	Tightening of rear fender
	Tightening of mud flap
	Tightening of rear brake caliper cover

TIP

Concerning the tightening torque, refer to “TIGHTENING TORQUES” on page 2-9.

EAM20126

MOTORCYCLE CARE AND STORAGE

EAM30200

CARE


While the open design of a motorcycle reveals the attractiveness of the technology, it also makes it more vulnerable. Rust and corrosion can develop even if high-quality components are used. A rusty exhaust pipe may go unnoticed on a car, however, it detracts from the overall appearance of a motorcycle. Frequent and proper care does not only comply with the terms of the warranty, but it will also keep your motorcycle looking good, extend its life and optimize its performance.

Before cleaning

TIP

Be sure to confirm that the vehicle is completely cooled.

1. Block or cover the following parts with suitable measures.
 - Air duct “1”
(other gaps around shrouds and seats)
 - Muffler outlet “2”

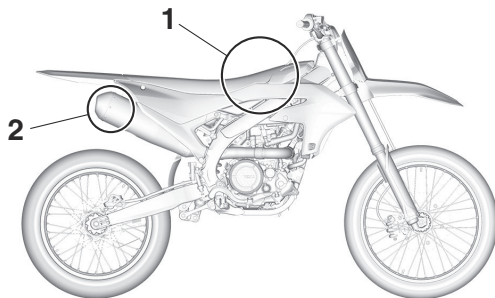

2. Make sure that all caps and covers as well as all electrical couplers and connectors, including the spark plug cap, are tightly installed.
3. Remove extremely stubborn dirt, like oil burnt onto the crankcase, with a degreasing agent and a brush, but never apply such products onto seals, gaskets, sprockets, the drive chain and wheel axles. Always rinse the dirt and degreaser off with water.

Cleaning


ECA26730

NOTICE

- Avoid using strong acidic wheel cleaners, especially on spoked wheels. If such products are used on hard-to-remove dirt, do not leave the cleaner on the affected area any longer than instructed. Also, thoroughly

rinse the area off with water, immediately dry it, and then apply a corrosion protection spray.

- Improper cleaning can damage plastic parts (such as cowlings, panels, windshields, headlight lenses, meter lenses, etc.) and the mufflers. Use only a soft, clean cloth or sponge with water to clean plastic. However, if the plastic parts cannot be thoroughly cleaned with water, diluted mild detergent with water may be used. Be sure to rinse off any detergent residue using plenty of water, as it is harmful to plastic parts.
- Do not use any harsh chemical products on plastic parts. Be sure to avoid using cloths or sponges which have been in contact with strong or abrasive cleaning products, solvent or thinner, fuel (gasoline), rust removers or inhibitors, brake fluid, antifreeze or electrolyte.
- For motorcycles equipped with a windshield: Do not use strong cleaners or hard sponges as they will cause dulling or scratching. Some cleaning compounds for plastic may leave scratches on the windshield. Test the product on a small hidden part of the windshield to make sure that it does not leave any marks. If the windshield is scratched, use a quality plastic polishing compound after washing.
- When cleaning using either a high-pressure cleaning machine or a water hose, do not direct the water jet toward the following areas: (Otherwise, it could cause either damage due to the water pressure or malfunction due to water entry.)
 - Wheels or swing arm bearings
 - Fork seals or brake seals
 - Electrical parts, such as couplers, switches, battery, etc.
 - Muffler or hoses
 - Air cleaner intake port
- Do not clean using a water jet with the seat or cover removed.

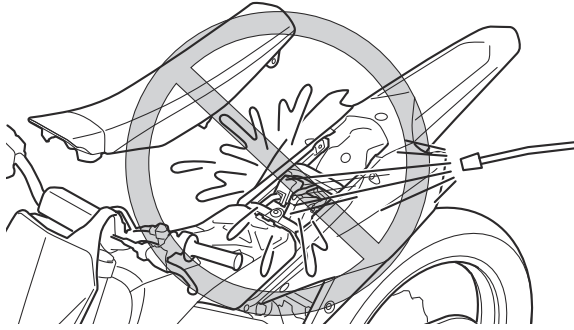

After normal use

Remove dirt with warm water, a mild detergent, and a soft, clean sponge, and then rinse thoroughly with clean water. Use a toothbrush or bottlebrush for hard-to-reach areas. Stubborn dirt and insects will come off more easily if the area is covered with a wet cloth for a few minutes before cleaning.

After riding in the rain, near the sea or on salt-sprayed roads

Since sea salt or salt sprayed on roads during winter are extremely corrosive in combination with water, carry out the following steps after each ride in the rain, near the sea or on salt-sprayed roads.

TIP

Salt sprayed on roads in the winter may remain well into spring.

1. Clean the motorcycle with cold water and a mild detergent, after the engine has cooled down.

NOTICE: Do not use warm water since it increases the corrosive action of the salt.

2. Apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces to prevent corrosion.

After cleaning

1. Dry the motorcycle with a chamois or an absorbing cloth.
2. Immediately dry the drive chain and lubricate it to prevent it from rusting.
3. Use a chrome polish to shine chrome, aluminum and stainless- steel parts, including the exhaust system. (Even the thermally induced discoloring of stainless- steel exhaust systems can be removed through polishing.)
4. To prevent corrosion, it is recommended to apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces.
5. Use spray oil as a universal cleaner to remove any remaining dirt.

6. Touch up minor paint damage caused by stones, etc.
7. Wax all painted surfaces.
8. Let the motorcycle dry completely before storing or covering it.

EWA19050

WARNING

Contaminants on the brakes or tires can cause loss of control.

- **Make sure that there is no oil or wax on the brakes or tires.**
- **If necessary, clean the brake discs and brake linings with a regular brake disc cleaner or acetone, and wash the tires with warm water and a mild detergent. Before riding at higher speeds, test the motorcycle's braking performance and cornering behavior.**

ECA24240

NOTICE

- **Apply spray oil and wax sparingly and make sure to wipe off any excess.**
- **Never apply oil or wax to any rubber and plastic parts, but treat them with a suitable care product.**
- **Avoid using abrasive polishing compounds as they will wear away the paint.**

TIP

- Consult a Yamaha dealer for advice on what products to use.
- Washing, rainy weather or humid climates can cause the headlight lens to fog. Turning the headlight on for a short period of time will help remove the moisture from the lens.

EAM30201

STORAGE

Short-term

Always store your motorcycle in a cool, dry place and, if necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the motorcycle.

ECA24250

NOTICE

- **Storing the motorcycle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.**
- **To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are**

stored.

Long-term

Before storing your motorcycle for several months:

1. Follow all the instructions in the “CARE” on page 1-32.
2. Fill up the fuel tank and add fuel stabilizer (if available) to prevent the fuel tank from rusting and the fuel from deteriorating.
3. Perform the following steps to protect the cylinder, piston rings, etc. from corrosion.
 - a. Remove the spark plug cap and spark plug.
 - b. Pour a teaspoonful of engine oil into the spark plug bore.
 - c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
 - d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.)
 - e. Remove the spark plug cap from the spark plug, and then install the spark plug and the spark plug cap. **WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.**
4. Lubricate all control cables and the pivoting points of all levers and pedals as well as of the sidestand/centerstand.
5. Check and, if necessary, correct the tire air pressure, and then lift the motorcycle so that both of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tires from becoming degraded in one spot.
6. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
7. Remove the battery and fully charge it. Store it in a cool, dry place and charge it once a month. Do not store the battery in an excessively cold or warm place [less than 0 °C (32 °F) or more than 65 °C (149 °F)]. For more information on storing the battery, “CHECKING AND CHARGING THE BATTERY” on page 8-52.

TIP

Make any necessary repairs before storing the motorcycle.

SPECIFICATIONS

GENERAL SPECIFICATIONS	2-1
ENGINE SPECIFICATIONS	2-2
CHASSIS SPECIFICATIONS	2-5
ELECTRICAL SPECIFICATIONS	2-8
TIGHTENING TORQUES	2-9
GENERAL TIGHTENING TORQUE SPECIFICATIONS.....	2-9
ENGINE TIGHTENING TORQUES.....	2-10
CHASSIS TIGHTENING TORQUES.....	2-13
CABLE ROUTING DIAGRAM	2-17

EAM20127

GENERAL SPECIFICATIONS

Model	
Model	D031 D036
Dimensions	
Overall length	2175 mm (85.6 in)
Overall width	825 mm (32.5 in)
Overall height	1275 mm (50.2 in)
Seat height	965 mm (38.0 in)
Wheelbase	1475 mm (58.1 in)
Ground clearance	345 mm (13.58 in)
Weight	
Curb weight	110 kg (243 lb)
Riding capacity	1 person

EAM20128

ENGINE SPECIFICATIONS

Engine

Combustion cycle	4-stroke
Cooling system	Liquid cooled
Valve train	DOHC
Displacement	450 cm ³
Number of cylinders	Single cylinder
Bore × stroke	97.0 × 60.8 mm (3.82 × 2.39 in)
Compression ratio	13.0 : 1
Starting system	Electric starter

Fuel

Recommended fuel	Unleaded gasoline (E10 acceptable)
Octane number (RON)	95
Fuel tank capacity	6.2 L (1.6 US gal, 1.4 Imp.gal)

Engine oil

Recommended brand	YAMALUBE
SAE viscosity grades	10W-40, 10W-50, 15W-40, 20W-40 or 20W-50
Recommended engine oil grade	API service SG type or higher, JASO standard MA
Lubrication system	Dry sump
Engine oil quantity	
Oil change	0.94 L (0.99 US qt, 0.83 Imp.qt)
With oil filter removal	0.96 L (1.01 US qt, 0.84 Imp.qt)
Quantity (disassembled)	1.20 L (1.27 US qt, 1.06 Imp.qt)

Oil filter

Oil filter type	Cartridge
-----------------	-----------

Cooling system

Coolant quantity	
Radiator (including all routes)	1.03 L (1.09 US qt, 0.91 Imp.qt)
Radiator cap valve opening pressure	107.9–137.3 kPa (1.08–1.37 kgf/cm ² , 15.6–19.9 psi)
Cooling system leak test pressure	137.3 kPa (1.37 kgf/cm ² , 19.9 psi)

Spark plug(s)

Manufacturer/model	NGK/LMAR8G
Spark plug gap	0.7–0.8 mm (0.028–0.031 in)

Cylinder head

Warpage limit	0.05 mm (0.0020 in)
---------------	---------------------

Camshaft

Camshaft cap inside diameter	22.043–22.064 mm (0.8678–0.8687 in)
Camshaft journal diameter	22.002–22.015 mm (0.8662–0.8667 in)
Camshaft-journal-to-camshaft-cap clearance	0.028–0.062 mm (0.0011–0.0024 in)
Camshaft-journal-to-camshaft-cap clearance limit	0.080 mm (0.0032 in)
Camshaft lobe dimensions	
Lobe height limit (Intake)	38.030 mm (1.4972 in)
Lobe height limit (Exhaust)	34.170 mm (1.3453 in)

Valve, valve seat, valve guide

Valve clearance (cold)	
------------------------	--

ENGINE SPECIFICATIONS

Intake	0.10–0.17 mm (0.0039–0.0067 in)
Exhaust	0.15–0.22 mm (0.0059–0.0087 in)
Valve dimensions	
Valve seat contact width limit (intake)	1.5 mm (0.06 in)
Valve seat contact width limit (exhaust)	1.5 mm (0.06 in)
Valve stem diameter limit (intake)	5.445 mm (0.2144 in)
Valve stem diameter limit (exhaust)	5.435 mm (0.2140 in)
Valve guide inside diameter (intake)	5.500–5.512 mm (0.2165–0.2170 in)
Valve guide inside diameter (exhaust)	5.500–5.512 mm (0.2165–0.2170 in)
Valve-stem-to-valve-guide clearance limit (intake)	0.080 mm (0.0032 in)
Valve-stem-to-valve-guide clearance limit (exhaust)	0.100 mm (0.0039 in)
Valve stem runout	0.020 mm (0.0008 in)
Valve spring	
Free length limit (intake)	36.65 mm (1.44 in)
Free length limit (exhaust)	37.34 mm (1.47 in)
Cylinder	
Bore	97.000–97.010 mm (3.8189–3.8193 in)
Wear limit	97.060 mm (3.8213 in)
Piston	
Piston-to-cylinder clearance	0.010–0.045 mm (0.0004–0.0018 in)
Diameter	96.955–96.970 mm (3.8171–3.8177 in)
Measuring point (from piston skirt bottom)	9.0 mm (0.35 in)
Piston pin bore inside diameter limit	18.045 mm (0.7104 in)
Piston pin outside diameter limit	17.981 mm (0.7079 in)
Piston-pin-to-piston-pin-bore clearance	0.004–0.024 mm (0.0002–0.0009 in)
Piston ring	
Top ring	
End gap limit	0.55 mm (0.0217 in)
Ring side clearance	0.015–0.065 mm (0.0006–0.0026 in)
Side clearance limit	0.120 mm (0.0047 in)
2nd ring	
End gap limit	0.85 mm (0.0335 in)
Ring side clearance	0.020–0.060 mm (0.0008–0.0024 in)
Side clearance limit	0.100 mm (0.0039 in)
Connecting rod	
Oil clearance	0.021–0.038 mm (0.0008–0.0015 in)
Bearing color code	
Code 0	Pink
Code 8	White
Crankshaft	
Crank assembly width	61.93–62.00 mm (2.438–2.441 in)
Runout limit	0.030 mm (0.0012 in)
Clutch	
Clutch type	Wet, multiple-disc
Friction plate 1 thickness	2.12–2.28 mm (0.083–0.090 in)
Wear limit	2.02 mm (0.080 in)
Plate quantity	4 pcs

ENGINE SPECIFICATIONS

Friction plate 2 thickness	2.12–2.28 mm (0.083–0.090 in)
Wear limit	2.02 mm (0.080 in)
Plate quantity	4 pcs
Clutch plate 1 thickness	1.35–1.45 mm (0.053–0.057 in)
Plate quantity	7 pcs
Warpage limit	0.10 mm (0.004 in)
Clutch plate 2 thickness	0.93–1.07 mm (0.037–0.042 in)
Plate quantity	2 pcs
Warpage limit	0.10 mm (0.004 in)
Clutch spring free height	4.59 mm (0.18 in)
Clutch spring free height limit	4.36 mm (0.17 in)
Push rod bending limit	0.10 mm (0.004 in)
Drivetrain	
Primary reduction ratio	2.481 (67/27)
Transmission type	Constant mesh 5-speed
Gear ratio	
1st	2.000 (28/14)
2nd	1.625 (26/16)
3rd	1.350 (27/20)
4th	1.136 (25/22)
5th	1.000 (21/21)
Main axle runout limit	0.08 mm (0.0032 in)
Drive axle runout limit	0.08 mm (0.0032 in)
Secondary reduction ratio	3.923 (51/13)
Final drive	Chain
Air filter	
Air filter element	Wet element
Air filter oil grade	Yamaha foam air filter oil or other quality foam air filter oil
Fuel pump	
Maximum consumption amperage	2.4 A
Fuel injector	
Resistance	12.0 Ω
Throttle body	
ID mark	D021
Idling condition	
Engine idling speed	1900–2100 r/min
Coolant temperature	70–80 °C (158–176 °F)
Fuel line pressure (at idle)	300–390 kPa (3.0–3.9 kgf/cm ² , 43.5–56.6 psi)
Throttle grip free play	3.0–6.0 mm (0.12–0.24 in)

EAM20129

CHASSIS SPECIFICATIONS

Chassis

Caster angle	27.5 °
Trail	123 mm (4.8 in)

Front wheel

Wheel type	Spoke wheel
Rim size	21x1.6
Radial wheel runout limit	2.0 mm (0.08 in)
Lateral wheel runout limit	2.0 mm (0.08 in)
Wheel axle bending limit	0.50 mm (0.02 in)

Rear wheel

Wheel type	Spoke wheel
Rim size	19x2.15
Radial wheel runout limit	2.0 mm (0.08 in)
Lateral wheel runout limit	2.0 mm (0.08 in)
Wheel axle bending limit	0.50 mm (0.02 in)

Front tire

Type	With tube
Size	80/100-21 51M
Manufacturer/model	DUNLOP/MX33

Rear tire

Type	With tube
Size	120/80-19 63M
Manufacturer/model	DUNLOP/MX33

Tire air pressure (measured on cold tires)

Front	100 kPa (1.00 kgf/cm ² , 15 psi)
Rear	100 kPa (1.00 kgf/cm ² , 15 psi)

Front brake

Type	Hydraulic single disc brake
Brake disc thickness limit	2.5 mm (0.10 in)
Brake disc runout limit (as measured on wheel)	0.15 mm (0.0059 in)
Brake pad lining thickness limit	1.0 mm (0.04 in)
Master cylinder inside diameter	9.52 mm (0.37 in)
Caliper cylinder inside diameter (Left)	25.40 mm, 25.40 mm (1.00 in, 1.00 in)
Specified brake fluid	DOT 4

Rear brake

Type	Hydraulic single disc brake
Brake disc thickness limit	3.5 mm (0.14 in)
Brake disc runout limit (as measured on wheel)	0.15 mm (0.0059 in)
Brake pad lining thickness limit	1.0 mm (0.04 in)
Master cylinder inside diameter	11.0 mm (0.43 in)
Caliper cylinder inside diameter	25.40 mm (1.00 in)
Specified brake fluid	DOT 4

Clutch

Specified brake and clutch fluid	DOT 4
----------------------------------	-------

CHASSIS SPECIFICATIONS

Front suspension

Type	Telescopic fork
Spring	Coil spring
Shock absorber	Hydraulic damper
Wheel travel	310 mm (12.2 in)
Fork spring free length limit	492.0 mm (19.37 in)
Inner tube bending limit	0.2 mm (0.01 in)
Recommended oil	Yamaha Suspension Oil S1
Quantity (left)	486.0 cm ³ (16.43 US oz, 17.14 Imp.oz)
Quantity (right)	486.0 cm ³ (16.43 US oz, 17.14 Imp.oz)
Rebound damping	
Adjusting system	Mechanical adjustable type
Unit for adjustment	Click
Adjustment value from the start position (Soft)	20
Adjustment value from the start position (STD)	9
Adjustment value from the start position (Hard)	0
Compression damping	
Adjusting system	Mechanical adjustable type
Unit for compression damping adjustment	Click
Adjustment value from the start position (Soft)	20
Adjustment value from the start position (STD)	12
Adjustment value from the start position (Hard)	0

Rear suspension

Type	Swingarm (link suspension)
Spring	Coil spring
Shock absorber	Gas-hydraulic damper
Wheel travel	295 mm (11.6 in)
Spring preload	
Adjusting system	Mechanical adjustable type
Adjustment value (Soft)	1.5 mm (0.06 in)
Adjustment value (STD)	7.0 mm (0.28 in)
Adjustment value (Hard)	18.0 mm (0.71 in)
Rebound damping	
Adjusting system	Mechanical adjustable type
Unit for adjustment	Click
Adjustment value from the start position (Soft)	30
Adjustment value from the start position (STD)	10
Adjustment value from the start position (Hard)	0
Compression damping	
Adjusting system	Mechanical adjustable type
Fast compression damping	
Unit for adjustment	Turn

CHASSIS SPECIFICATIONS

Adjustment value from the start position (Soft)	2
Adjustment value from the start position (STD)	1+1/4
Adjustment value from the start position (Hard)	0
Slow compression damping	
Unit for adjustment	Click
Adjustment value from the start position (Soft)	20
Adjustment value from the start position (STD)	8
Adjustment value from the start position (Hard)	0

Drive chain	
Size	520
Chain type	Non-sealed type
Number of links	114
Drive chain slack (Maintenance Stand)	50.0–60.0 mm (1.97–2.36 in)
15-link length limit	242.9 mm (9.56 in)

EAM20130

ELECTRICAL SPECIFICATIONS**Voltage**

System voltage	12 V
----------------	------

Ignition system

Ignition system	TCI
Ignition timing (B.T.D.C.)	8.0–12.0 °/2000 r/min

Engine control unit

Model	D030
-------	------

Ignition coil

Primary coil resistance	1.98–2.42 Ω
Secondary coil resistance	14.64–21.96 k Ω

Spark plug cap

Resistance	10.00 k Ω
------------	------------------

Charging system

Charging system	AC magneto
Standard output	14.0 V, 7.1 A at 5000 r/min

Rectifier/regulator

Regulator type	Single-phase
Regulated voltage (DC)	14.0–14.8 V

Battery

Model	BR98
Voltage, capacity	12 V, 2.4 Ah (5 HR)

Starter motor

Brush overall length	11.0 mm (0.43 in)
Brush overall length limit	5.5 mm (0.22 in)
Brush spring force	4.80–7.20 N (489–734 gf, 17.28–25.92 oz)
Mica undercut (depth)	2.40 mm (0.09 in)

Fuel injection sensor

Crankshaft position sensor resistance	228–342 Ω
Intake air temperature sensor resistance	5400–6600 Ω at 0 °C (5400–6600 Ω at 32 °F)
Intake air temperature sensor resistance	290–390 Ω at 80 °C (290–390 Ω at 176 °F)
Coolant temperature sensor resistance	2310–2590 Ω at 20 °C (2310–2590 Ω at 68 °F)
Coolant temperature sensor resistance	310–326 Ω at 80 °C (310–326 Ω at 176 °F)

Fuse(s)

Main fuse	15.0 A
Spare fuse	15.0 A


EAM20131

TIGHTENING TORQUES

EAM30205

GENERAL TIGHTENING TORQUE SPECIFICATIONS

This chart specifies tightening torques for standard fasteners with a standard ISO thread pitch. Tightening torque specifications for special components or assemblies are provided for each chapter of this manual. To avoid warpage, tighten multi-fastener assemblies in a crisscross pattern and progressive stages until the specified tightening torque is reached. Unless otherwise specified, tightening torque specifications require clean, dry threads. Components should be at room temperature.

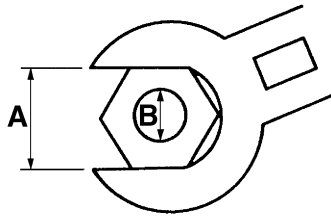

- A. Distance between flats
- B. Outside thread diameter

A (nut)	B (bolt)	General tightening torques		
		N·m	kgf·m	lb·ft
10 mm	6 mm	6	0.6	4.4
12 mm	8 mm	15	1.5	11
14 mm	10 mm	30	3.0	22
17 mm	12 mm	55	5.5	41
19 mm	14 mm	85	8.5	63
22 mm	16 mm	130	13.0	96

TIGHTENING TORQUES

EAM30203

ENGINE TIGHTENING TORQUES

TIP

△ - marked portion shall be checked for torque tightening after break-in or before each race.

Item	Thread size	Q'ty	Tightening torques	Remarks
Camshaft cap bolt	M6	8	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Spark plug	M10	1	13 N·m (1.3 kgf·m, 9.6 lb·ft)	
Oil passage plug (cylinder head)	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Cylinder head bolt	M10	4	See TIP.	
Cylinder head bolt	M6	2	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Cylinder head cover bolt	M6	3	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Cylinder head stud bolt (exhaust pipe)	M6	3	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Stud bolt (cylinder head cover)	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Cylinder head cover breather plate bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Oil nozzle (cylinder head)	M6	1	3.0 N·m (0.30 kgf·m, 2.2 lb·ft)	
Cylinder bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Balancer driven gear nut	M14	1	50 N·m (5.0 kgf·m, 37 lb·ft)	Use a lock washer.
Timing chain guide stopper plate (exhaust side)	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Timing chain tensioner cap bolt	M6	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Timing chain tensioner bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Coolant drain bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Radiator hose clamp screw	M6	8	1.5 N·m (0.15 kgf·m, 1.1 lb·ft)	
Radiator bolt	M6	4	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Radiator pipe joint bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Water pump housing cover bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Oil pump assembly bolt	M5	2	5 N·m (0.5 kgf·m, 3.7 lb·ft)	
Oil pump cover bolt	M4	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Oil strainer bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Throttle cable cover bolt	M5	1	3.5 N·m (0.35 kgf·m, 2.6 lb·ft)	
Throttle body joint bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Throttle body joint clamp screw	M5	1	3.0 N·m (0.30 kgf·m, 2.2 lb·ft)	
Air filter case joint clamp screw	M5	1	3.0 N·m (0.30 kgf·m, 2.2 lb·ft)	
Air filter case bolt	M6	3	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Air filter case bracket bolt	M6	4	7 N·m (0.7 kgf·m, 5.2 lb·ft)	

TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torques	Remarks
Intake air temperature sensor screw	M5	1	1.5 N·m (0.15 kgf·m, 1.1 lb·ft)	
Clutch hose union bolt	M10	2	30 N·m (3.0 kgf·m, 22 lb·ft)	△
Clutch master cylinder holder bolt	M6	2	9 N·m (0.9 kgf·m, 6.6 lb·ft)	
Clutch master cylinder reservoir cap screw	M4	2	1.5 N·m (0.15 kgf·m, 1.1 lb·ft)	
Clutch lever pivot bolt	M6	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Clutch lever pivot nut	M6	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Locknut (clutch lever position)	M6	1	5 N·m (0.5 kgf·m, 3.7 lb·ft)	
Exhaust pipe nut	M6	3	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Exhaust pipe protector screw	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Exhaust pipe bracket bolt	M8	1	20 N·m (2.0 kgf·m, 15 lb·ft)	
Silencer bolt (front)	M8	1	30 N·m (3.0 kgf·m, 22 lb·ft)	
Silencer bolt (rear)	M8	1	30 N·m (3.0 kgf·m, 22 lb·ft)	
Exhaust pipe clamp bolt	M8	2	16 N·m (1.6 kgf·m, 12 lb·ft)	
Oil nozzle (crankcase)	M5	1	0.5 N·m (0.05 kgf·m, 0.37 lb·ft)	
Oil nozzle bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Engine oil drain bolt (crankcase)	M10	1	20 N·m (2.0 kgf·m, 15 lb·ft)	
Engine oil drain bolt (oil tank)	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Crankcase bolt	M6	9	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Crankshaft end accessing screw	M36	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Timing mark accessing screw	M14	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Drive sprocket cover bolt	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Crankcase bearing cover plate screw	M8	4	30 N·m (3.0 kgf·m, 22 lb·ft)	
Bearing plate cover bolt (left side of the drive axle)	M6	2	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Plate bolt	M6	4	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Clutch cover bolt	M6	6	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Crankcase cover bolt (left)	M6	8	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Crankcase cover bolt (right)	M6	10	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Oil filter element cover bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Bolt (holder)	M6	2	12 N·m (1.2 kgf·m, 8.9 lb·ft)	
Primary drive gear nut	M20	1	See TIP.	
Bolt (pressure plate 1)	M6	6	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Clutch boss nut	M20	1	75 N·m (7.5 kgf·m, 55 lb·ft)	Stake. 


TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torques	Remarks
Clutch release cylinder bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Clutch release cylinder bleed screw	M6	1	5 N·m (0.5 kgf·m, 3.7 lb·ft)	
Drive sprocket nut	M20	1	90 N·m (9.0 kgf·m, 66 lb·ft)	Use a lock washer. 
Segment bolt	M8	1	30 N·m (3.0 kgf·m, 22 lb·ft)	
Shift guide bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Stopper lever bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Shift pedal bolt	M6	1	12 N·m (1.2 kgf·m, 8.9 lb·ft)	△
Generator rotor nut	M12	1	65 N·m (6.5 kgf·m, 48 lb·ft)	
Stator coil screw	M5	3	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Crankshaft position sensor bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Gear position switch bolt	M5	2	3.5 N·m (0.35 kgf·m, 2.6 lb·ft)	
Rectifier/regulator bolt	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Ignition coil bolt	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Starter motor bolt	M6	1	10 N·m (1.0 kgf·m, 7.4 lb·ft)	
Nut (holder)	M6	1	8 N·m (0.8 kgf·m, 5.9 lb·ft)	
Throttle position sensor screw	M5	1	3.5 N·m (0.35 kgf·m, 2.6 lb·ft)	
Intake air pressure sensor screw	M6	1	3.5 N·m (0.35 kgf·m, 2.6 lb·ft)	

TIP

Cylinder head bolt

Tighten all the cylinder head bolts evenly in the tightening order to 36 N·m (3.6 kgf·m, 27 lb·ft). Remove the one bolt according to the tightening order. When doing so, do not loosen the other bolts. Retighten the bolt to 18 N·m (1.8 kgf·m, 13 lb·ft), and then tighten it further to reach the specified angle (90°). Remove the remaining bolts one by one in the same manner and retighten them. Finally, tighten all the bolts to reach the specified angle (60°). Total tightening angle: 90° + 60° = 150° (The first and second time, be sure to apply molybdenum disulfide grease to the bolt threads and seats as well as to both sides of the plain washers.)

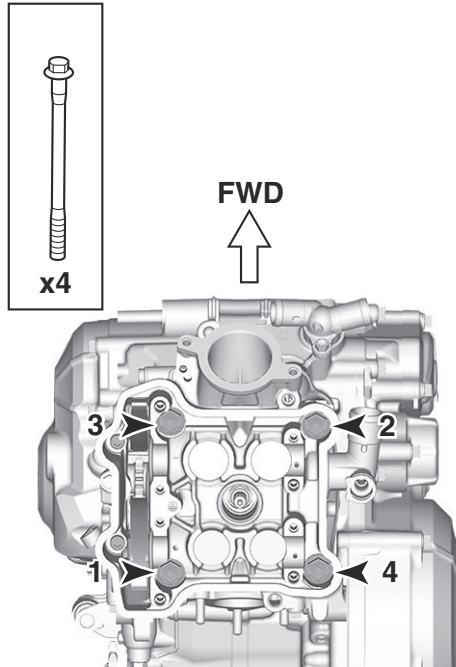

TIP

Primary drive gear nut

1. Thoroughly clean the threaded portion of the crankshaft, contact surface of the washer, and threaded portion and contact surface of the primary drive gear nut to remove the oil.
2. Apply molybdenum disulfide grease to the threaded portion of the crankshaft, the contact surface of the washer, and contact surface and threaded portion of the primary drive gear nut.
3. Tighten the primary drive gear nut 170 N·m (17 kgf·m, 125 lb·ft).

EAM30204

CHASSIS TIGHTENING TORQUES

TIP

△ - marked portion shall be checked for torque tightening after break-in or before each race.

Item	Thread size	Q'ty	Tightening torques	Remarks
Upper bracket pinch bolt	M8	4	21 N·m (2.1 kgf·m, 15 lb·ft)	△
Lower bracket pinch bolt	M8	4	21 N·m (2.1 kgf·m, 15 lb·ft)	△
Steering stem nut	M24	1	145 N·m (14.5 kgf·m, 107 lb·ft)	△
Upper handlebar holder bolt	M8	4	28 N·m (2.8 kgf·m, 21 lb·ft)	△
Lower handlebar holder nut	M10	2	40 N·m (4.0 kgf·m, 30 lb·ft)	△
Handlebar switch screw (left)	M4	1	1.3 N·m (0.13 kgf·m, 0.95 lb·ft)	
Starter switch	M3	1	0.5 N·m (0.05 kgf·m, 0.37 lb·ft)	
Lower ring nut	M28	1	See TIP.	△
Damper assembly (front fork)	M51	2	30 N·m (3.0 kgf·m, 22 lb·ft)	
Inner tube and adjuster	M22	2	55 N·m (5.5 kgf·m, 41 lb·ft)	
Base valve (front fork)	M42	2	28 N·m (2.8 kgf·m, 21 lb·ft)	

TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torques	Remarks
Adjuster (damper assembly)	M12	2	29 N·m (2.9 kgf·m, 21 lb·ft)	
Bleed screw (front fork)	M5	2	1.3 N·m (0.13 kgf·m, 0.95 lb·ft)	
Screw (adjuster knob)	M4	2	0.6 N·m (0.06 kgf·m, 0.44 lb·ft)	
Front fork protector bolt	M6	6	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Brake hose holder bolt	M6	2	9 N·m (0.9 kgf·m, 6.6 lb·ft)	△
Screw (throttle cable housing)	M5	2	3.8 N·m (0.38 kgf·m, 2.8 lb·ft)	
Front brake master cylinder holder bolt	M6	2	9 N·m (0.9 kgf·m, 6.6 lb·ft)	△
Front brake master cylinder reservoir cap screw	M4	2	1.5 N·m (0.15 kgf·m, 1.1 lb·ft)	
Front brake lever pivot bolt	M6	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Front brake lever pivot nut	M6	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Locknut (front brake lever position)	M6	1	5 N·m (0.5 kgf·m, 3.7 lb·ft)	
Front brake hose union bolt	M10	2	30 N·m (3.0 kgf·m, 22 lb·ft)	△
Front brake caliper bolt	M8	2	28 N·m (2.8 kgf·m, 21 lb·ft)	△
Front brake pad pin	M10	1	17 N·m (1.7 kgf·m, 13 lb·ft)	
Front brake pad pin plug	M10	1	2.5 N·m (0.25 kgf·m, 1.8 lb·ft)	
Front brake caliper bleed screw	M8	1	5 N·m (0.5 kgf·m, 3.7 lb·ft)	△
Front wheel axle nut	M18	1	115 N·m (11.5 kgf·m, 85 lb·ft)	△
Front wheel axle pinch bolt	M8	4	21 N·m (2.1 kgf·m, 15 lb·ft)	△
Front brake disc bolt	M6	6	12 N·m (1.2 kgf·m, 8.9 lb·ft)	△/ 
Rear brake disc bolt	M6	6	12 N·m (1.2 kgf·m, 8.9 lb·ft)	△/ 
Footrest bracket bolt	M10	4	55 N·m (5.5 kgf·m, 41 lb·ft)	
Rear brake pedal bolt	M8	1	26 N·m (2.6 kgf·m, 19 lb·ft)	△
Rear brake pedal adjusting locknut	M6	1	6 N·m (0.6 kgf·m, 4.4 lb·ft)	
Rear brake master cylinder bolt	M6	2	10 N·m (1.0 kgf·m, 7.4 lb·ft)	△
Rear brake master cylinder reservoir cap bolt	M4	2	1.5 N·m (0.15 kgf·m, 1.1 lb·ft)	
Rear brake hose union bolt	M10	2	30 N·m (3.0 kgf·m, 22 lb·ft)	△
Rear brake caliper bleed screw	M8	1	5 N·m (0.5 kgf·m, 3.7 lb·ft)	△
Rear brake pad pin	M10	1	17 N·m (1.7 kgf·m, 13 lb·ft)	
Rear brake pad pin plug	M10	1	2.5 N·m (0.25 kgf·m, 1.8 lb·ft)	
Rear wheel axle nut	M22	1	135 N·m (13.5 kgf·m, 100 lb·ft)	△
Drive chain puller locknut	M8	2	21 N·m (2.1 kgf·m, 15 lb·ft)	
Rear wheel sprocket nut	M8	6	42 N·m (4.2 kgf·m, 31 lb·ft)	△
Nipple (spoke)	—	72	2.5 N·m (0.25 kgf·m, 1.8 lb·ft)	△
Rear brake caliper protector bolt	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△

TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torques	Remarks
Engine mounting bolt (upper side)	M10	2	45 N·m (4.5 kgf·m, 33 lb·ft)	△
Engine mounting bolt (front side)	M10	1	55 N·m (5.5 kgf·m, 41 lb·ft)	△
Engine mounting bolt (lower side)	M10	1	53 N·m (5.3 kgf·m, 39 lb·ft)	△
Engine bracket bolt (upper side)	M8	4	34 N·m (3.4 kgf·m, 25 lb·ft)	△
Engine bracket bolt (front side)	M8	2	34 N·m (3.4 kgf·m, 25 lb·ft)	△
Rear frame bolt	M8	4	38 N·m (3.8 kgf·m, 28 lb·ft)	△
Engine guard bolt (right side)	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Pivot shaft nut	M16	1	75 N·m (7.5 kgf·m, 55 lb·ft)	△/ 
Rear shock absorber assembly upper nut	M10	1	56 N·m (5.6 kgf·m, 41 lb·ft)	△
Rear shock absorber assembly lower nut	M10	1	53 N·m (5.3 kgf·m, 39 lb·ft)	△
Relay arm nut (swingarm side)	M14	1	70 N·m (7.0 kgf·m, 52 lb·ft)	△
Connecting arm nut (relay arm side)	M14	1	80 N·m (8.0 kgf·m, 59 lb·ft)	△
Connecting arm nut (frame side)	M14	1	80 N·m (8.0 kgf·m, 59 lb·ft)	△
Drive chain tensioner bolt (lower side)	M8	1	16 N·m (1.6 kgf·m, 12 lb·ft)	
Bolt (drive chain support)	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Drive chain support nut	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Drive chain guide bolt	M5	3	4.0 N·m (0.40 kgf·m, 3.0 lb·ft)	
Fuel tank bolt (front side)	M6	2	8 N·m (0.8 kgf·m, 5.9 lb·ft)	△
Screw (fuel tank)	M6	1	4.0 N·m (0.40 kgf·m, 3.0 lb·ft)	
Fuel pump bolt	M5	5	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Screw (fuel inlet pipe)	M5	2	3.5 N·m (0.35 kgf·m, 2.6 lb·ft)	
Seat set bracket screw	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Seat bolt	M6	2	13 N·m (1.3 kgf·m, 9.6 lb·ft)	△
Side cover bolt (left)	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Center side cover bolt (left)	M6	1	9.5 N·m (0.95 kgf·m, 7.0 lb·ft)	
Side cover bolt (right)	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Center side cover bolt (right)	M6	1	9.5 N·m (0.95 kgf·m, 7.0 lb·ft)	
Shroud bolt (frame)	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Shroud bolt (air filter case)	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Shroud bolt (fuel tank)	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Shroud bolt (radiator guard)	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Front fender bolt	M6	4	10 N·m (1.0 kgf·m, 7.4 lb·ft)	△
Rear fender bolt (front side)	M6	4	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Rear fender bolt (rear side)	M6	2	16 N·m (1.6 kgf·m, 12 lb·ft)	△

TIGHTENING TORQUES

Item	Thread size	Q'ty	Tightening torques	Remarks
Screw (mud flap)	—	2	1.3 N·m (0.13 kgf·m, 0.95 lb·ft)	△
Number plate bolt	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	△
Frame ground bolt (negative battery lead)	M6	1	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Ignition coil bracket bolt	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	
Starter relay bolt	M6	2	3.5 N·m (0.35 kgf·m, 2.6 lb·ft)	
Battery box bolt	M6	2	7 N·m (0.7 kgf·m, 5.2 lb·ft)	

TIP


Lower ring nut

1. First, tighten the lower ring nut approximately 38 N·m (3.8 kgf·m, 28 lb·ft) by using the steering nut wrench, then loosen the lower ring nut one turn.
2. Retighten the lower ring nut 7 N·m (0.7 kgf·m, 5.2 lb·ft).

EAM20152

CABLE ROUTING DIAGRAM

Frame and engine (front left side view)

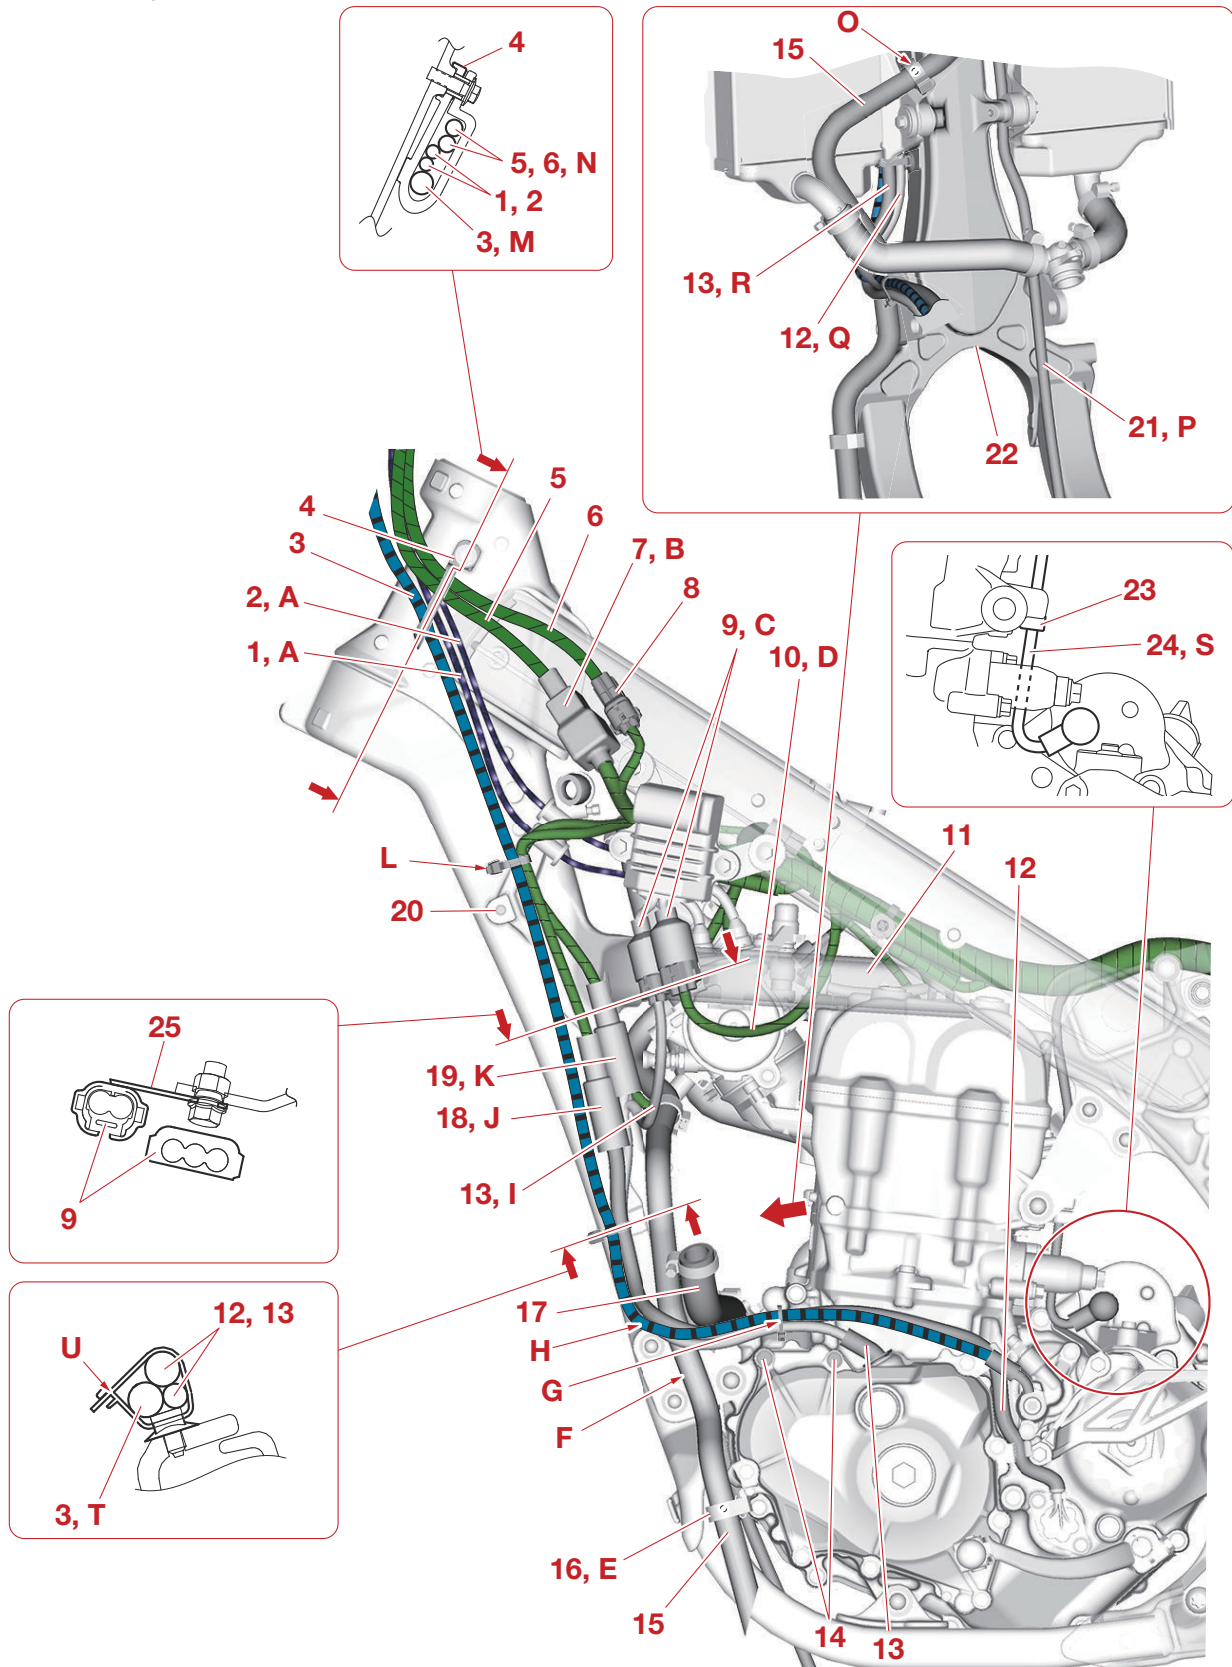


CABLE ROUTING DIAGRAM

1. Throttle cable (return)
 2. Throttle cable (pull)
 3. Clutch hose
 4. Cable holder
 5. Handlebar switch lead (left)
 6. Starter switch lead
 7. Handlebar switch coupler (left) (black, 6-pin)
 8. Starter switch coupler (black, 2-pin)
 9. Rectifier/regulator coupler
 10. Rectifier/regulator lead
 11. Tension arm
 12. Gear position switch lead
 13. Stator coil assembly lead
 14. Crankcase cover bolt (left)
 15. Cylinder head breather hose
 16. Holder
 17. Radiator hose
 18. Gear position switch coupler (white, 3-pin)
 19. Stator coil assembly coupler (gray, 2-pin)
 20. Upper radiator boss
 21. Radiator breather hose
 22. Down tube
 23. Clamp
 24. Starter motor lead
 25. Bracket
- A. Route the throttle cable behind the handlebar switch lead (left) and starter switch lead with respect to the vehicle.
 - B. Insert the handlebar switch 6-pin coupler (left) (black) into the bracket and secure it. After securing the coupler, install the cover over it up to the wire harness as shown.
 - C. Insert the rectifier/regulator 2-pin coupler (not colored) and rectifier/regulator 3-pin coupler (not colored) into the bracket and secure them. After securing, install the cover over them.
 - D. Pass the rectifier/regulator lead (wire harness side) to the inside of the tension arm (the side of the vehicle).
 - E. Install the cylinder head breather hose by aligning the paint mark on the cylinder head breather hose with the holder. When doing so, the paint mark should be within the holder area.
 - F. Route the cylinder head breather hose between the two engine bracket bolts (front) and the one engine bracket bolt (rear).
 - G. Fasten the clutch hose, gear position switch lead and stator coil assembly lead with a plastic locking tie. The fastening position should be between the crankcase cover bolt (left) and the crankcase cover bolt (left), as shown. Place the lock portion of the plastic locking tie to the outside of the vehicle, and then cut off the end of the remaining portion. (The direction of the end does not matter.)
 - H. Route the clutch hose outside the vehicle past the gear position switch lead and stator coil assembly lead.
 - I. Pass the stator coil assembly lead behind the radiator. Be sure the lead will not be pinched between the radiator and the tension arm. Also make sure that the lead is not pinched between the radiator and the gear position switch 3-pin coupler (white).
 - J. After connecting the gear position switch 3-pin coupler (white), attach the coupler cover.
 - K. After connecting the stator coil assembly 2-pin coupler (gray), attach the coupler cover.
 - L. Fasten the clutch hose, gear position switch lead, and stator coil assembly lead over the upper radiator boss with the plastic locking tie. Place the lock portion of the plastic locking tie to the front of the vehicle, and then cut off the end of the remaining portion. (The direction of the end does not matter.)
 - M. Route the clutch hose under the handlebar switch lead (left), starter switch lead, and throttle cable.
 - N. The routing order of the handlebar switch lead (left) and starter switch lead does not matter.
 - O. Install the clamp by aligning the paint mark on the cylinder head breather hose. When doing so, the paint mark should be within the clamp area.
 - P. Pass the radiator breather hose through the down tube.
 - Q. Route the gear position switch lead outside the vehicle past the cylinder head breather hose.
 - R. Route the stator coil assembly lead outside the vehicle past the cylinder head breather hose.
 - S. When fastening the starter motor lead with the clamp, close the clamp while applying tension to the starter motor lead so that the starter motor lead has no slack. It does not matter if the starter motor lead contacts the crankcase cover bolt and timing chain tensioner.
 - T. Route the clutch hose while facing the front, and then fasten it using the clamp at the paint mark.
 - U. Insert the clip portion of the clamp into the frame. The lock part should face toward the front of the vehicle. Cut off the end of the remaining portion. (The direction of the end does not matter.)

CABLE ROUTING DIAGRAM


Frame (rear left side view)

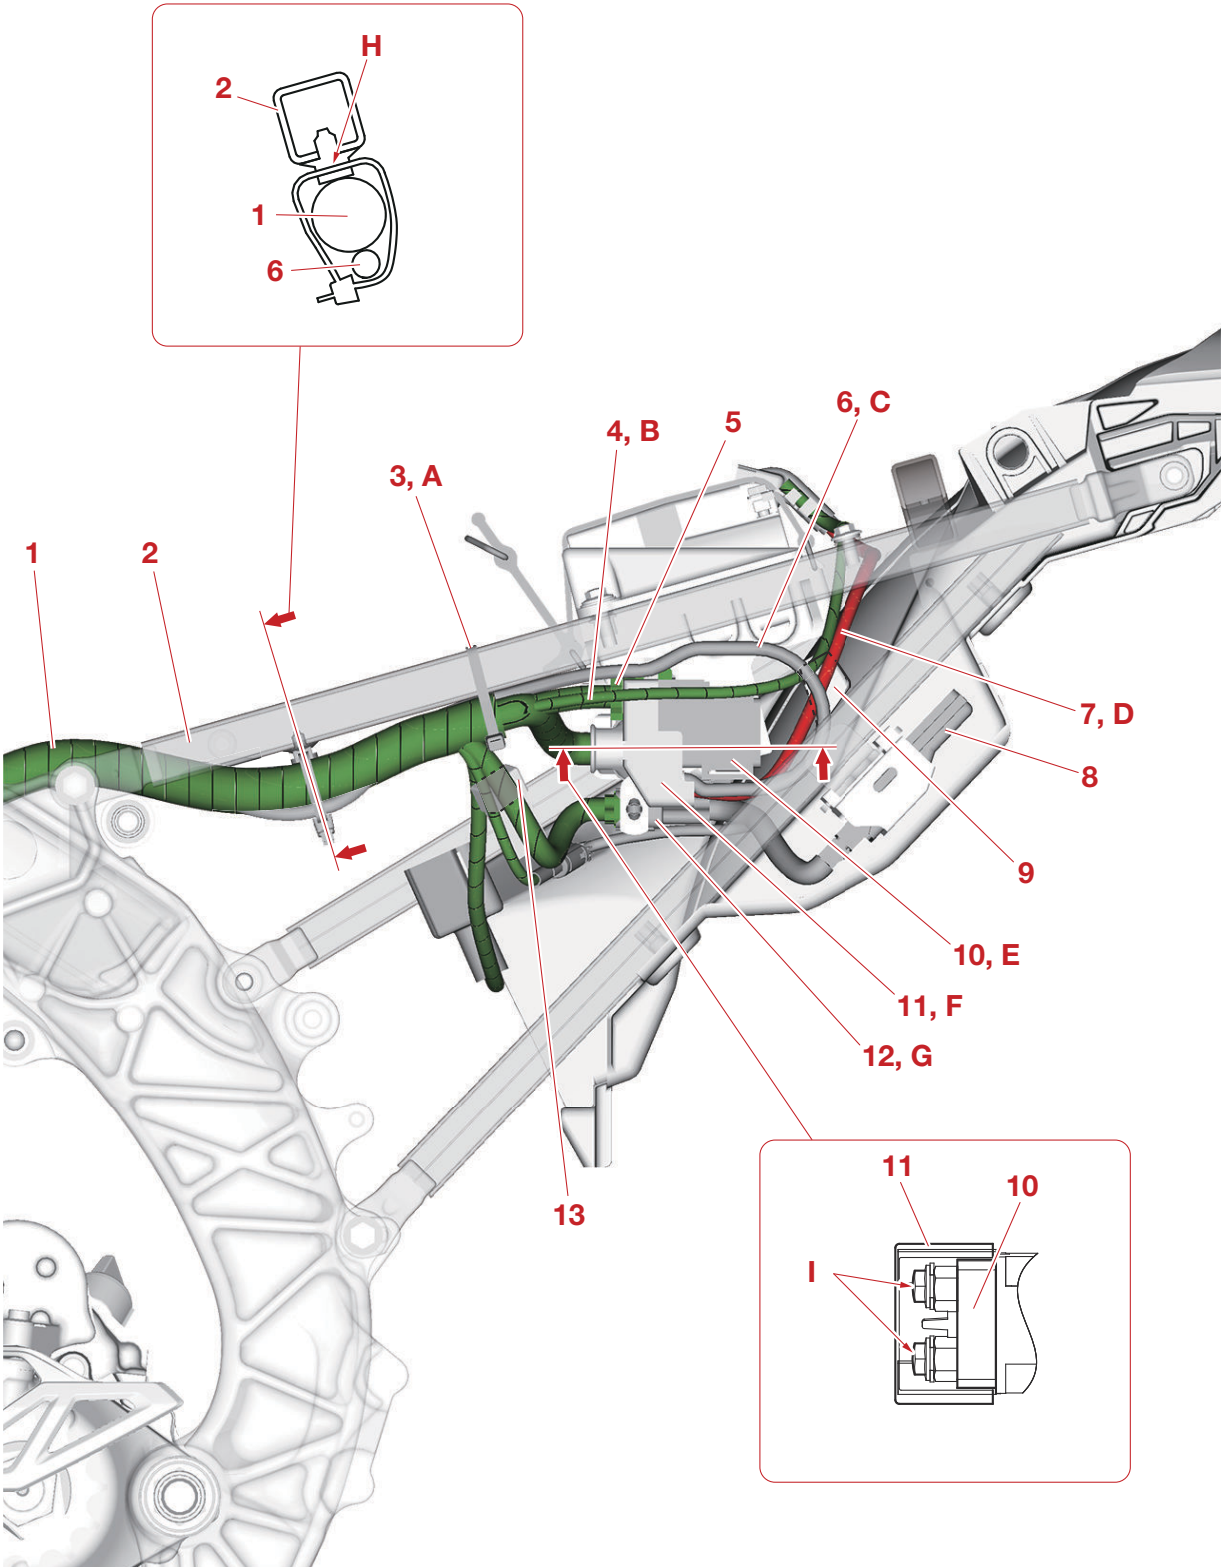

1. Wire harness
 2. Rear frame
 3. Plastic locking tie
 4. Negative battery lead
 5. Starter relay coupler (black, 4-pin)
 6. Starter motor lead
 7. Positive battery lead
 8. CCU (Communication Control Unit)
 9. Rear fender (projection)
 10. Starter relay
 11. Starter relay cover
 12. CCU coupler
 13. Diode
-
- A. Fasten the starter motor lead and wire harness to the rear frame at the white tape position of the wire harness using the plastic locking tie. Point the lock portion of the wire harness to the lower side of the vehicle while pointing the end of the lock portion to the outside of the vehicle, and then cut off the end.
 - B. Route the negative battery lead through the inside of the vehicle along the starter motor lead.
 - C. Route the starter motor lead between the starter relay and the rear frame. Adjust any slack between the starter relay and the plastic locking tie of the rear frame.
 - D. Route the positive battery lead on the outside of the projection on the rear fender (outside the vehicle).
 - E. Insert the starter relay into the battery bracket, and secure it.
 - F. Install the starter relay cover over the starter relay.
 - G. Insert the CCU coupler into the battery bracket so that the coupler is located on the inside (of the vehicle), and then secure it.
 - H. Insert the clip of the clamp into the frame. Fasten the starter motor lead and wire harness at the green tape position of the wire harness. Place the starter motor lead under the vehicle's wire harness. Place the lock portion of the plastic locking tie to the lower part of the vehicle, and then cut off the end by pointing it to the outside of the vehicle.
 - I. Point the starter motor lead to the outside, and then install it.

CABLE ROUTING DIAGRAM


Frame and engine (right side view)

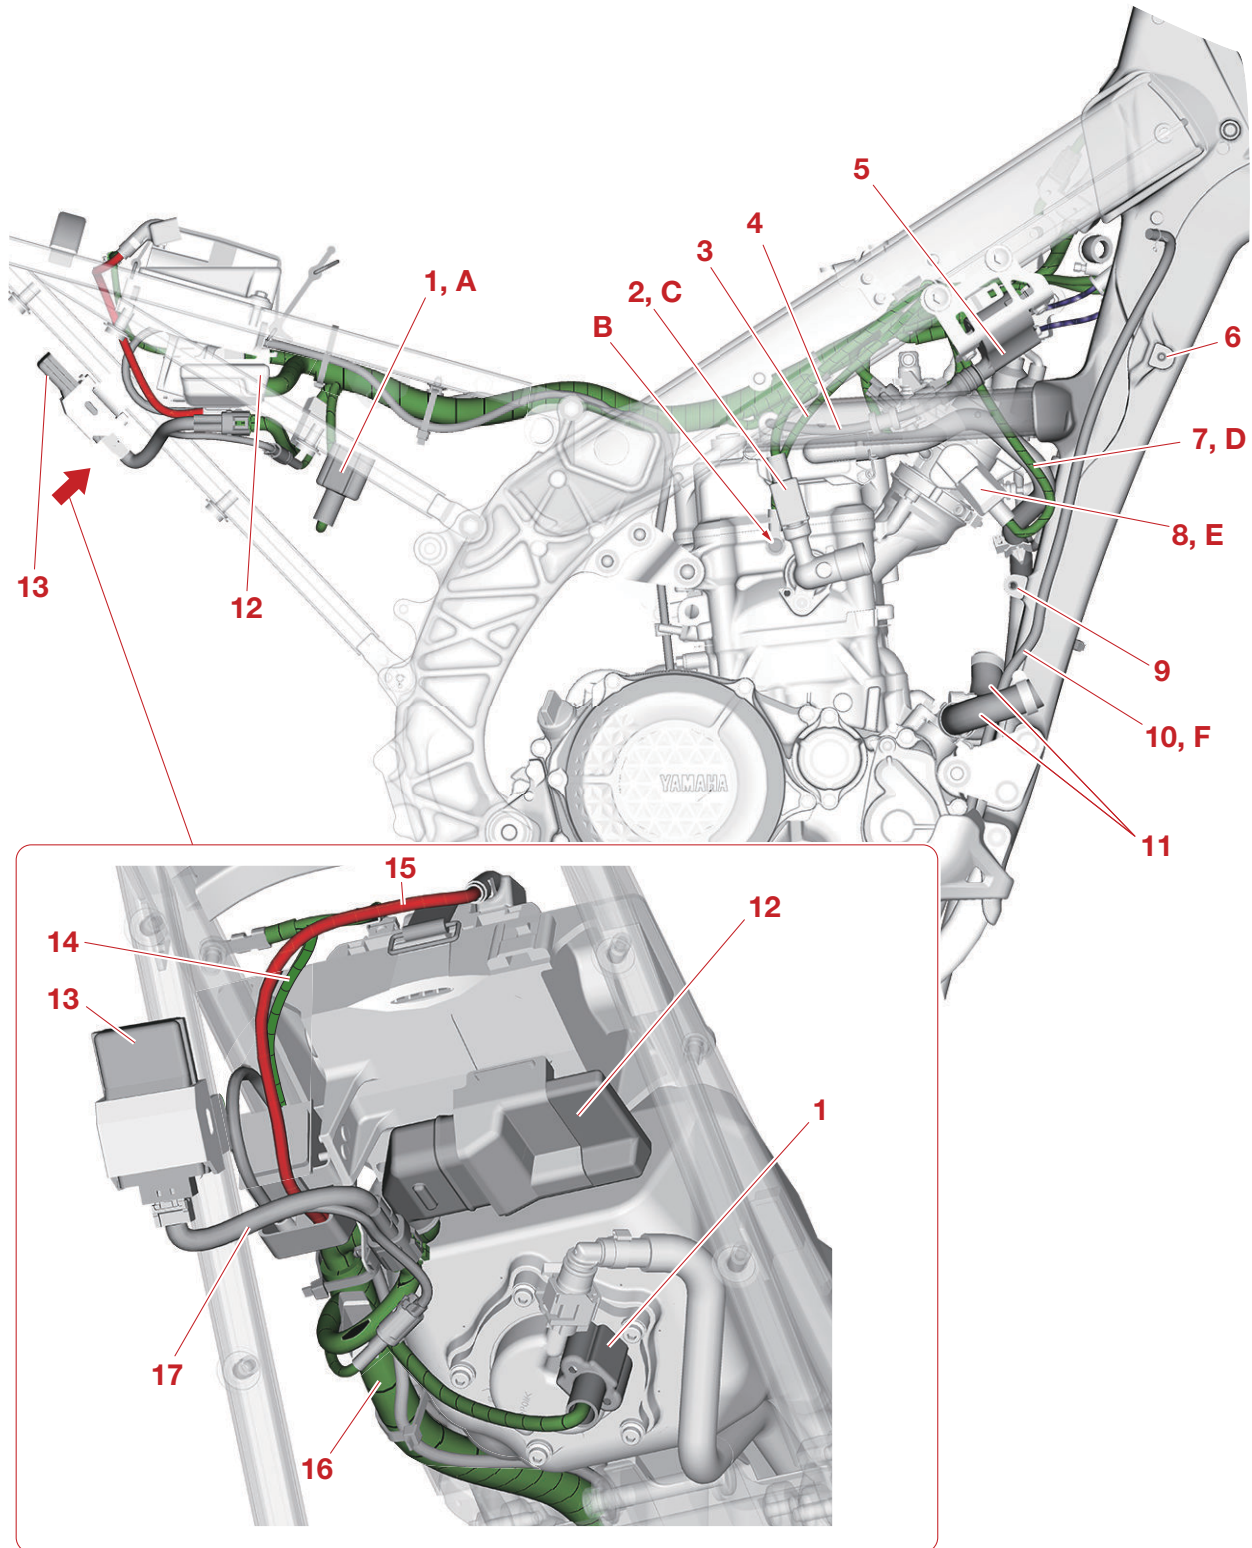

1. Fuel pump coupler (black, 5-pin)
 2. Coolant temperature sensor coupler (black, 2-pin)
 3. Engine ground lead
 4. High tension cord
 5. Ignition coil
 6. Upper radiator boss
 7. Throttle position sensor lead
 8. Throttle position sensor coupler (black, 3-pin)
 9. Lower radiator boss
 10. Radiator breather hose
 11. Radiator hose
 12. ECU (Engine Control Unit)
 13. CCU (Communication Control Unit)
 14. Wire harness (to the negative battery lead)
 15. Positive battery lead
 16. Wire harness
 17. CCU sub-lead
- A. After connecting, install the cover over the fuel pump 5-pin coupler (black).
- B. Route the engine ground lead outside the vehicle past the high tension cord. When installing the engine ground lead terminal, it can face either way. Point the engine ground lead to the upper side of the vehicle, and then install it.
- C. Route the coolant temperature sensor lead outside the vehicle past the high tension cord. After connecting the water temperature sensor 2-pin coupler (black), install the cover over it.
- D. Route the throttle position sensor lead inside the vehicle along the ignition coil.
- E. After connecting the throttle position sensor 3-pin coupler (black), install the cover over it. Pay attention so that the folded part of the cover does not get caught.
- F. The radiator breather hose should be routed in the following order and via each mentioned point.
The upper radiator boss at the rear of the vehicle.
The lower radiator boss at the front of the vehicle.
The radiator hose at the front of the vehicle.
For routing the remaining leads, refer to the diagram "Frame and engine (front left side view)".

CABLE ROUTING DIAGRAM


Handlebar (front view)

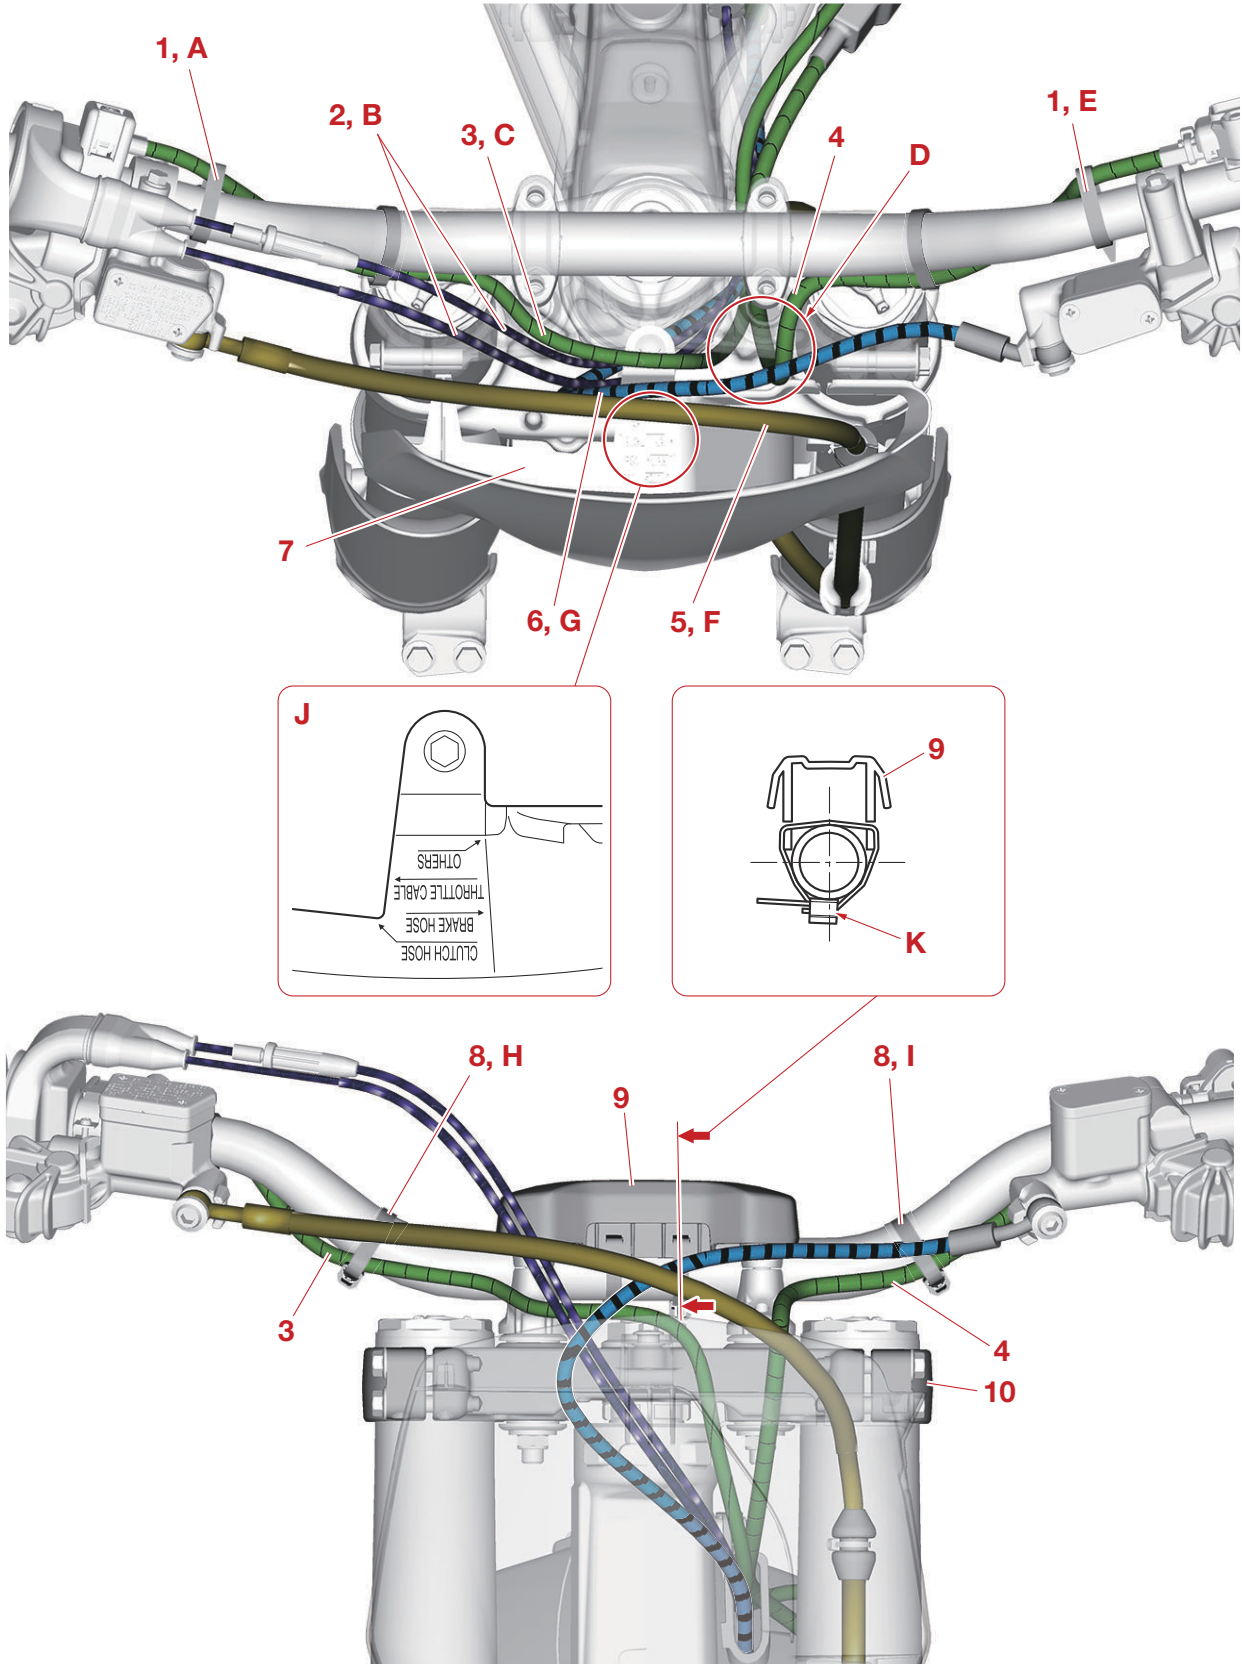

1. Plastic locking tie
 2. Throttle cable
 3. Starter switch lead
 4. Handlebar switch lead (left)
 5. Front brake hose
 6. Clutch hose
 7. Number plate
 8. Plastic locking tie
 9. Handlebar protector
 10. Upper bracket
- A. Fasten the starter switch lead to the handlebar using the plastic locking tie. Point the lock portion of the plastic locking tie toward the lower part of the vehicle, and the tip of the plastic locking tie to the front side of the vehicle. Pay attention so that the tip of the plastic locking tie does not contact the brake master cylinder.
 - B. Route the throttle cable on the right side of the number plate mounting bracket.
 - C. Route the starter switch lead on the left side of the number plate mounting bracket.
 - D. Route the starter switch lead and handlebar switch lead (left) between the routing portion of the number plate and the upper bracket.
 - E. Fasten the handlebar switch lead (left) to the handlebar using the plastic locking tie. Point the lock portion of the plastic locking tie toward the lower part of the vehicle, and the tip of the plastic locking tie to the front side of the vehicle. Pay attention so that the tip of the plastic locking tie does not contact the clutch master cylinder.
 - F. Route the front brake hose through the number plate upper guide.
 - G. Route the clutch hose on the right side of the vehicle, where the license plate is installed, in front of the vehicle, where the throttle cable is routed, and to the rear side of vehicle where the brake hose is routed.
 - H. Secure the starter switch lead to the handlebar using the plastic locking tie. Point the lock portion of the plastic locking tie to the lower part of the vehicle while pointing the end to the front side of the vehicle. Make sure that the tip of the plastic locking tie does not contact the front fork.
 - I. Secure the handlebar switch lead (left) to the handlebar using the plastic locking tie. Point the lock portion of the plastic locking tie to the lower part of the vehicle while pointing the end to the front side of the vehicle. Make sure that the tip of the plastic locking tie does not contact the front fork.
 - J. Route the cables according to the instructions on the number plate.
 - K. Secure the handlebar and handlebar protector with the plastic locking tie. Point the lock portion of the plastic locking tie to the lower side of the vehicle. The direction of the end does not matter.

CABLE ROUTING DIAGRAM

Frame and engine (top view)

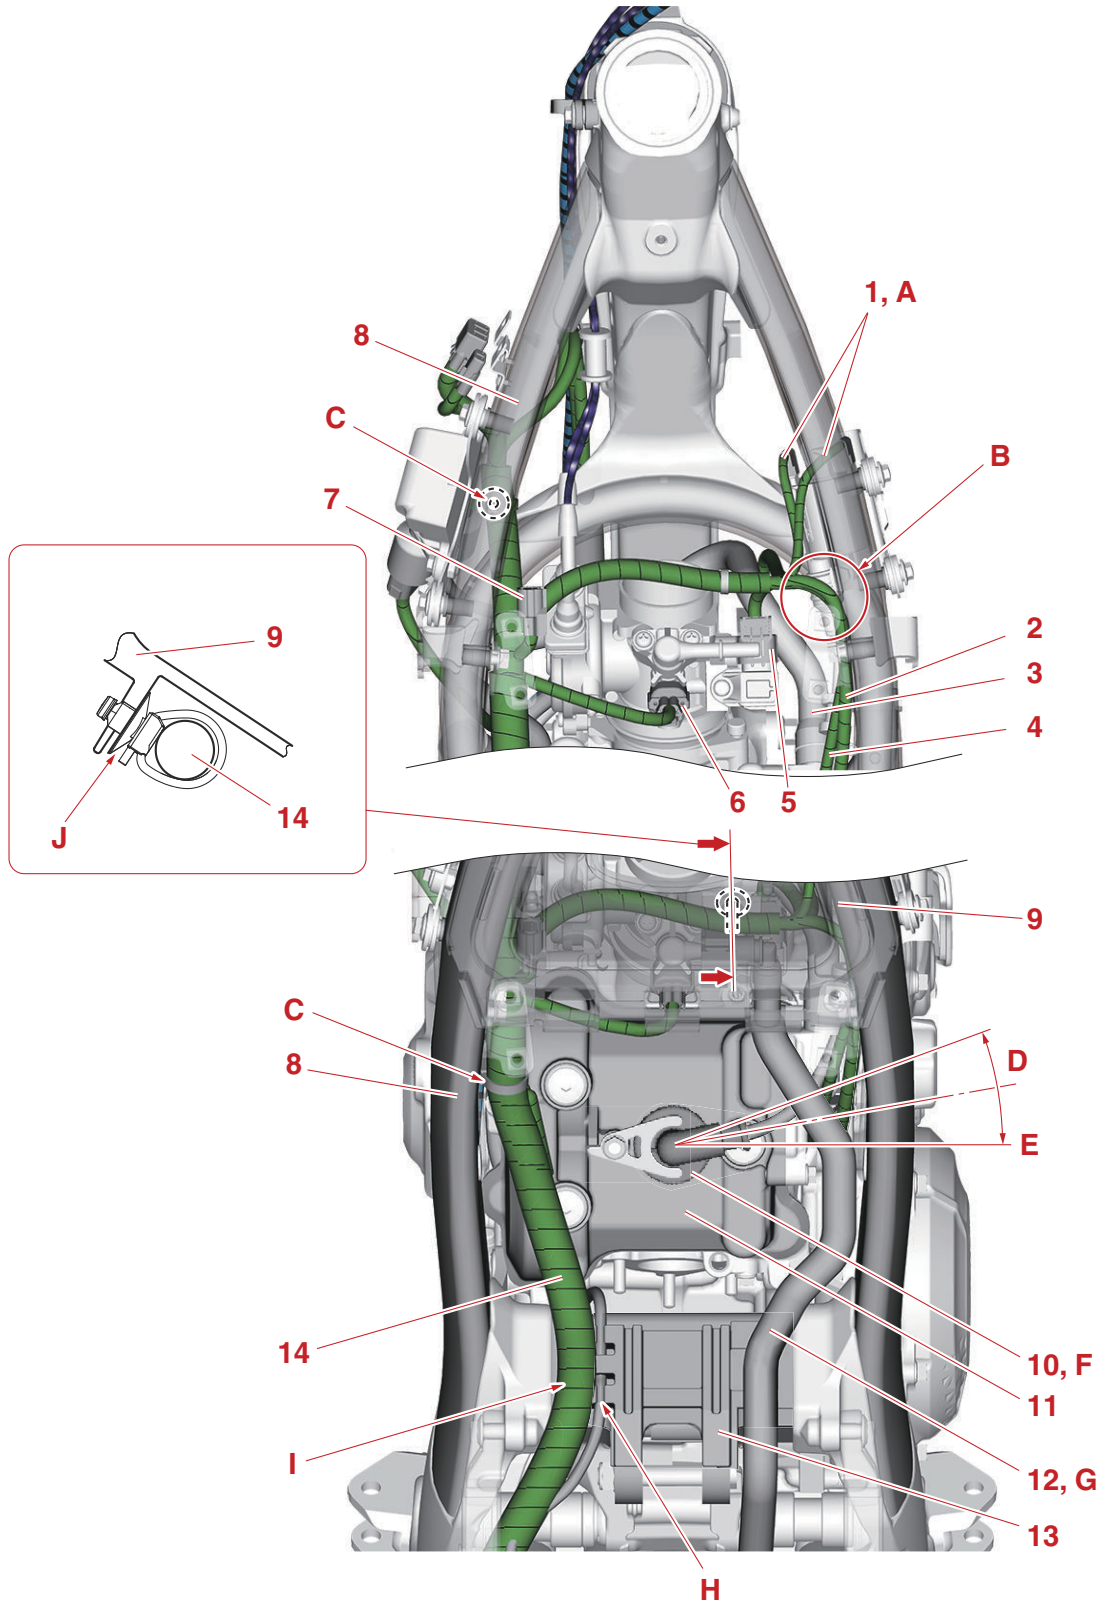

1. Ignition coil lead
 2. Coolant temperature sensor lead
 3. Cylinder head breather hose
 4. Engine ground lead
 5. Intake air pressure sensor coupler (dark blue, 3-pin)
 6. Fuel injector coupler (gray, 2-pin)
 7. Intake air temperature sensor coupler (black, 2-pin)
 8. Tank rail
 9. Air filter case
 10. Spark plug cap
 11. Cylinder head cover
 12. Fuel hose
 13. Damper
 14. Wire harness
- A. Install the terminal so that the lead is positioned above the vehicle. Connect the black cover of the ignition coil lead to the black terminal of the ignition coil, and the white cover to the green terminal.
When doing so, at the branch portion of the wire harness, route the ignition coil lead (with the black cover) over and on the right side of the ignition coil lead (with the white cover).
- B. Route the coolant temperature sensor lead, engine ground lead, and high tension cord outside the vehicle past the cylinder head breather hose.
- C. Insert the projection of the main harness into the hole in the frame.
- D. 0–20°
- E. Right side of the vehicle.
- F. Insert the spark plug cap all the way into the cylinder head cover so that there is no clearance between the cap and the cover.
- G. Place the fuel hose on the flat surface on the upper side of the damper.
- H. Route the starter motor lead along the damper and clamp it.
- I. Place the wire harness on the flat surface on the upper side of the damper. When doing so, be careful so that the wire harness does not contact the engine.
- J. Insert the clip portion of the clamp into the air filter assembly.


Frame and battery (top view)



1. ECU lead
 2. Battery
 3. Positive battery lead
 4. Negative battery lead
 5. CCU (Communication Control Unit)
 6. ECU (Engine Control Unit)
 7. Holder
 8. Rear frame
-
- A. Route the positive battery lead under the vehicle's negative battery lead.
 - B. Point the terminal of the negative battery lead to the inside of the vehicle, and install it.
 - C. After connecting the positive battery lead in the direction shown in the illustration, put the cover over it.
 - D. After connecting the ECU coupler, put the coupler cover over it.
 - E. Insert the holder with the ECU installed into the battery box bracket. When doing so, secure the ECU so that the connector of the ECU points to the left side of the vehicle.
 - F. Install the terminal in the direction shown.

CABLE ROUTING DIAGRAM






Rear brake (right side view)

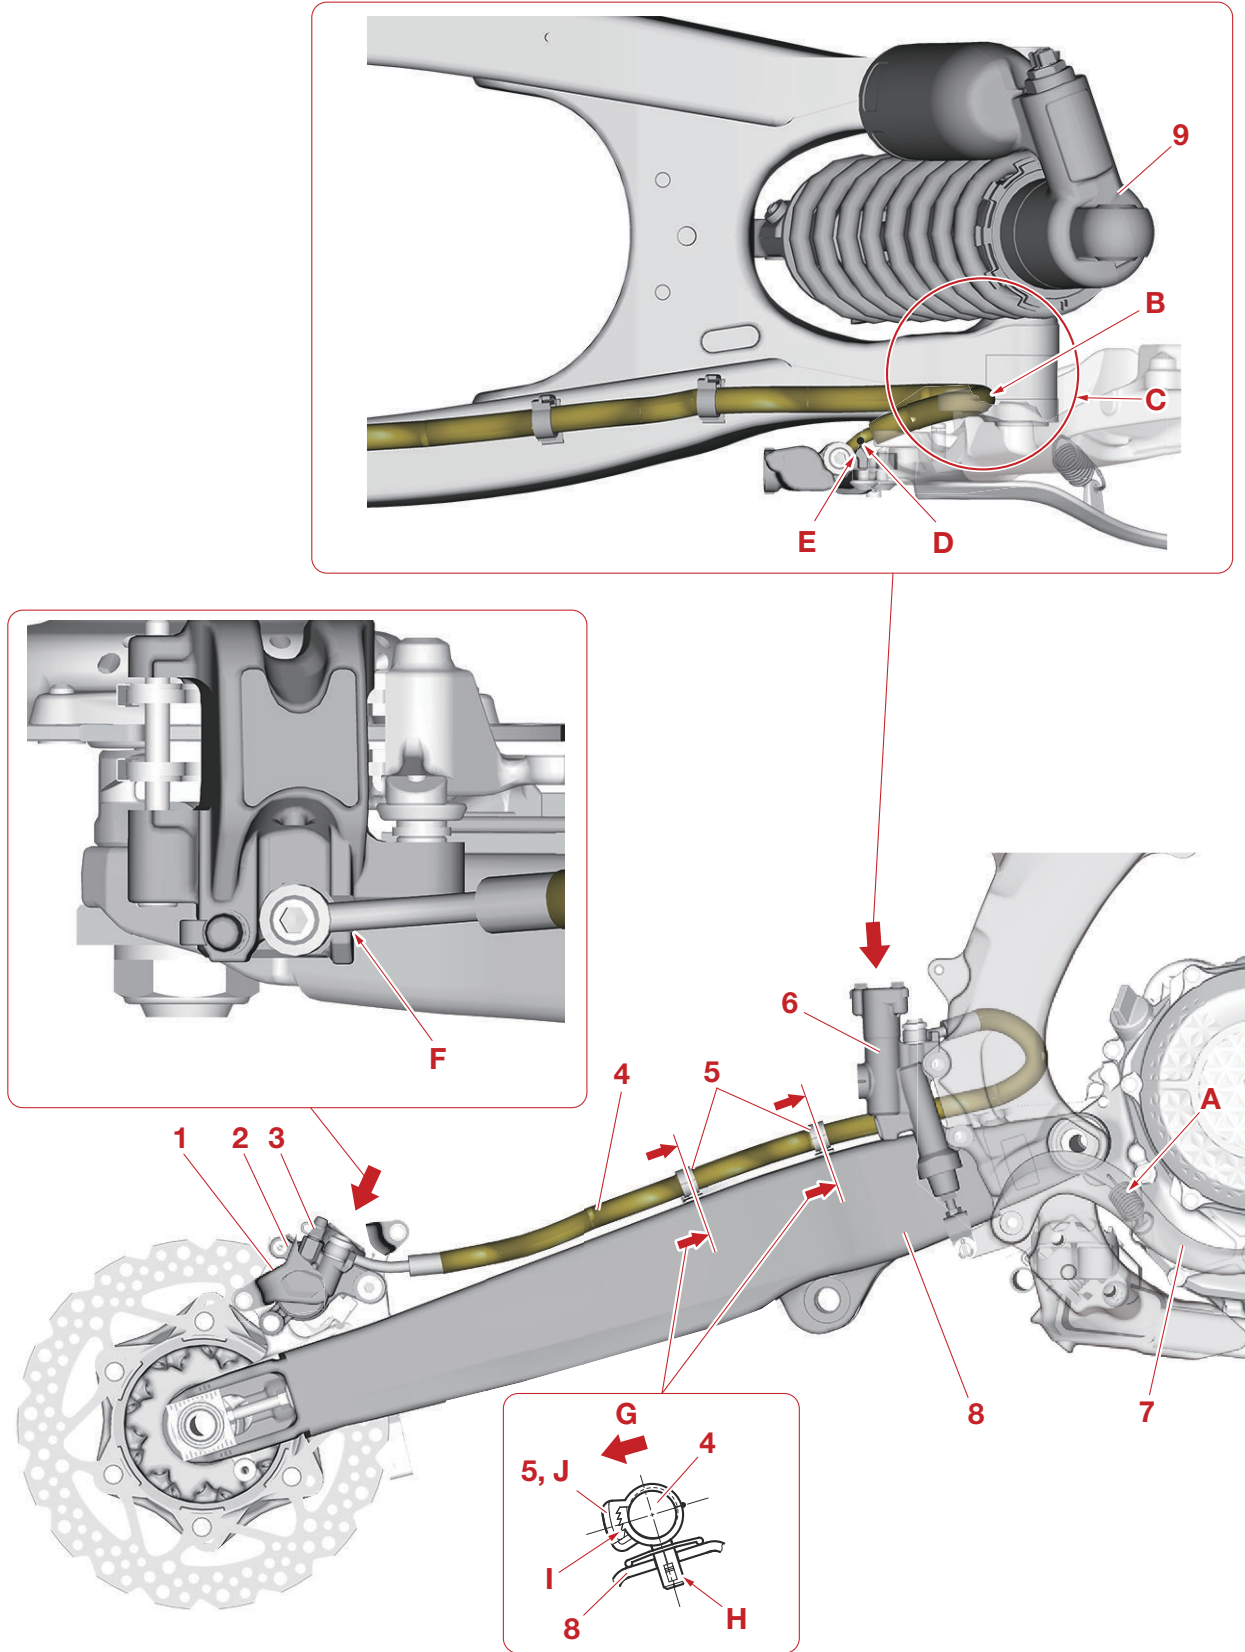

1. Protector
 2. Rear brake caliper
 3. Bleed screw
 4. Rear brake hose
 5. Clamp
 6. Rear brake master cylinder assembly
 7. Brake pedal
 8. Swingarm
 9. Rear shock absorber assembly
-
- A. It does not matter whether the spring is installed upward or downward.
 - B. Route the rear brake hose and spring so that they do not interfere with each other.
 - C. Make sure that the rear brake hose is not excessively twisted.
 - D. Install the rear brake hose so that the paint mark of the rear brake faces to the upper part of the vehicle.
 - E. Make sure that the metal part of the rear brake hose contacts the stopper of the rear brake master cylinder.
 - F. Make sure that the metal part of the rear brake hose contacts the stopper of the rear brake caliper.
 - G. Inside of the vehicle
 - H. Insert the clamp all the way into the base.
 - I. Make sure that the lock portion of the clamp is engaged by 3 or more notches.
 - J. Face the opening of the clamp to the inside of the vehicle.

CABLE ROUTING DIAGRAM


Front brake (left side view)

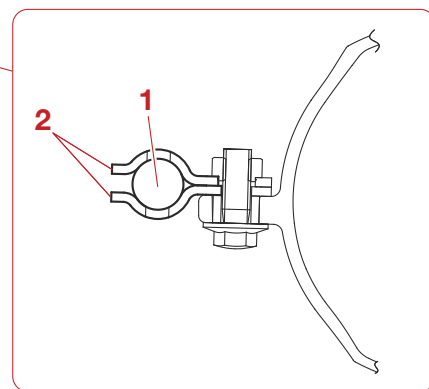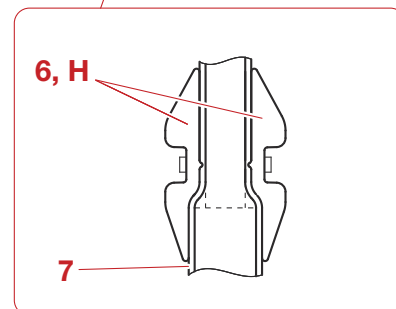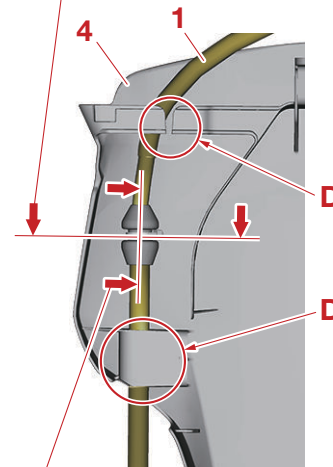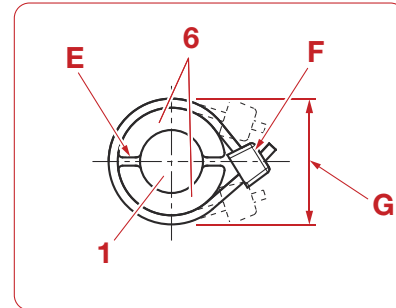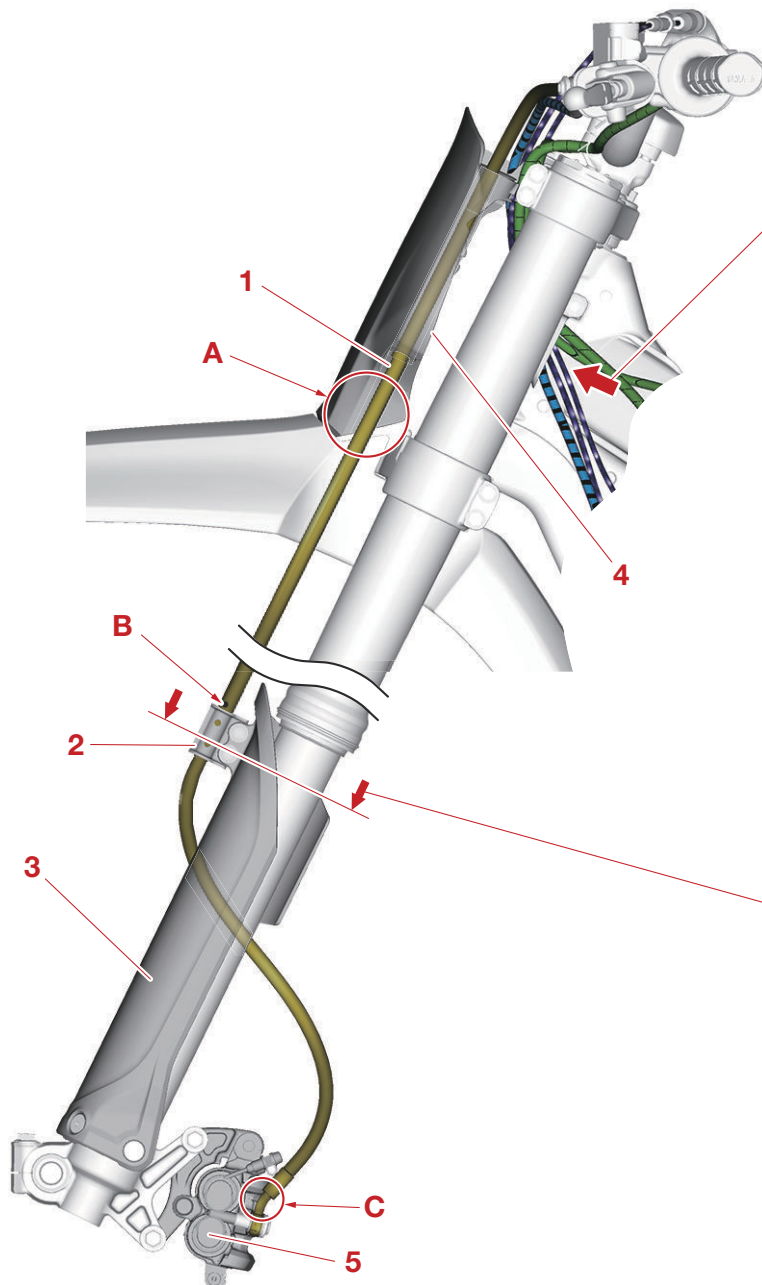

1. Front brake hose
 2. Brake hose holder
 3. Protector
 4. Number plate
 5. Front brake caliper
 6. Protector
 7. Front brake hose (shrinkable tube side)
-
- A. Route the front brake hose on the outside of the number plate from the position shown.
 - B. Install the brake hose holder by aligning it with the paint mark of the front brake hose.
 - C. Make sure that the metal part of the front brake hose contacts the stopper of the front brake caliper.
 - D. Route the front brake hose through the guide of the number plate.
 - E. Whether there is a clearance when assembling the protector does not matter. Point the mating surface line to the left and right directions of the vehicle, and then install.
 - F. Fasten the front brake hose and protector with the plastic locking tie. Point the lock portion to the inside of the vehicle, and then cut off the end of the plastic locking tie. After tightening the plastic locking tie, make sure that the protector does not wobble at the top and bottom.
 - G. Place the lock portion within the area shown by the arrow.
 - H. Install the protector to the shrinkable tube of the front brake hose. Align the stepped part of the front brake hose with the stepped part of the protector.

CABLE ROUTING DIAGRAM

Radiator (rear side view)

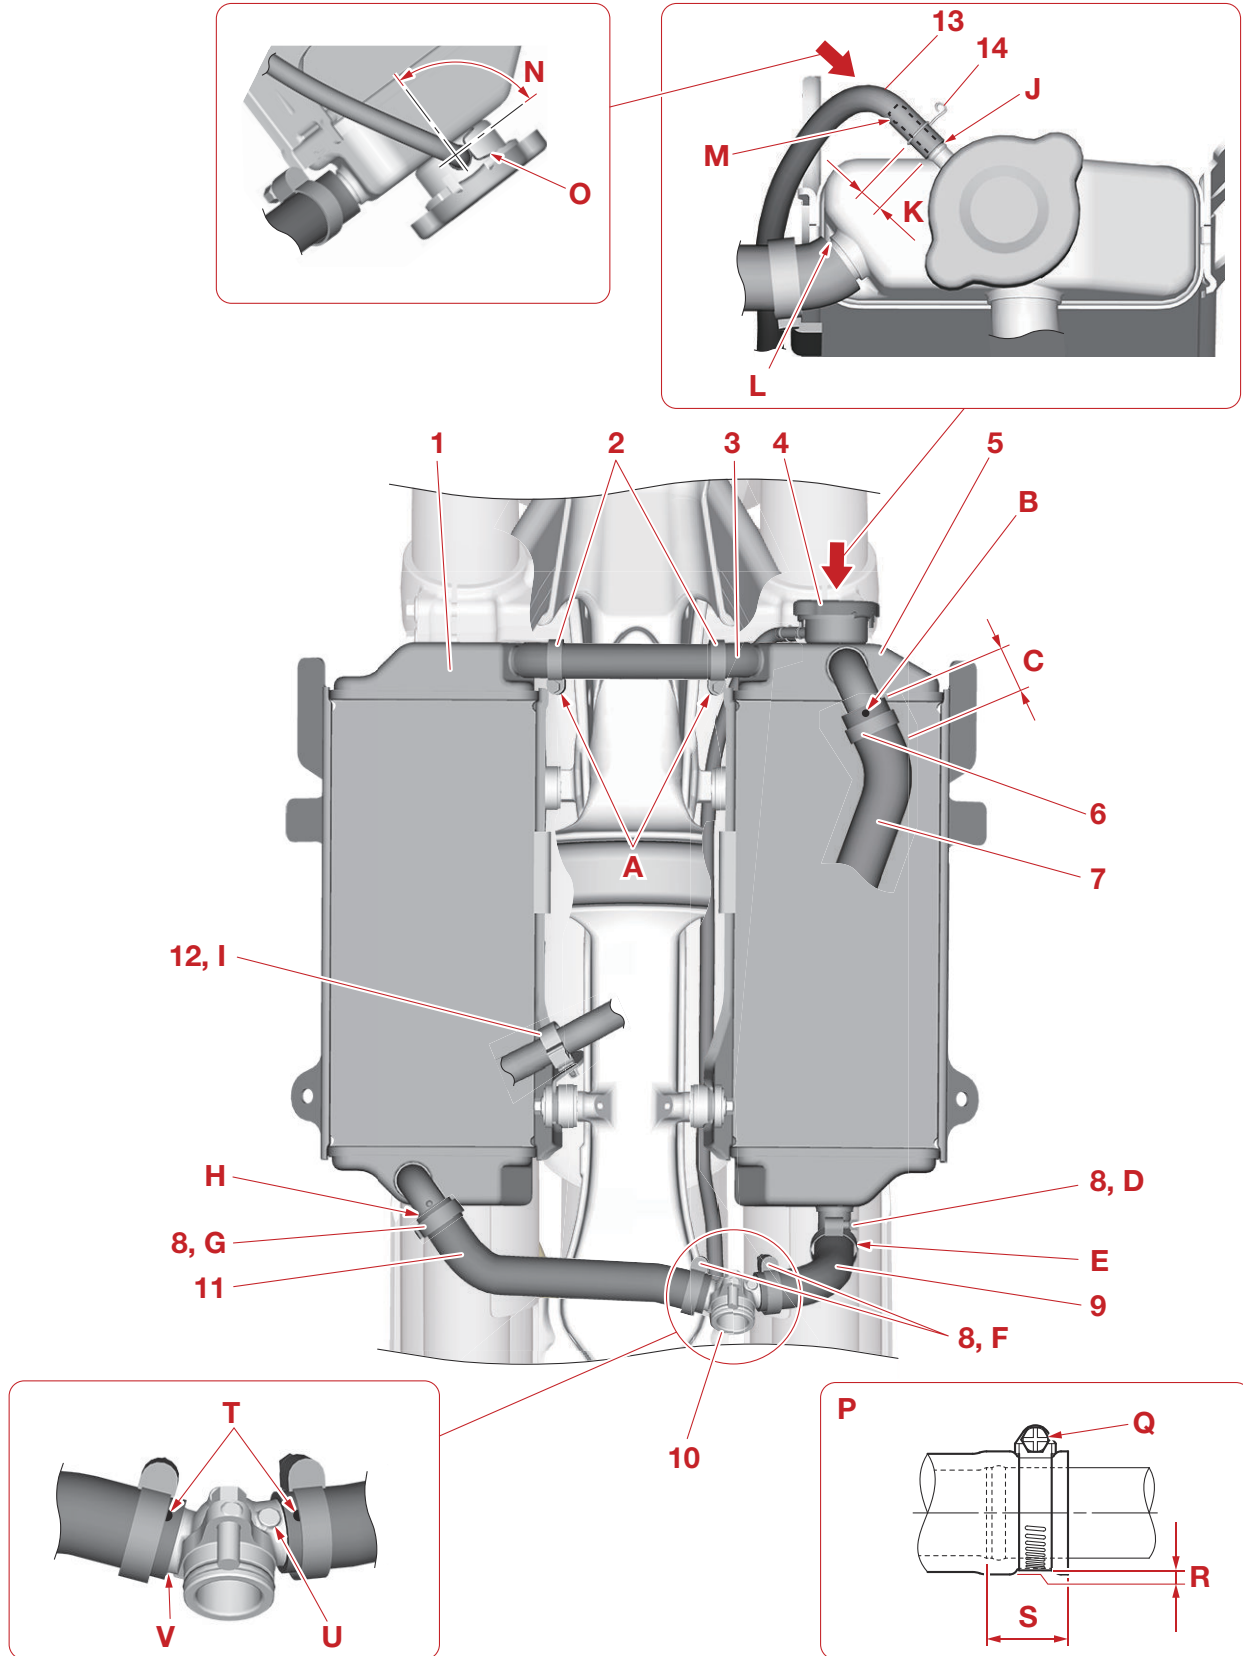

1. Radiator (left)
 2. Radiator hose clamp
 3. Radiator hose 2
 4. Radiator cap
 5. Radiator (right)
 6. Radiator hose clamp
 7. Radiator hose 1
 8. Radiator hose clamp
 9. Radiator hose 4
 10. Radiator pipe 2
 11. Radiator hose 3
 12. Clamp
 13. Breather pipe
 14. Clip
- A. Tighten the band from the rear side of the vehicle, and then point the lock portion to the lower side.
Install so that the metal part of the radiator and lock portion of the band contact the tip of the bolt, and that the clearance is within 5.9 mm (0.23 in).
 - B. Point the mark to the rear side of the vehicle.
 - C. Inserted depth 20 mm (0.8 in)
 - D. Tighten the band from the right side of the vehicle, and then point the lock portion to the rear side of the vehicle.
 - E. Insert the radiator hose 4 all the way into the bent portion of the pipe of the radiator (right).
 - F. Point the lock portion of the band to the front side of the vehicle.
 - G. Tighten the band from the left side of the vehicle, and then point the lock portion to the front side of the vehicle.
 - H. Insert the radiator hose 3 as a reference of the projection on the pipe of the radiator (left).
 - I. Insert the clamp into the radiator, and then make sure that it contacts the side plate. Point the lock portion of the clamp to the rear side of the vehicle.
 - J. Insert the breather pipe into the bulge portion.
 - K. 3 mm (0.12 in) or more
 - L. Make sure that the front side of the vehicle, where the radiator hose 2 is located, contacts the bulge.
 - M. Make sure that the clip does not ride on top of the spool.
 - N. The direction of the knob of the clip should be in the range from the right side direction of the vehicle to the downward direction. Pay attention so that the grip of the clip does not contact the radiator.
 - O. Clip that is installed to the right direction of the vehicle
 - P. Details of the insert portion of the radiator hose
 - Q. Install the band between the spool portion and the tip of the radiator hose.
 - R. 0–1 mm (0–0.04 in)
 - S. Inserted length
 - T. Align the mark of the radiator hose 3, 4 with the protrusion on the radiator pipe 2.
 - U. Insert the radiator hose 4 until it contacts the protrusion on the radiator pipe 2.
 - V. Insert the radiator hose 3 until it contacts the protrusion on the radiator pipe 2.

PERIODIC CHECKS AND ADJUSTMENTS


SERVICING PARTS	3-1
MAINTENANCE INTERVALS	3-2
MAINTENANCE INTERVALS.....	3-2
PRE-OPERATION INSPECTION AND MAINTENANCE	3-6
GENERAL INSPECTION AND MAINTENANCE.....	3-6
ENGINE	3-7
ADJUSTING THE VALVE CLEARANCE.....	3-7
VALVE CLEARANCE SHIM CHART.....	3-10
CHECKING THE ENGINE IDLING SPEED.....	3-12
CHECKING THE THROTTLE GRIP.....	3-12
CHECKING THE SPARK PLUG.....	3-13
CHECKING THE ENGINE OIL LEVEL.....	3-13
CHANGING THE ENGINE OIL.....	3-14
ADJUSTING THE CLUTCH LEVER POSITION.....	3-15
CHECKING THE CLUTCH FLUID.....	3-16
BLEEDING THE HYDRAULIC CLUTCH SYSTEM.....	3-16
CLEANING THE AIR FILTER ELEMENT.....	3-17
CHECKING THE THROTTLE BODY JOINT.....	3-19
CHECKING THE FUEL LINE.....	3-19
CHECKING THE CYLINDER HEAD BREATHER HOSE.....	3-19
CHECKING THE EXHAUST SYSTEM.....	3-20
CHECKING THE COOLANT LEVEL.....	3-22
CHECKING THE COOLING SYSTEM.....	3-22
CHANGING THE COOLANT.....	3-23
CHASSIS	3-24
ADJUSTING THE FRONT DISC BRAKE.....	3-24
ADJUSTING THE REAR DISC BRAKE.....	3-24
CHECKING THE BRAKE FLUID LEVEL.....	3-24
CHECKING THE FRONT BRAKE PADS.....	3-25
CHECKING THE REAR BRAKE PADS.....	3-25
CHECKING THE FRONT BRAKE HOSE.....	3-25
CHECKING THE REAR BRAKE HOSE.....	3-26
CHECKING THE BRAKE OPERATION.....	3-26
BLEEDING THE HYDRAULIC BRAKE SYSTEM.....	3-26
DRIVE CHAIN SLACK.....	3-27
CHECKING AND ADJUSTING THE STEERING HEAD.....	3-28
LUBRICATING THE STEERING HEAD.....	3-29
CHECKING THE FRONT FORK LEGS.....	3-29
ADJUSTING THE FRONT FORK LEGS.....	3-30
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY.....	3-31
ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY.....	3-31
CHECKING THE SWINGARM OPERATION.....	3-33
LUBRICATING THE SWINGARM PIVOT.....	3-33
CHECKING THE CONNECTING ARM AND RELAY ARM.....	3-33

CHECKING THE TIRES.....	3-34
CHECKING AND TIGHTENING THE SPOKES.....	3-34
CHECKING THE WHEELS.....	3-34
CHECKING THE WHEEL BEARINGS.....	3-34
CHECKING THE CHASSIS FASTENERS.....	3-35
CHECKING AND LUBRICATING THE CABLES.....	3-35
LUBRICATING THE BRAKE LEVER.....	3-35
LUBRICATING THE CLUTCH LEVER.....	3-35
LUBRICATING THE PEDAL.....	3-35
 ELECTRICAL SYSTEM	 3-36
CHECKING AND CHARGING THE BATTERY.....	3-36
CHECKING THE FUSES.....	3-36

EAM20202

SERVICING PARTS

Regularly check or replace the servicing parts shown in the illustration.

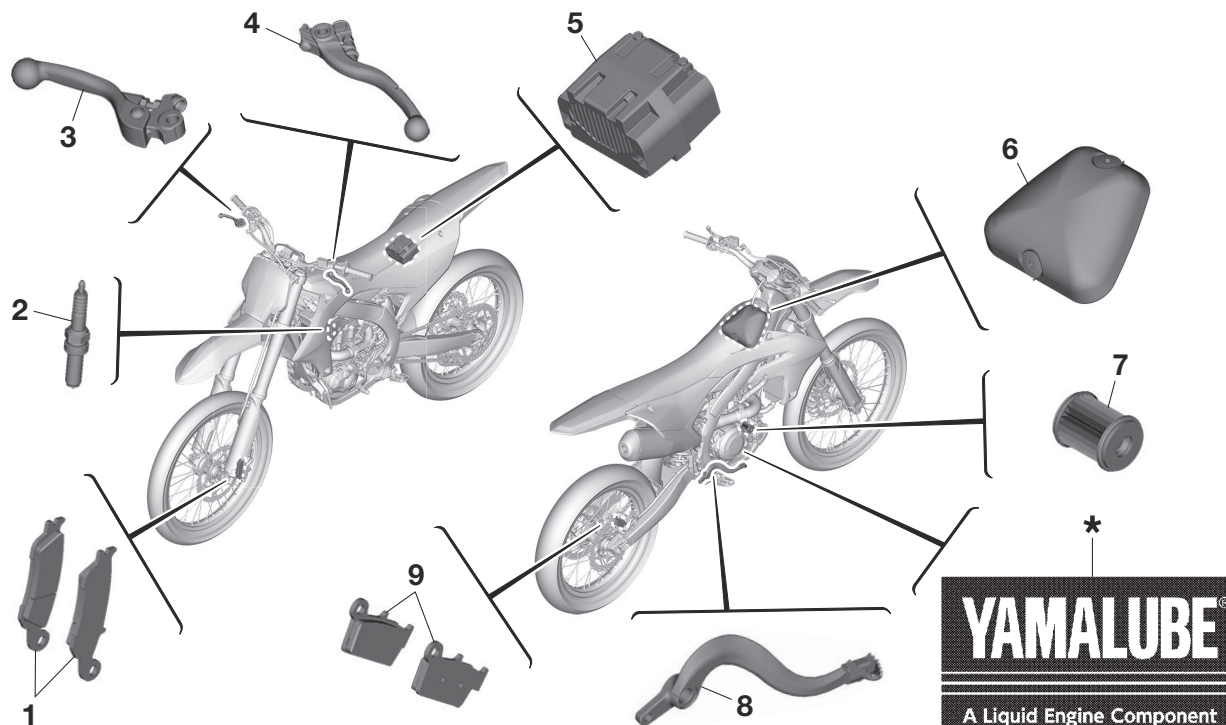

* Engine oil, lubricants & greases, care products.

Ref. No.	Part No.	Part name in parts catalog	Q'ty
1	B2W-25805-00	BRAKE PAD KIT	1
2	94701-00434	PLUG, SPARK (NGK LMAR8G)	1
3	B2W-83922-00	LEVER 2	1
4	D03-83912-00	LEVER 1	1
5	BR9-82100-A9	BATTERY ASSY (4S1P)	1
6	BHR-14451-00	ELEMENT, AIR CLEANER	1
7	5D3-13440-02	ELEMENT ASSY, OIL CLEANER	1
8	BHR-27200-00	PEDAL, BRAKE	1
9	1C3-W0046-50	BRAKE PAD KIT 2	1

TIP

The part number is subject to change. In that case, order the part from a Yamaha dealer by stating the identification number of your vehicle.

EAM20157

MAINTENANCE INTERVALS

EAM30369

MAINTENANCE INTERVALS

ECA25871

NOTICE

- After a break-in or before each race, always check the points shown in “TORQUE-CHECK POINTS” for tightening torques and retighten them.
- Periodic inspection is essential in making full use of the machine performance. The life of parts varies significantly according to the environment in which the machine runs (e.g., rain, dirt, etc.). Therefore, earlier inspection is required by reference to the list below.

TIP

Items marked with an asterisk should be performed by a Yamaha dealer as they require special tools, data and technical skills.

No.	Item	Routine	After break-in	Every race (about 2.5 hours)	Every third race (about 7.5 hours)	Every fifth race (about 12.5 hours)	As required
1	* Valve	• Check the valve clearances.	√		√		
		• Check the valve seats and the valve faces for wear.				√	
		• Replace.					√
2	* Valve spring	• Check the free length.				√	
		• Replace.					√
3	* Valve lifter	• Check for scratches and wear.				√	
		• Replace.					√
4	* Camshaft	• Inspect the camshaft surface. • Inspect the decompression system.				√	
		• Replace.					√
5	* Timing chain	• Check for damage and sticking.					√
		• Replace.				√	√
6	* Timing chain tensioner	• Replace.				√	√
7	* Camshaft sprocket	• Check for wear on the teeth and for damage.				√	
		• Replace.					√
8	* Piston	• Inspect crack.					√
		• Inspect carbon deposits and eliminate them.					√
		• Replace the piston, piston pin, piston pin clip, and piston ring all as a set.				√	√
9	* Piston ring	• Check the end gap of the piston ring.					√
		• Replace the piston, piston pin, piston pin clip, and piston ring all as a set.				√	√
10	* Piston pin	• Inspect.					√
		• Replace the piston, piston pin, piston pin clip, and piston ring all as a set.				√	√

MAINTENANCE INTERVALS

No.	Item	Routine	After break-in	Every race (about 2.5 hours)	Every third race (about 7.5 hours)	Every fifth race (about 12.5 hours)	As required
11	* Cylinder head	- Check the coolant passages for corrosion. - Inspect carbon deposits and eliminate them. - Check for warpage, and replace the gasket.				√	
12	* Cylinder	Inspect score marks.				√	
		Inspect wear.					√
13	Engine oil	Check the engine oil amount.		√			√
		Replace.	√		√		
14	Oil filter element	Replace.	√			√	
15	* Clutch	Adjust lever position.	√	√			
		Lubricate pivot point.	√	√			
		Check fluid leakage.	√	√			
		Check fluid level.	Every 45 hours				√
		Retighten release cylinder bolts, master cylinder bolts and union bolts. (Check for tightening torques.)	√	√			
		Inspect housing, friction plate, clutch plate and spring.	√	√			
		Replace.					√
		Replace clutch fluid.	Every four years				√
16	* Transmission	Inspect.					√
		Replace bearings.					√
17	* Shift fork, shift drum, guide bar	Inspect wear.					√
18	* Nut (generator rotor)	Check for tightening torques.	√			√	
19	* Exhaust pipe, silencer, protector	Check for exhaust leaks, and tightening torques.	√	√			
		Clean.				√	
		Replace filter. (When the exhaust sound becomes louder or when a performance drop is felt.)			√		√
20	* Crankshaft	Inspect and clean.				√	√
21	* Throttle body	Inspect.					√
22	Air filter	Clean and lubricate.	√	√			
		Replace.					√
23	Spark plug	Check the electrodes and the terminals for wear.	√		√		
		Replace.					√
24	* Cooling system	Check coolant level and leakage.	√	√			
		Check radiator cap operation.					√
		Check radiator cap attached.	√	√			
		Change the coolant.	Every two years				√
		Inspect hoses.		√			

MAINTENANCE INTERVALS

No.	Item	Routine	After break-in	Every race (about 2.5 hours)	Every third race (about 7.5 hours)	Every fifth race (about 12.5 hours)	As required
25	* Engine guard	• Replace.					√
26	* Frame	• Clean and inspect.	√	√			
27	* Fuel tank, fuel pump	• Inspect.	√		√		
28	* Fuel hose	• Inspect.					√
		• Replace.	Every four years				√
29	* Front fork leg(s)	• Clean.	√	√			
		• Inspect and adjust.	√	√			
		• Replace oil.	√			√	
		• Replace oil seal.					√
		• Clean and grease oil seals and dust seals.	√	√			√
30	Protector guide	• Replace.					√
31	* Rear shock absorber	• Inspect and adjust.	√	√			
		• Grease pillow balls and bearings. (After rain ride)			√		√
		• Check for tightening torques.	√	√			
32	* Brake(s)	• Adjust lever position and pedal position.	√	√			
		• Lubricate pivot point.	√	√			
		• Check brake disc surface.	√	√			
		• Check fluid level and leakage.	√	√			
		• Retighten brake disc bolts, caliper bolts, master cylinder bolts and union bolts. (Check for tightening torques.)	√	√			
		• Replace pads.					√
		• Replace brake fluid.	Every one year				√
33	* Swingarm	• Inspect, lube and retighten.	√	√			
34	* Relay arm, connecting rod	• Inspect, lube and retighten.	√	√			
35	* Steering head	• Inspect free play and retighten. (Check for tightening torques.)	√	√			
		• Clean and lube. (After rain ride)				√	
		• Replace bearings.					√
36	* Tire, wheels	• Inspect air pressure, wheel run-out, tire wear and spoke looseness.	√	√			
		• Retighten sprocket bolt.	√	√			
		• Check the bearing.			√		
		• Replace bearings.					√
		• Lubricate.			√		
37	* Drive chain	• Clean, lubricate, slack, alignment.	√	√			
		• Replace.					√
38	* Drive chain guide	• Inspect wear.		√			

MAINTENANCE INTERVALS

No.	Item	Routine	After break-in	Every race (about 2.5 hours)	Every third race (about 7.5 hours)	Every fifth race (about 12.5 hours)	As required
39	* Drive chain guide and drive chain support	• Replace.					✓
40	Cables	• Routing (Connection)	✓	✓			
		• Check and grease.	✓	✓			
		• Check throttle cables on the throttle body for dirt and wear.	✓	✓			
41	Brake pedal, footrest	• Lubricate.	✓	✓			
42	* Outside nuts and bolts	• Retighten.	✓	✓			
43	* Battery	• Check terminal for looseness and corrosion.					✓

PRE-OPERATION INSPECTION AND MAINTENANCE

EAM20134

PRE-OPERATION INSPECTION AND MAINTENANCE

Before riding for break-in operation, practice or a race, make sure the machine is in good operating condition.

Before using this machine, check the following points.

EAM30209

GENERAL INSPECTION AND MAINTENANCE

Item	Inspect	Page
Coolant	Check that coolant is filled up to the radiator cap. Check the cooling system for leakage.	3-22, 3-22, 3-23, 6-5, 6-5
Fuel	Check that a fresh gasoline is filled in the fuel tank. Check the fuel line for leakage.	1-27
Engine oil	Check that the oil level is correct. Check the crankcase and oil line for leakage.	3-13, 3-14
Gear shifter and clutch	Check that gears can be shifted correctly in order and that the clutch operates smoothly.	3-15
Throttle grip/Housing	Check that the throttle grip operation and free play are correctly adjusted. Lubricate the throttle grip and housing, if necessary.	3-12, 3-35
Brakes	Check the play of front brake and effect of front and rear brake.	3-24, 3-24, 3-24, 3-25, 3-25, 3-25, 3-26, 3-26
Drive chain	Check drive chain slack and alignment. Check that the drive chain is lubricated properly.	3-27, 4-75, 4-75, 4-76, 4-76, 4-76
Wheels	Check for excessive wear and tire pressure. Check for loose spokes and have no excessive play.	3-34, 3-34, 3-34, 3-34
Steering	Check that the handlebar can be turned smoothly and have no excessive play.	3-28
Front forks and rear shock absorber	Check that they operate smoothly and there is no oil leakage.	3-29, 3-30, 3-31, 3-31, 3-33
Cables (wires)	Check that the throttle cables move smoothly. Check that they are not caught when the handlebars are turned or when the front forks travel up and down.	—
Exhaust pipe	Check that the exhaust pipe is tightly mounted and has no cracks.	3-20
Rear wheel sprocket	Check that the rear wheel sprocket tightening bolt is not loose.	4-14, 4-14, 4-14, 4-14, 4-15, 4-15
Lubrication	Check for smooth operation. Lubricate if necessary.	3-35, 3-35, 3-35, 3-35
Bolts and nuts	Check the chassis and engine for loose bolts and nuts.	1-30
Lead connectors	Check that the stator coil assembly, ECU and ignition coil are connected tightly.	1-14
Settings	Is the machine set suitably for the condition of the racing course and weather or by taking into account the results of test runs before racing? Are inspection and maintenance completely done?	10-1, 10-1, 10-1, 10-2, 10-2, 10-3, 10-3, 10-4, 10-4, 10-5, 10-6

TIP

Perform usual maintenance enough so that, in the race course, a confirmation of that and simple setting adjustments may only be left, in order to get enough time to use effectively.

EAM20135

ENGINE

EAM30226

ADJUSTING THE VALVE CLEARANCE

TIP

- This section is intended for those who have basic knowledge and skill concerning the servicing of Yamaha motorcycles (e.g., Yamaha dealers, service engineers, etc.). Those who have little knowledge and skill concerning servicing are requested not to undertake inspection, adjustment, disassembly, or reassembly only by reference to this manual. It may lead to servicing trouble and mechanical damage.
- Make sure that the valve clearance is checked or adjusted while the engine is cold (at room temperature).
- While the valve clearance is checked or adjusted, make sure that the piston is positioned in the top dead center (TDC).

1. Remove:

- Seat
- Side cover (left/right)
- Shroud (left/right)

Refer to "GENERAL CHASSIS" on page 4-1.

- Fuel tank

Refer to "FUEL TANK" on page 7-1.


2. Remove:

- Spark plug
- Cylinder head cover

Refer to "CAMSHAFT" on page 5-11.

3. Remove:

- Timing mark accessing screw "1"
- Crankshaft end accessing screw "2"
- O-ring

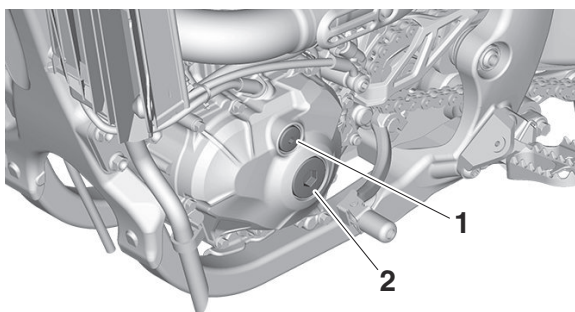

4. Check:

- Valve clearance
Out of specification → Regulate.



Valve clearance (cold)


Intake

0.10–0.17 mm (0.0039–0.0067 in)

Exhaust


0.15–0.22 mm (0.0059–0.0087 in)

- Turn the crankshaft counterclockwise with a wrench.
- Align the top dead center (TDC) mark "a" on the generator rotor with the alignment mark "b" on the crankcase cover.

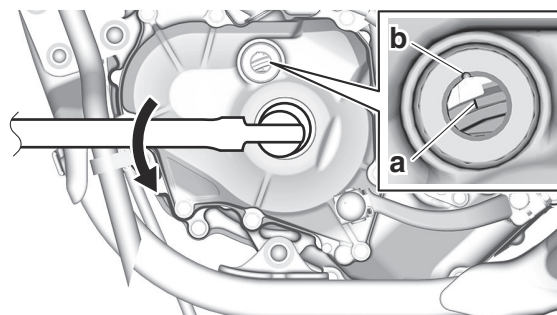

TIP

Check that the alignment marks "c" on the camshaft sprockets are aligned with the edge of the camshaft cap surfaces "d".

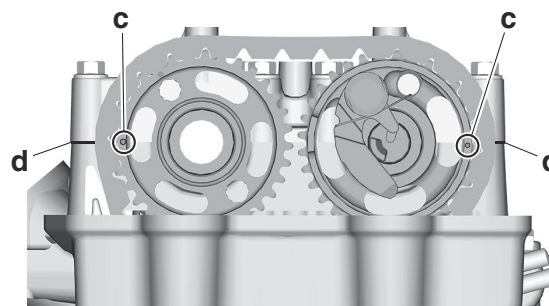

- Measure the valve clearance using a thickness gauge "1".



Thickness gauge


90890-03268

Feeler gauge set

YU-26900-9

TIP

Record the measured reading if the clearance is incorrect.

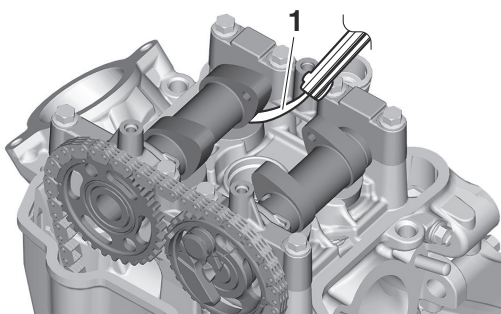

5. Adjust:


- Valve clearance
 - a. Remove the camshaft (intake and exhaust).
Refer to "CAMSHAFT" on page 5-11.
 - b. Remove the valve lifter "2" and the adjusting pad "3" with a valve lapper "1".

TIP

- Place a cloth in the timing chain space to prevent adjusting pads from falling into the crankcase.
- Identity each valve lifter and adjusting pad position very carefully so that they can be reinstalled in their original place.



Valve lapper (ø14)
90890-04101
Valve lapper (ø14)
YM-A8998

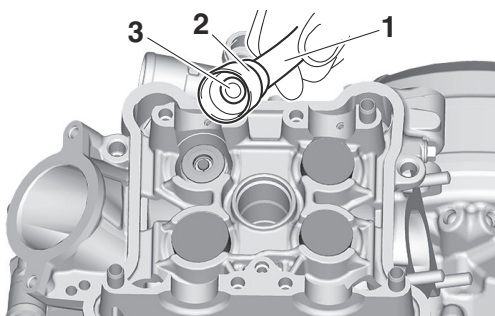


EX		
IN		

- c. Check the number on the originally installed adjusting pad.

TIP

- The adjusting pad number "a" is indicated on the top of the adjusting pad.
- For the number on the originally installed adjusting pad, convert the last digit of adjusting pad number as per the below table.

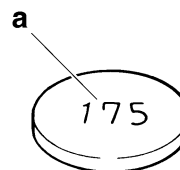

- d. Select an adjusting pad with a proper valve clearance from the adjusting pad selection table.

TIP

- There are 25 types of adjusting pads, ranging from 1.20 mm (0.0472 in) to 2.40 mm (0.0945 in), in increments of 0.05 mm (0.0020 in).
- The field where the number on the originally installed adjusting pad and the measured valve clearance intersect shows the adjusting pad number to replace.

Last digit of pad number	Rounded value
0, 1 or 2	0
4, 5 or 6	5
8 or 9	10

Example:

Pad number = 148

Rounded value = 150

- e. Install the new adjusting pads "4" and the valve lifters "5".

ECA24310


NOTICE

Do not twist adjusting pads and valve lifters forcibly during installation.

TIP

- Apply the engine oil on the valve lifters.
- Apply molybdenum disulfide oil to the valve stem ends.
- Check that the valve lifters turn smoothly when rotated with your finger.
- Make sure that valve lifters and adjusting pads are installed in place.
- Make sure that adjusting pads are installed

with their numbers facing upward.

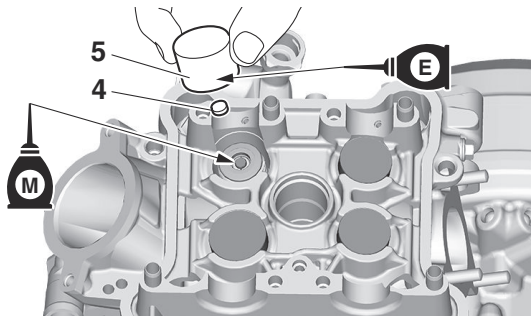

- f. Install the camshafts (exhaust and intake). Refer to “CAMSHAFT” on page 5-11.
- g. Measure the valve clearance again.
- h. If the valve clearance is out of specification, repeat adjusting the valve clearance until it is within specification.

EAM30383

VALVE CLEARANCE SHIM CHART **INTAKE**

A	B																									
	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240	
0.00 – 0.01				120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230
0.02 – 0.06			120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.07 – 0.09		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.10 – 0.17	C																									
0.18 – 0.24	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240		
0.25 – 0.29	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240			
0.30 – 0.34	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240				
0.35 – 0.39	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240					
0.40 – 0.44	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240						
0.45 – 0.49	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240							
0.50 – 0.54	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240								
0.55 – 0.59	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240									
0.60 – 0.64	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240										
0.65 – 0.69	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240											
0.70 – 0.74	175	180	185	190	195	200	205	210	215	220	225	230	235	240												
0.75 – 0.79	180	185	190	195	200	205	210	215	220	225	230	235	240													
0.80 – 0.84	185	190	195	200	205	210	215	220	225	230	235	240														
0.85 – 0.89	190	195	200	205	210	215	220	225	230	235	240															
0.90 – 0.94	195	200	205	210	215	220	225	230	235	240																
0.95 – 0.99	200	205	210	215	220	225	230	235	240																	
1.00 – 1.04	205	210	215	220	225	230	235	240																		
1.05 – 1.09	210	215	220	225	230	235	240																			
1.10 – 1.14	215	220	225	230	235	240																				
1.15 – 1.19	220	225	230	235	240																					
1.20 – 1.24	225	230	235	240																						
1.25 – 1.29	230	235	240																							
1.30 – 1.34	235	240																								
1.35 – 1.39	240																									

A. Measured clearance

B. Installed pad number

C. Standard clearance

Example:

Valve clearance (cold) 0.10–0.17 mm (0.0039–0.0067 in)

Installed is 175.

Measured clearance 0.25 mm (0.0098 in)

Replace 175 pad with 185 pad.

Pad No. 175 = 1.75 mm (0.0689 in)

Pad No. 185 = 1.85 mm (0.0728 in)

EXHAUST

A	B																								
	120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240
0.00 – 0.01					120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220
0.02 – 0.06				120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225
0.07 – 0.11			120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230
0.12 – 0.14		120	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235
0.15 – 0.22	C																								
0.23 – 0.29	125	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240	
0.30 – 0.34	130	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240		
0.35 – 0.39	135	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240			
0.40 – 0.44	140	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240				
0.45 – 0.49	145	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240					
0.50 – 0.54	150	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240						
0.55 – 0.59	155	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240							
0.60 – 0.64	160	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240								
0.65 – 0.69	165	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240									
0.70 – 0.74	170	175	180	185	190	195	200	205	210	215	220	225	230	235	240										
0.75 – 0.79	175	180	185	190	195	200	205	210	215	220	225	230	235	240											
0.80 – 0.84	180	185	190	195	200	205	210	215	220	225	230	235	240												
0.85 – 0.89	185	190	195	200	205	210	215	220	225	230	235	240													
0.90 – 0.94	190	195	200	205	210	215	220	225	230	235	240														
0.95 – 0.99	195	200	205	210	215	220	225	230	235	240															
1.00 – 1.04	200	205	210	215	220	225	230	235	240																
1.05 – 1.09	205	210	215	220	225	230	235	240																	
1.10 – 1.14	210	215	220	225	230	235	240																		
1.15 – 1.19	215	220	225	230	235	240																			
1.20 – 1.24	220	225	230	235	240																				
1.25 – 1.29	225	230	235	240																					
1.30 – 1.34	230	235	240																						
1.35 – 1.39	235	240																							
1.40 – 1.44	240																								

A. Measured clearance

B. Installed pad number

C. Standard clearance

Example:

Valve clearance (cold) 0.15–0.22 mm (0.0059–0.0087 in)

Installed is 175.

Measured clearance 0.30 mm (0.0118 in)

Replace 175 pad with 185 pad.

Pad No. 175 = 1.75 mm (0.0689 in)

Pad No. 185 = 1.85 mm (0.0728 in)

EAM30412

CHECKING THE ENGINE IDLING SPEED

TIP

- Because the air pressure is lower at high altitudes, the air-fuel mixture will become richer. If the idling speed is low, turn the idle screw clockwise to increase the speed before the adjustment.
- Before adjusting the engine idling speed, make sure that the air filter element is not clogged, the engine compression is proper, and the throttle grip free play is proper.
- Adjust the engine idling speed with the starter knob pulled in completely.

1. Start the engine, and warm this up until the oil has reached the specified temperature.
2. Measure the coolant temperature using the Yamaha diagnostic tool.

	Yamaha diagnostic tool USB (US) 90890-03275 Yamaha diagnostic tool (A/I) 90890-03273
---	---


	Coolant temperature 70–80 °C (158–176 °F)
--	--

3. Install:
 - Digital tachometer

	Digital tachometer 90890-06760 Digital tachometer YU-39951-B
---	---

TIP

Get the high tension cord “1” of the ignition coil pinched in the detector “a” of the digital tachometer.

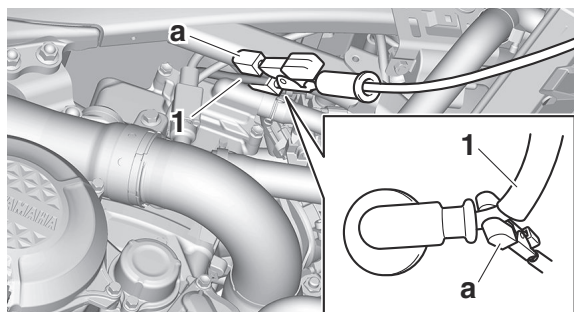


4. Measure:
 - Engine idling speed
 Out of specification → Regulate.



Engine idling speed
1900–2100 r/min

5. Adjust:
 - Engine idling speed
 - a. Turn the idle screw “1” to make an adjustment.

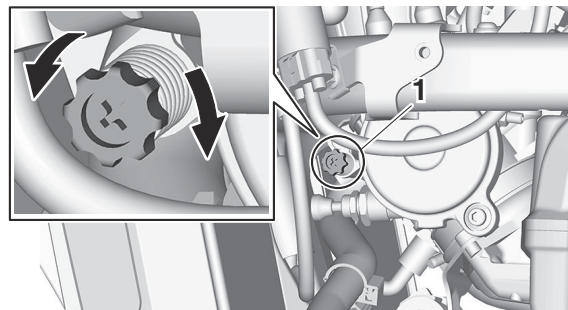

EAM30475


CHECKING THE THROTTLE GRIP

TIP

Prior to adjusting throttle grip free play, the engine idling speed should be adjusted.

1. Check:
 - Throttle grip free play “a”
 Out of specification → Regulate.

	Throttle grip free play 3.0–6.0 mm (0.12–0.24 in)
---	--

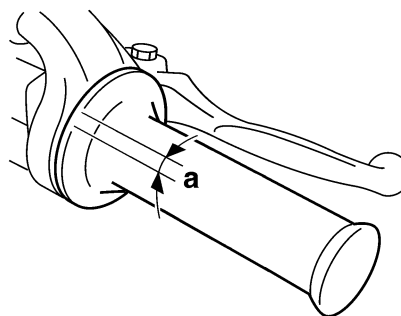


2. Adjust:
 - Throttle grip free play
 - a. Loosen the locknut “1”.
 - b. Turn the adjuster “2” until the specified throttle grip free play is obtained.
 - c. Tighten the locknut.

EWA18470

WARNING

After adjusting the throttle grip free play, start the engine and turn the handlebar to the right and to the left to ensure that this does not cause the engine idling speed to change.

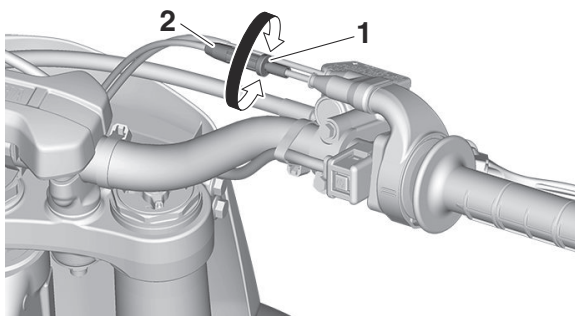

EAM30254

CHECKING THE SPARK PLUG

1. Remove:
 - Seat
 - Side cover (left/right)
 - Shroud (left/right)
 Refer to "GENERAL CHASSIS" on page 4-1.
 - Fuel tank "1"
 Refer to "FUEL TANK" on page 7-1.


ECA24400

NOTICE

Do not use too much force to pull the hose.

TIP

Remove the fuel tank, turn this 180° clockwise, and put it in the frame "2" as shown.

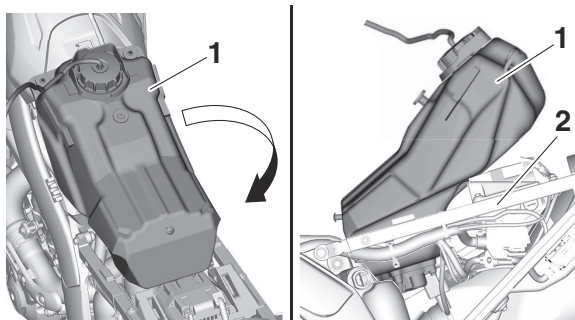

2. Remove:
 - Spark plug cap
 - Spark plug
 Refer to "CAMSHAFT" on page 5-11.

ECA24410

NOTICE

In order not to allow the dirt accumulated around the spark plug to drop from the spark plug hole into the cylinder, clean it before removing the spark plug.

3. Check:
 - Spark plug type
 Wrong type → Replace.




Manufacturer/model
NGK/LMAR8G

4. Check:
 - Electrode
Damage/wear → Replace the spark plug.
 - Insulator
Abnormal color → Replace the spark plug.
Normal color is medium-to-light tan.
5. Clean:
 - Spark plug
(with a spark plug cleaner or a wire brush)
6. Measure:
 - Spark plug gap "a"
 Out of specification → Adjust the spark plug gap.



Spark plug gap
0.7–0.8 mm (0.028–0.031 in)

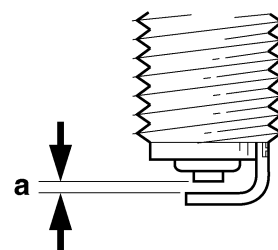

7. Install:
 - Spark plug



Spark plug
13 N·m (1.3 kgf·m, 9.6 lb·ft)

TIP

Before installing the spark plug, clean the spark plug and gasket surface.

8. Install:
 - Spark plug cap
 - Fuel tank
 - Shroud (left/right)
 - Side cover (left/right)
 - Seat
 Refer to "GENERAL CHASSIS" on page 4-1.

EAM30224

CHECKING THE ENGINE OIL LEVEL

1. Start the engine and warm it up for ten minutes until the engine oil has reached a normal temperature of 60 °C (140 °F), and then turn the engine off.
2. Stand the vehicle upright on a level surface.
3. Start the engine, wait for ten seconds, turn the engine off, and then wait a few minutes.

4. Check:


• Engine oil level

The engine oil level should be between the minimum level (lower edge of the oil check window “1”) and the maximum level mark “a”.

Below the minimum level → Add the recommended engine oil to the proper level.

TIP

Before checking the engine oil level, wait a few minutes until the oil has settled.

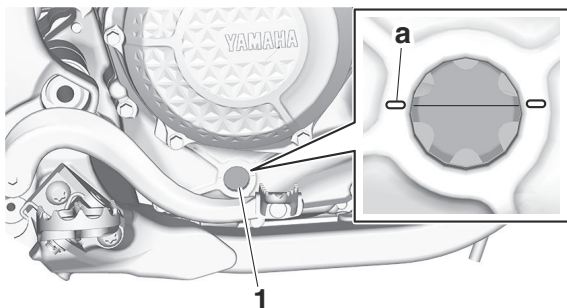


**Recommended brand
YAMALUBE**

**SAE viscosity grades
10W-40, 10W-50, 15W-40,
20W-40 or 20W-50**

**Recommended engine oil grade
API service SG type or higher,
JASO standard MA**

-20 -10 0 10 20 30 40 50 °C

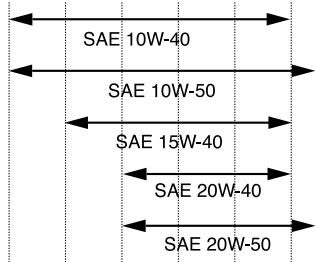

ECA13361

NOTICE

- **Engine oil also lubricates the clutch and the wrong oil types or additives could cause clutch slippage. Therefore, do not add any chemical additives or use engine oils with a grade of “CD” or higher and do not use oils labeled “ENERGY CONSERVING II”.**
- **Do not allow foreign materials to enter the crankcase.**

5. Start the engine, warm it up for several minutes, and then turn it off.

6. Check the engine oil level again.



TIP

Before checking the engine oil level, wait a few minutes until the oil has settled.

EAM30225


CHANGING THE ENGINE OIL

1. Stand the vehicle upright on a level surface.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Place a container under the engine oil drain bolts.
4. Remove:
 - Oil filler cap (along with the O-ring)
5. Remove:
 - Engine oil drain bolt (crankcase) “1” (along with the gasket “2”)
 - Engine oil drain bolt (oil tank) “3” (along with the gasket “4”)

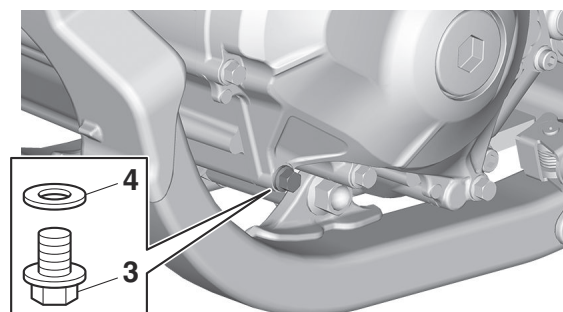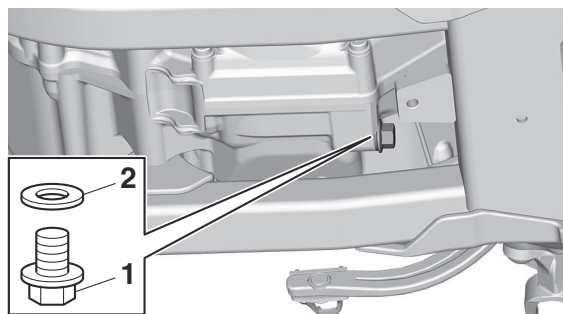

6. Drain:

- Engine oil (completely from the oil tank and crankcase)
7. If the oil filter element is also to be replaced, perform the following procedure.
 - a. Remove the oil filter element cover “1”, oil filter element “2”.
 - b. Replace the new O-ring “3”.

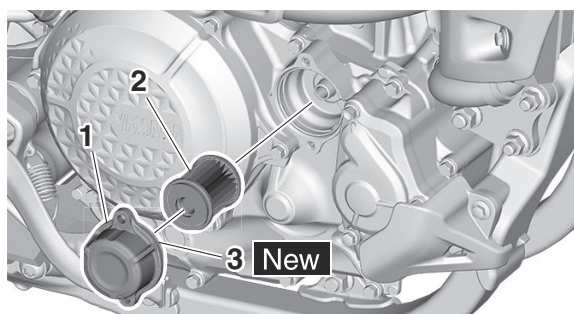

- c. Install the new oil filter element and the oil filter element cover.



Oil filter element cover bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

8. Install:

- Engine oil drain bolt (oil tank)
(along with the gasket **New**)
- Engine oil drain bolt (crankcase)
(along with the gasket **New**)



Engine oil drain bolt (oil tank)
10 N·m (1.0 kgf·m, 7.4 lb·ft)
Engine oil drain bolt (crankcase)
20 N·m (2.0 kgf·m, 15 lb·ft)

9. Fill:

- Crankcase
(with the specified amount of the recommended engine oil)



Engine oil quantity
Oil change
0.94 L (0.99 US qt, 0.83 Imp.qt)
With oil filter removal
0.96 L (1.01 US qt, 0.84 Imp.qt)
Quantity (disassembled)
1.20 L (1.27 US qt, 1.06 Imp.qt)

10. Install:

- Engine oil filler cap
(along with the O-ring **New**)

11. Check:

- Oil level
Refer to “CHECKING THE ENGINE OIL LEVEL” on page 3-13.

12. Check:

- Engine oil pressure
a. Start the engine.

EWA19130




WARNING

Always keep the engine idling speed during the checkup without increasing the engine speed.

- b. Look at the oil level check window “1”, and then make sure that the engine oil flows and that the engine oil level decreases.

TIP

Check the engine oil level while the engine is at idling speed.

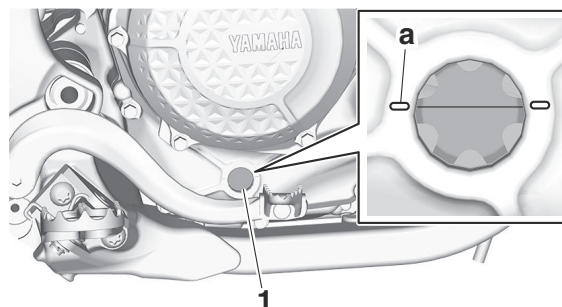

- a. Maximum level mark

ECA26740

NOTICE

If the engine oil level does not decrease after the engine has been started, immediately turn the engine off. Otherwise, the engine could seize.

- c. If the engine oil level does not decrease at the specified level mark, check the engine oil system for leaks, and the engine oil passages and oil pump for damage.
- d. Check the oil pressure again.

EAM30370


ADJUSTING THE CLUTCH LEVER POSITION

1. Adjust:

- Clutch lever position
(distance “a” from the handlebar grip to the clutch lever)
- a. While pushing the clutch lever forward, turn the clutch lever adjusting bolt “1” until the clutch lever is in the desired position.
- b. Tighten the locknut (clutch lever position “2” to specification.



Locknut (clutch lever position)
5 N·m (0.5 kgf·m, 3.7 lb·ft)

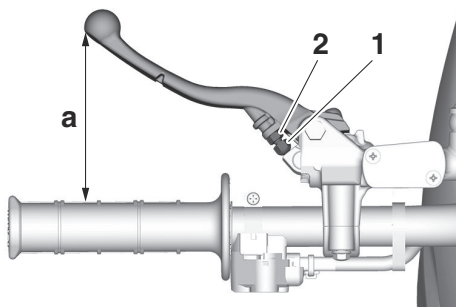

EAM30667

CHECKING THE CLUTCH FLUID

TIP

- When changing the clutch fluid, it is recommended to also replace the friction plate and clutch plate.
- The clutch fluid level rises as the wear on the friction plate increases.

1. Stand the vehicle on a level surface.

TIP

Place the vehicle on a suitable stand.

2. Check:

- Clutch fluid level

The clutch fluid level is above the baseline →
Check the friction plate for wear.

Refer to “CLUTCH” on page 5-46.

The clutch fluid level is under the baseline →
Check the hydraulic clutch system for leakage.

EWA13370

WARNING

- Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.
- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the clutch fluid reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

ECA13420

NOTICE

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilled clutch fluid immediately.

TIP


- In order to ensure a correct reading of the clutch fluid level, make sure the top of the res-

ervoir is horizontal.

- Adjust the clutch fluid level with the baseline.
- Make sure that clutch fluid does not overflow when the diaphragm is set and the cap is attached.
- Wipe off any adhered clutch fluid.



**Specified brake and clutch fluid
DOT 4**

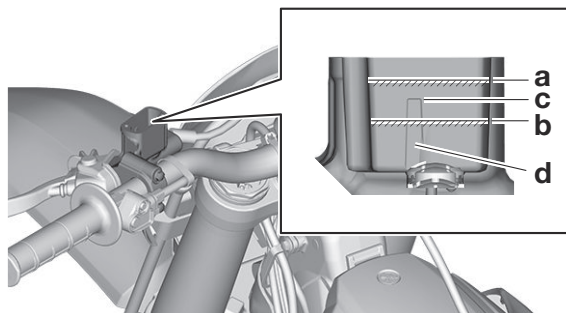

- a. The clutch fluid level is above the baseline.
- b. The clutch fluid level is under the baseline.
- c. Baseline
- d. Raised portion

EAM30668

BLEEDING THE HYDRAULIC CLUTCH SYSTEM

EWA13000

WARNING

Bleed the hydraulic clutch system whenever:

- the system was disassembled,
- a clutch hose was loosened or removed,
- the clutch fluid level is very low,
- clutch operation is faulty.


TIP

- Be careful not to spill any clutch fluid or allow the clutch master cylinder reservoir to overflow.
- When bleeding the hydraulic clutch system, make sure there is always enough clutch fluid before applying the clutch lever. Ignoring this precaution could allow air to enter the hydraulic clutch system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the clutch fluid settle for a few hours. Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.

1. Bleed:

- Hydraulic clutch system
 - a. Add the specified clutch fluid to the proper level.

- b. Install the clutch master cylinder reservoir diaphragm.
- c. Connect a clear plastic hose “1” tightly to the bleed screw “2”, and place a container under the vinyl hose end on one side.

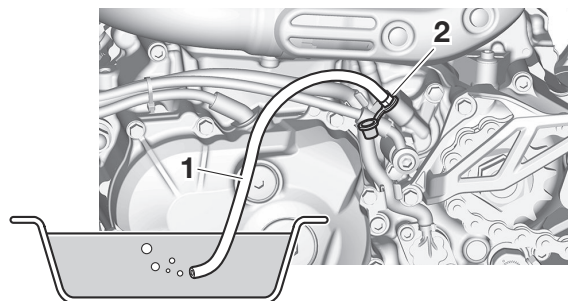

- d. Slowly squeeze the clutch lever several times.
- e. Fully squeeze the clutch lever without releasing it.
- f. Loosen the bleed screw.
- g. Tighten the bleed screw and then release the clutch lever.
- h. Repeat steps (d) to (g) until all of the air bubbles have disappeared from the clutch fluid in the clear plastic hose.
- i. Tighten the bleed screw to specification.



Clutch release cylinder bleed screw
5 N·m (0.5 kgf·m, 3.7 lb·ft)

- j. Add the specified clutch fluid to the proper level.
Refer to “CHECKING THE CLUTCH FLUID” on page 3-16.

EWA13010



After bleeding the hydraulic clutch system, check the clutch operation.

EAM30219

CLEANING THE AIR FILTER ELEMENT



1. Remove:
 - Sub-seat
Refer to “FUEL TANK CAP” on page 1-26.
 - Air filter case cover “1”

TIP

To remove the air filter case cover:

- Raise the air filter case cover rear side while pushing the side “a” of the air intake duct from inside to unhook the ribs “b” on both sides of the air filter case cover from the air filter case “2”.
- Slide the air filter case cover to the rear of the

vehicle to remove the projection “c” from the hole “d” in the air filter case.

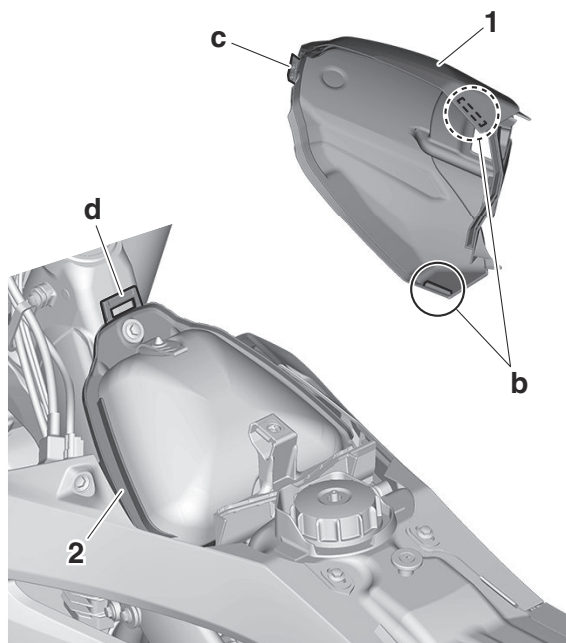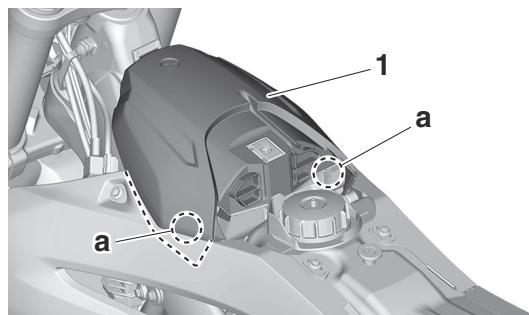



2. Remove:

- Air filter element guide “1”
- Air filter element “2”
(from the air filter element guide)
- Seal “3”
(from the air filter element)

TIP

To remove the air filter element:

- Release the band “a” from the projection “b”, and then move the air filter case assembly bracket “4” in the direction of the arrow to release the projection “c”.
- Remove the air filter element and the air filter element guide as a set.

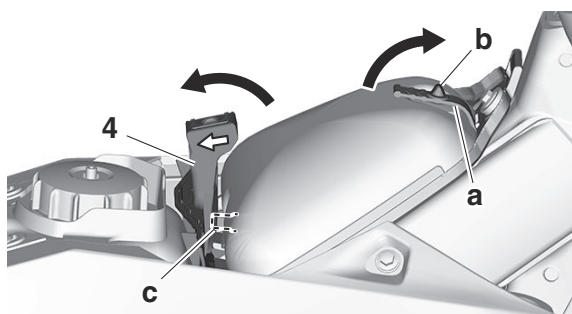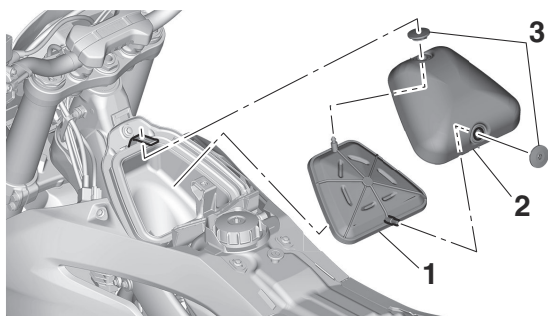

3. Wash:

- Air filter element
 - After washing the element with air filter cleaner or kerosene, squeeze and dry it completely.

EWA19110



Do not use gasoline or organic (acid/alkaline) volatile oil for washing.

ECA24280

NOTICE

Do not twist the element when squeezing the element.

4. Check:

- Air filter element
Damage → Replace.


5. Apply:

- Yamaha foam air filter oil or other quality foam air filter oil
 - Put the air filter element into a plastic bag and drip the filter oil into the bag.
 - With the element inside the bag, rub it thoroughly so that the element is evenly permeated with the oil.
 - Wrap the element in a clean cloth, rub the element gently, and wipe off any excess oil.

TIP

- The element should be permeated with oil so that it is wet but not dripping.
- When replacing the element, permeate the element in oil by using the same procedure as

when cleaning.


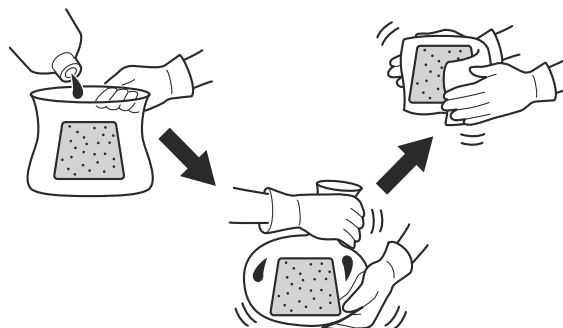


6. Install:

- Air filter case assembly bracket (if removed)
Refer to "THROTTLE BODY" on page 7-4.
- Seal "1"
- Air filter element "2"
- Air filter element guide "3"

TIP

- Apply lithium-soap-based grease on the entire seal lips when installing the air filter element guide.
- To install the air filter element:
 - Move the air filter case assembly bracket "4" to the rear of the vehicle.
 - Set the projection "a" on the air filter element guide to the air filter case assembly bracket and insert the projection "b" on the air filter element guide to the band "c".

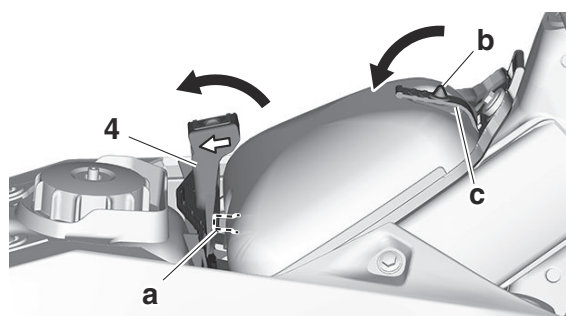
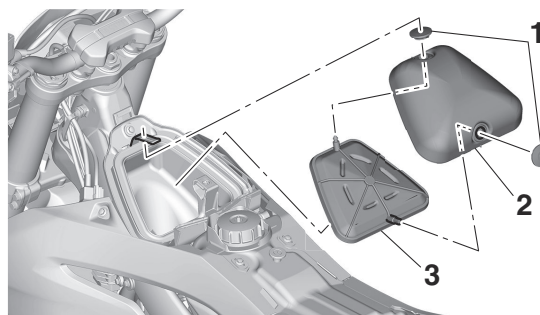


7. Install:

- Air filter case cover “1”
- Fuel tank breather hose “2”
(to the air filter case cover)

TIP

- To install the air filter case cover:
 - Insert the projection “a” on air filter case cover to the hole “b” in the air filter case “3”.
 - Push the rear side of the air filter case cover to hook the ribs “c” to the air filter case.
- Insert the fuel tank breather hose end with the protector into the steering shaft hole.
- Fit the other end of the fuel tank breather hose into the projection on the fuel tank cap.
- Route the fuel tank breather hose through the guide “d”, and then fit it into the groove “e” in the air filter case cover.

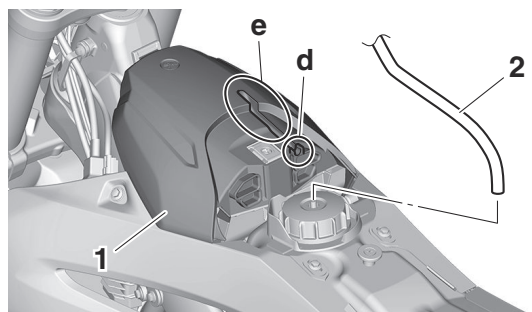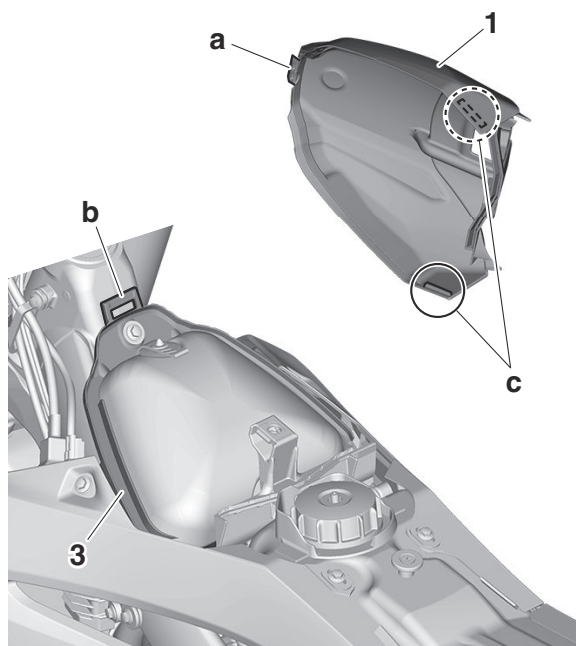

8. Install:


- Sub-seat

EAM30335

CHECKING THE THROTTLE BODY JOINT

1. Check:

- Throttle body joint “1”
Crack/damage → Replace.

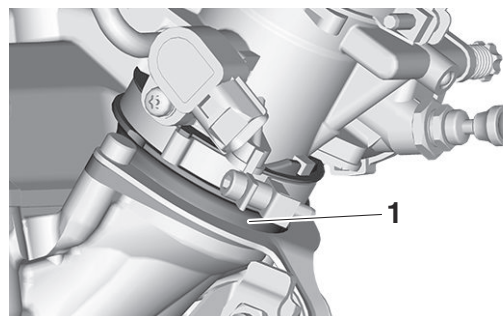

EAM30222


CHECKING THE FUEL LINE

1. Remove:

- Seat
- Side cover (left/right)
- Shroud (left/right)
Refer to “GENERAL CHASSIS” on page 4-1.
- Fuel tank
Refer to “FUEL TANK” on page 7-1.

2. Check:

- Fuel hose “1”
Crack/damage → Replace.
Loose connection → Connect properly.

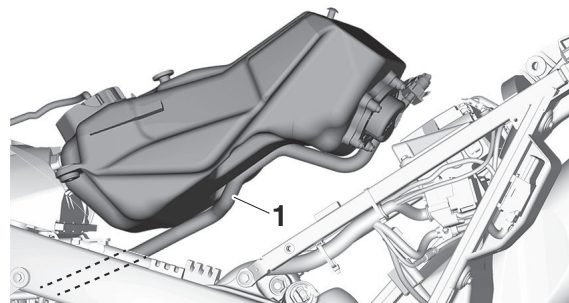

3. Install:

- Fuel tank
Refer to “FUEL TANK” on page 7-1.
- Shroud (left/right)
- Side cover (left/right)
- Seat
Refer to “GENERAL CHASSIS” on page 4-1.

EAM30476

CHECKING THE CYLINDER HEAD BREATHER HOSE

1. Check:


- Breather hose “1”
Crack/damage → Replace.

Loose connection → Connect properly.

ECA14920

NOTICE

Make sure the cylinder head breather hose is routed correctly.

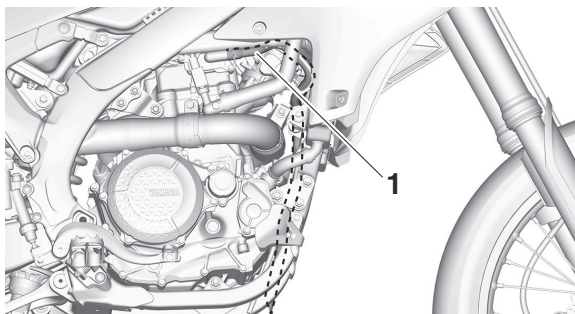

EAM30221

CHECKING THE EXHAUST SYSTEM

1. Remove:
 - Exhaust pipe 1
 - Exhaust pipe 2
 Refer to “ENGINE REMOVAL” on page 5-3.
2. Remove:
 - Exhaust pipe protector
3. Check:
 - Exhaust pipe 1
 - Exhaust pipe 2
 - Silencer
 Crack/damage → Replace.
4. Check:
 - Silencer fiber
 Damage → Replace.
5. Replace:
 - Silencer fiber
 a. Remove the rivets “1” and silencer body “2”.



ECA25800

NOTICE


Do not hit the silencer stay “a” as it may do damage to the silencer.

TIP


Remove the inner pipe while holding the silencer in place with a vise etc.

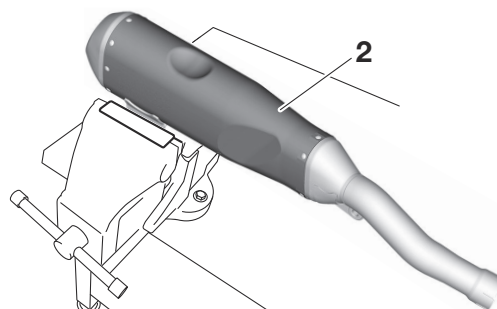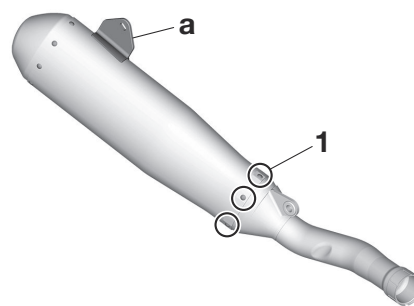


- b. Remove the rivets “3” and silencer cap “4”.

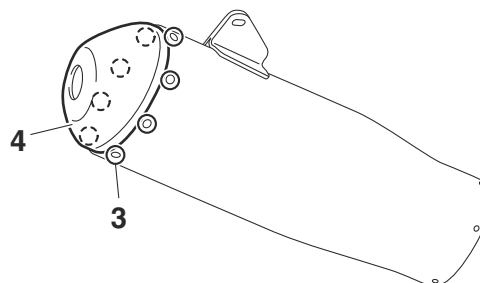

- c. Replace the fiber inserts “5”.

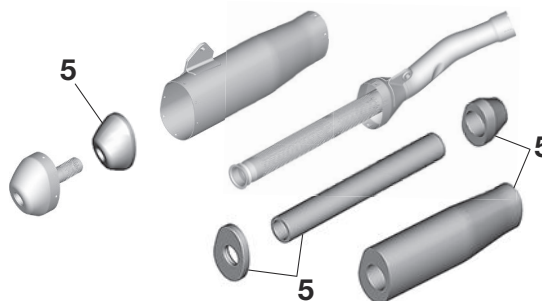


- d. Install the fiber insert “6” to the part “b”.
e. Twist the fiber insert “7” onto the inner pipe “c”.

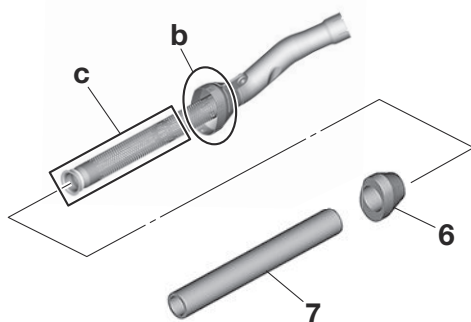

f. Install the silencer body “8” and rivets “9”.

TIP


Apply heat-resistant sealant to the areas “d” shown, making sure that there are no gaps in the beads of sealant.

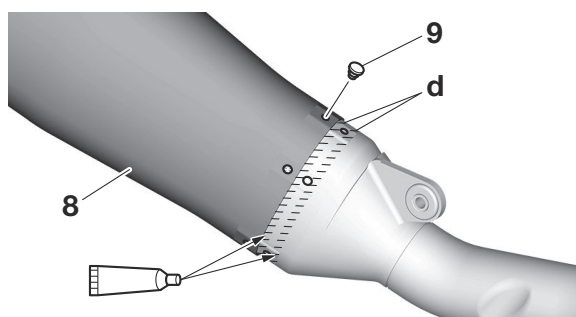

g. Install the fiber “10”.



TIP

Stuff the fiber into the silencer body by using a flat board “11”.

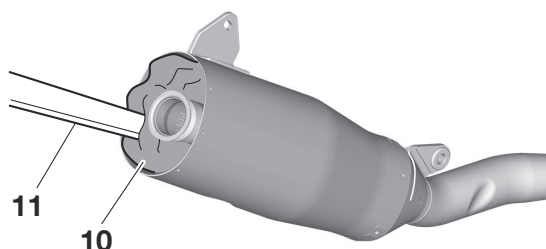

h. Install the fiber insert “12” to the inner pipe.


i. Install the fiber insert “13” to the inside of the silencer cap “14”.

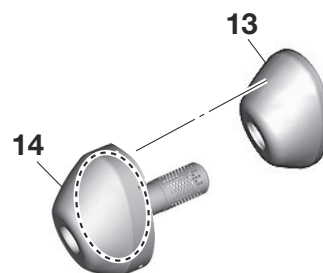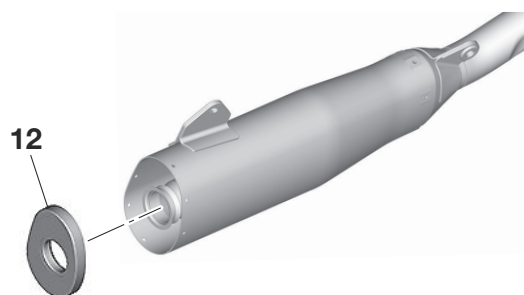

j. Install the silencer cap “15” and rivet “16”.


TIP

- Apply heat-resistant sealant to the areas “e” shown, making sure that there are no gaps in the beads of sealant.
- Take care not to allow the fiber out of place when installing the silencer body “17”.

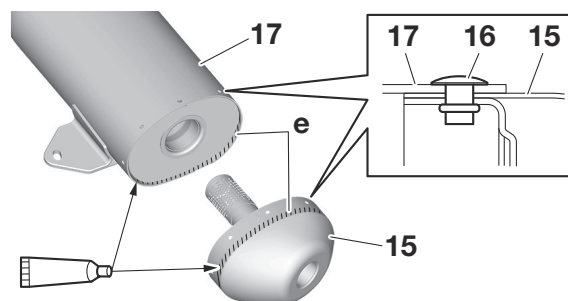

6. Check:

- Gasket “1”
Damage → Replace.


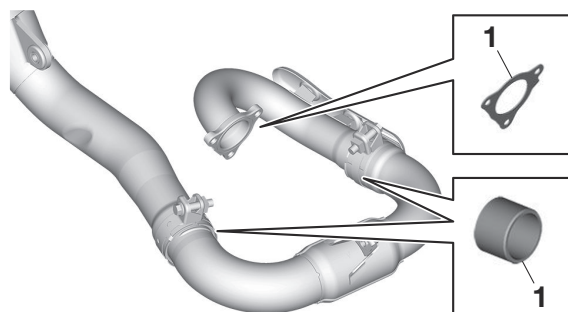


7. Check:

- Tightening torques



- Exhaust pipe nut "1"
10 N·m (1.0 kgf·m, 7.4 lb·ft)
- Exhaust pipe clamp bolt "2"
16 N·m (1.6 kgf·m, 12 lb·ft)
- Exhaust pipe bracket bolt "3"
20 N·m (2.0 kgf·m, 15 lb·ft)
- Exhaust pipe clamp bolt "4"
16 N·m (1.6 kgf·m, 12 lb·ft)
- Silencer bolt "5"
30 N·m (3.0 kgf·m, 22 lb·ft)

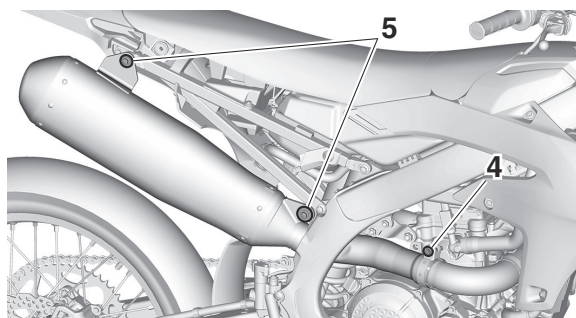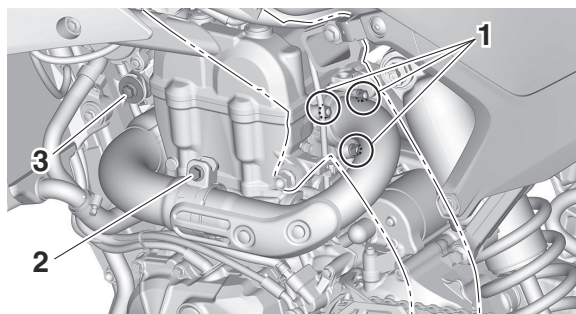

8. Install:
- Exhaust pipe protector



- Exhaust pipe protector screw
10 N·m (1.0 kgf·m, 7.4 lb·ft)
LOCTITE®

EAM30210

CHECKING THE COOLANT LEVEL

EWA13030


WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:


Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the radiator cap and turn it counterclockwise to re-

move.

1. Stand the vehicle upright on a level surface.
2. Remove:
 - Radiator cap "1"

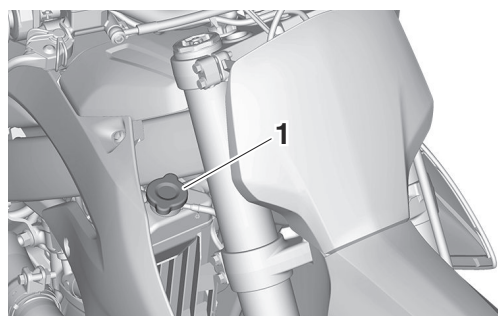

3. Check:
 - Coolant level
Maximum level "a" or below → Add coolant up to the maximum level.

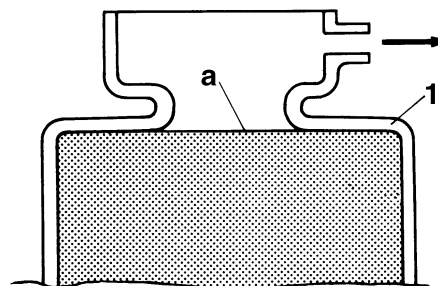

1. Radiator

ECA24260

NOTICE

- Adding water instead of coolant lowers the antifreeze content. If, therefore, water is used instead of coolant, check, and if necessary, adjust the antifreeze concentration.
- Use only distilled water. However, if distilled water is not available, soft water may be used.

4. Start the engine, warm this up for several minutes, and then stop it.

5. Check:
 - Coolant level

TIP

Before checking the coolant level, wait a few minutes until the coolant has settled.

EAM30211

CHECKING THE COOLING SYSTEM

1. Remove:
 - Seat
 - Side cover (left/right)
 - Shroud (left/right)

Refer to “GENERAL CHASSIS” on page 4-1.

2. Check:

- Radiator
- Radiator hose
Crack/damage → Replace.
Refer to “RADIATOR” on page 6-3.

3. Install:

- Shroud (left/right)
- Side cover (left/right)
- Seat
Refer to “GENERAL CHASSIS” on page 4-1.

EAM30212

CHANGING THE COOLANT


EWA13030

WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:

Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the radiator cap and turn it counterclockwise to remove.

1. Place a container under the engine.
2. Remove:
 - Coolant drain bolt “1”
 - Copper washer

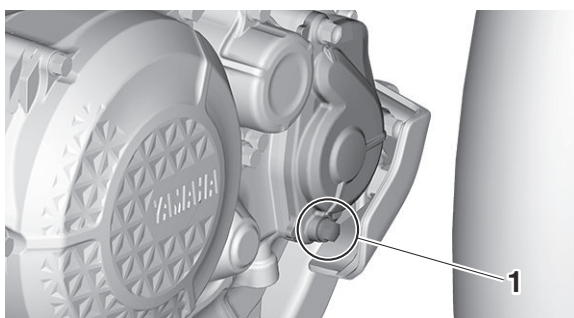

3. Remove:

- Radiator cap
Slowly loosen the radiator cap to drain coolant.

TIP

When the radiator cap is loosened, coolant will gush out transversely; therefore, bring the container near to the outlet.

4. Thoroughly flush the cooling system with clean tap water.

5. Install:

- Copper washer **New**
- Coolant drain bolt



Coolant drain bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

6. Pour coolant.



Recommended coolant
High quality ethylene glycol anti-freeze containing anti-corrosion for aluminum engine
Radiator (including all routes)
1.03 L (1.09 US qt, 0.91 Imp.qt)
Coolant mixing ratio
1:1 (Coolant:Water)

EWA13040

WARNING

- If coolant splashes in your eyes, thoroughly wash them with water and consult a doctor.
- If coolant splashes on your clothes, quickly wash it away with water and then with soap and water.
- If coolant is swallowed, induce vomiting and get immediate medical attention.

ECA13481

NOTICE

- Adding water instead of coolant lowers the antifreeze content of the coolant. If water is used instead of coolant, check, and if necessary, correct the antifreeze concentration of the coolant.
- Use only distilled water. However, if distilled water is not available, soft water may be used.
- If coolant comes into contact with painted surfaces, immediately wash them with water.
- Do not mix different types of antifreeze.

7. Install:

- Radiator cap

8. Start the engine, warm this up for several minutes, stop it, and then wait for it to cool down.

9. Check:

- Coolant level

Refer to “CHECKING THE COOLANT LEVEL” on page 3-22.

EAM20136



CHASSIS

EAM30479


ADJUSTING THE FRONT DISC BRAKE**TIP**

There should be no free play at the brake lever end.

1. Check:
 - Brake lever position “a”

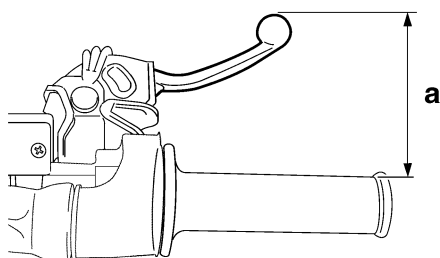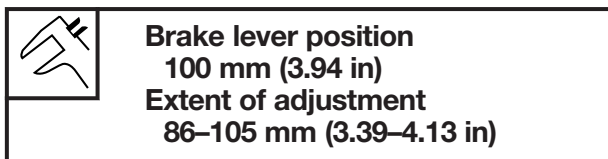

2. Remove:
 - Brake lever cover
3. Adjust:
 - Brake lever position
 - a. Loosen the locknut “1”.
 - b. Turn the adjusting bolt “2” until the specified brake lever position is obtained.

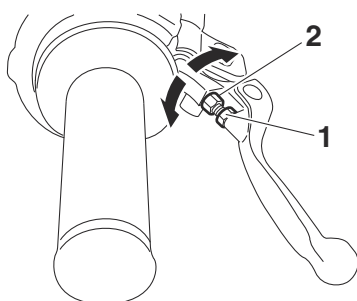

c. Tighten the locknut.



EWA13050

WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the brake system. Before the vehicle is operated, the air must be removed by bleeding the brake sys-

tem. Air in the brake system will considerably reduce braking performance.

ECA13490

NOTICE


After adjusting the brake lever position, make sure there is no brake drag.

4. Install:
 - Brake lever cover

EAM30480

ADJUSTING THE REAR DISC BRAKE

1. Adjust:
 - Brake pedal position
 - a. Loosen the locknut “1”.
 - b. Turn the adjusting bolt “2” until the brake pedal is in the correct position.

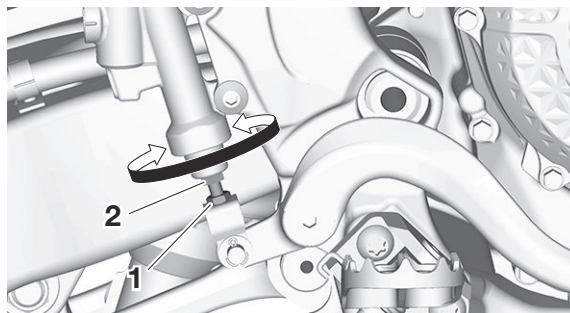

c. Tighten the locknut.



Locknut
6 N·m (0.6 kgf·m, 4.4 lb·ft)

EWA19150

WARNING

A soft or spongy feeling in the brake pedal can indicate the presence of air in the brake system. Before running, bleed the brake system. Air in the brake system will cause braking performance to be reduced.

ECA13510

NOTICE

After adjusting the brake pedal position, make sure there is no brake drag.

EAM30234

CHECKING THE BRAKE FLUID LEVEL

1. Stand the vehicle upright on a level surface.


TIP

In order to ensure a correct reading of the brake fluid level, make sure that the top of the brake fluid reservoir is horizontal.

2. Check:
 - Brake fluid level
The minimum level mark “a” or below → Add.



**Specified brake fluid
DOT 4**

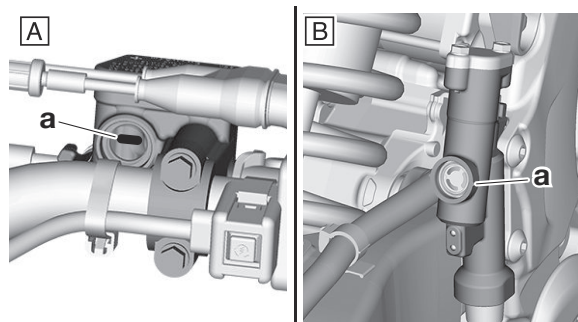

- A. Front brake
B. Rear brake

EWA13090

WARNING

- **Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.**
- **Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.**
- **When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.**

ECA13540

NOTICE


Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

EAM30231

CHECKING THE FRONT BRAKE PADS

The following procedure applies to all of the brake pads.

1. Operate the brake.
2. Check:
 - Front brake pad
Wear indicator grooves "1" almost touch the brake disc → Replace the brake pads as a set.
Refer to "FRONT BRAKE" on page 4-17.

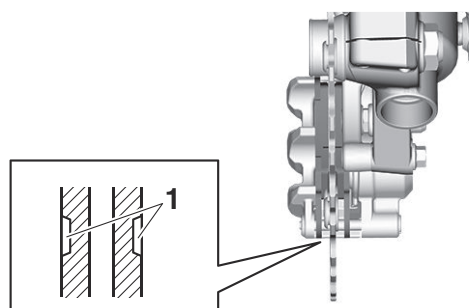


EAM30232

CHECKING THE REAR BRAKE PADS

The following procedure applies to all of the brake pads.

1. Operate the brake.
2. Check:
 - Rear brake pad
Wear indicator grooves "1" almost touch the brake disc → Replace the brake pads as a set.
Refer to "REAR BRAKE" on page 4-28.

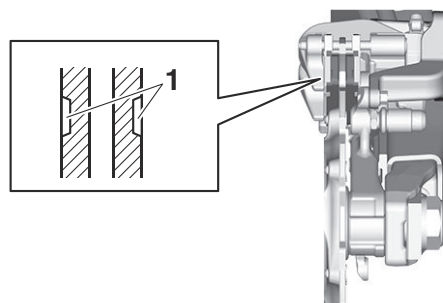

EAM30478


CHECKING THE FRONT BRAKE HOSE

1. Check:
 - Brake hose
Cracks/damage/wear → Replace.
2. Check:
 - Brake hose clamp
Loose connection → Tighten the clamp bolt.
3. Stand the vehicle upright and apply the front brake several times.
4. Check:
 - Brake hose
Brake fluid leaks → Replace the damaged brake hose.
Refer to "FRONT BRAKE" on page 4-17.
5. Check:
 - Protector "1"
Out of specification → Replace.

TIP

The protector reaches the limit of its use when it is worn down to the same height "a" as of the

plastic locking tie circumference.

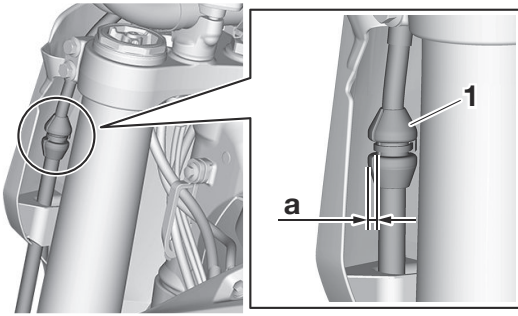

EAM30498

CHECKING THE REAR BRAKE HOSE

1. Check:
 - Brake hose
Cracks/damage/wear → Replace.
2. Check:
 - Brake hose holder
Loose connection → Tighten the holder bolt.
3. Hold the vehicle upright and apply the rear brake several times.
4. Check:
 - Brake hose
Brake fluid leakage → Replace the damaged hose.
Refer to “REAR BRAKE” on page 4-28.

EAM30499

CHECKING THE BRAKE OPERATION

1. Check:
 - Brake operation
Brake not working properly → Check the brake system.
Refer to “FRONT BRAKE” on page 4-17 and “REAR BRAKE” on page 4-28.

TIP

Drive on the dry road, operate the front and rear brakes separately and check to see if the brakes are operating properly.

EAM30477

BLEEDING THE HYDRAULIC BRAKE SYSTEM

EWA19140

⚠ WARNING

Bleed the brake system whenever:

- The system is disassembled.
- A brake hose is loosened, disconnected, or replaced.
- The brake fluid level is very low.
- Brake operation is faulty.

1. Remove:
 - Brake master cylinder cap



- Reservoir diaphragm
- Reservoir float (front brake)
- Protector (rear brake)

TIP

- Be careful not to spill any brake fluid or allow the reservoir to overflow.
- Make sure that there is enough brake fluid before applying the brake. Ignoring this precaution could allow air to enter the brake system, considerably lengthening the bleeding procedure.
- If bleeding is difficult, it may be necessary to let the brake fluid settle for a few hours. Repeat the bleeding procedure when the tiny bubbles in the hose have disappeared.

2. Bleed the brake system.

- a. Fill the reservoir to the proper level with the recommended brake fluid.
- b. Install the reservoir diaphragm.
- c. Connect the plastic hose “1” to the bleed screw “2” securely, and place a container under the end of the plastic hose.

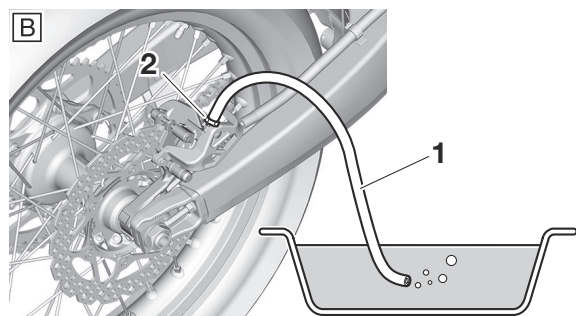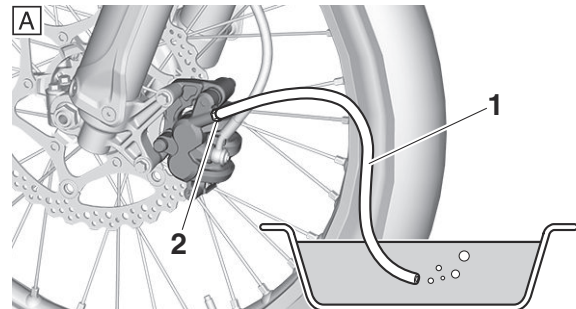

- A. Front
- B. Rear

- d. Slowly apply the brake several times.
- e. Fully pull the brake lever or fully press down the brake pedal and hold it in position.
- f. Loosen the bleed screw.

TIP

Loosening the bleed screw will release the pressure in the brake caliper and cause the brake

lever to contact the throttle grip or the brake pedal to fully extend.

- g. Tighten the bleed screw and then release the brake lever or brake pedal.
- h. Repeat steps (d) to (g) until all of the air bubbles have disappeared from the brake fluid in the plastic hose.

TIP

During the procedure, keep adding brake fluid to the reservoir.

ECA24320

NOTICE

- Wipe off any brake fluid on the brake discs, tires, wheels, etc.
- Brake fluid may erode painted surfaces or plastic parts. Always clean up spilled fluid immediately.

- i. Tighten the bleed screw.



Bleed screw
5 N·m (0.5 kgf·m, 3.7 lb·ft)

- j. Pour brake fluid to the reservoir up to the specified level.
Refer to “CHECKING THE BRAKE FLUID LEVEL” on page 3-24.

EWA13110

WARNING

After bleeding the hydraulic brake system, check the brake operation.

EAM30481

DRIVE CHAIN SLACK

ECA13550

NOTICE

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

Checking the drive chain slack

1. Use a maintenance stand to raise the rear wheel off the ground.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.


2. Shift the transmission into the neutral position.
3. Pull the drive chain up above the drive chain guide installation bolt with a force of about 50 N (5.0 kgf, 37 lbf).

4. Check:

- Drive chain slack “a”
Out of specification → Regulate.

TIP

Measure drive chain slack between the drive chain guide and the bottom of the chain as shown.

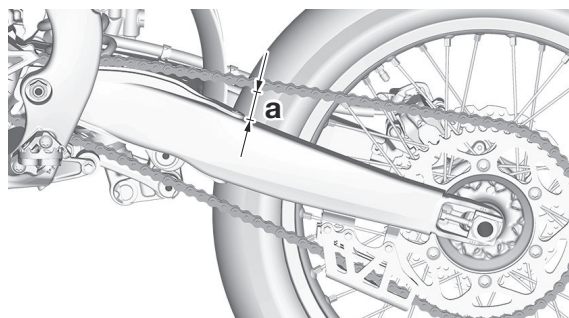

Drive chain slack (Maintenance Stand)
50.0–60.0 mm (1.97–2.36 in)

Adjusting the drive chain slack


EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

1. Adjust:

- Drive chain slack
 - a. Loosen the wheel axle nut “1”.
 - b. Loosen both locknuts “2”.
 - c. Turn the adjusting bolt “3” until the specified drive chain slack is obtained.

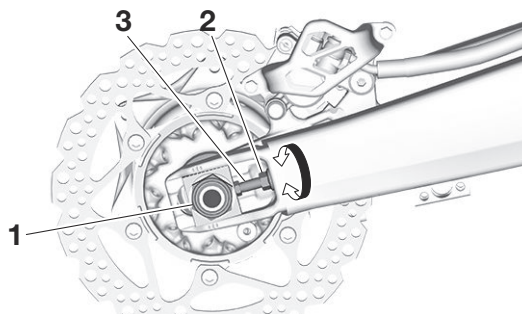

TIP

- To maintain the proper wheel alignment, adjust both sides evenly.
- Push the rear wheel forward to make sure that there is no clearance between the swingarm end plates and the ends of the swingarm.

- d. Tighten the wheel axle nut.



Wheel axle nut
135 N·m (13.5 kgf·m, 100 lb·ft)

e. Tighten the drive chain puller locknut.



Drive chain puller locknut
21 N·m (2.1 kgf·m, 15 lb·ft)

EAM30247

CHECKING AND ADJUSTING THE STEERING HEAD

1. Use a maintenance stand to raise the front wheel off the ground.

EWA13120



WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Check:

- Steering head

Grasp the bottom of the front fork legs and gently rock the front fork.

Blinding/looseness → Adjust the steering head.

3. Remove:

- Handlebar

Refer to “HANDLEBAR” on page 4-39.


- Upper bracket

Refer to “STEERING HEAD” on page 4-58.

4. Adjust:

- Steering head


a. Remove the washer “1”.

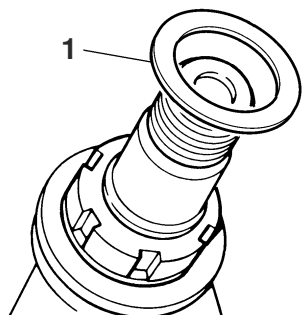

b. After loosening the ring nut “2” with a steering nut wrench “3”, tighten it to the specified torque.

TIP

- Set the torque wrench at a right angle to the steering nut wrench.
- Move the steering to the left and right a couple of times to check that it moves smoothly.

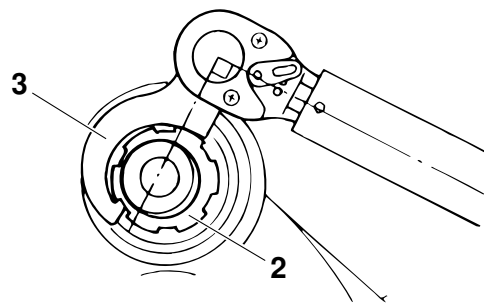

Steering nut wrench
90890-01403
Exhaust flange nut wrench
YU-A9472



Ring nut (initial tightening torque)
38 N·m (3.8 kgf·m, 28 lb·ft)

c. Turn the front fork to the right and left a few times, and make sure that the steering rotates smoothly. If it does not turn smoothly, remove the lower bracket and check the upper and lower bearings.

Refer to “STEERING HEAD” on page 4-58.

d. Loosen the ring nut fully turn and then tighten it to specification with a steering nut wrench.

EWA13140



WARNING

Do not overtighten the lower ring nut.




Ring nut (final tightening torque)
7 N·m (0.7 kgf·m, 5.2 lb·ft)

e. Check the steering head for looseness or binding by turning the front fork all the way in both directions. If any binding is felt, remove the lower bracket and check the upper and lower bearings.

Refer to “STEERING HEAD” on page 4-58.

f. Install the washer “1”.

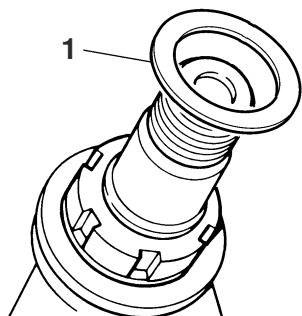

5. Install:

- Upper bracket
Refer to “STEERING HEAD” on page 4-58.
- Handlebar
Refer to “HANDLEBAR” on page 4-39.

EAM30502

LUBRICATING THE STEERING HEAD

1. Lubricate:

- Upper bearing
- Lower bearing
- Bearing race



Recommended lubricant
Lithium-soap-based grease

EAM30338

CHECKING THE FRONT FORK LEGS

1. Stand the vehicle upright on a level surface.

EWA13120



WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Check:

- Inner tube
Damage/scratches → Replace.
- Front fork leg
Oil leaks between inner tube and outer tube → Replace the oil seal.

3. Hold the vehicle upright and apply the front brake.

4. Check:

- Front fork operation
Push down hard on the handlebar several times and check if the front fork rebounds smoothly.
Unsmooth operation → Correct or replace.
Refer to “FRONT FORK” on page 4-45.


5. Check:

- Protector guide “1”
Out of specification → Replace.

TIP

The protector guide reaches the limit of its use when it is worn down to the same height “a” as

of the outer tube circumference.

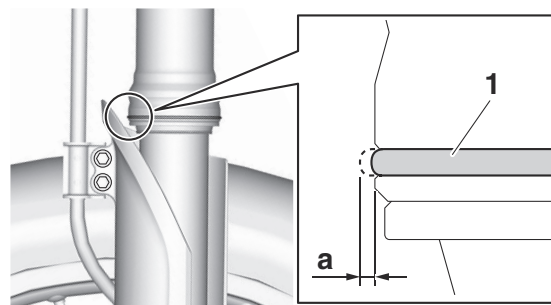


6. Remove:

- Protector
- Dust seal “1”

ECA24330

NOTICE

Be careful not to damage the dust seal and the inner tube by a driver.

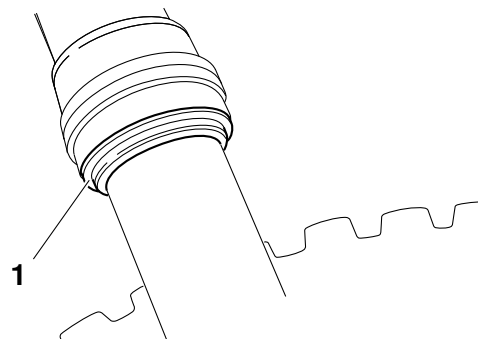


7. Clean:

- Dust seal “a”
- Scraper “b”
- Oil seal “c”

TIP

- Clean the dust seal, scraper and oil seal after every run.
- Apply lithium-soap-based grease on the inner tube.

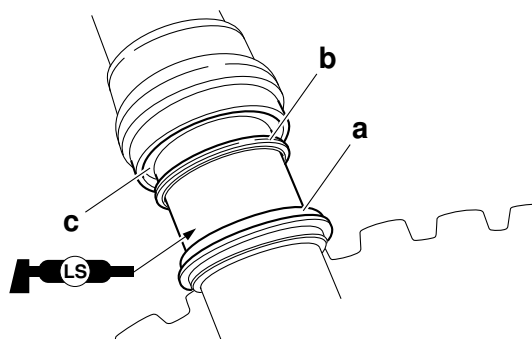

EAM30239

ADJUSTING THE FRONT FORK LEGS

EWA19180

WARNING

- Always adjust the left and right front forks evenly. If this is not done, the vehicle may have poor stability.
- Securely support the vehicle so that there is no danger of it falling over.

Rebound damping

ECA24340

NOTICE

Do not turn the adjuster forcibly beyond its adjusting range.

1. Adjust:

- Rebound damping
 - a. Turn the adjuster "1" in the direction of "a" or "b" to make an adjustment.

Direction "a"

Rebound damping is increased (suspension is harder).

Direction "b"

Rebound damping is decreased (suspension is softer).

**Rebound damping**

Minimum (soft)

20 click(s) in direction "b"*

Standard

9 click (s) in direction "b"*


Maximum (hard)

0 click(s) in direction "b"*

*With the adjusting screw fully turned in direction "a"

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

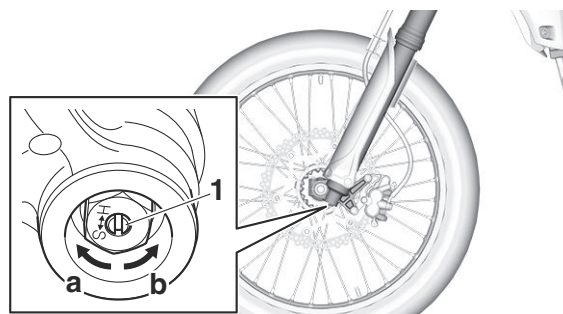**Compression damping**

ECA24350

NOTICE

Do not turn the adjuster forcibly beyond its adjusting range.

1. Adjust:

- Compression damping
 - a. Turn the adjuster "1" in the direction of "a" or "b" to make an adjustment.

Direction "a"

Compression damping is increased (suspension is harder).

Direction "b"

Compression damping is decreased (suspension is softer).

**Compression damping**

Minimum (soft)

20 click(s) in direction "b"*

Standard

12 click(s) in direction "b"*


Maximum (hard)

0 click(s) in direction "b"*

*With the adjusting screw fully turned in direction "a"

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

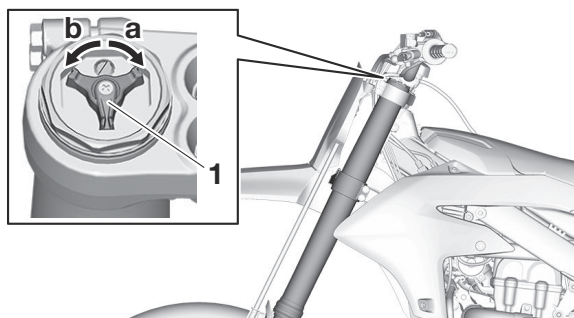

Air bleeding from front fork

TIP

If the front fork initial movement feels stiff during a run, relieve the front fork internal pressure.

1. Use a maintenance stand to raise the front wheel off the ground.

EWA13120


WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Remove the bleed screw "1" and release the internal pressure from the front fork.
3. Tighten:
 - Bleed screw



Bleed screw
1.3 N·m (0.13 kgf·m, 0.95 lb·ft)

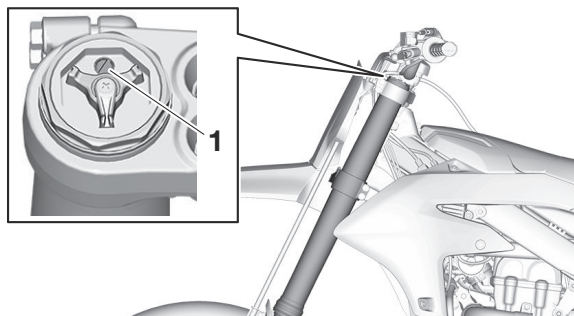

EAM30482

CHECKING THE REAR SHOCK ABSORBER ASSEMBLY

1. Stand the vehicle upright on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Check:
 - Rear shock absorber assembly
Gas leaks/oil leaks → Replace the rear shock absorber assembly.
Refer to "REAR SHOCK ABSORBER ASSEMBLY" on page 4-63.

3. Check:

- Rear shock absorber assembly smooth action
- Rear suspension link smooth action
Sit astride the seat and shake your body up and down several times to check whether the rear shock absorber assembly operates smoothly.
Unsmooth operation → Correct or replace.
Refer to "REAR SHOCK ABSORBER ASSEMBLY" on page 4-63.

EAM30242

ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY

Use a maintenance stand to raise the rear wheel off the ground.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.


Spring preload

ECA24360

NOTICE

Do not turn the adjuster forcibly beyond its adjusting range.

1. Adjust:
 - Spring preload
 - a. Loosen the locknut "1".
 - b. Loosen the adjuster "2" until there is some clearance between the spring and the adjuster.
 - c. Measure the spring free length "a".

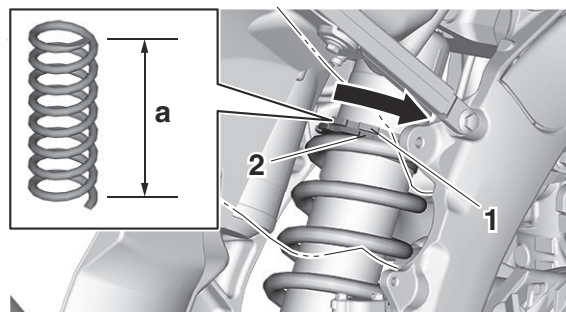

- d. Turn the adjuster in the direction of "b" or "c" to make an adjustment.

Direction "b"

Spring preload is increased (suspension is harder).

Direction "c"

Spring preload is decreased (suspension is softer).

**Spring preload adjusting positions****Minimum**

Position in which the spring is turned in 1.5 mm (0.06 in) from its free length.

Standard


Position in which the spring is turned in 7.0 mm (0.28 in) from its free length.

Maximum

Position in which the spring is turned in 18.0 mm (0.71 in) from its free length.

TIP

- Be sure to remove all dirt and mud from around the locknut and adjusting ring before adjustment.
- The length of the spring (installed) changes 1.5 mm (0.06 in) per turn of the adjusting ring.

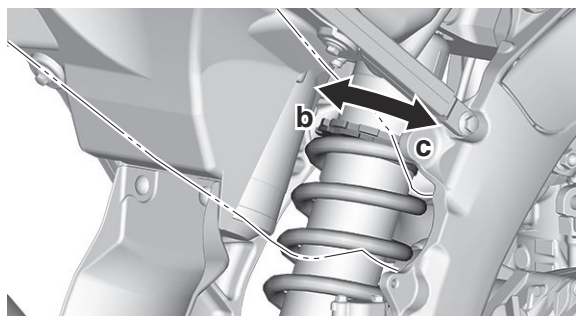

e. Tighten the locknut.

Rebound damping

ECA24370

NOTICE

Do not turn the adjuster forcibly beyond its adjusting range.

1. Adjust:

- Rebound damping
 - Turn the adjuster "1" in the direction of "a" or "b" to make an adjustment.

Direction "a"

Rebound damping is increased (suspension is harder).

Direction "b"

Rebound damping is decreased (suspension is softer).

**Rebound damping****Minimum (soft)**

30 click(s) in direction "b"*

Standard

10 click(s) in direction "b"*


Maximum (hard)

0 click(s) in direction "a"

*With the adjusting screw fully turned in direction "a"

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

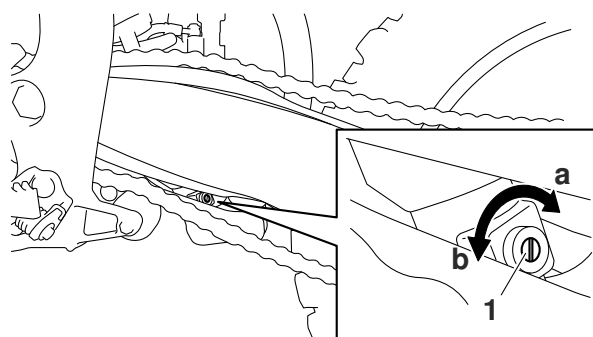**Compression damping (for fast compression damping)**

ECA24370

NOTICE

Do not turn the adjuster forcibly beyond its adjusting range.

1. Adjust:

- Compression damping (for fast compression damping)
 - Turn the adjuster "1" in the direction of "a" or "b" to make an adjustment.

Direction "a"

Compression damping is increased (suspension is harder).

Direction "b"


Compression damping is decreased (suspension is softer).



Fast compression damping
Minimum (soft)
 2 turn(s) in direction “b”^{*}
Standard
 1+1/4 turn(s) in direction “b”^{*}
Maximum (hard)
 0 turn(s) in direction “b”^{*}
^{*}With the adjusting screw fully turned in direction “a”

TIP

To obtain a precise adjustment, it is advisable to check the actual total number of turns of the damping force adjusting mechanism. This adjustment range may not exactly match the specifications listed due to small differences in production.

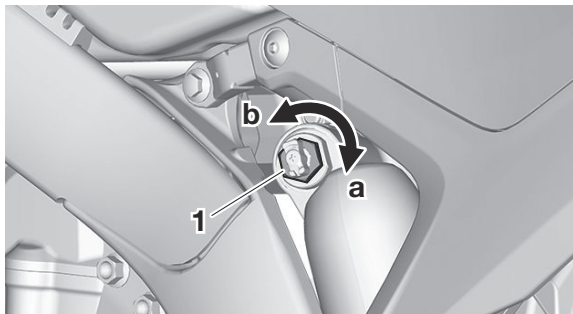

Compression damping (for slow compression damping)

ECA24390

NOTICE

Do not turn the adjuster forcibly beyond its adjusting range.

1. Adjust:
 - Compression damping (for slow compression damping)
 - a. Turn the adjuster “1” in the direction of “a” or “b” to make an adjustment.

Direction “a”

Compression damping is increased (suspension is harder).

Direction “b”


Compression damping is decreased (suspension is softer).



Slow compression damping
Minimum (soft)
 20 click(s) in direction “b”^{*}
Standard
 8 click(s) in direction “b”^{*}
Maximum (hard)
 0 click(s) in direction “b”^{*}
^{*}With the adjusting screw fully turned in direction “a”

TIP

Although the total number of clicks of a damping force adjusting mechanism may not exactly match the above specifications due to small differences in production, the actual number of clicks always represents the entire adjusting range. To obtain a precise adjustment, it would be advisable to check the number of clicks of each damping force adjusting mechanism and to modify the specifications as necessary.

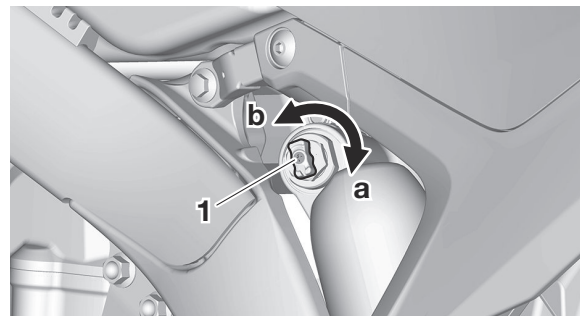

EAM30240

CHECKING THE SWINGARM OPERATION

1. Check:
 - Swingarm smooth action
 - Swingarm free play
 Refer to “SWINGARM” on page 4-70.

EAM30500

LUBRICATING THE SWINGARM PIVOT

1. Lubricate:
 - Oil seal
 - Collar



Recommended lubricant
Lithium-soap-based grease

Refer to “INSTALLING THE SWINGARM” on page 4-72.

EAM30501

CHECKING THE CONNECTING ARM AND RELAY ARM

Refer to “CHECKING THE CONNECTING ARM AND RELAY ARM” on page 4-67.

EAM30243

CHECKING THE TIRES

1. Measure:

- Tire pressure
Out of specification → Regulate.




Tire air pressure (measured on cold tires)

Front
100 kPa (1.00 kgf/cm², 15 psi)

Rear
100 kPa (1.00 kgf/cm², 15 psi)

TIP

- Check the tire while it is cold.
- Because if the bead stopper tightening nut is loose when the tire pressure is low, the tire could slip off the rim, thus be sure to check and tighten the bead stopper tightening nut “a”.
- If the tire valve stem “b” is found tilted, the tire is considered to be slipping off its position. Correct the tire position.

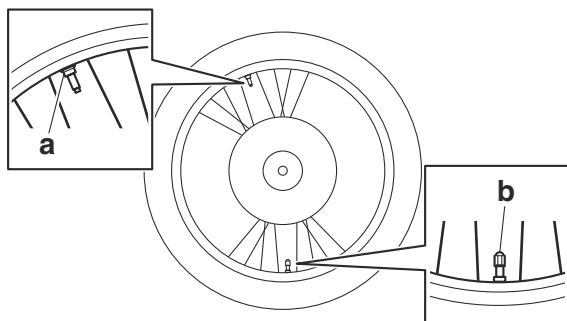


- a. Bead stopper tightening nut
b. Tire valve stem

EAM30244

CHECKING AND TIGHTENING THE SPOKES

1. Check:

- Spoke
Bend/damage → Replace.
Loose → Tighten.
Tap the spoke with a screwdriver.

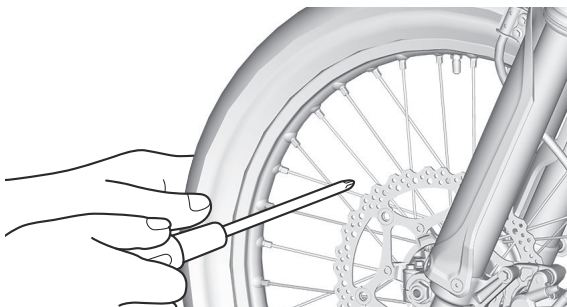


TIP

A tight spoke will emit a clear, ringing tone; a loose spoke will sound flat.

2. Tighten:

- Spoke
(with a spoke nipple wrench “1”)

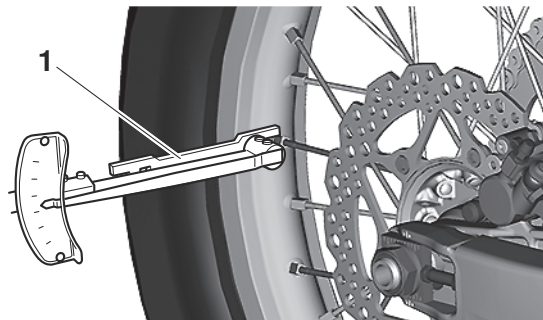

Spoke nipple wrench (6-7)
90890-01521
Spoke nipple wrench (6-7)
YM-01521



Spoke
2.5 N·m (0.25 kgf·m, 1.8 lb·ft)

TIP

- Do not give a half turn (180°) or more for one tightening.
- Make sure that tightening after a break-in is done until the initial looseness in nipples disappears.
- Make sure that tightening is done in stages, not at a time.

EAM30245

CHECKING THE WHEELS

1. Check:

- Wheel
Damage/out-of-round → Replace.

EWA13260



WARNING
Never attempt to make any repairs to the wheel.

EAM30246

CHECKING THE WHEEL BEARINGS

1. Check:

- Wheel bearing
Refer to “CHECKING THE FRONT WHEEL” on page 4-9 and “CHECKING THE REAR WHEEL” on page 4-14.

EAM30253

CHECKING THE CHASSIS FASTENERS

Make sure that all nuts, bolts, and screws are properly tightened.

Refer to “CHASSIS TIGHTENING TORQUES” on page 2-13.



Recommended lubricant
Lithium-soap-based grease

EAM30248

CHECKING AND LUBRICATING THE CABLES

The following procedure applies to all of the inner and outer cables.

EWA13270

**WARNING**

Damaged outer cable may cause the cable to corrode and interfere with its movement. Replace damaged outer cable and inner cables as soon as possible.

1. Check:
 - Outer cable
Damage → Replace.
2. Check:
 - Cable operation
Rough movement → Lubricate.



Recommended lubricant
Engine oil or a suitable cable lubricant

TIP

Hold the cable end upright and pour a few drops of lubricant into the cable sheath or use a suitable lubricating device.

EAM30483

LUBRICATING THE BRAKE LEVER

1. Lubricate the pivoting points and metal-to-metal moving parts of the following parts.
 - Brake lever



Recommended lubricant
Silicone grease

EAM30503

LUBRICATING THE CLUTCH LEVER

1. Lubricate the pivoting points and metal-to-metal moving parts of the following parts.
 - Clutch lever



Recommended lubricant
Lithium-soap-based grease

EAM30250

LUBRICATING THE PEDAL

1. Lubricate the pivoting point and metal-to-metal moving parts of the pedal.

EAM20137

ELECTRICAL SYSTEM

EAM30256

CHECKING AND CHARGING THE BATTERY

Refer to “CHECKING AND CHARGING THE BATTERY” on page 8-52.

EAM30505

CHECKING THE FUSES

Refer to “CHECKING THE FUSES” on page 8-52.

CHASSIS


GENERAL CHASSIS	4-1
REMOVING THE SEAT.....	4-4
REMOVING THE NUMBER PLATE.....	4-4
INSTALLING THE SHROUD.....	4-4
REMOVING THE SIDE COVER.....	4-5
INSTALLING THE SIDE COVER.....	4-5
INSTALLING THE DRIVE CHAIN TENSIONER (UPPER).....	4-5
 FRONT WHEEL	4-7
REMOVING THE FRONT WHEEL.....	4-9
DISASSEMBLING THE FRONT WHEEL.....	4-9
CHECKING THE FRONT WHEEL.....	4-9
ASSEMBLING THE FRONT WHEEL.....	4-9
INSTALLING THE FRONT WHEEL.....	4-10
 REAR WHEEL	4-12
REMOVING THE REAR WHEEL.....	4-14
DISASSEMBLING THE REAR WHEEL.....	4-14
CHECKING THE REAR WHEEL.....	4-14
CHECKING AND REPLACING THE REAR WHEEL SPROCKET.....	4-14
ASSEMBLING THE REAR WHEEL.....	4-15
INSTALLING THE REAR WHEEL.....	4-15
 FRONT BRAKE	4-17
INTRODUCTION.....	4-21
CHECKING THE FRONT BRAKE DISC.....	4-21
REPLACING THE FRONT BRAKE PADS.....	4-21
REMOVING THE FRONT BRAKE CALIPER.....	4-23
DISASSEMBLING THE FRONT BRAKE CALIPER.....	4-23
CHECKING THE FRONT BRAKE CALIPER.....	4-23
ASSEMBLING THE FRONT BRAKE CALIPER.....	4-23
INSTALLING THE FRONT BRAKE CALIPER.....	4-24
REMOVING THE FRONT BRAKE MASTER CYLINDER.....	4-25
CHECKING THE FRONT BRAKE MASTER CYLINDER.....	4-25
ASSEMBLING THE FRONT BRAKE MASTER CYLINDER.....	4-25
INSTALLING THE FRONT BRAKE MASTER CYLINDER.....	4-26
 REAR BRAKE	4-28
INTRODUCTION.....	4-33
CHECKING THE REAR BRAKE DISC.....	4-33
REPLACING THE REAR BRAKE PADS.....	4-33
REMOVING THE REAR BRAKE CALIPER.....	4-35
DISASSEMBLING THE REAR BRAKE CALIPER.....	4-35
CHECKING THE REAR BRAKE CALIPER.....	4-35
ASSEMBLING THE REAR BRAKE CALIPER.....	4-35
INSTALLING THE REAR BRAKE CALIPER.....	4-36
REMOVING THE REAR BRAKE MASTER CYLINDER.....	4-36
CHECKING THE REAR BRAKE MASTER CYLINDER.....	4-37

ASSEMBLING THE REAR BRAKE MASTER CYLINDER.....	4-37
INSTALLING THE REAR BRAKE MASTER CYLINDER.....	4-38
 HANDLEBAR	 4-39
REMOVING THE HANDLEBAR.....	4-41
CHECKING THE HANDLEBAR.....	4-41
INSTALLING THE HANDLEBAR.....	4-41
 FRONT FORK	 4-45
REMOVING THE FRONT FORK LEGS.....	4-47
DISASSEMBLING THE FRONT FORK LEGS.....	4-47
CHECKING THE FRONT FORK LEGS.....	4-48
ASSEMBLING THE FRONT FORK LEGS.....	4-49
INSTALLING THE FRONT FORK LEGS.....	4-55
 STEERING HEAD	 4-58
REMOVING THE LOWER BRACKET.....	4-60
CHECKING THE STEERING HEAD.....	4-60
INSTALLING THE STEERING HEAD.....	4-60
 REAR SHOCK ABSORBER ASSEMBLY	 4-63
HANDLING THE REAR SHOCK ABSORBER.....	4-66
DISPOSING OF A REAR SHOCK ABSORBER.....	4-66
REMOVING THE REAR SHOCK ABSORBER ASSEMBLY.....	4-66
CHECKING THE REAR SHOCK ABSORBER ASSEMBLY.....	4-66
CHECKING THE CONNECTING ARM AND RELAY ARM.....	4-67
INSTALLING THE RELAY ARM.....	4-67
INSTALLING THE CONNECTING ARM.....	4-67
INSTALLING THE REAR SHOCK ABSORBER ASSEMBLY.....	4-68
 SWINGARM	 4-70
REMOVING THE SWINGARM.....	4-72
CHECKING THE SWINGARM.....	4-72
INSTALLING THE SWINGARM.....	4-72
 CHAIN DRIVE	 4-74
REMOVING THE DRIVE CHAIN.....	4-75
CHECKING THE DRIVE CHAIN.....	4-75
CHECKING THE DRIVE SPROCKET.....	4-76
CHECKING THE REAR WHEEL SPROCKET.....	4-76
INSTALLING THE DRIVE CHAIN.....	4-76

EAM20094


GENERAL CHASSIS

Removing the seat and battery

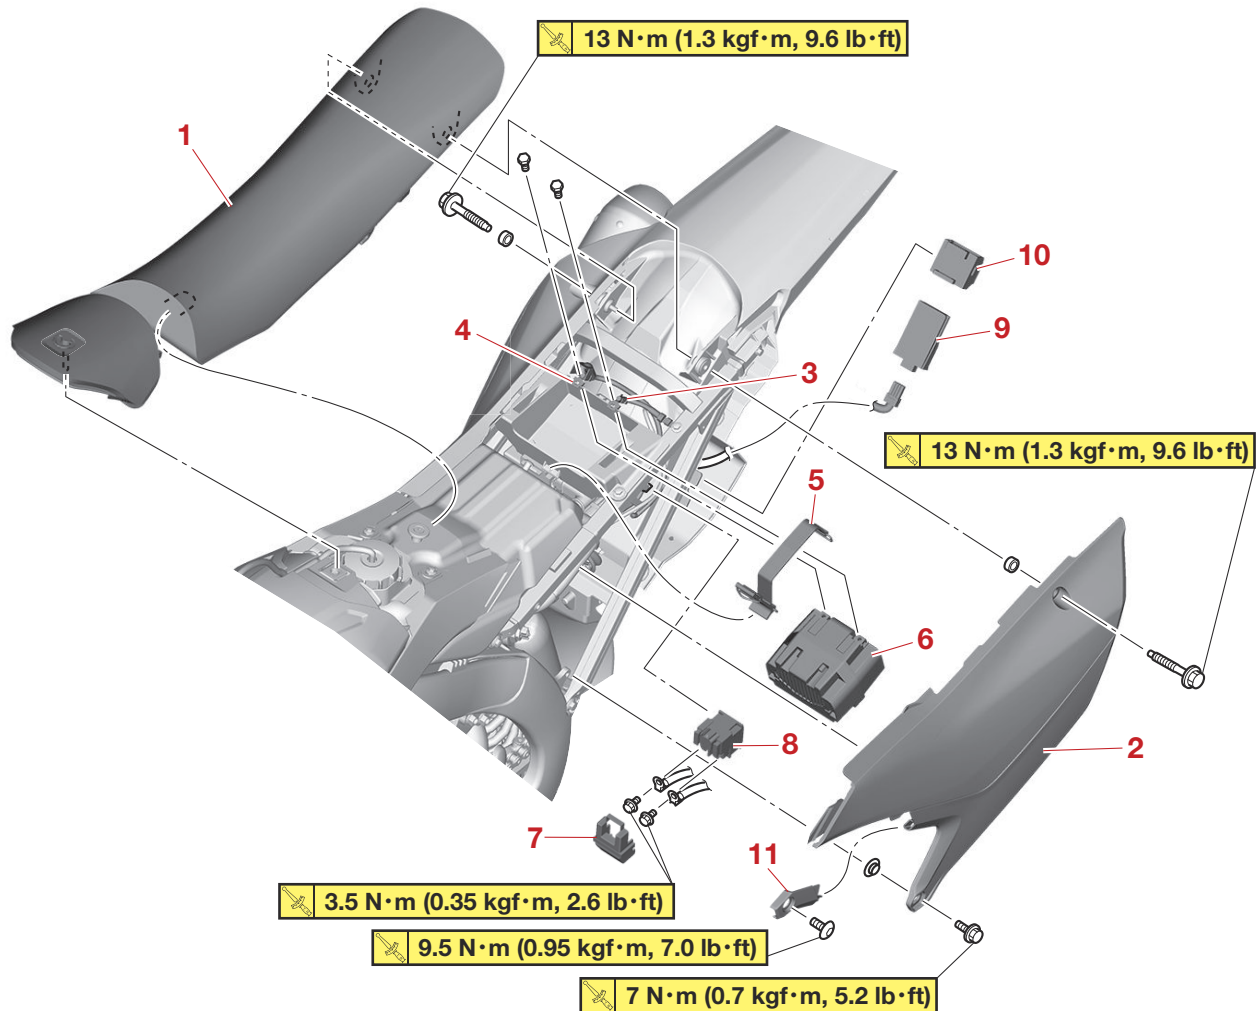


Order	Job/Parts to remove	Q'ty	Remarks
1	Seat	1	
2	Side cover (left)	1	
3	Negative battery lead	1	Disconnect.
4	Positive battery lead	1	Disconnect.
5	Battery band	1	
6	Battery	1	
7	Cover	1	
8	Starter relay	1	
9	CCU (Communication Control Unit)	1	
10	Holder	1	
11	Center side cover (left)	1	

Removing the side cover

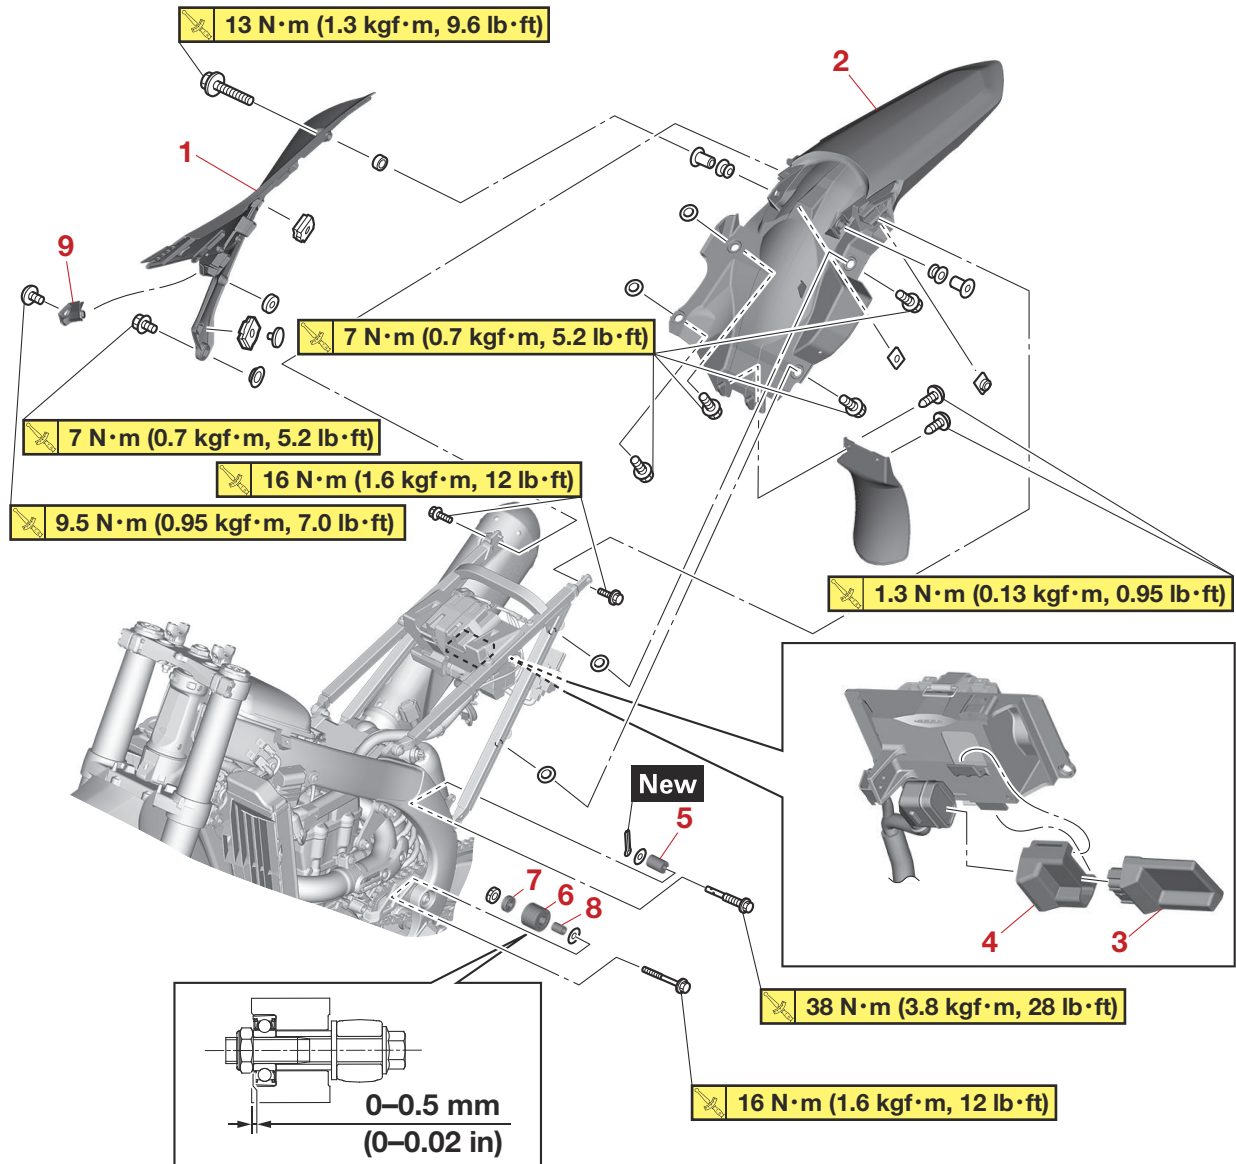

Order	Job/Parts to remove	Q'ty	Remarks
1	Side cover (right)	1	
2	Rear fender	1	
3	ECU (Engine Control Unit)	1	
4	Holder	1	
5	Drive chain tensioner (upper)	1	
6	Drive chain tensioner (lower)	1	
7	Bearing	1	
8	Collar	1	
9	Center side cover (right)	1	

Removing the shroud

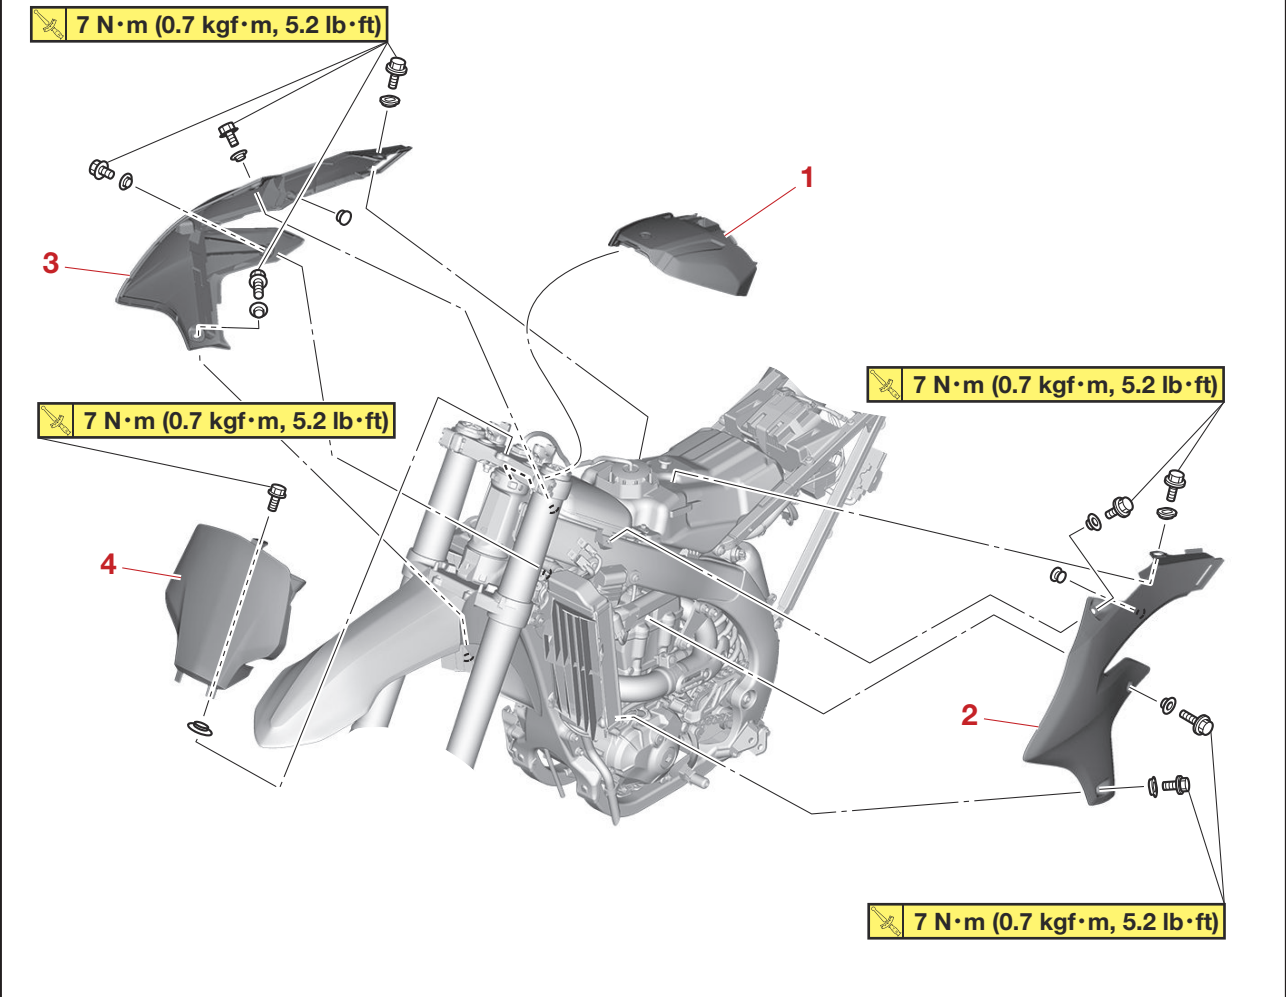

Order	Job/Parts to remove	Q'ty	Remarks
1	Air filter case cover	1	Refer to "CLEANING THE AIR FILTER ELEMENT" on page 3-17.
2	Shroud (left)	1	
3	Shroud (right)	1	
4	Number plate	1	

EAM30016

REMOVING THE SEAT

TIP


The sub-seat and the seat are coupled with each other with a plastic band.

When removing the seat, always remove the sub-seat beforehand.

1. Remove:


- Sub-seat "1"

Refer to "FUEL TANK CAP" on page 1-26.

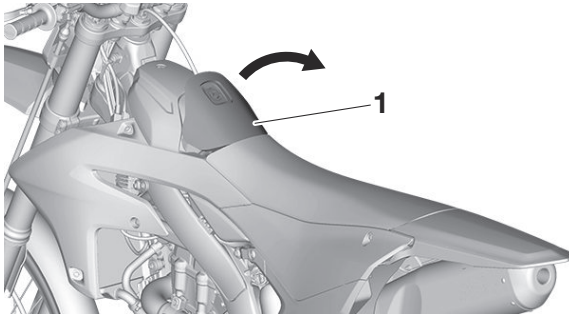

2. Remove:


- Seat "1"

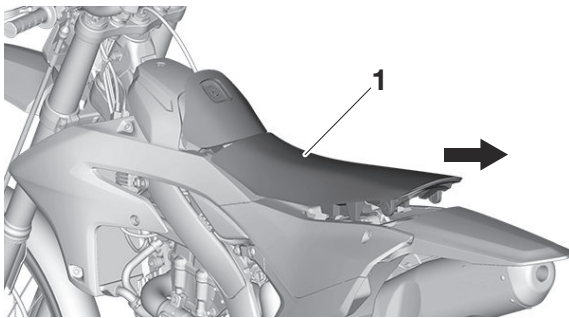

3. Check:

- Damper "1"

Damage/wear/detachment → Replace.

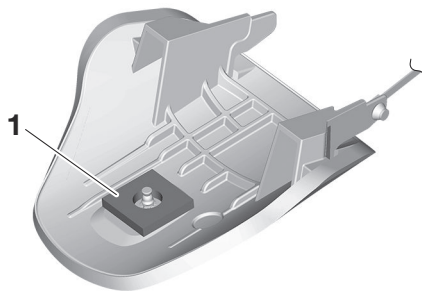


4. Replace:

- Damper "1"

TIP

Install a new damper to the original position by aligning it with the scribe line "a".

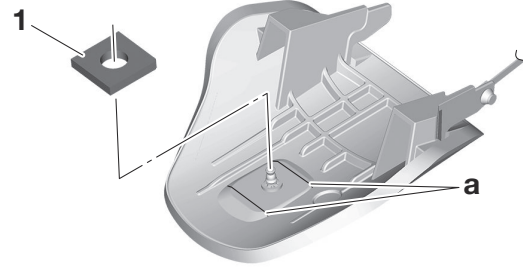

EAM30371

REMOVING THE NUMBER PLATE


1. Remove:

- Bolt (number plate)
- Number plate "1"

TIP

• Remove the brake hose "2" from the upper guide "a" and the lower guide "b" on the number plate.

• The projection "c" on the number plate is inserted into the front fender. Remove the number plate by pulling it off the front fender.

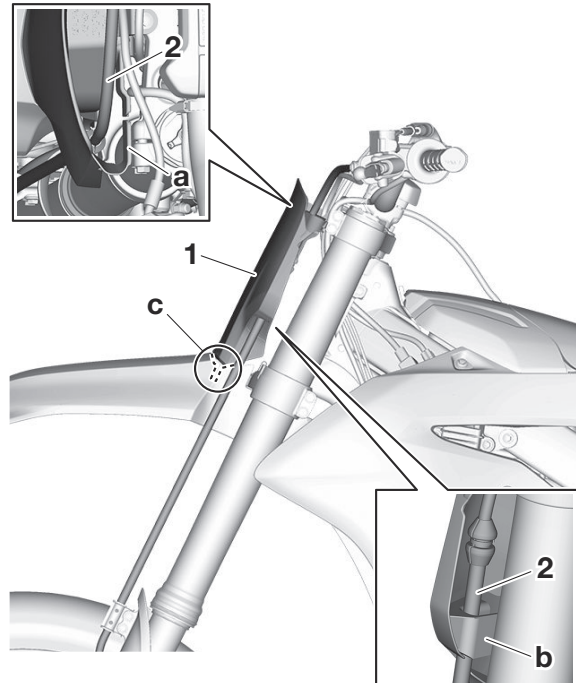

EAM30640


INSTALLING THE SHROUD

1. Install:

- Shroud (left "1"/right)

TIP

Insert the projection "a" on the radiator guard (left/right) into the hole "b" in the shroud (left/right), install the shroud, and then secure it with the bolts.

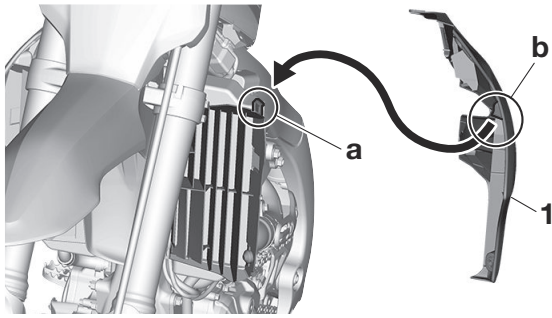

EAM30459


REMOVING THE SIDE COVER

1. Remove:

- Side cover (right) "1"

TIP

Remove the side cover (right) from the vehicle by removing the bolts and sliding it as shown.

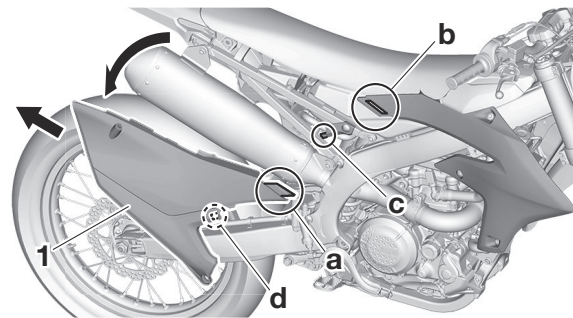

- a. Projection (upper)
- b. Slot (upper)
- c. Projection (lower)
- d. Slot (lower)

EAM30460


INSTALLING THE SIDE COVER

1. Install:

- Side cover (right) "1"

TIP

- Install the side cover (right) by sliding it as shown and secure it with the bolts to fit it to the vehicle.
- Install the side cover (right) so that the rib is located under the rib of the rear fender.

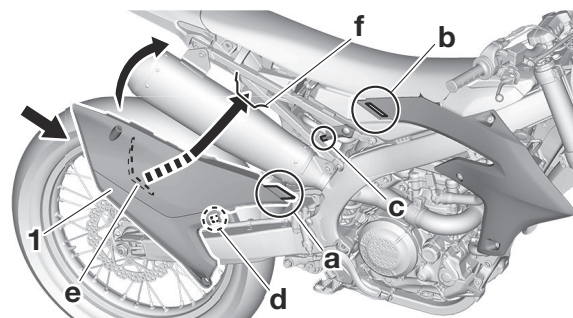

- a. Projection (upper)
- b. Slot (upper)
- c. Projection (lower)
- d. Slot (lower)
- e. Rib (side cover)
- f. Rib (rear fender)

EAM30669

INSTALLING THE DRIVE CHAIN TENSIONER (UPPER)

1. Install:


- Rear frame bolt "1"



Rear frame bolt
38 N·m (3.8 kgf·m, 28 lb·ft)

TIP

Install the front frame "2" to the rear frame "3" using the rear frame bolt.

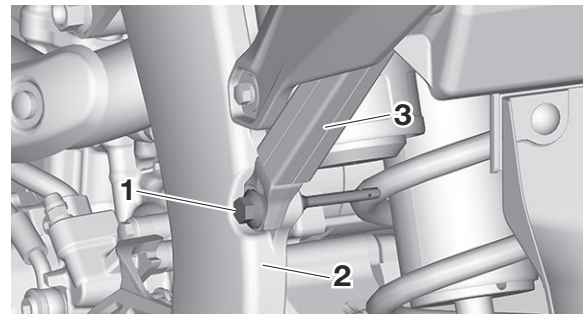


2. Install:

- Drive chain tensioner (upper) "1"
- Washer "2"
- Pin "3" **New**

TIP


- When inserting the pin into the pin hole of the rear frame bolt, insert it into the pin hole "a" on the outside of the vehicle. However, if assembly is difficult, it is possible to insert it into the pin hole "b" on the inside of the vehicle.
- The tip of the bent pin should not protrude from the outside diameter of the drive chain tensioner (upper).
- It does not matter if the tip of the pin "c" is away from the rear frame bolt.

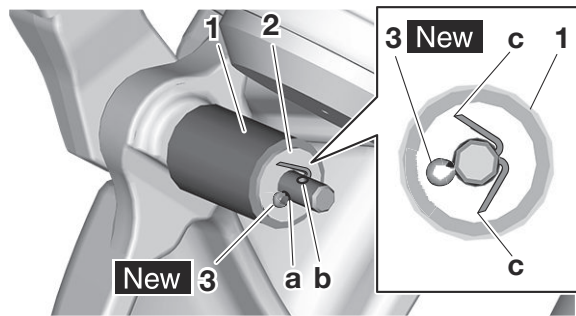

EAM20095


FRONT WHEEL

Removing the front wheel

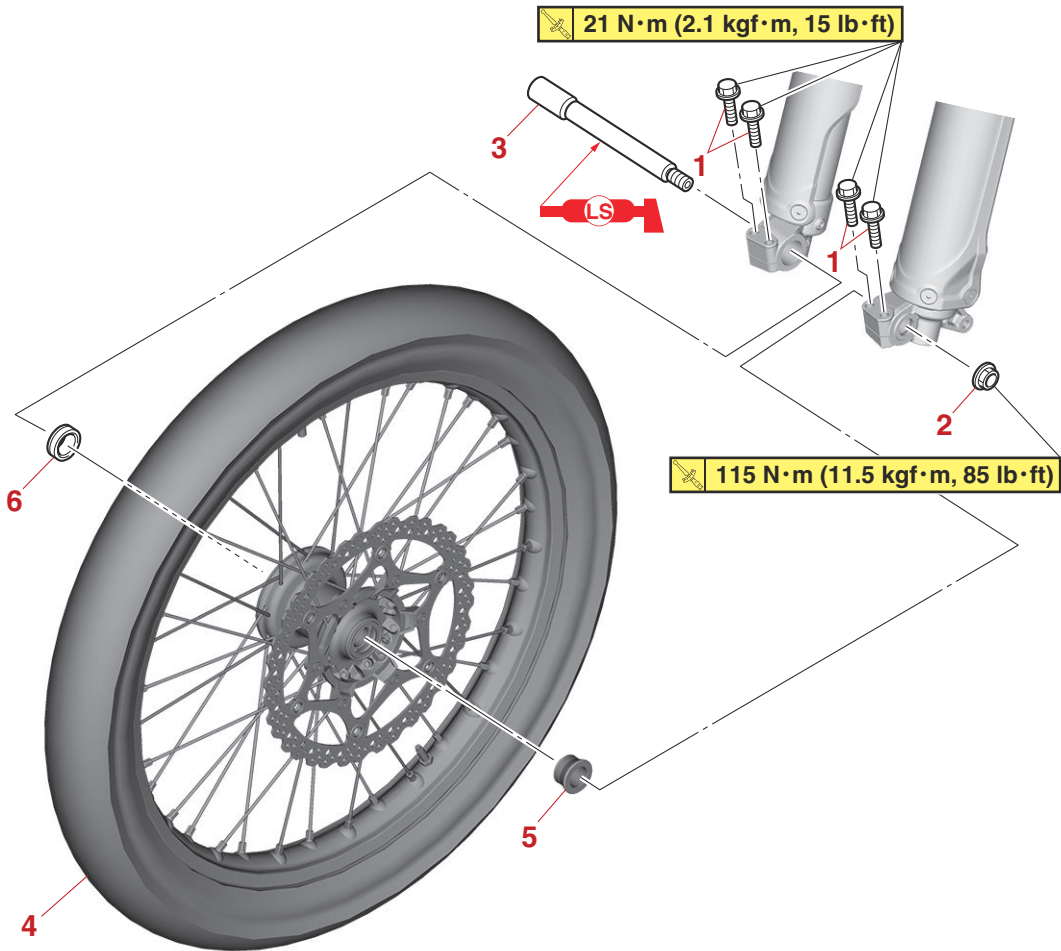

Order	Job/Parts to remove	Q'ty	Remarks
			Use a maintenance stand to raise the front wheel off the ground.
1	Front wheel axle pinch bolt	4	Loosen.
2	Front wheel axle nut	1	
3	Front wheel axle	1	
4	Front wheel	1	
5	Collar (left)	1	
6	Collar (right)	1	

Disassembling the front wheel

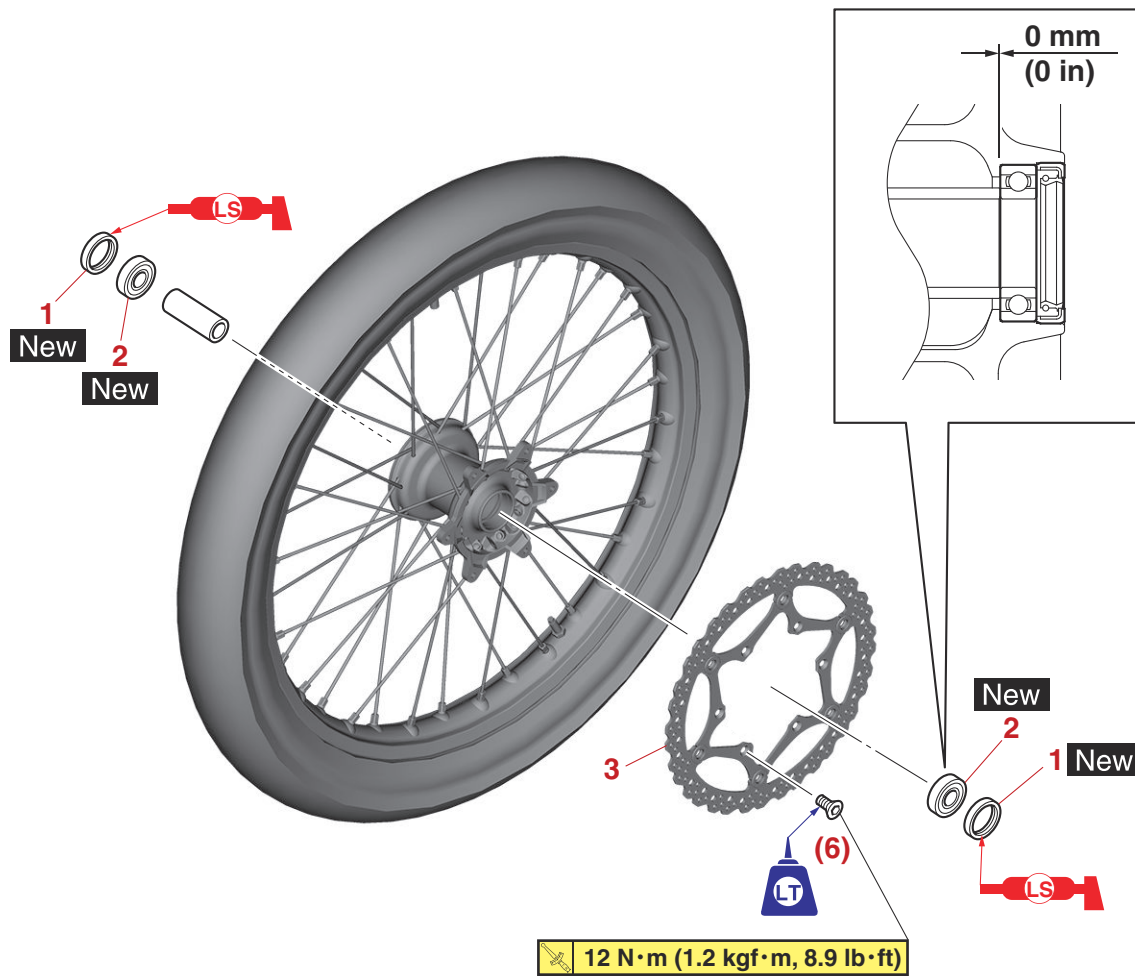

Order	Job/Parts to remove	Q'ty	Remarks
1	Oil seal	2	
2	Bearing	2	
3	Brake disc	1	

EAM30017

REMOVING THE FRONT WHEEL

1. Use a maintenance stand to raise the front wheel off the ground.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Remove:
 - Front wheel


EAM30019

DISASSEMBLING THE FRONT WHEEL

1. Remove:
 - Oil seal
 - Bearing
 - a. Clean the outside of the front wheel hub.
 - b. Remove the oil seals “1” with a flat-head screwdriver.

TIP

To prevent damaging the wheel, place a rag “2” between the screwdriver and the wheel surface.

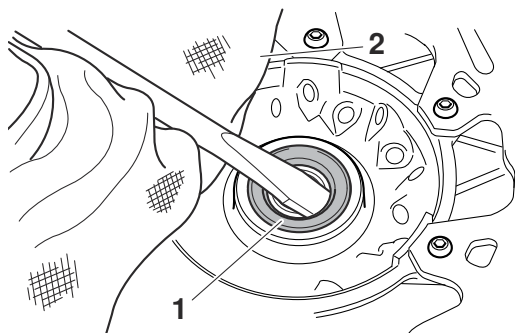

- c. Remove the bearings with a bearing puller.

EAM30018

CHECKING THE FRONT WHEEL

1. Check:
 - Front wheel axle
 - Roll the front wheel axle on a flat surface.
 - Bends → Replace.

EWA13460

WARNING

Do not attempt to straighten a bent wheel axle.

2. Check:
 - Tire
 - Front wheel
 - Damage/wear → Replace.
 - Refer to “CHECKING THE TIRES” on page 3-34 and “CHECKING THE WHEELS” on page 3-34.

3. Check:
 - Spoke
 - Refer to “CHECKING AND TIGHTENING THE SPOKES” on page 3-34.
4. Tighten:
 - Spoke
 - Refer to “CHECKING AND TIGHTENING THE SPOKES” on page 3-34.




Spoke
2.5 N·m (0.25 kgf·m, 1.8 lb·ft)

TIP

After tightening the spokes, measure the wheel runout.

5. Measure:
 - Radial wheel runout “a”
 - Lateral wheel runout “b”
 - Out of specification → Repair/replace.

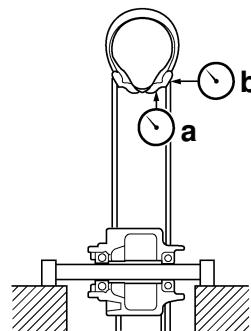

Radial wheel runout limit
2.0 mm (0.08 in)
Lateral wheel runout limit
2.0 mm (0.08 in)

6. Check:
 - Collar
 - Damage/wear → Replace.
7. Check:
 - Bearing
 - Front wheel turns roughly or is loose → Replace the wheel bearings.
 - Oil seal
 - Damage/wear → Replace.

EAM30020

ASSEMBLING THE FRONT WHEEL

1. Install:
 - Bearing (left side) “1” **New**
 - Spacer “2”
 - Bearing (right side) “3” **New**
 - Oil seal “4” **New**

TIP


- Apply the lithium-soap-based grease to the oil seal lip when installing.

- Left side of bearing shall be installed first.
- Install the oil seal with its manufacture's marks or numbers facing outward.

ECA24420


NOTICE

Install the bearing by pressing its outer race parallel.

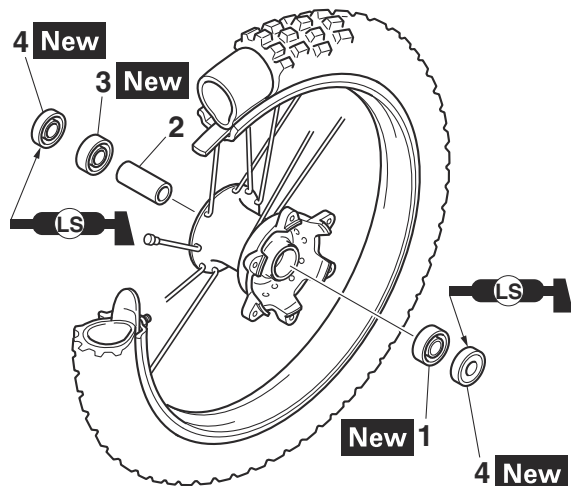

TIP

Use a socket "5" that matches the diameter of the bearing outer race and that of the oil seal.

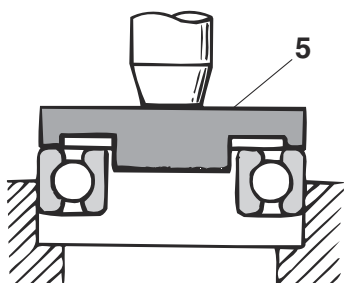

2. Install:

- Brake disc
- Brake disc bolt



Brake disc bolt
12 N·m (1.2 kgf·m, 8.9 lb·ft)
LOCTITE®

TIP


Tighten the bolts in stages and in a crisscross pattern.

3. Install:

- Collar "1"

TIP

Apply the lithium-soap-based grease on the oil seal lip.

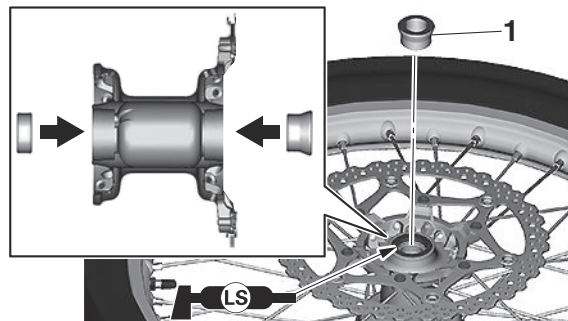

EAM30617


INSTALLING THE FRONT WHEEL

1. Install:

- Front wheel

TIP

Install the brake disc "1" between the brake pads "2" correctly.

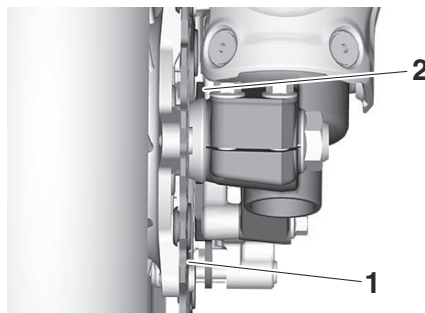


2. Install:

- Front wheel axle "1"

TIP

Apply the lithium-soap-based grease to the front wheel axle.

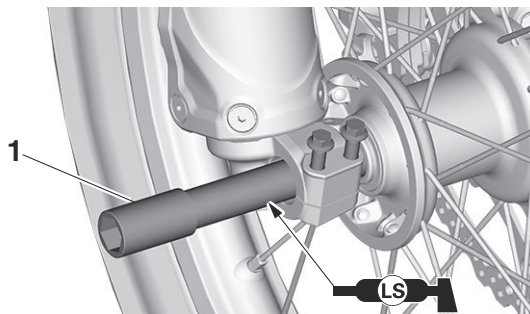

3. Tighten:

- Front wheel axle nut "1"




Front wheel axle nut
115 N·m (11.5 kgf·m, 85 lb·ft)

ECA24430

NOTICE

Before tightening the front wheel axle nut, push down hard on the handlebar(s) several times and check if the front fork rebounds smoothly.

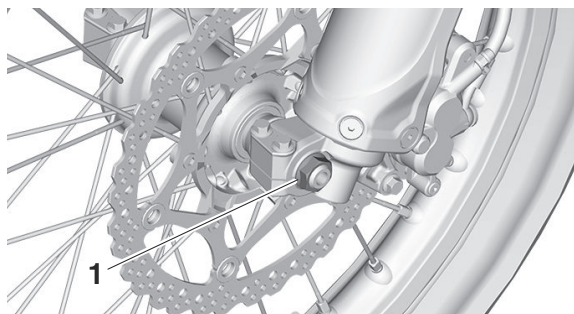

4. Tighten:

- Front wheel axle pinch bolt “1”




Front wheel axle pinch bolt
21 N·m (2.1 kgf·m, 15 lb·ft)



REAR WHEEL

Removing the rear wheel

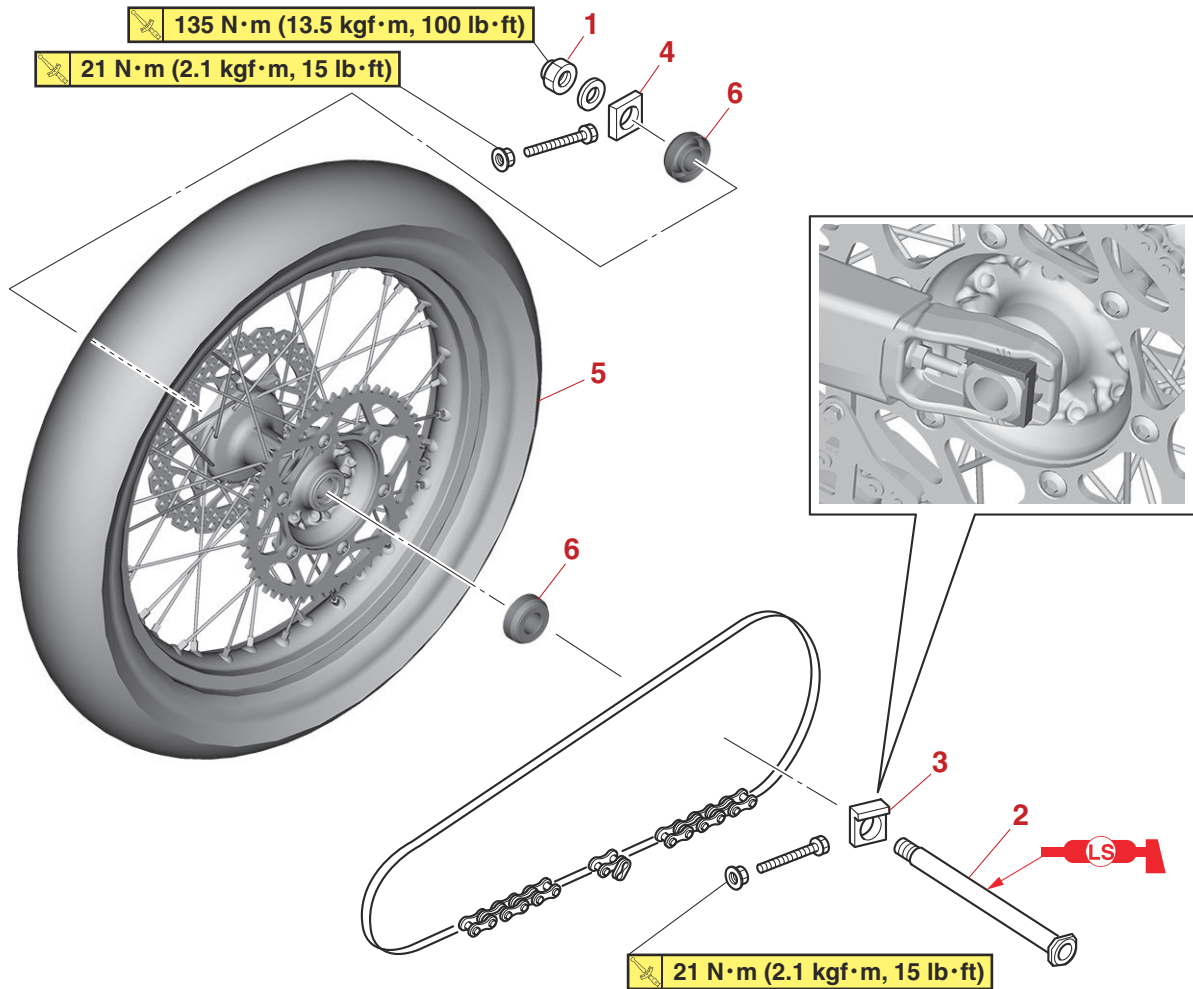

Order	Job/Parts to remove	Q'ty	Remarks
			Use a maintenance stand to raise the rear wheel off the ground.
1	Rear wheel axle nut	1	
2	Rear wheel axle	1	
3	Drive chain puller (left)	1	
4	Drive chain puller (right)	1	
5	Rear wheel	1	
6	Collar	2	

EAM30022

REMOVING THE REAR WHEEL


1. Use a maintenance stand to raise the rear wheel off the ground.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Remove:
 - Rear wheel axle nut “1”
3. Loosen:
 - Locknut “2”
4. Tighten:
 - Adjusting bolt “3”

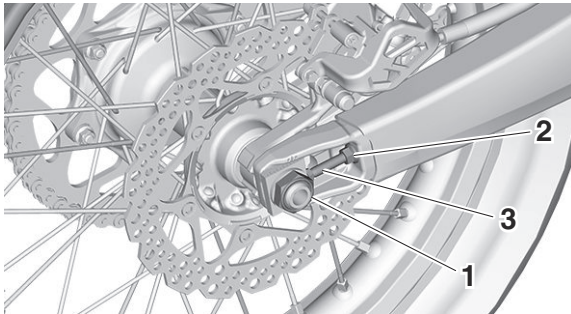

5. Remove:
 - Rear wheel axle
 - Rear wheel

TIP

- Push the rear wheel forward and remove the drive chain from the rear wheel sprocket.
- Do not depress the brake pedal with the rear wheel removed.

EAM30024

DISASSEMBLING THE REAR WHEEL

1. Remove:
 - Oil seal
 - Bearing

Refer to “DISASSEMBLING THE FRONT WHEEL” on page 4-9.

EAM30023

CHECKING THE REAR WHEEL

1. Check:
 - Rear wheel axle
 - Rear wheel
 - Bearing
 - Oil seal

Refer to “CHECKING THE FRONT WHEEL” on page 4-9.
2. Check:
 - Tire
 - Rear wheel

Damage/wear → Replace.

Refer to “CHECKING THE TIRES” on page 3-34 and “CHECKING THE WHEELS” on page 3-34.

3. Check:

- Spoke
- Refer to “CHECKING AND TIGHTENING THE SPOKES” on page 3-34.

4. Measure:

- Radial wheel runout
- Lateral wheel runout

Refer to “CHECKING THE FRONT WHEEL” on page 4-9.



Radial wheel runout limit
2.0 mm (0.08 in)
Lateral wheel runout limit
2.0 mm (0.08 in)

EAM30025


CHECKING AND REPLACING THE REAR WHEEL SPROCKET

1. Check:

- Rear wheel sprocket

More than 1/4 tooth wear “a” → Replace the rear wheel sprocket and the drive sprocket as a set.

Bent tooth → Replace the rear wheel sprocket and the drive sprocket as a set.

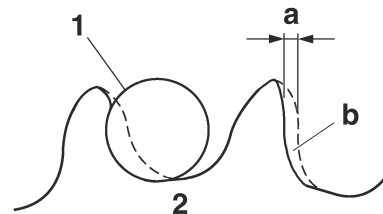

- b. Correct

1. Drive chain roller
2. Rear wheel sprocket

2. Replace:

- Rear wheel sprocket

- a. Remove the self-locking nuts and the rear wheel sprocket.
- b. Clean the rear wheel drive hub with a clean cloth, especially the surfaces that contact the sprocket.
- c. Install the new rear wheel sprocket.



Rear wheel sprocket self-locking nut
42 N·m (4.2 kgf·m, 31 lb·ft)

TIP

Tighten the self-locking nuts in stages and in a crisscross pattern.

EAM30026

ASSEMBLING THE REAR WHEEL

1. Install:

- Bearing (right side) “1” **New**
- Circlip “2” **New**
- Spacer “3”
- Bearing (left side) “4” **New**
- Oil seal “5” **New**


TIP

- Apply the lithium-soap-based grease to the oil seal lip when installing.
- Right side of bearing shall be installed first.
- Install the oil seal with its manufacture’s marks or numbers facing outward.

ECA24440


NOTICE

Install the bearing by pressing its outer race parallel.

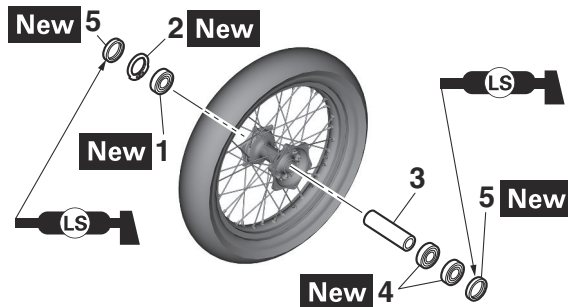

TIP

Use a socket “6” that matches the diameter of the bearing outer race and that of the oil seal.

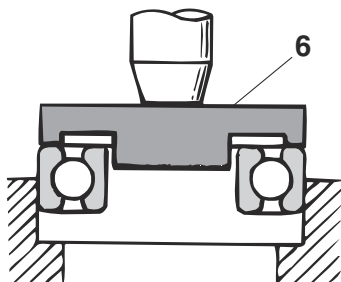

2. Install:

- Brake disc
- Brake disc bolt



Brake disc bolt
12 N·m (1.2 kgf·m, 8.9 lb·ft)
LOCTITE®

TIP


Tighten the bolts in stages and in a crisscross pattern.

3. Install:

- Collar “1”

TIP

Apply the lithium-soap-based grease on the oil seal lip.

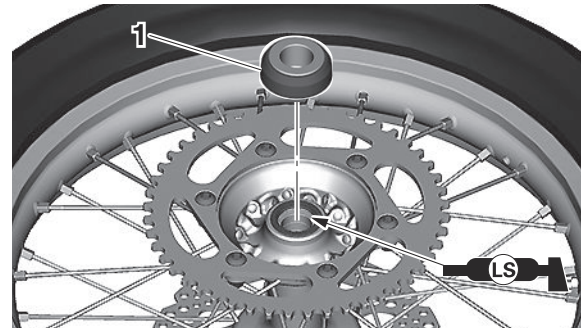

EAM30027


INSTALLING THE REAR WHEEL

1. Install:

- Rear wheel

TIP

Install the brake disc “1” between the brake pads “2” correctly.

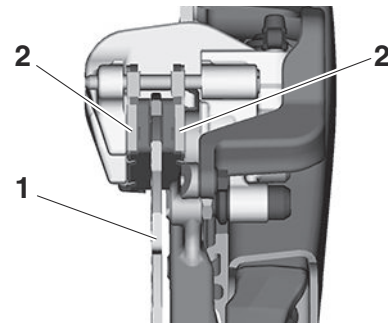


2. Install:

- Drive chain “1”

TIP

Push the rear wheel “2” forward and install the drive chain.

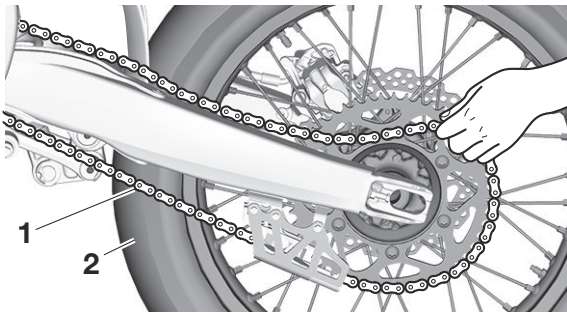


3. Install:

- Drive chain puller (left) “1”
- Rear wheel axle “2”

TIP

- Install the drive chain puller (left), and insert the rear wheel axle from the left side.
- Apply the lithium-soap-based grease to the rear wheel axle.

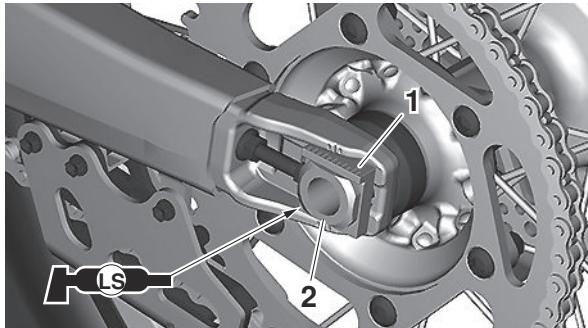


4. Install:

- Drive chain puller (right) “1”
- Washer “2”
- Rear wheel axle nut “3”

TIP

Temporarily tighten the rear wheel axle nut at this point.

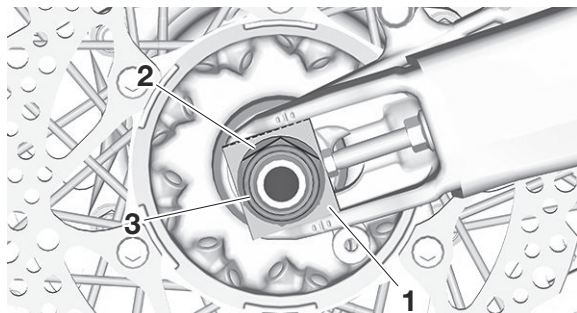

5. Adjust:


- Drive chain slack “a”



Drive chain slack (Maintenance Stand)
50.0–60.0 mm (1.97–2.36 in)

Refer to “DRIVE CHAIN SLACK” on page

3-27.

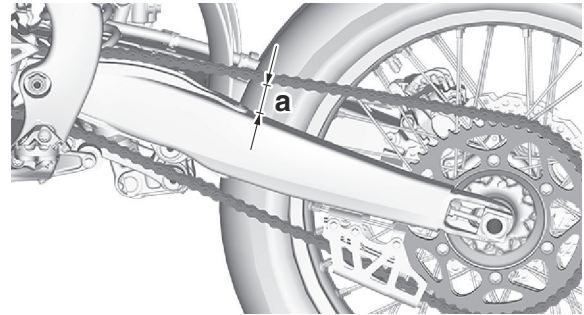

6. Tighten:

- Rear wheel axle nut “1”




Rear wheel axle nut
135 N·m (13.5 kgf·m, 100 lb·ft)

- Locknut “2”




Locknut
21 N·m (2.1 kgf·m, 15 lb·ft)

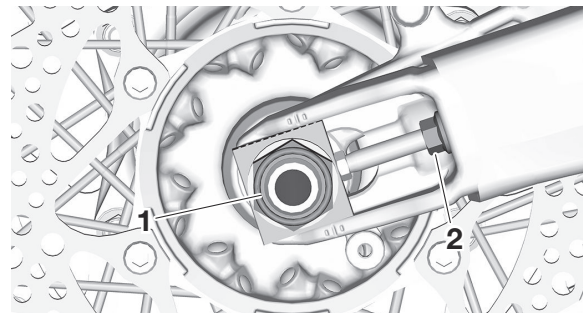

EAM20097


FRONT BRAKE

Removing the front brake caliper

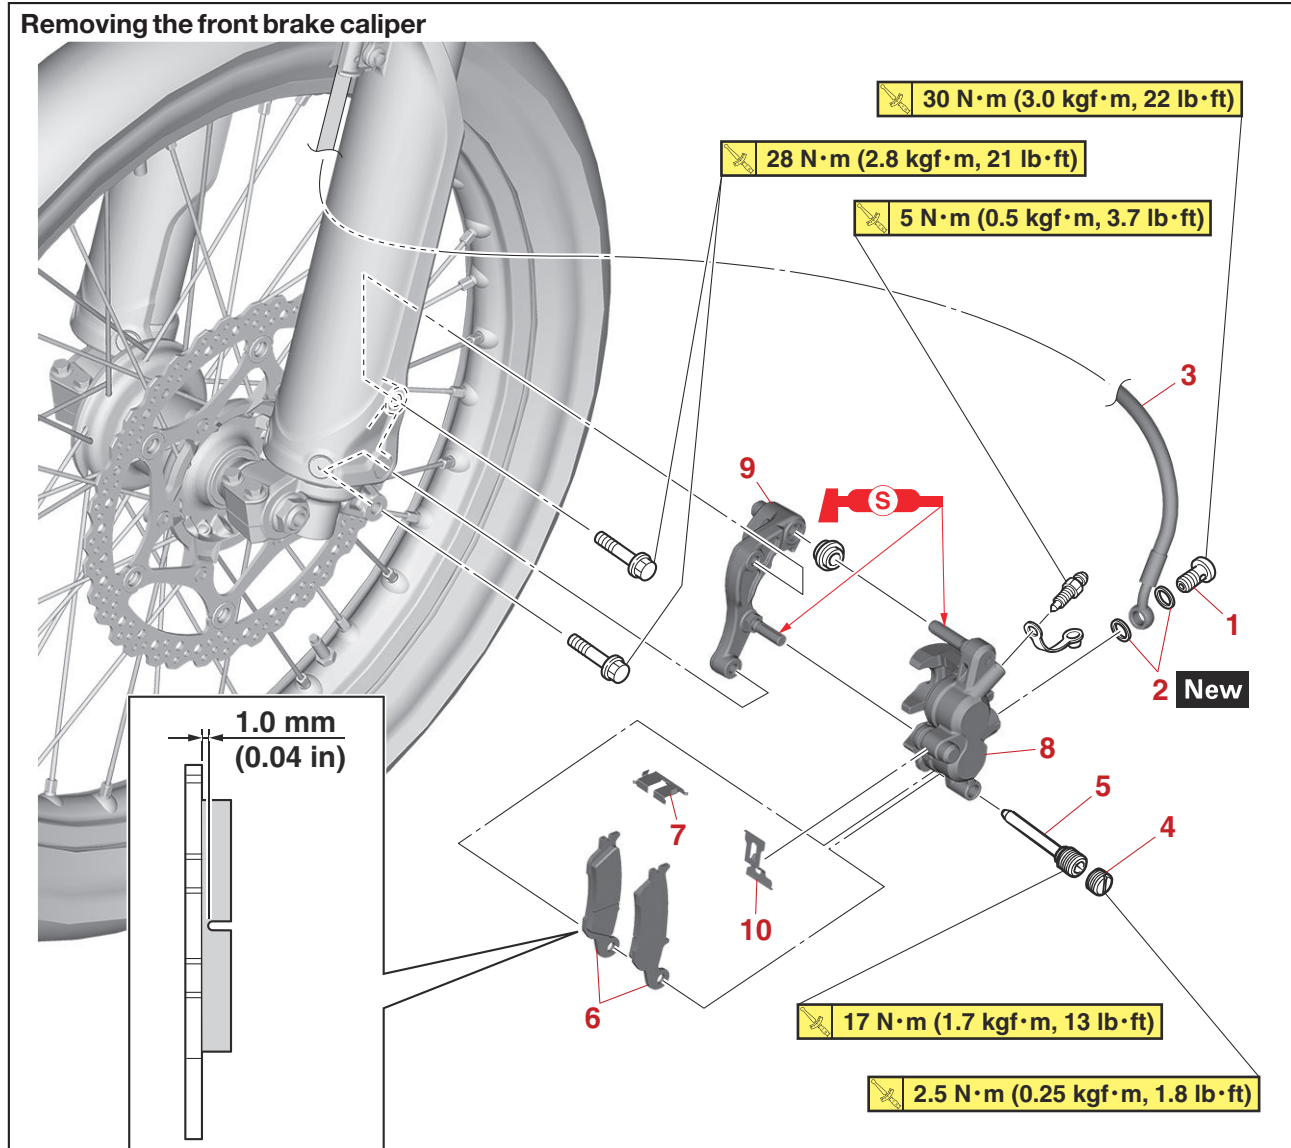


Order	Job/Parts to remove	Q'ty	Remarks
	Brake fluid		Drain. Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" on page 3-26.
1	Union bolt	1	
2	Copper washer	2	
3	Front brake hose	1	
4	Brake pad pin plug	1	
5	Brake pad pin	1	
6	Brake pad	2	
7	Brake pad spring	1	
8	Front brake caliper assembly	1	
9	Front brake caliper bracket	1	
10	Brake pad spring	1	

Disassembling the front brake caliper

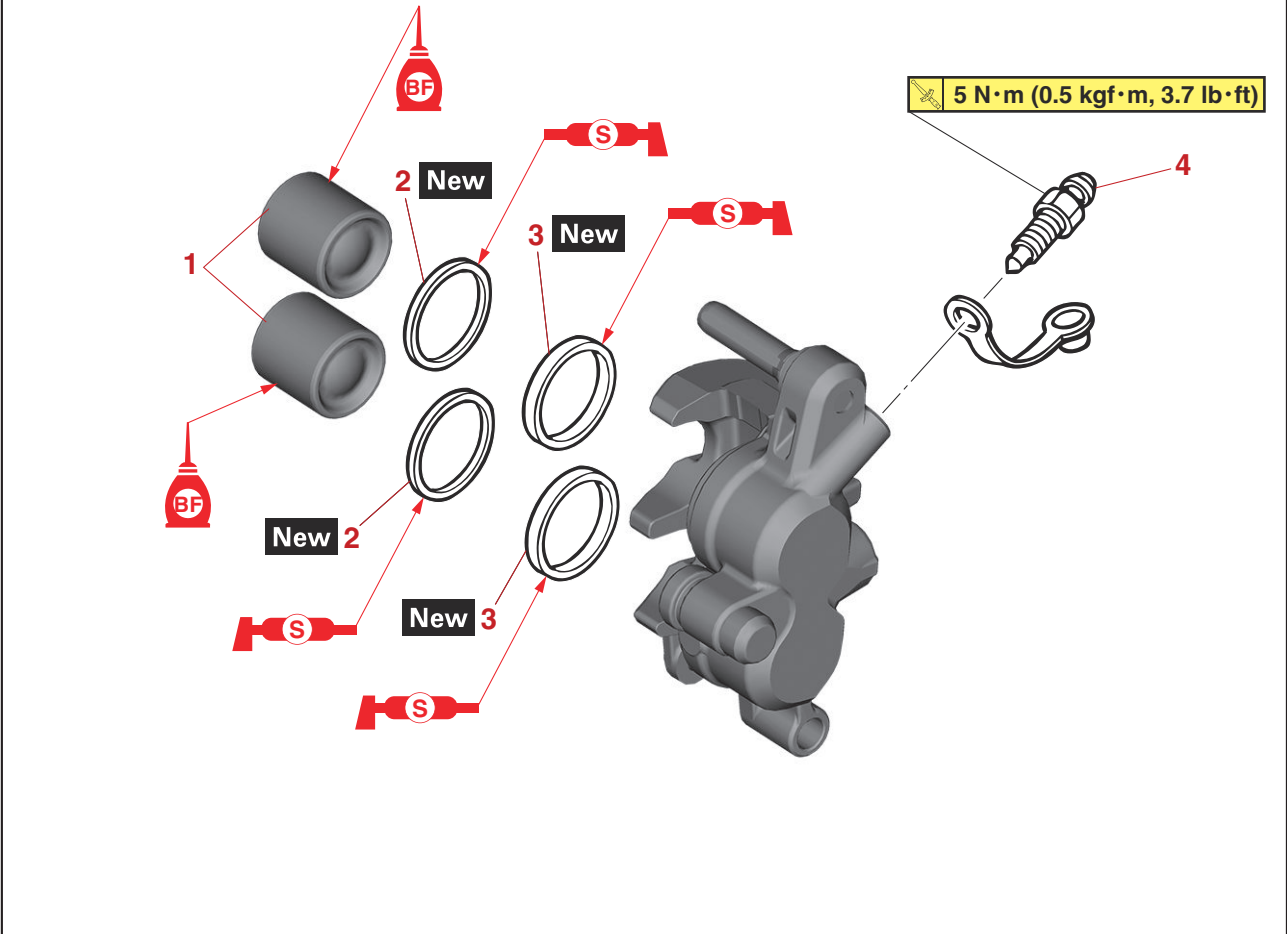


Order	Job/Parts to remove	Q'ty	Remarks
1	Brake caliper piston	2	
2	Brake caliper piston dust seal	2	
3	Brake caliper piston seal	2	
4	Bleed screw	1	

Removing the front brake master cylinder

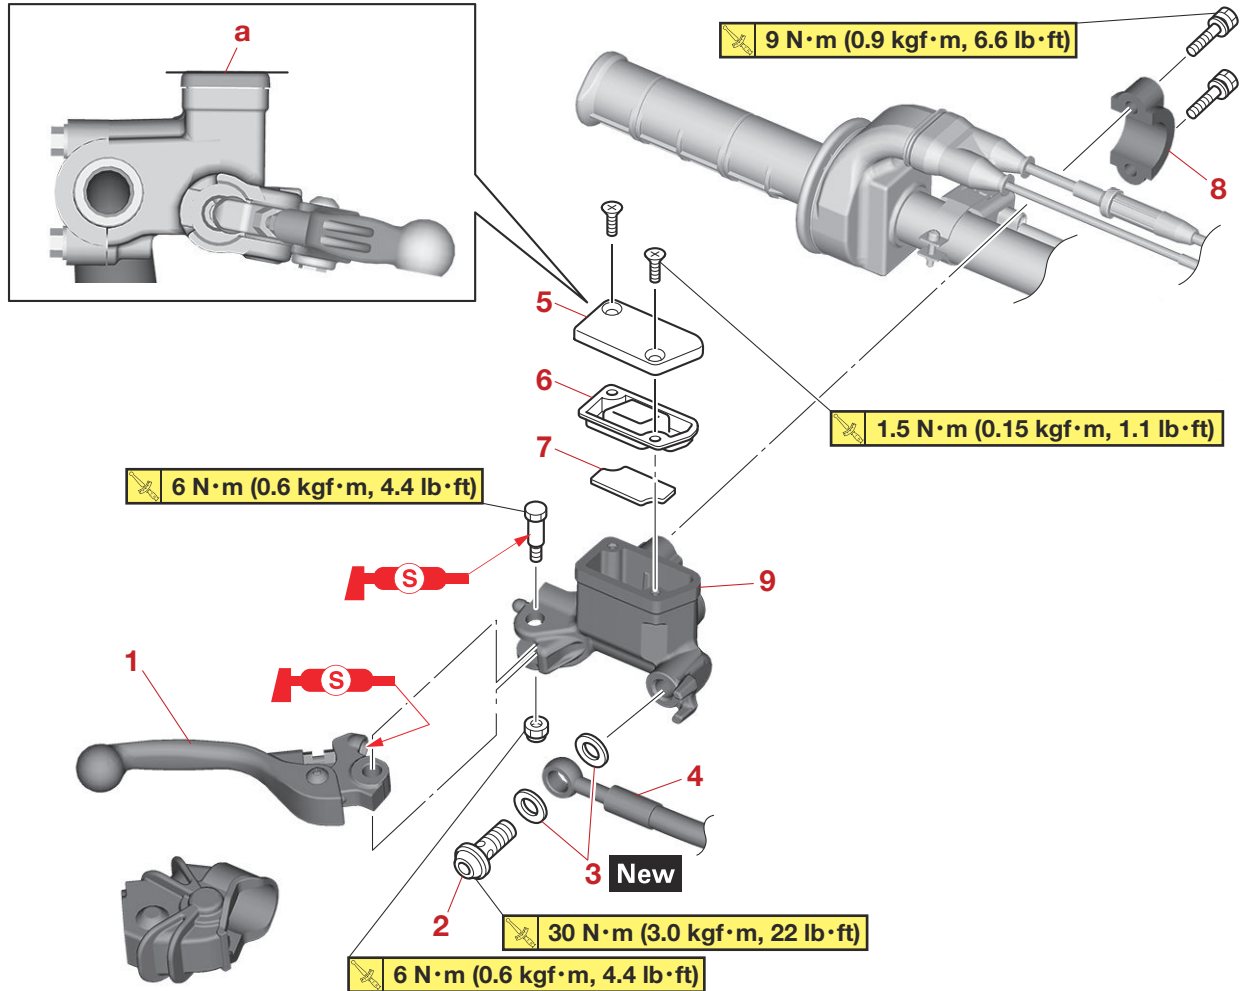

Order	Job/Parts to remove	Q'ty	Remarks
	Brake fluid		Drain. Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" on page 3-26.
1	Brake lever	1	
2	Union bolt	1	
3	Copper washer	2	
4	Front brake hose	1	
5	Brake master cylinder reservoir cap	1	Adjust the front brake master cylinder so that the top "a" of the brake master cylinder reservoir cap is horizontal.
6	Brake master cylinder reservoir diaphragm	1	
7	Front brake master cylinder float	1	
8	Front brake master cylinder holder	1	
9	Front brake master cylinder	1	

Disassembling the front brake master cylinder

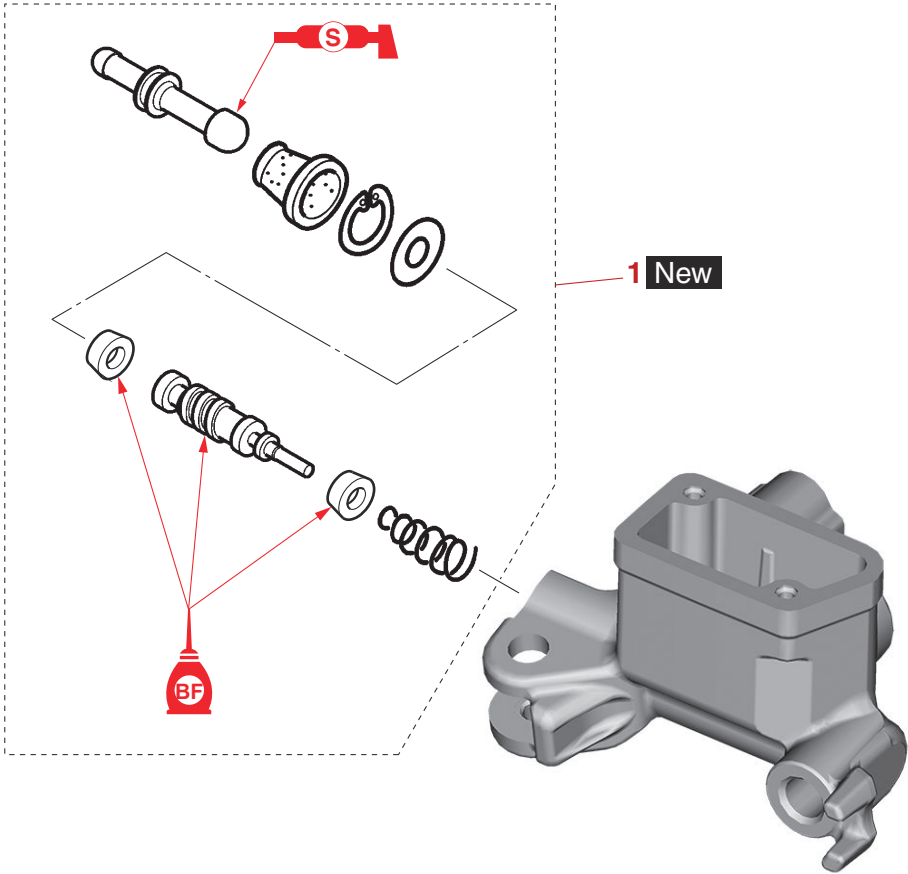

Order	Job/Parts to remove	Q'ty	Remarks
1	Brake master cylinder kit	1	

EAM30028

INTRODUCTION

EWA19210

WARNING

If you need to disassemble the disc brake components, observe the following precautions.

- Never disassemble the brake components unless absolutely necessary.
- If there is any problem with connections on the hydraulic brake system, perform the following jobs. Disassemble the brake system, drain the brake fluid, and clean it. After that, add a suitable amount of brake fluid. Then, bleed it after reassembly.
- Use only brake fluid for washing brake components.
- Use new brake fluid for cleaning the brake components.
- Immediately wipe off the spilled brake fluid to avoid damage to painted surfaces or plastic parts.
- Handle brake fluid with special care not to let it enter your eyes so that you may not lose your eyesight.
- **FIRST AID FOR BRAKE FLUID ENTERING THE EYES:**
- Flush with water for 15 minutes and get immediate medical attention.

EAM30029

CHECKING THE FRONT BRAKE DISC

1. Check:
 - Front brake disc
 - Damage/galling → Replace.
2. Measure:
 - Brake disc thickness
 - Measure the brake disc thickness at a few different locations.
 - Out of specification → Replace.



Brake disc thickness limit
2.5 mm (0.10 in)


3. Measure:
 - Brake disc runout
 - Out of specification → Replace the brake disc.



Brake disc runout limit (as measured on wheel)
0.15 mm (0.0059 in)

- a. Place the vehicle on a maintenance stand so that the front wheel is elevated.

- b. Remove the brake caliper.
- c. Hold the dial gauge at a right angle against the brake disc surface.
- d. Measure the runout 1.5 mm (0.06 in) above the brake disc edge.

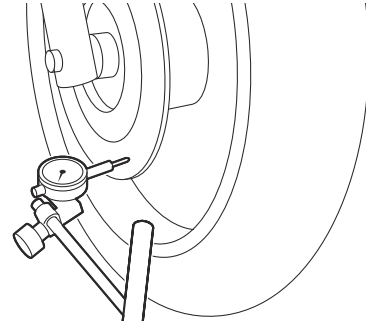

G098641

4. Replace:
 - Brake disc
 - Refer to “ASSEMBLING THE FRONT WHEEL” on page 4-9.


EAM30519

REPLACING THE FRONT BRAKE PADS


TIP

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.


1. Remove:
 - Brake pad
 - a. Remove the pad pin plug “1”.

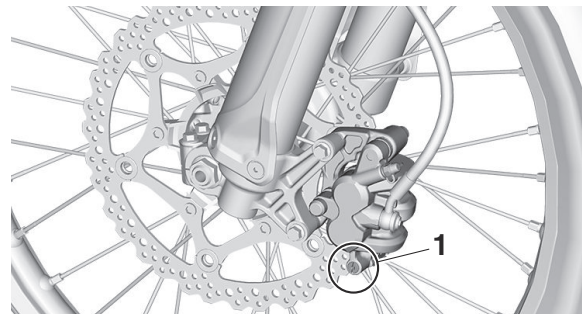

- b. Loosen the pad pin “2”.
- c. Remove the brake caliper “3” from the front fork.

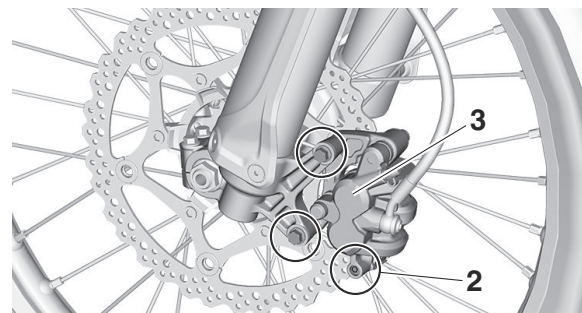

- d. Remove the pad pin and brake pads “4”.

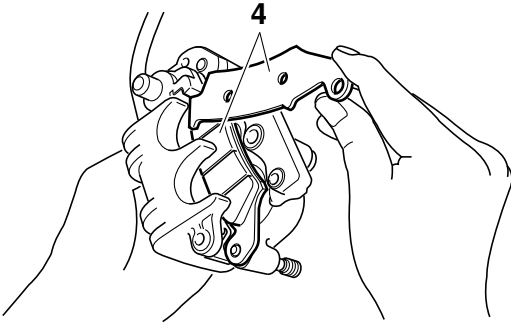


2. Measure:

- Brake pad wear limit “a”
Out of specification → Replace the brake pads as a set.



Brake pad lining thickness limit
1.0 mm (0.04 in)

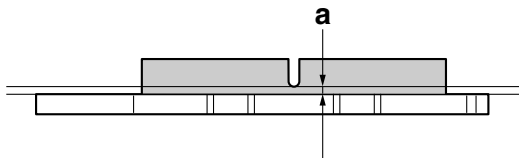

3. Install:


- Brake pad
 - Connect the plastic hose “1” to the bleed screw “2” and place a container under the end of the plastic hose.
 - Loosen the bleed screw and push the brake caliper piston in.

EWA19160



WARNING

Do not reuse the drained brake fluid.

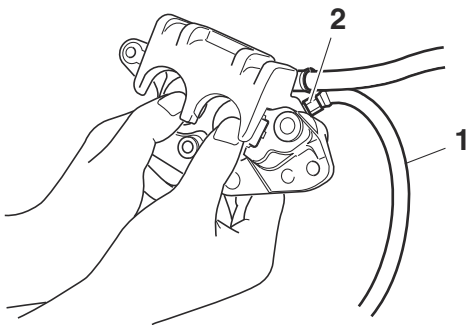

- Tighten the bleed screw.





Bleed screw
5 N·m (0.5 kgf·m, 3.7 lb·ft)

- Install the brake pads “3” and the pad pin.

TIP


- Install the brake pads with their projections “a” into the brake caliper recesses “b”.
- Temporarily tighten the pad pin at this point.

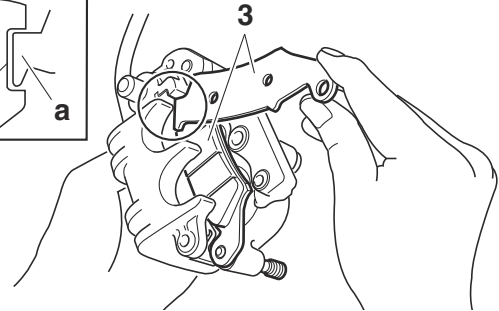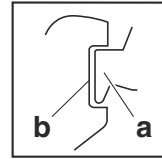

- Install the brake caliper “4” and tighten the pad pin “5”.




Front brake caliper bolt
28 N·m (2.8 kgf·m, 21 lb·ft)
Pad pin
17 N·m (1.7 kgf·m, 13 lb·ft)

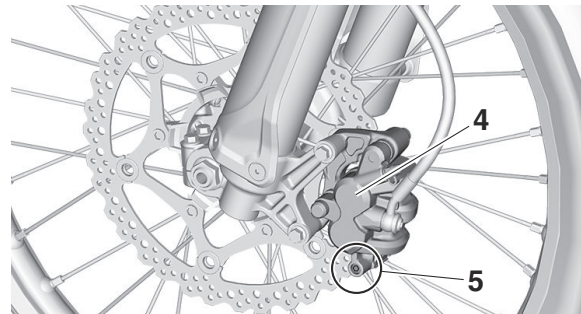

- Install the pad pin plug “6”.



Pad pin plug
2.5 N·m (0.25 kgf·m, 1.8 lb·ft)

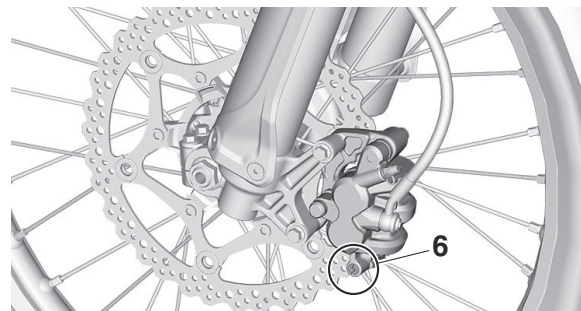

4. Check:

- Brake fluid level
Refer to “CHECKING THE BRAKE FLUID LEVEL” on page 3-24.

5. Check:

- Brake lever operation
A softy or spongy feeling → Bleed the brake

system.

Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.

EAM30030

REMOVING THE FRONT BRAKE CALIPER

TIP

Before disassembling the brake caliper, drain the brake fluid from the entire brake system.

1. Remove:

- Union bolt
- Copper washer
- Brake hose

TIP


Put the end of the brake hose into a container and pump out the brake fluid.

EAM30031

DISASSEMBLING THE FRONT BRAKE CALIPER

1. Remove:

- Brake caliper piston “1”
- Brake caliper piston dust seal “2”
- Brake caliper piston seal “3”

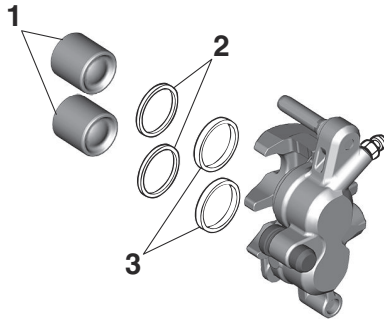


- a. Blow compressed air into the brake hose joint opening to force out the piston from the brake caliper.

EWA13550

WARNING

- Cover the brake caliper piston with a rag. Be careful not to get injured when the piston is expelled from the brake caliper.
- Never try to pry out the brake caliper piston.

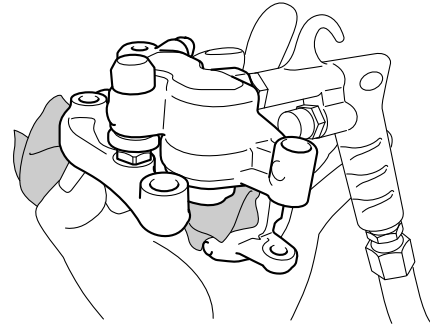


- b. Remove the brake caliper piston dust seal and the brake caliper piston seal.

EAM30032

CHECKING THE FRONT BRAKE CALIPER

1. Check:

- Brake caliper piston “1”
Rust/scratches/wear → Replace the brake caliper piston.
- Brake caliper cylinder “2”
Scratches/wear → Replace the brake caliper assembly.
- Brake caliper body “3”
Cracks/damage → Replace the brake caliper assembly.
- Brake fluid delivery passages (brake caliper body)
Obstruction → Blow out with compressed air.

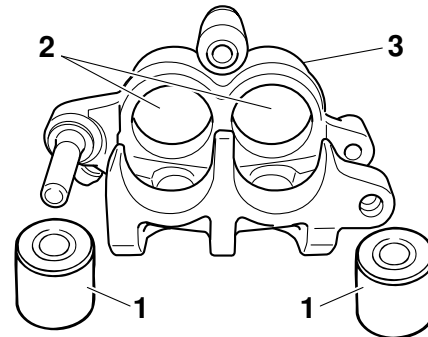

EWA19220

WARNING

When the brake caliper is disassembled, replace the brake caliper piston seal and the brake caliper piston dust seal with new ones.

2. Check:

- Brake caliper bracket
Crack/damage → Replace.

EAM30033

ASSEMBLING THE FRONT BRAKE CALIPER

EWA19230

WARNING

- Before installation, clean and lubricate the

internal parts. Use new brake fluid for cleaning and lubricating.

- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- When the brake caliper is disassembled, replace the brake caliper piston seal and the brake caliper piston dust seal with new ones.



**Specified brake fluid
DOT 4**

EAM30035

INSTALLING THE FRONT BRAKE CALIPER

1. Install:

- Front brake caliper bracket
- Front brake caliper (temporarily)
- Copper washer **New**
- Brake hose
- Union bolt



**Front brake caliper bracket
28 N·m (2.8 kgf·m, 21 lb·ft)
Brake hose union bolt
30 N·m (3.0 kgf·m, 22 lb·ft)**

EWA13531


WARNING

Proper brake hose routing is essential to insure safe vehicle operation.

ECA24460

NOTICE

Make sure that the pipe portion “a” of the brake hose touches the projection “b” on the brake caliper.

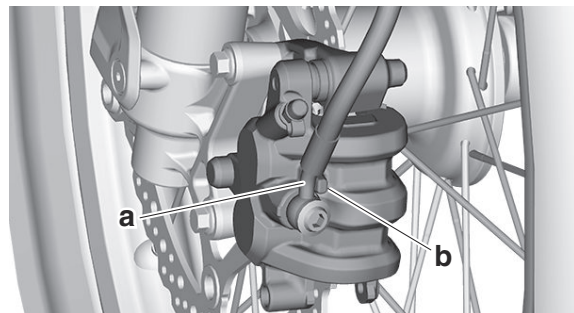

2. Install:

- Front brake caliper
- Brake pad spring
- Brake pad
- Brake pad pin
- Brake pad pin plug
- Brake hose holder



**Brake pad pin
17 N·m (1.7 kgf·m, 13 lb·ft)
Brake pad pin plug
2.5 N·m (0.25 kgf·m, 1.8 lb·ft)**

Refer to “CHECKING THE FRONT BRAKE PADS” on page 3-25.

3. Tighten:


- Brake hose holder bolt “1”



**Brake hose holder bolt
9 N·m (0.9 kgf·m, 6.6 lb·ft)**

TIP

Make sure that the brake hose holder “2” is installed with its upper end “a” aligned with the paint “b” on the brake hose.

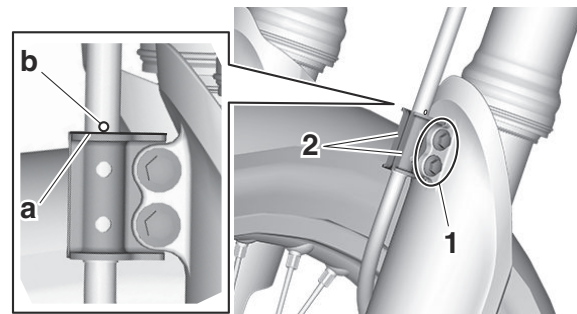

4. Pour brake fluid to the brake master cylinder reservoir up to the specified level.



**Specified brake fluid
DOT 4**

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

5. Bleed:
 - Brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.
6. Check:
 - Brake fluid level
The minimum level mark or below → Add.
Refer to “CHECKING THE BRAKE FLUID LEVEL” on page 3-24.
7. Check:
 - Brake lever operation
A softy or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.

EAM30036

REMOVING THE FRONT BRAKE MASTER CYLINDER

TIP

Before removing the front brake master cylinder, drain the brake fluid from the entire brake system.

1. Remove:
 - Union bolt
 - Copper washer
 - Brake hose


TIP

To drain any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

EAM30037

CHECKING THE FRONT BRAKE MASTER CYLINDER


1. Check:
 - Brake master cylinder “1”
Damage/scratches/wear → Replace the brake master cylinder assembly.
 - Brake fluid delivery passages “2”
(brake master cylinder body)
Obstruction → Blow out with compressed air.

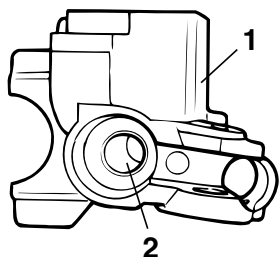

2. Check:
 - Brake master cylinder reservoir cap
Damage/scratches/wear → Replace.
3. Check:
 - Brake hose
Cracks/damage/wear → Replace.
 - Protector “1”
Out of specification → Replace.

TIP

The protector reaches the limit of its use when it is worn down to the same height “a” as of the plastic locking tie circumference.

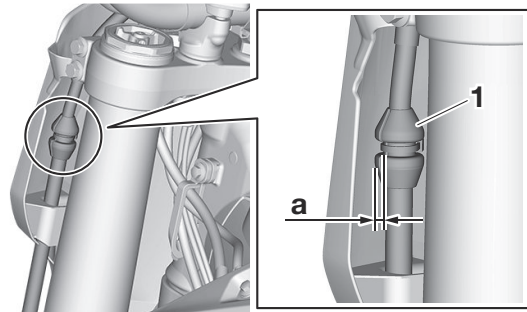

EAM30038

ASSEMBLING THE FRONT BRAKE MASTER CYLINDER

EWA13520

WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.





1. Wash the brake master cylinder with brake fluid.
2. Install:
 - Primary cylinder cup “1”
 - Secondary cylinder cup “2”
(to the brake master cylinder piston “3”)

EWA20240

WARNING


Apply brake fluid to the cylinder cups and install them as shown. Wrong orientation in installation causes poor braking performance.

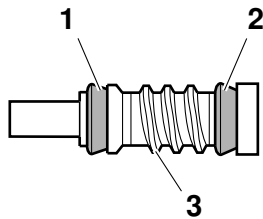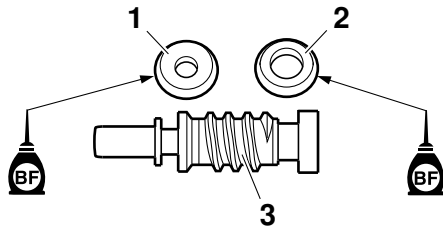

3. Install:
- Spring “1”
(to the brake master cylinder piston “2”)

TIP


Install the spring with a smaller inside diameter to the brake master cylinder piston.

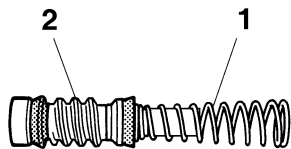

4. Install:
- Brake master cylinder piston assembly “1” **New**
 - Washer “2”
 - Circlip “3” **New**
 - Dust boot “4”
 - Push rod “5”

TIP

- Before installation, apply brake fluid to the components of the brake master cylinder piston assembly.
- Before installation, apply silicone grease to the push rod end.
- Before installation, apply brake fluid to the inside of the brake master cylinder.

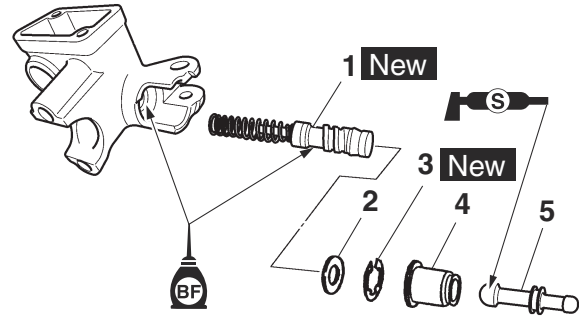

EAM30039

INSTALLING THE FRONT BRAKE MASTER CYLINDER

1. Install:


- Brake master cylinder “1”



Brake master cylinder holder bolt
9 N·m (0.9 kgf·m, 6.6 lb·ft)

TIP

- Install the front brake master cylinder holder with the “UP” mark facing up.
- First, tighten the upper bolt, then the lower bolt.

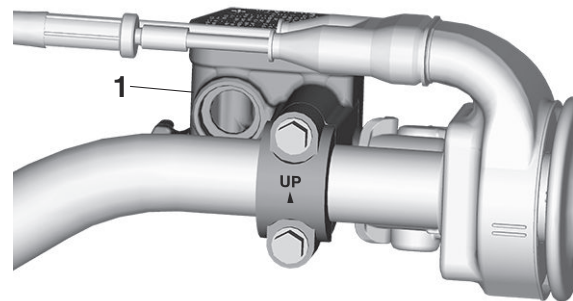

2. Install:

- Copper washer **New**
- Brake hose
- Union bolt



Brake hose union bolt
30 N·m (3.0 kgf·m, 22 lb·ft)

EWA13531

WARNING

Proper brake hose routing is essential to insure safe vehicle operation.

ECA24470


NOTICE

During installation, bring the brake hose into contact with the brake master cylinder projection “a” and make its bent portion “b” face downward.

TIP

Turn the handlebar toward right and left to make sure that the brake hose does not touch other parts (e.g., wire harness, cables, leads). Adjust if necessary.

Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.

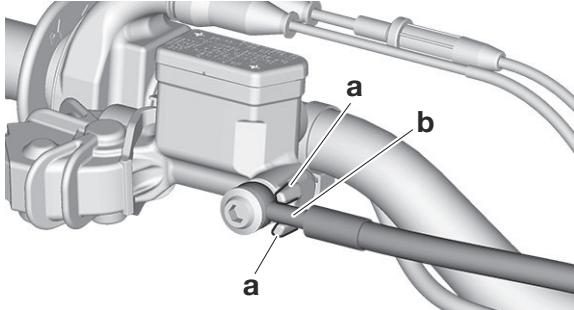

3. Pour brake fluid to the brake master cylinder reservoir up to the specified level.



EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE


Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

4. Bleed:
 - Brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.
5. Check:
 - Brake fluid level
The minimum level mark or below → Add.
Refer to “CHECKING THE BRAKE FLUID LEVEL” on page 3-24.
6. Check:
 - Brake lever operation
A softy or spongy feeling → Bleed the brake system.

EAM20098


REAR BRAKE

Removing the rear brake caliper

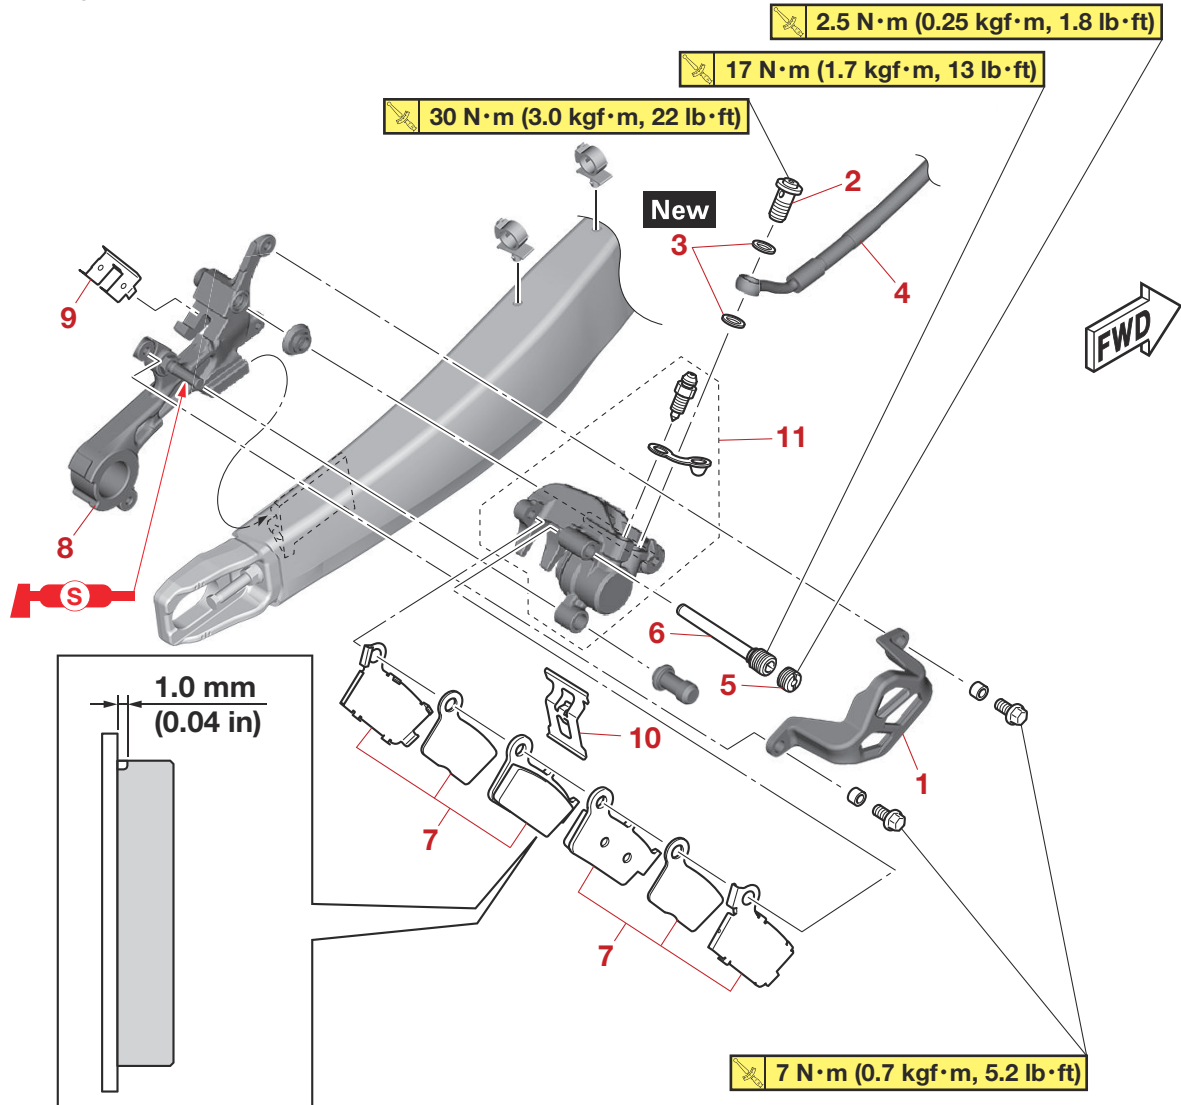

Order	Job/Parts to remove	Q'ty	Remarks
	Brake fluid		Drain. Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" on page 3-26.
	Rear wheel		Refer to "REAR WHEEL" on page 4-12.
1	Protector	1	
2	Union bolt	1	
3	Copper washer	2	
4	Rear brake hose	1	
5	Brake pad pin plug	1	
6	Brake pad pin	1	
7	Rear brake pad assembly	2	
8	Rear brake caliper bracket	1	
9	Brake pad spring	1	
10	Brake pad spring	1	
11	Rear brake caliper assembly	1	

Disassembling the rear brake caliper

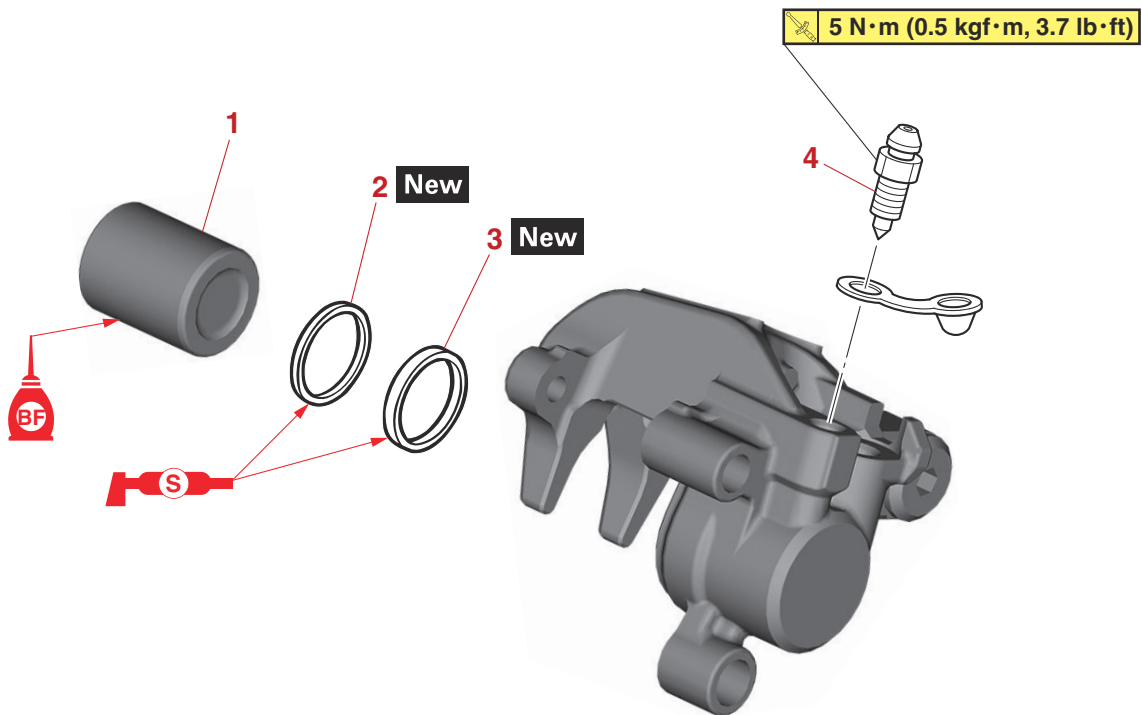

Order	Job/Parts to remove	Q'ty	Remarks
1	Brake caliper piston	1	
2	Brake caliper piston dust seal	1	
3	Brake caliper piston seal	1	
4	Bleed screw	1	

Removing the rear brake master cylinder

5 mm (0.20 in)

1.5 N·m (0.15 kgf·m, 1.1 lb·ft)

30 N·m (3.0 kgf·m, 22 lb·ft)

10 N·m (1.0 kgf·m, 7.4 lb·ft)

1 Union bolt

2 New

3

2 New

New

Order	Job/Parts to remove	Q'ty	Remarks
	Brake fluid		Drain. Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" on page 3-26.
1	Union bolt	1	
2	Copper washer	2	
3	Brake hose	1	

Removing the rear brake master cylinder

5 mm (0.20 in)

1.5 N·m (0.15 kgf·m, 1.1 lb·ft)

30 N·m (3.0 kgf·m, 22 lb·ft)

New


New

10 N·m (1.0 kgf·m, 7.4 lb·ft)

4 New

Order	Job/Parts to remove	Q'ty	Remarks
4	Split pin	1	
5	Washer	1	
6	Pin	1	
7	Brake master cylinder reservoir cap	1	
8	Brake master cylinder reservoir diaphragm plate	1	
9	Brake master cylinder reservoir diaphragm	1	
10	Rear brake master cylinder	1	

Disassembling the rear brake master cylinder

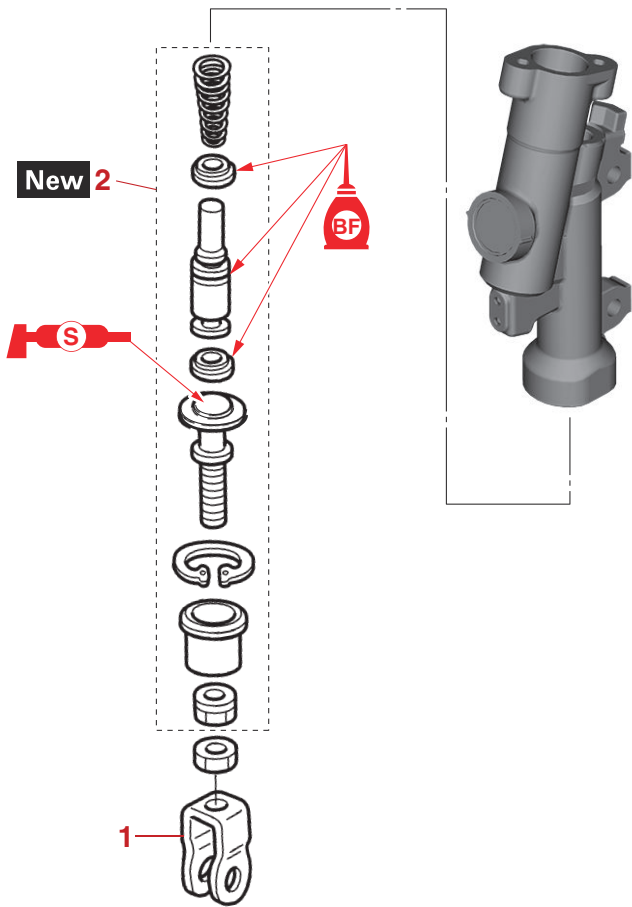

Order	Job/Parts to remove	Q'ty	Remarks
1	Brake master cylinder joint	1	
2	Brake master cylinder kit	1	

EAM30040

INTRODUCTION

EWA19260

WARNING

If you need to disassemble the disc brake components, observe the following precautions.

- Never disassemble the brake components unless absolutely necessary.
- If there is any problem with connections on the hydraulic brake system, perform the following jobs. Disassemble the brake system, drain the brake fluid, and clean it. After that, add a suitable amount of brake fluid. Then, bleed it after reassembly.
- Use only brake fluid for washing internal brake components.
- Use new brake fluid for cleaning the brake components.
- Immediately wipe off the spilled brake fluid to avoid damage to painted surfaces or plastic parts.
- Handle brake fluid with special care not to let it enter your eyes so that you may not lose your eyesight.
- **FIRST AID FOR BRAKE FLUID ENTERING THE EYES:**
- Flush with water for 15 minutes and get immediate medical attention.

EAM30041

CHECKING THE REAR BRAKE DISC

1. Check:
 - Brake disc
 - Damage/galling → Replace.
2. Measure:
 - Brake disc thickness
 - Measure the brake disc thickness at a few different locations.
 - Out of specification → Replace.
 - Refer to "CHECKING THE FRONT BRAKE DISC" on page 4-21.

	Brake disc thickness limit 3.5 mm (0.14 in)
---	--

3. Measure:
 - Brake disc runout
 - Out of specification → Replace the brake disc.
 - Refer to "CHECKING THE FRONT BRAKE DISC" on page 4-21.



Brake disc runout limit (as measured on wheel)
0.15 mm (0.0059 in)

4. Replace:
 - Brake disc
 - Refer to "ASSEMBLING THE REAR WHEEL" on page 4-15.


EAM30523

REPLACING THE REAR BRAKE PADS


TIP

When replacing the brake pads, it is not necessary to disconnect the brake hose or disassemble the brake caliper.


1. Remove:
 - Brake pad
 - a. Remove the protector "1" and the pad pin plug "2".

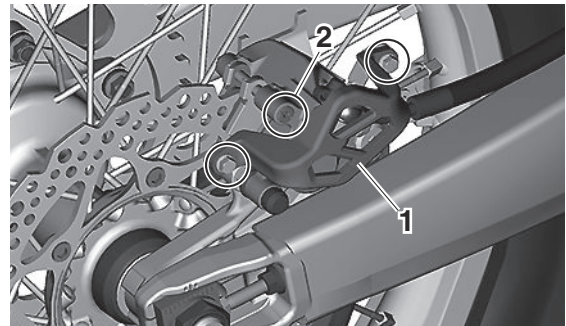

- b. Loosen the pad pin "3".
 - c. Remove the rear wheel "4" and the brake caliper "5".
 - Refer to "REAR WHEEL" on page 4-12.

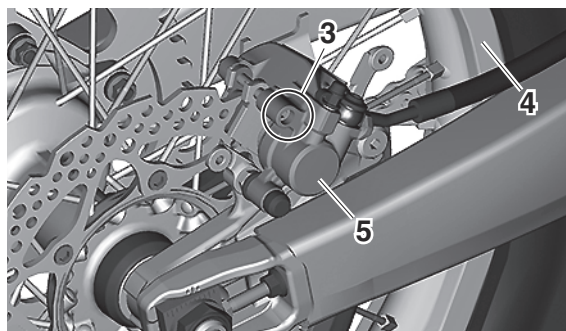


- d. Remove the pad pin "6" and the brake pads "7".

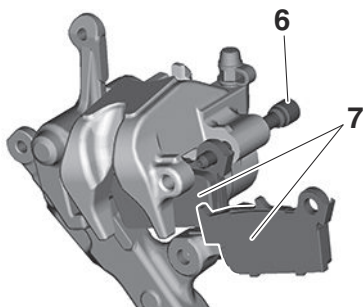

2. Measure:

- Brake pad wear limit “a”
Out of specification → Replace the brake pads as a set.



3. Install:


- Brake pad
 - Connect the plastic hose “1” to the bleed screw “2” and place a container under the end of the plastic hose.
 - Loosen the bleed screw and push the brake caliper piston in.

EWA19170



WARNING

Do not reuse the drained brake fluid.

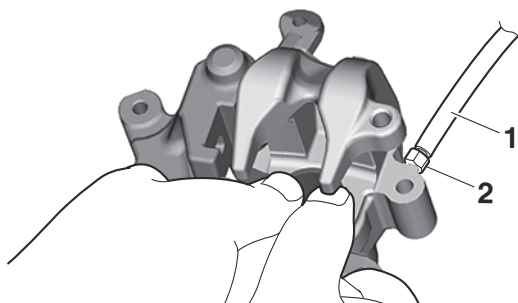


- Tighten the bleed screw.



- Install the brake pads “3” and the pad pin “4”.

TIP


- Install the brake pads with their projections “a” into the brake caliper recesses “b”.
- Temporarily tighten the pad pin at this point.

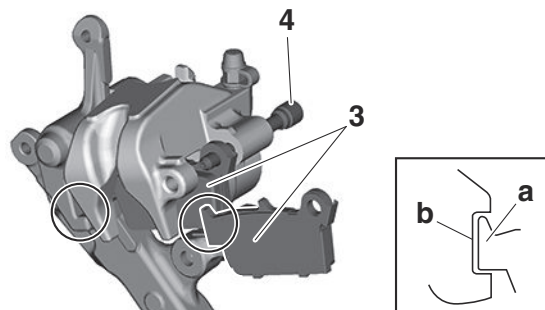



- Install the brake caliper “5” and the rear wheel “6”.

Refer to “REAR WHEEL” on page 4-12.

- Tighten the pad pin “7”.

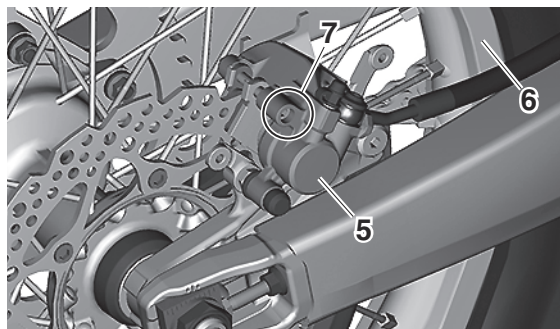

- Install the pad pin plug “8” and the protector “9”.

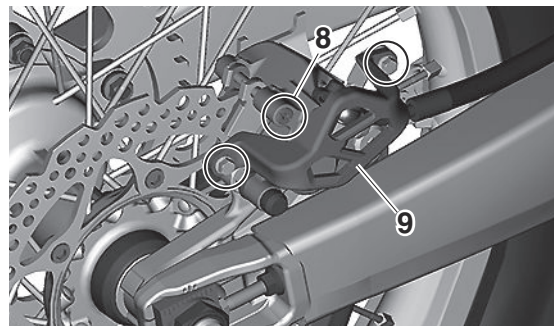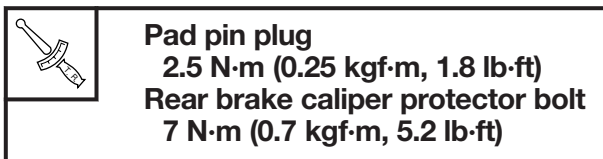

4. Check:

- Brake fluid level
Refer to “CHECKING THE BRAKE FLUID LEVEL” on page 3-24.

5. Check:

- Brake pedal operation
A softy or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.

EAM30042

REMOVING THE REAR BRAKE CALIPER

TIP

Before disassembling the brake caliper, drain the brake fluid from the entire brake system.

1. Remove:

- Union bolt
- Copper washer
- Brake hose

TIP


Put the end of the brake hose into a container and pump out the brake fluid.

EAM30043

DISASSEMBLING THE REAR BRAKE CALIPER

1. Remove:

- Brake caliper piston “1”
- Brake caliper piston dust seal “2”
- Brake caliper piston seal “3”

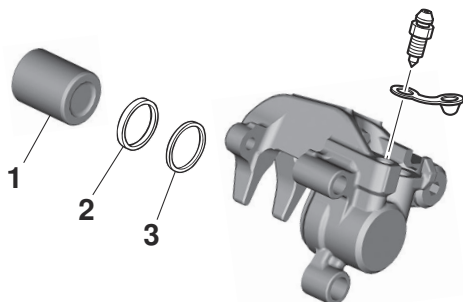


- Blow compressed air into the brake hose joint opening to force out the piston from the brake caliper.

EWA13550

⚠ WARNING

- Cover the brake caliper piston with a rag. Be careful not to get injured when the piston is expelled from the brake caliper.
- Never try to pry out the brake caliper piston.

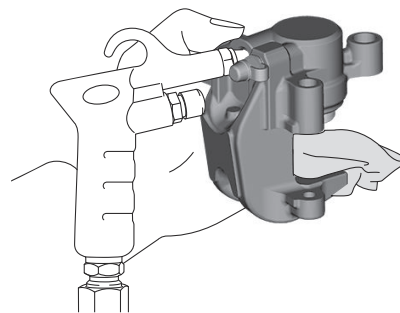


- Remove the brake caliper piston dust seal and the brake caliper piston seal.

EAM30044

CHECKING THE REAR BRAKE CALIPER

1. Check:

- Brake caliper piston “1”
Rust/scratches/wear → Replace the brake caliper piston.
- Brake caliper cylinder “2”
Scratches/wear → Replace the brake caliper assembly.
- Brake caliper body “3”
Cracks/damage → Replace the brake caliper assembly.
- Brake fluid delivery passages (brake caliper body)
Obstruction → Blow out with compressed air.

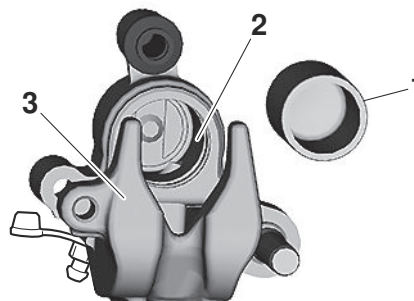

EWA19270

⚠ WARNING

When the brake caliper is disassembled, replace the brake caliper piston seal and the brake caliper piston dust seal with new ones.

2. Check:

- Brake caliper bracket
Crack/damage → Replace.

EAM30045

ASSEMBLING THE REAR BRAKE CALIPER


EWA19280

⚠ WARNING

- Before installation, clean and lubricate the internal parts. Use new brake fluid for

cleaning and lubricating.


- Never use solvents on internal brake components as they will cause the piston seals to swell and distort.
- When the brake caliper is disassembled, replace the brake caliper piston seal and the brake caliper piston dust seal with new ones.



EAM30047

INSTALLING THE REAR BRAKE CALIPER

1. Install:
 - Rear brake caliper
 - Rear brake caliper bracket
2. Install:
 - Rear wheel
Refer to "REAR WHEEL" on page 4-12.
 - Copper washer **New**
 - Brake hose
 - Union bolt



EWA13531


WARNING

Proper brake hose routing is essential to insure safe vehicle operation.

ECA24490

NOTICE

Make sure that a bend in its pipe portion "a" is directed as shown and the brake hose touches the projection "b" on the brake caliper.

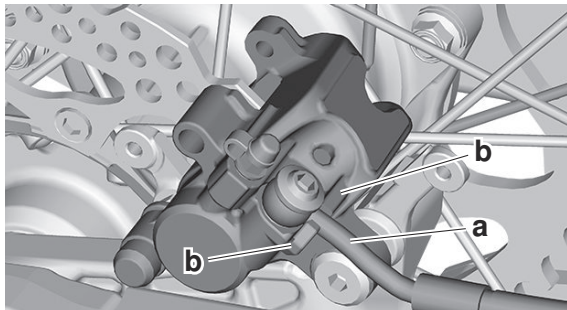

3. Install:
 - Brake pad spring
 - Brake pad
 - Brake pad pin
 - Brake pad pin plug



**Brake pad pin
17 N·m (1.7 kgf·m, 13 lb·ft)
Brake pad pin plug
2.5 N·m (0.25 kgf·m, 1.8 lb·ft)**

Refer to "CHECKING THE REAR BRAKE PADS" on page 3-25.

4. Pour brake fluid to the brake fluid reservoir up to the specified level.



**Specified brake fluid
DOT 4**

EWA13090

WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA13540

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

5. Bleed:
 - Brake system
Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" on page 3-26.
6. Check:
 - Brake fluid level
The minimum level mark or below → Add.
Refer to "CHECKING THE BRAKE FLUID LEVEL" on page 3-24.
7. Check:
 - Brake pedal operation
A softy or spongy feeling → Bleed the brake system.
Refer to "BLEEDING THE HYDRAULIC BRAKE SYSTEM" on page 3-26.

EAM30048

REMOVING THE REAR BRAKE MASTER CYLINDER

TIP

Before removing the rear brake master cylinder, drain the brake fluid from the entire brake

system.

1. Remove:
 - Union bolt
 - Copper washer
 - Brake hose


TIP

To drain any remaining brake fluid, place a container under the master cylinder and the end of the brake hose.

EAM30049

CHECKING THE REAR BRAKE MASTER CYLINDER

1. Check:
 - Brake master cylinder “1”
Damage/scratches/wear → Replace.
 - Brake fluid delivery passages “2”
(brake master cylinder body)
Obstruction → Blow out with compressed air.

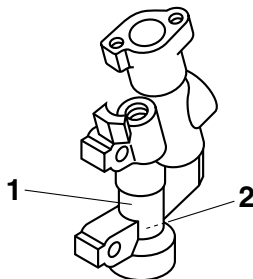

2. Check:
 - Brake master cylinder reservoir cap
Crack/damage → Replace.
 - Brake master cylinder reservoir diaphragm holder
 - Brake master cylinder reservoir diaphragm
Crack/damage → Replace.
3. Check:
 - Brake hose
Cracks/damage/wear → Replace.

EAM30050

ASSEMBLING THE REAR BRAKE MASTER CYLINDER

EWA13520

WARNING

- Before installation, all internal brake components should be cleaned and lubricated with clean or new brake fluid.
- Never use solvents on internal brake components.





**Specified brake fluid
DOT 4**

1. Wash the brake master cylinder with brake fluid.
2. Install:
 - Primary cylinder cup “1”
 - Secondary cylinder cup “2”
(to the brake master cylinder piston “3”)

EWA19300

WARNING


Apply brake fluid to the cylinder cups and install them as shown. Wrong orientation in installation causes poor braking performance.

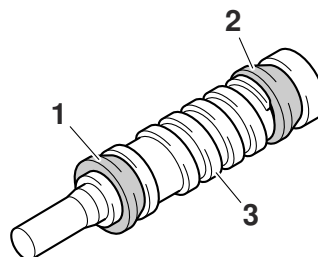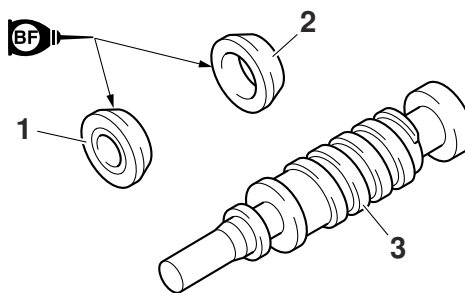

3. Install:
 - Spring “1”
(to the brake master cylinder piston “2”)

TIP

Install the spring with a smaller inside diameter to the brake master cylinder piston.

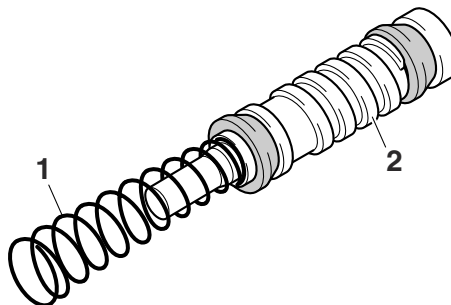


4. Install:

- Brake master cylinder piston assembly “1” **New**
- Push rod “2” **New**
- Circlip “3” **New**
- Dust boot “4” **New**

TIP

- Before installation, apply brake fluid to the brake master cylinder piston assembly.
- Before installation, apply silicone grease to the push rod end.
- Before installation, apply brake fluid to the inside of the brake master cylinder.

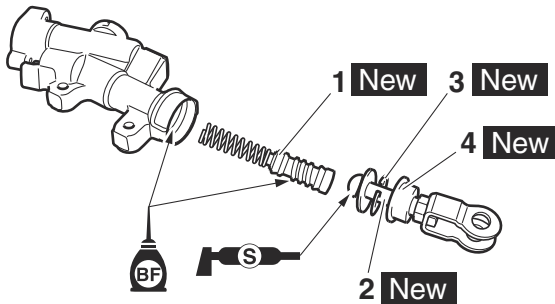

EAM30051

INSTALLING THE REAR BRAKE MASTER CYLINDER

1. Install:

- Copper washer **New**
- Brake hose
- Union bolt



Brake hose union bolt
30 N·m (3.0 kgf·m, 22 lb·ft)

EWA13531


⚠ WARNING

Proper brake hose routing is essential to insure safe vehicle operation.

ECA24500

NOTICE

Make sure that the pipe portion of the brake hose touches the projection “a” on the brake caliper.

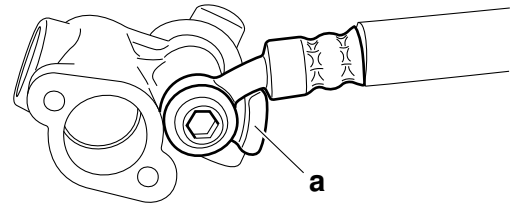

2. Pour brake fluid to the brake fluid reservoir up to the specified level.



Specified brake fluid
DOT 4

EWA13090

⚠ WARNING

- Use only the designated brake fluid. Other brake fluids may cause the rubber seals to deteriorate, causing leakage and poor brake performance.
- Refill with the same type of brake fluid that is already in the system. Mixing brake fluids may result in a harmful chemical reaction, leading to poor brake performance.
- When refilling, be careful that water does not enter the brake fluid reservoir. Water will significantly lower the boiling point of the brake fluid and could cause vapor lock.

ECA24510

NOTICE

Brake fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt brake fluid immediately.

3. Bleed:

- Brake system
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.


4. Check:

- Brake fluid level
The minimum level mark or below → Add.
Refer to “CHECKING THE BRAKE FLUID LEVEL” on page 3-24.

5. Check:


- Brake pedal operation
A softy or spongy feeling → Bleed the brake system.
Refer to “BLEEDING THE HYDRAULIC BRAKE SYSTEM” on page 3-26.

EAM20099

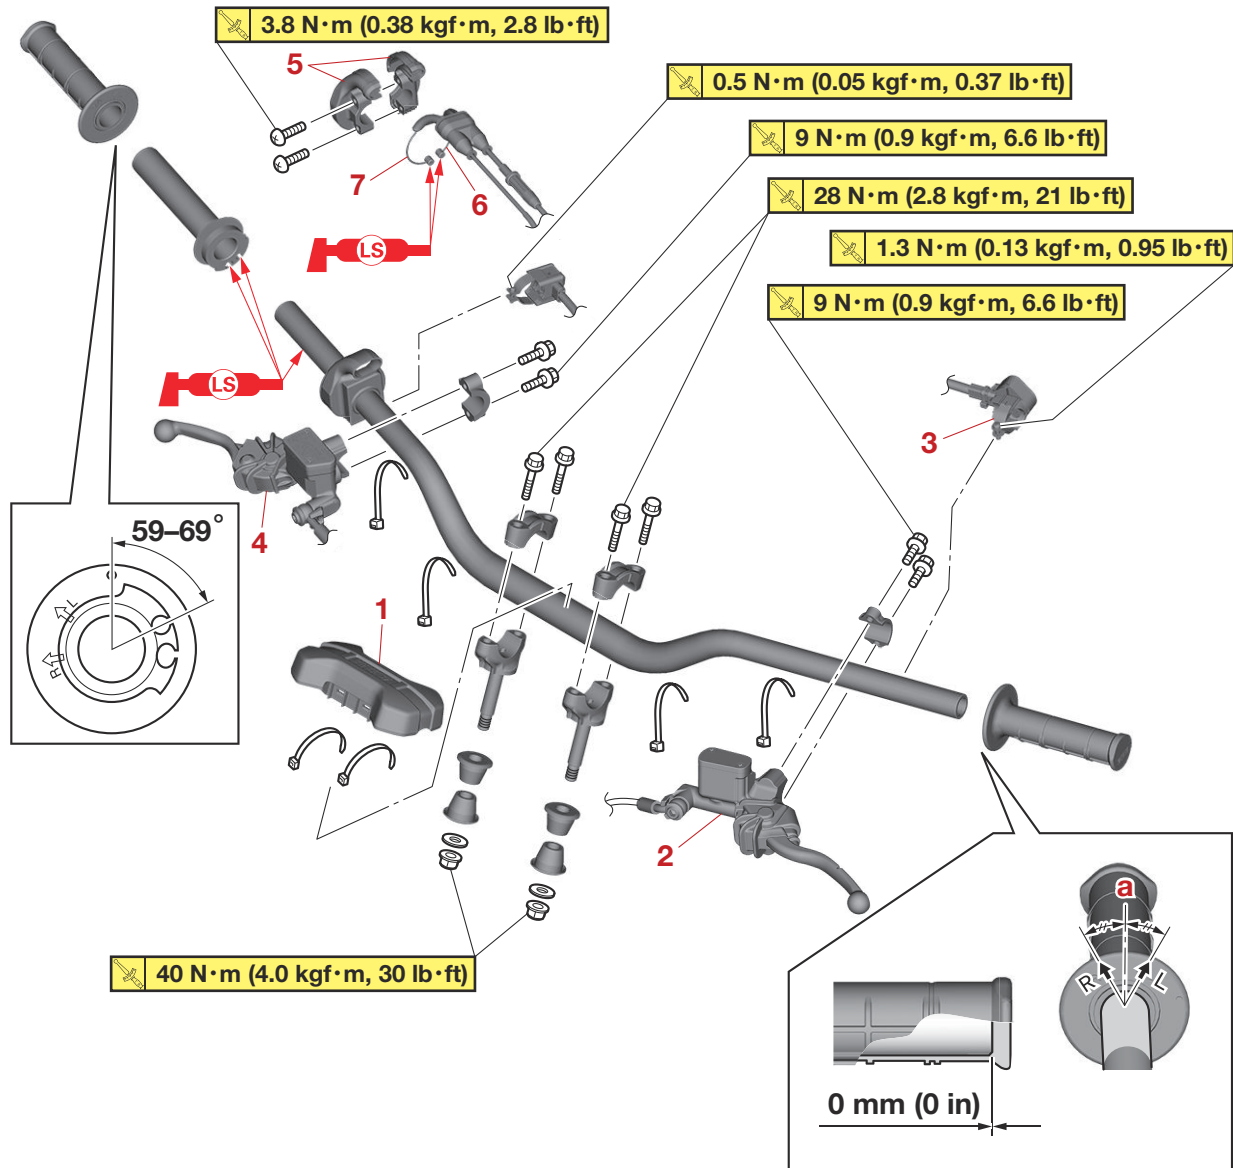HANDLEBAR**Removing the handlebar**

Order	Job/Parts to remove	Q'ty	Remarks
	Number plate		Refer to "GENERAL CHASSIS" on page 4-1.
1	Handlebar protector	1	
2	Clutch master cylinder	1	
3	Handlebar switch (left)	1	
4	Brake master cylinder	1	
5	Throttle cable housing	1	
6	Throttle cable (pull)	1	Disconnect.
7	Throttle cable (return)	1	Disconnect.

Removing the handlebar

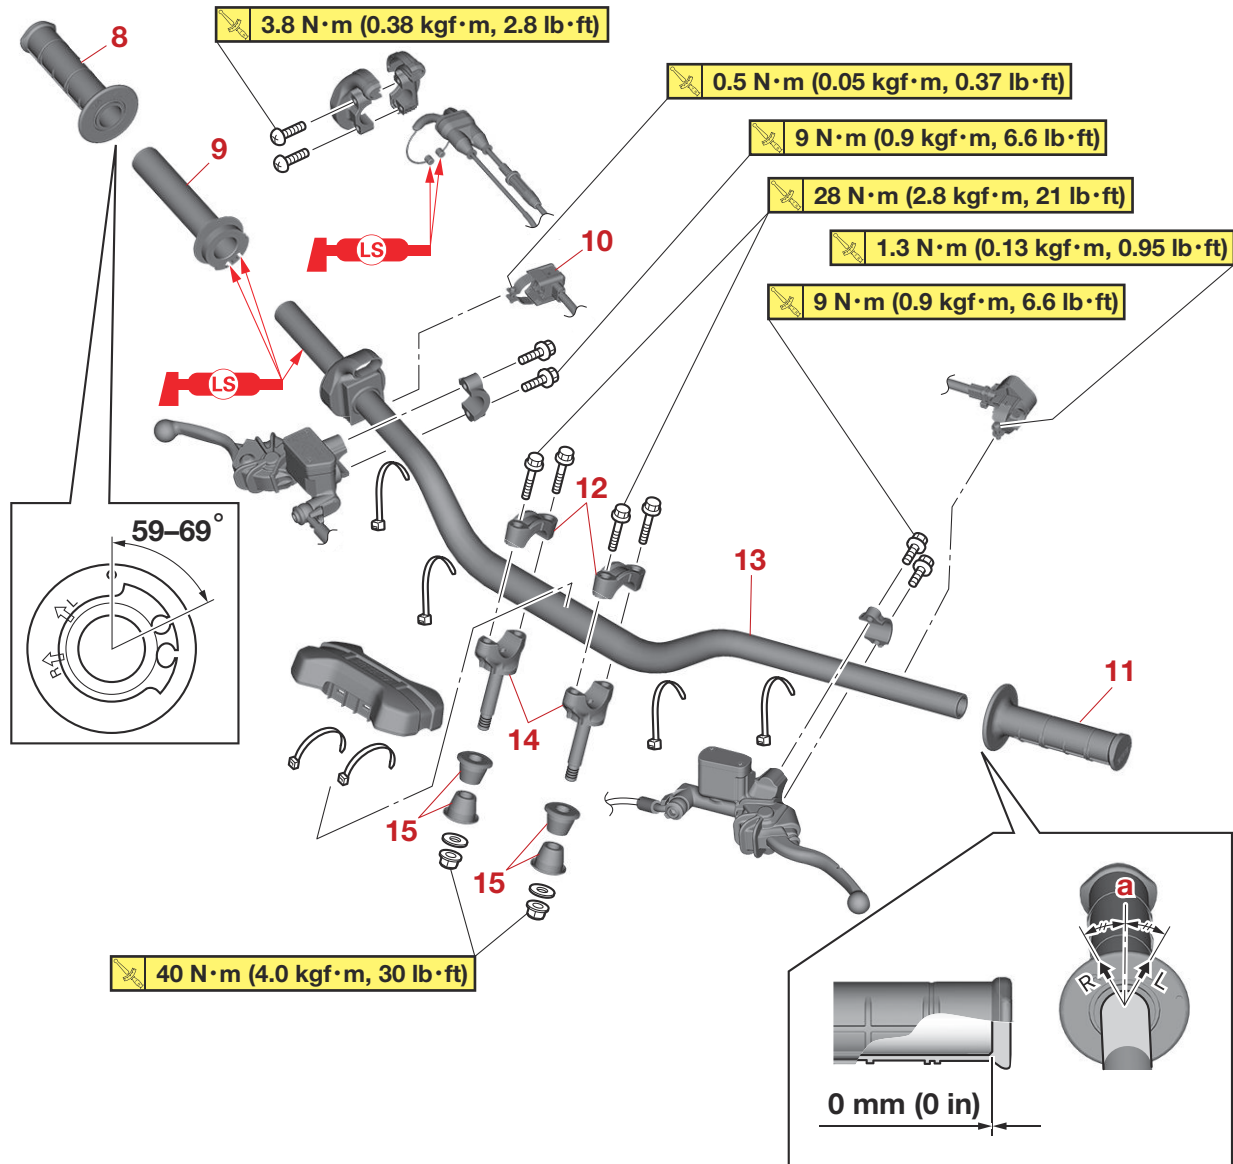

Order	Job/Parts to remove	Q'ty	Remarks
8	Handlebar grip (right)	1	
9	Tube guide	1	
10	Starter switch	1	
11	Handlebar grip (left)	1	Install the handlebar grip (left) to the handlebar so that the line "a" between the two arrow marks faces straight upward.
12	Upper handlebar holder	2	
13	Handlebar	1	
14	Lower handlebar holder	2	
15	Damper	4	

EAM30052

REMOVING THE HANDLEBAR

1. Stand the vehicle upright on a level surface.

EWA13120

WARNING


Securely support the vehicle so that there is no danger of it falling over.

2. Remove:

- Grip “1”

TIP

Blow in compressed air between the handlebar or tube guide and the grip. Then remove the grip which has become loose.

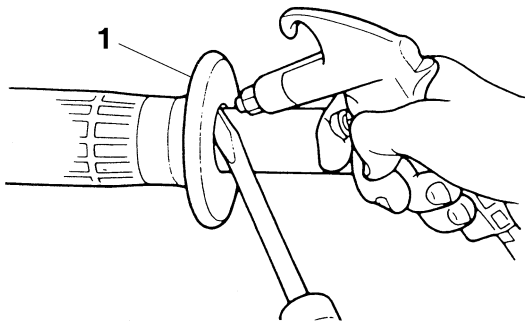


3. Remove:

- Throttle cable housing “1”
- Throttle grip “2”

TIP

While removing the throttle cable housing, pull back the rubber cover “3”.

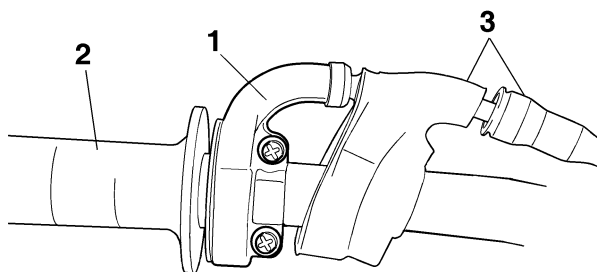

EAM30053

CHECKING THE HANDLEBAR

1. Check:

- Handlebar
Bends/cracks/damage → Replace.

EWA13690

WARNING

Do not attempt to straighten a bent handlebar as this may dangerously weaken it.

EAM30054

INSTALLING THE HANDLEBAR

1. Stand the vehicle upright on a level surface.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Install:

- Damper “1”
- Lower handlebar holder “2” (temporarily)
- Handlebar “3”
- Upper handlebar holder “4”



**Upper handlebar holder bolt
28 N·m (2.8 kgf·m, 21 lb·ft)**


TIP






- Install the lower handlebar holders with the side having the longer distance “a” from the mounting bolt center facing towards the front side of the vehicle.
- Installing the lower handlebar holders in the reverse direction allow the front-to-rear offset amount of the handlebar position to be changed.
- Installing the lower handlebar holder holes from the back to the front allows front-to-rear offset amount of the handlebar position to be changed.
- The upper handlebar holders should be installed with the punch marks “b” facing forward.
- When installing the handlebar, make sure that right and left marks “c” are in place identically on both sides.
- Install the handlebar so that the projection “d” of the upper handlebar holders is positioned at the mark on the handlebar as shown.

ECA14250

NOTICE

- **First, tighten the bolts on the front side of the handlebar holder, and then on the rear side.**
- **Turn the handlebar all the way to the left and right. If there is any contact with the fuel tank, adjust the handlebar position.**

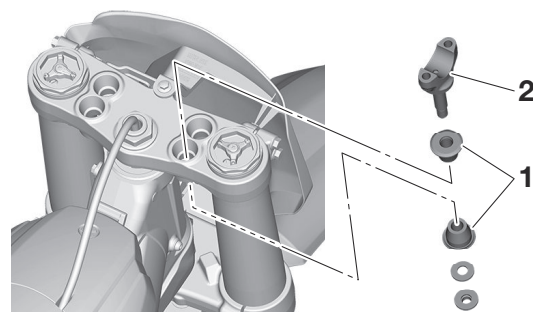

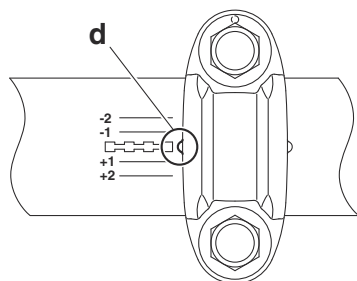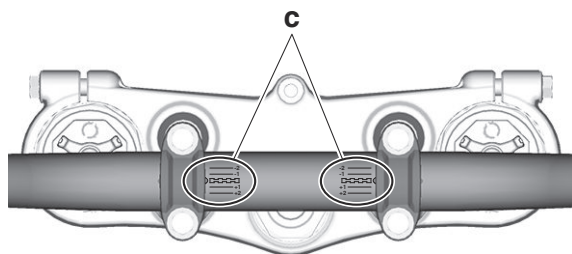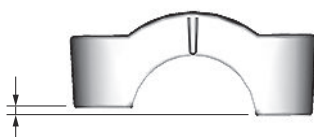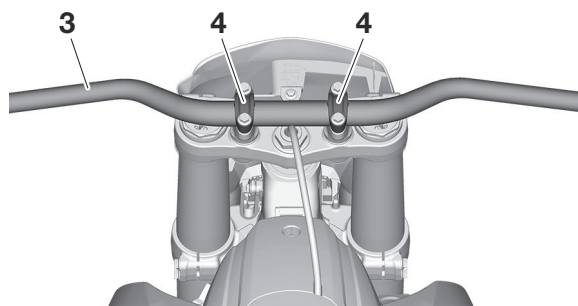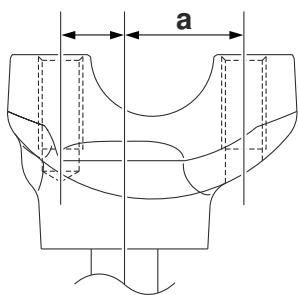

3. Tighten:
- Lower handlebar holder nut



Lower handlebar holder nut
40 N·m (4.0 kgf·m, 30 lb·ft)


4. Install:
- Clutch master cylinder
Refer to "INSTALLING THE CLUTCH MASTER CYLINDER" on page 5-58.
5. Install:
- Handlebar switch (left) "1"
 - Clamp "2"



Handlebar switch (left)
1.3 N·m (0.13 kgf·m, 0.95 lb·ft)

TIP


- The handlebar switch (left) "1" should be installed according to the dimensions shown.
- Pass the handlebar switch lead (left) through the middle of the clutch master cylinder holder.

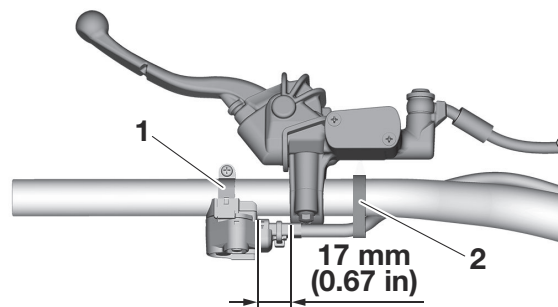

6. Install:
- Handlebar grip (left) "1"
 - Slightly coat the handlebar left end with a rubber adhesive.
 - Install the handlebar grip (left) on the handlebar by pressing the grip from the left side.
 - Wipe off any excess adhesive with a clean cloth.

TIP

Install the handlebar grip (left) to the handlebar so that the line "a" between the two arrow marks faces straight upward.

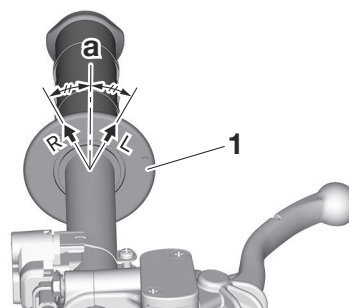

7. Adjust:


- Clutch lever position
Refer to “ADJUSTING THE CLUTCH LEVER POSITION” on page 3-15.

8. Install:

- Handlebar grip (right) “1”
Apply adhesive to the tube guide “2”.

TIP

- Before applying the adhesive, wipe off grease or oil on the tube guide surface “a” with a lacquer thinner.
- Install the grip to the tube guide so that the grip match mark “b” and tube guide slot “c” form the angle as shown.

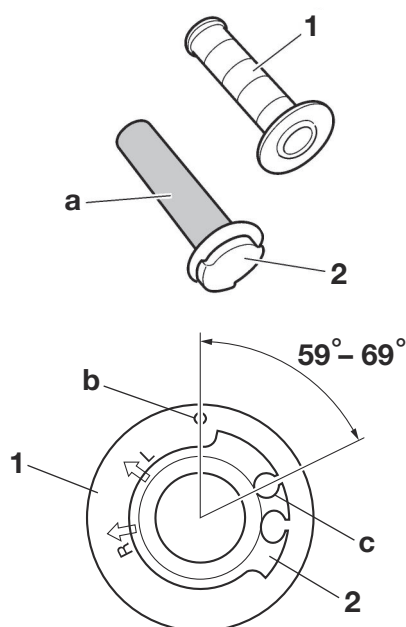


9. Install:

- Rubber cover “1”
- Throttle grip “2”

TIP

Apply the lithium-soap-based grease on the throttle grip sliding surface.

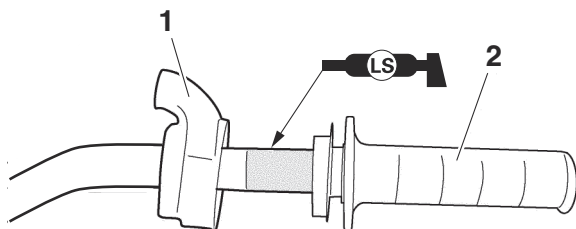


10. Install:

- Throttle cable “1”

TIP

Slightly coat the end of throttle cable and inside of throttle grip with lithium-soap-based grease. Then, mount the throttle grip onto the handlebar.

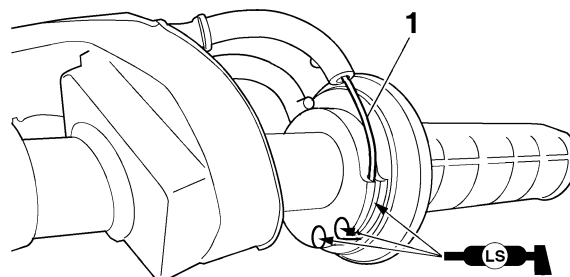

11. Install:

- Throttle cable housing “1”
- Screw (throttle cable housing) “2”





Screw (throttle cable housing)
3.8 N·m (0.38 kgf·m, 2.8 lb·ft)

EWA19310

WARNING


After tightening the throttle cable housing screws, check that the throttle grip “3” moves smoothly. If it does not, retighten the screws for adjustment.

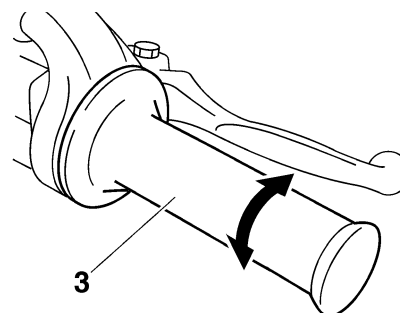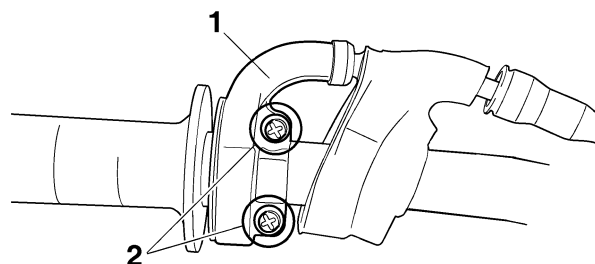

12. Install:

- Rubber cover “1”
- Cover (throttle cable housing) “2”

on page 3-12.

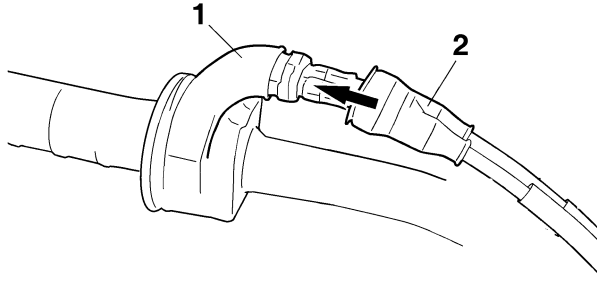

Throttle grip free play
3.0–6.0 mm (0.12–0.24 in)

13. Install:



- Starter switch “1”
- Front brake master cylinder assembly “2”
- Front brake master cylinder holder “3”
- Front brake master cylinder holder bolt “4”
- Clamp “5”



Front brake master cylinder holder bolt
9 N·m (0.9 kgf·m, 6.6 lb·ft)

TIP

- Install the front brake master cylinder holder with the “UP” mark facing up.
- Install in order for the top of the front brake master cylinder assembly to be level.
- First, tighten the upper bolt, then the lower bolt.
- Pass the starter switch lead through the middle of the front brake master cylinder holder.

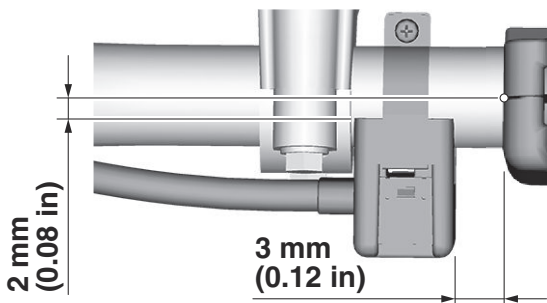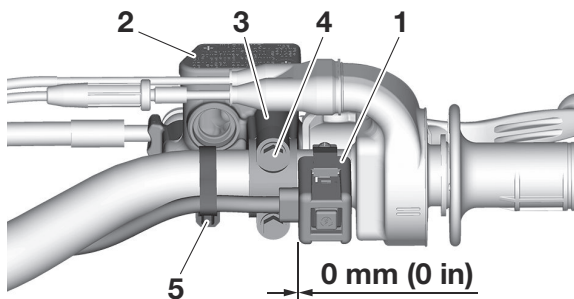


14. Adjust:

- Throttle grip free play
Refer to “CHECKING THE THROTTLE GRIP”


FRONT FORK

Removing the front fork legs

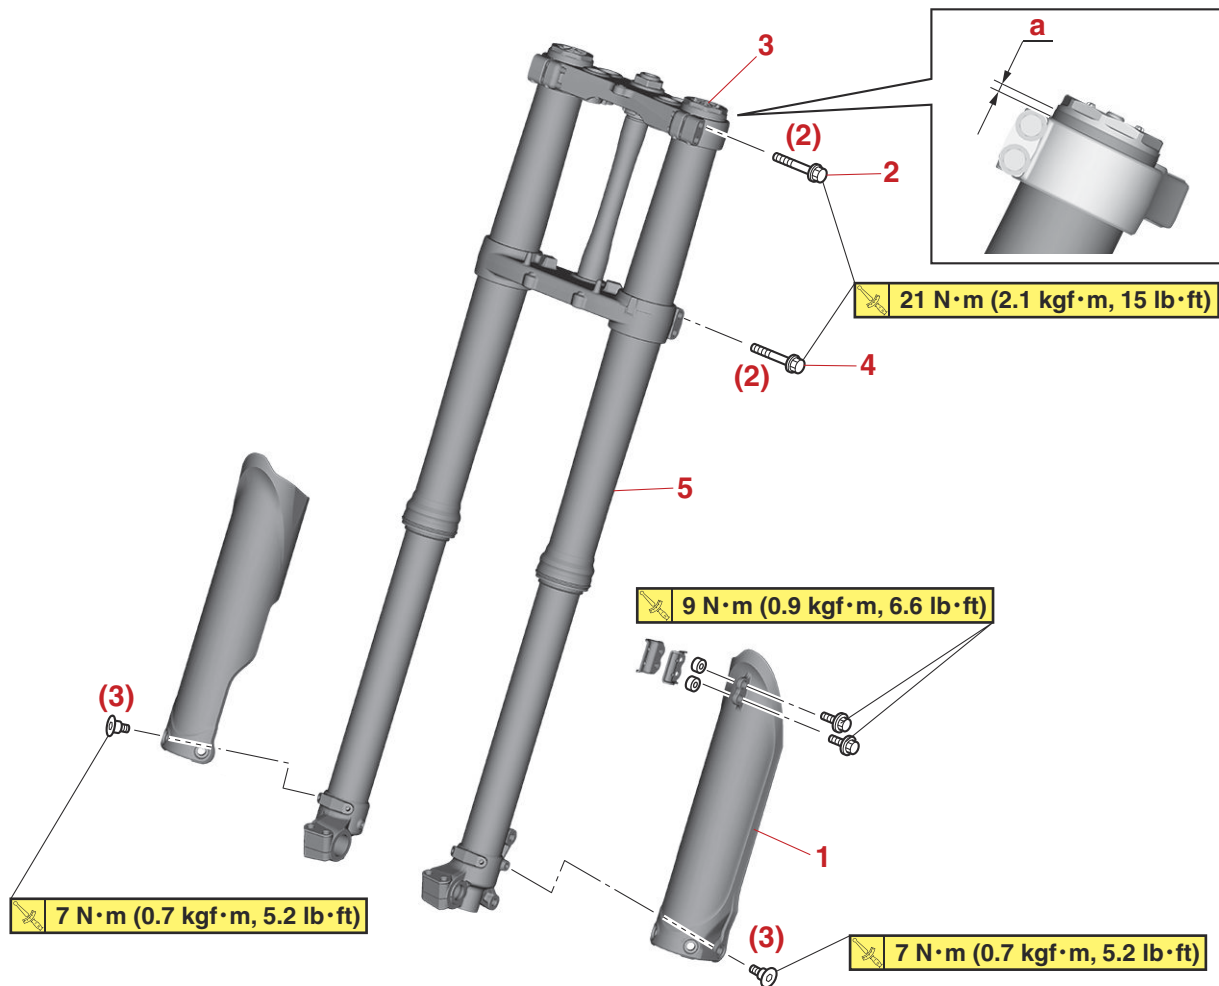

Order	Job/Parts to remove	Q'ty	Remarks
			Use a maintenance stand to raise the front wheel off the ground.
	Front wheel		Refer to "FRONT WHEEL" on page 4-7.
	Front brake caliper		Refer to "FRONT BRAKE" on page 4-17.
	Number plate		Refer to "GENERAL CHASSIS" on page 4-1.
1	Protector	1	
2	Upper bracket pinch bolt	2	Loosen.
3	Damper assembly	1	Loosen.
4	Lower bracket pinch bolt	2	Loosen.
5	Front fork leg	1	["a" = 2 mm (0.1 in)]

Disassembling the front fork leg

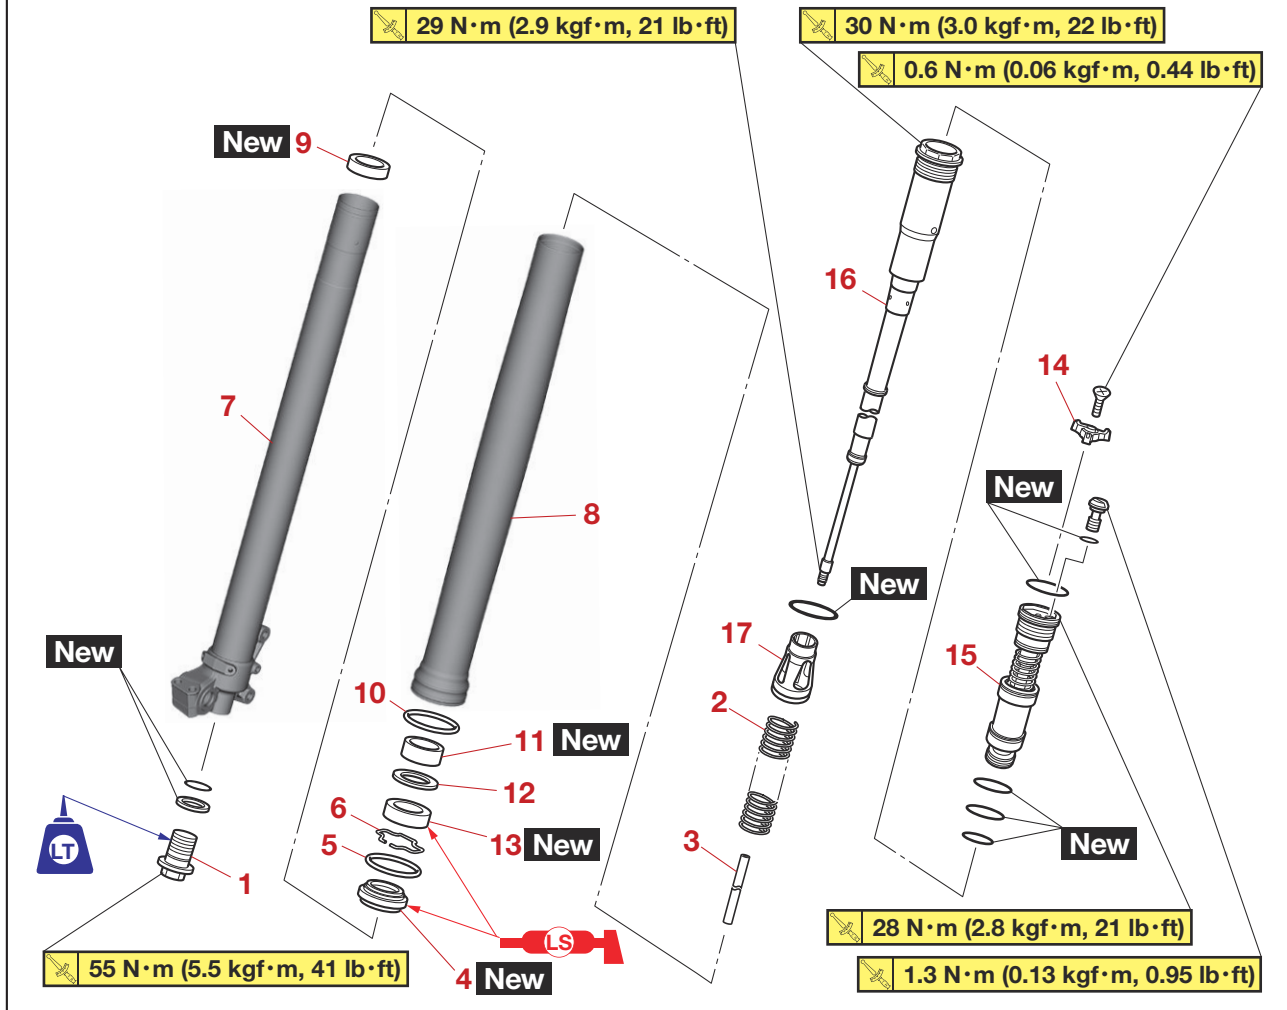

Order	Job/Parts to remove	Q'ty	Remarks
1	Adjuster	1	
2	Fork spring	1	
3	Damper adjusting rod	1	
4	Dust seal	1	
5	Scraper	1	
6	Stopper ring	1	
7	Inner tube	1	
8	Outer tube	1	
9	Piston metal	1	
10	Protector guide	1	
11	Slide metal	1	
12	Washer	1	
13	Oil seal	1	
14	Adjuster knob	1	
15	Base valve	1	
16	Damper assembly	1	
17	Upper spring seat	1	

EAM30055

REMOVING THE FRONT FORK LEGS

1. Use a maintenance stand to raise the front wheel off the ground.

EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

TIP

Record the adjusting screw setting position before loosening the adjuster and the base valve.

2. Loosen:
 - Upper bracket pinch bolt
 - Damper assembly
 - Lower bracket pinch bolt

EWA20350

WARNING


Before loosening the upper and lower bracket pinch bolts, support the front fork leg.

TIP

Before removing the front fork leg from the vehicle, loosen the damper assembly "1" with the cap bolt ring wrench "2".



Cap bolt ring wrench
90890-01501
Cap bolt ring wrench
YM-01501

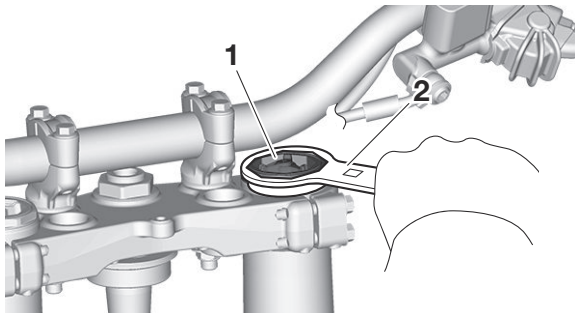

3. Remove:
 - Front fork leg

EAM30056

DISASSEMBLING THE FRONT FORK LEGS

1. Drain:
 - Fork oil
2. Remove:
 - Adjuster "1"
 (from the inner tube)

TIP

- While compressing the inner tube "2", set the cap bolt ring wrench "4" between the inner tube and locknut "3".

- Hold the locknut and remove the adjuster.


ECA24520

NOTICE

Do not remove the locknut as the damper rod may go into the damper assembly and not be taken out.



Cap bolt ring wrench
90890-01501
Cap bolt ring wrench
YM-01501

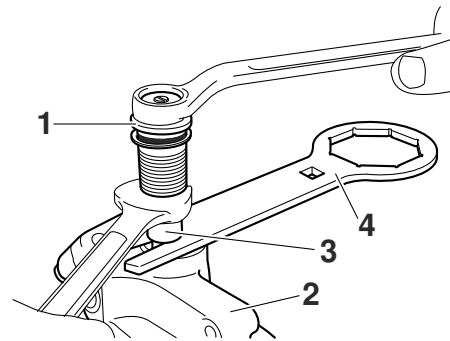


3. Remove:
 - Dust seal "1"
 - Stopper ring "2"
 (with a flat-head screwdriver)


ECA14180

NOTICE

Do not scratch the inner tube.

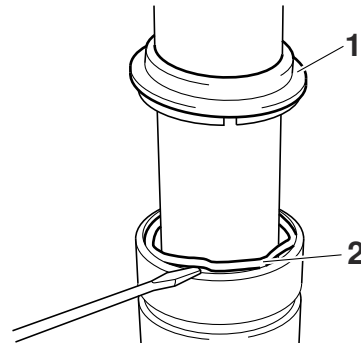

4. Remove:
 - Inner tube "1"
 - a. Push in slowly "a" the inner tube just before it bottoms out and then pull it back quickly "b".
 - b. Repeat this step until the inner tube can be pulled out from the outer tube.

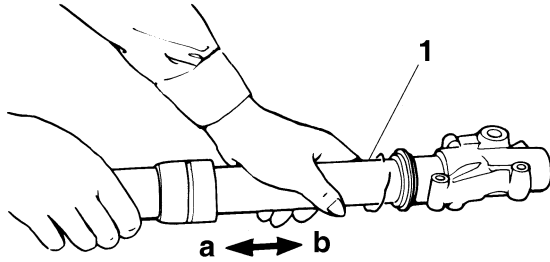


5. Remove:
- Adjuster knob
 - Base valve "1"
(from the damper assembly)

TIP

- Before loosening the damping force adjuster, record the setting position.
- Unless the damping force adjuster is fully loosened, correct damping characteristic cannot be obtained after installation.
- Hold the damper assembly with the cap bolt ring wrench "2" and use the cap bolt wrench "3" to remove the base valve.



Cap bolt wrench
90890-01911
Cap bolt ring wrench
90890-01501
Cap bolt ring wrench
YM-01501

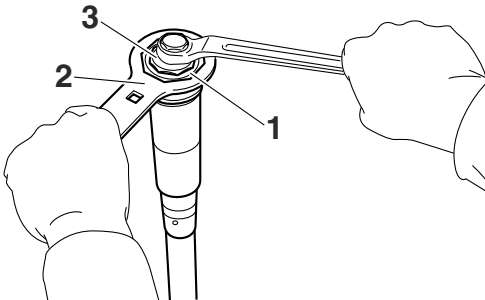

EAM30057

CHECKING THE FRONT FORK LEGS

1. Check:

- Inner tube surface
Scratches → Repair or replace.
Use #1000 grit wet sandpaper.
Damaged oil lock piece → Replace.
- Inner tube bends
Out of specification → Replace.
Use the dial gauge.



Inner tube bending limit
0.2 mm (0.01 in)

TIP

The bending value is shown by one half of the dial gauge reading.

EWA13650


WARNING

Do not attempt to straighten a bent inner tube as this may dangerously weaken it.

2. Check:
- Outer tube
Scratches/wear/damage → Replace.
3. Measure:
- Fork spring free length "a"
Out of specification → Replace.



Fork spring free length limit
492.0 mm (19.37 in)

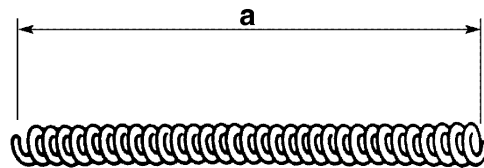


4. Check:

- Damper assembly "1"
Bend/damage → Replace.
- O-ring "2"
Wear/damage → Replace.

ECA14200


NOTICE

- The front fork leg has a built-in damper adjusting rod and a very sophisticated internal construction, which are particularly sensitive to foreign material.
- When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.

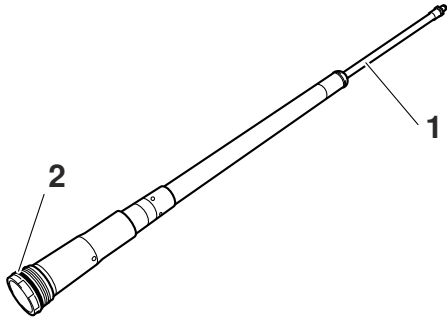


5. Check:

- Base valve “1”
Wear/damage → Replace.
Contamination → Clean.
- O-ring “2”
Wear/damage → Replace.
- Base valve bushing
Wear/damage → Replace.
- Fork spring “3”
Damage/fatigue → Replace the base valve.
- Bleed screw “4”
Wear/damage → Replace.

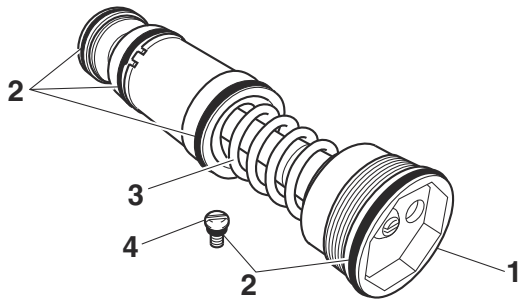


6. Check:

- Upper spring seat “1”
(contacting surface “a”)
Wear/damage → Replace.

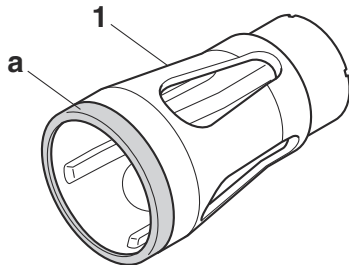


7. Check:

- Adjuster “1”
- O-ring “2”
Wear/damage → Replace.

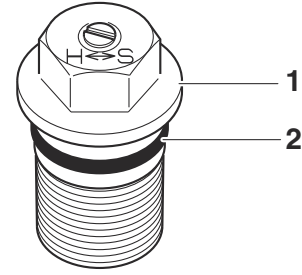

8. Check:

- Scraper “1”
Damage → Replace.

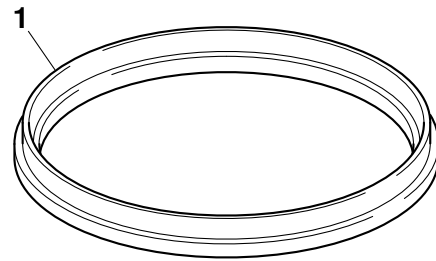

EAM30058

ASSEMBLING THE FRONT FORK LEGS

EWA13660

⚠ WARNING

- **Make sure the oil levels in both front fork legs are equal.**
- **Uneven oil levels can result in poor handling and a loss of stability.**

TIP

- When assembling the front fork leg, be sure to replace the following parts:
 - Inner tube bushing
 - Slide metal
 - Oil seal
 - Copper washer
- Before assembling the front fork leg, make sure that all of the components are clean.

1. Stretch the damper assembly fully.

2. Fill:

- Damper assembly



Recommended oil
Yamaha Suspension Oil S1
Standard oil amount
216 cm³ (7.30 US oz, 7.62 Imp.oz)

ECA24530


NOTICE

- Be sure to use the recommended oil. Other oils may have an adverse effect on front fork performance.
- When disassembling and assembling the front fork leg, take care not to allow any foreign material to enter the front fork.

3. After filling, pump the damper assembly "1" slowly up and down (about 200 mm (7.9 in) stroke) several times to bleed the damper assembly of air.

TIP



Avoid excessive full stroke. A stroke of 200 mm (7.9 in) or more will cause air to enter. In this case, repeat the steps (1) to (3).

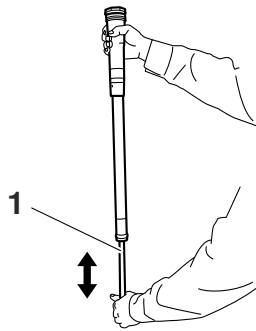

4. Measure:
- Oil level (left and right) "a"
- Out of specification → Regulate.




Standard oil level
145–148 mm (5.71–5.83 in)
From top of fully stretched damper assembly.

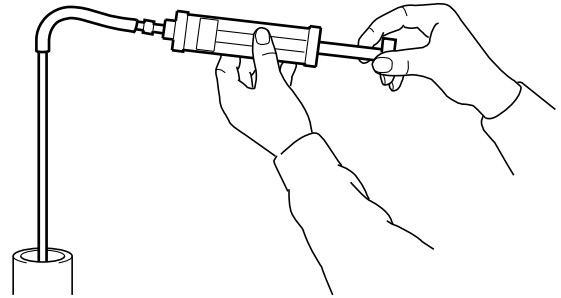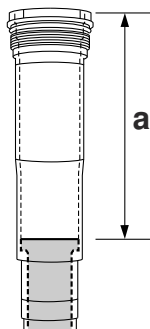

5. Tighten:
- Locknut "1"

TIP


Fully finger tighten the locknut onto the damper assembly.



6. Install:
- Base valve "1"
- (to the damper assembly "2")

TIP

First bring the damper rod pressure to a maximum. Then install the base valve while releasing the damper rod pressure.

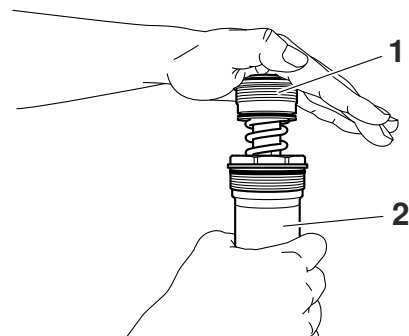

7. Check:
- Damper assembly
- Not fully stretched → Repeat the steps (1) to (7).
8. Tighten:
- Base valve "1"
 - Screw (adjuster knob)




Base valve
28 N·m (2.8 kgf·m, 21 lb·ft)
Screw (adjuster knob)
0.6 N·m (0.06 kgf·m, 0.44 lb·ft)

TIP


Hold the damper assembly with the cap bolt ring wrench “2” and use the cap bolt wrench “3” to tighten the base valve.



Cap bolt wrench
90890-01911
Cap bolt ring wrench
90890-01501
Cap bolt ring wrench
YM-01501

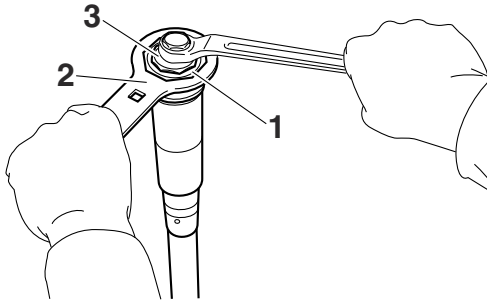

9. After filling, pump the damper assembly “1” slowly up and down more than 10 times to distribute the fork oil.

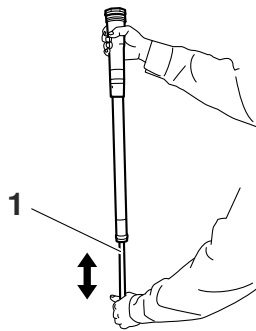


10. While protecting the damper assembly “1” with a cloth and compressing fully, allow excessive oil to overflow on the base valve side.

ECA24540

NOTICE


Take care not to damage the damper assembly.

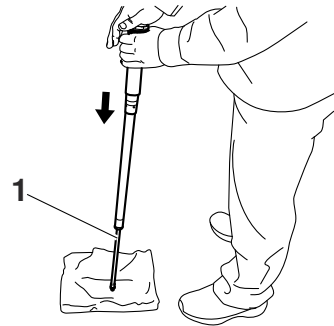

11. Allow the overflowing oil to escape at the hole “a” in the damper assembly.


TIP

The overflow measures about 10 cm³ (0.34 US oz, 0.35 Imp.oz).

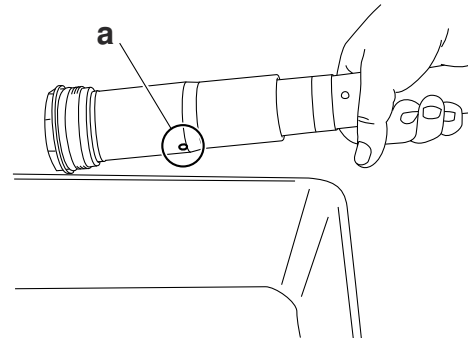

12. Check:

- Damper assembly smooth movement
- Tightness/binding/rough spots → Repeat the steps (1) to (12).

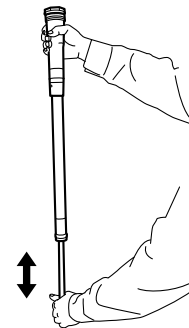

13. Install:

- Dust seal “1” **New**
- Scraper “2”
- Stopper ring “3”
- Oil seal “4” **New**
- Washer “5”
- Slide metal “6” **New**
 (to the inner tube “7”)



ECA24550

NOTICE

Make sure that the numbered side of the oil seal faces bottom side.

TIP

- Apply the lithium-soap-based grease on the dust seal lip and oil seal lip.
- Apply the fork oil on the inner tube.
- Install the scraper to the inner tube as shown in the illustration.
- When installing the oil seal, use vinyl seat “a” with fork oil applied to protect the oil seal lip.

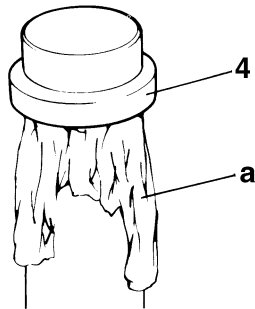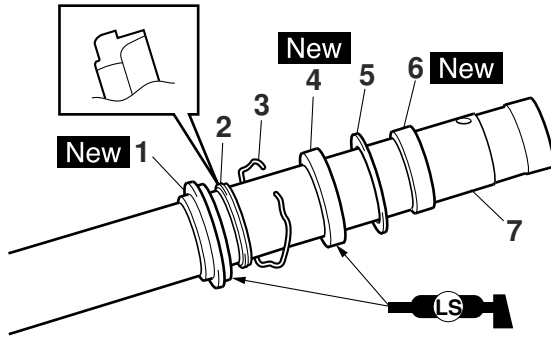


14. Install:

- Piston metal “1” **New**


TIP

Install the piston metal onto the slot on inner tube.

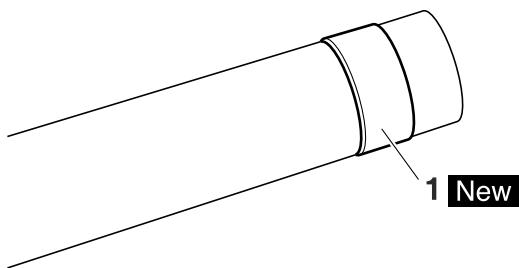

15. Install:

- Outer tube “1”
(to the inner tube “2”)

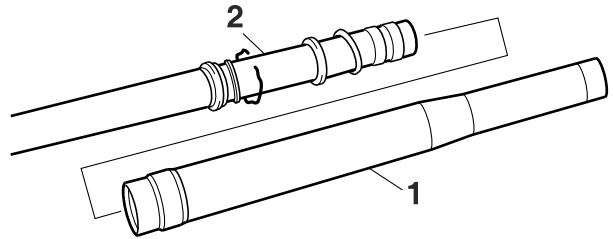

16. Install:



- Slide metal “1” **New**
- Washer “2”
(to the outer tube)

TIP

Press the slide metal into the outer tube with fork seal driver “3”.



**Fork seal driver
90890-01917
Fork seal driver (48)
YM-A0948**

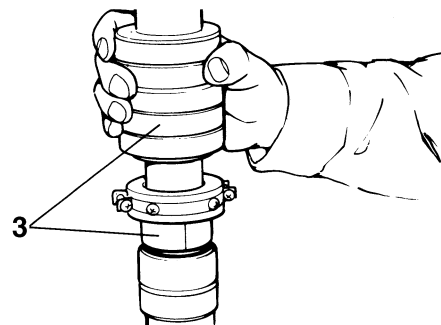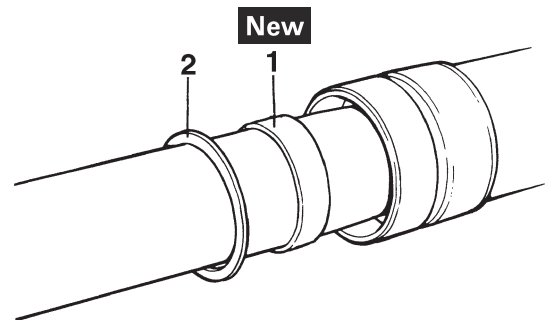

17. Install:


- Oil seal “1” **New**

TIP

Using a fork seal driver “2”, press the oil seal in until the stopper ring groove fully appears.



Fork seal driver
90890-01917
Fork seal driver (48)
YM-A0948

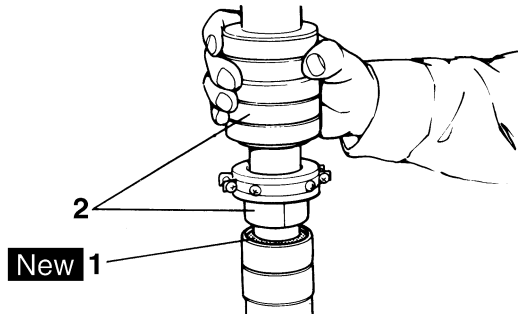


18. Install:

- Stopper ring "1"

TIP

Fit the stopper ring correctly in the groove in the outer tube.

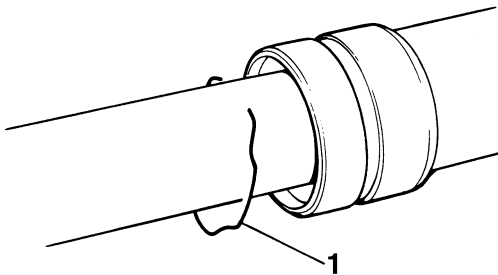


19. Install:

- Scraper "1"
- Dust seal "2" **New**


TIP

Apply lithium-soap-based grease on the inner tube.

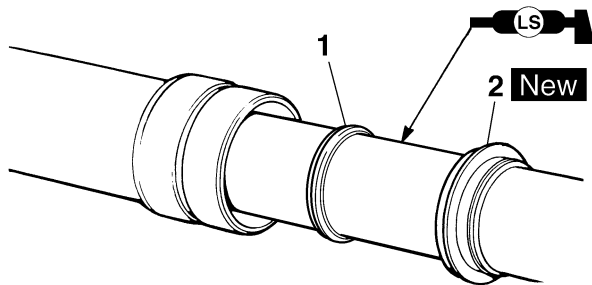

20. Check:

- Inner tube smooth movement
Tightness/binding/rough spots → Repeat the steps (13) to (20).

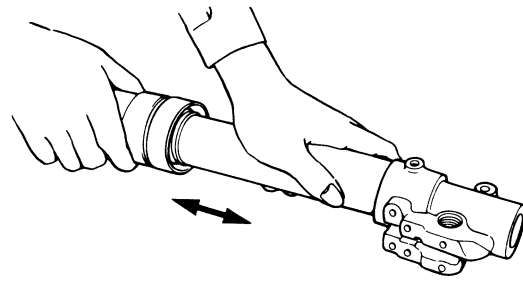

21. Measure:


- Distance "a"

Out of specification → Turn the locknut to specification.



Distance "a"

16 mm (0.63 in) or more
Between the damper assembly
"1" bottom and locknut "2" bot-
tom.

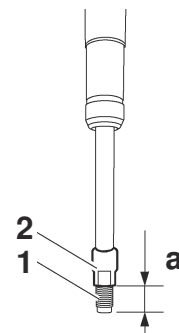


22. Install:

- Upper spring seat "1"
- Fork spring "2"
(to the damper assembly "3")

TIP

Install the upper spring seat with its larger dia. end "a" facing the fork spring.

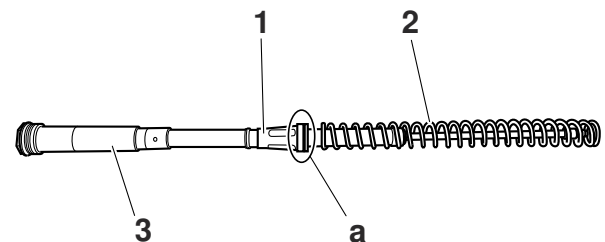


23. Install:

- Damper assembly "1"
(to the inner tube "2")

ECA24560

NOTICE

Allow the damper assembly to slide slowly down the inner tube until it contacts the bottom of the inner tube. Be careful not to damage the inner tube.

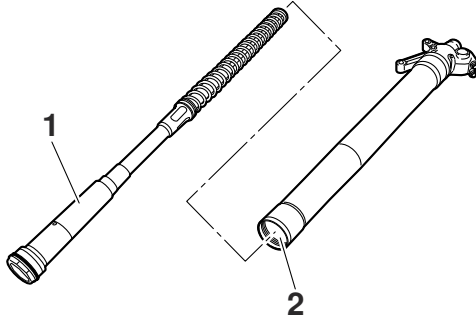


24. Loosen:

- Rebound damping force adjuster “1”

TIP

- Before loosening the damping force adjuster, record the setting position.
- Unless the damping force adjuster is fully loosened, correct damping characteristic cannot be obtained after installation.

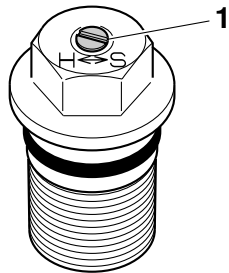

25. Install:


- Damper adjusting rod “1”
- Copper washer “2” **New**
- Adjuster “3”
(to the damper assembly “4”)

TIP

- While compressing the inner tube “5”, set the cap bolt ring wrench “7” between the inner tube and locknut “6”.
- Fully finger tighten the adjuster onto the damper assembly.



Cap bolt ring wrench
90890-01501
Cap bolt ring wrench
YM-01501

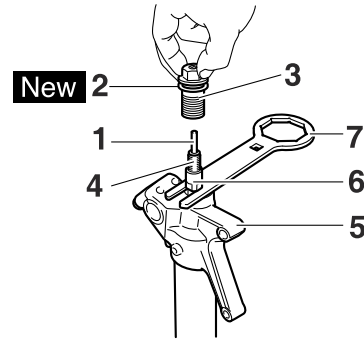

26. Measure:


- Gap “a” between the adjuster “1” and the locknut “2”
Out of specification → Retighten and readjust the locknut.



Gap “a” between the adjuster and the locknut
0.5–1.0 mm (0.02–0.04 in)

TIP

If it is installed with a gap out of specification, correct damping force cannot be obtained.

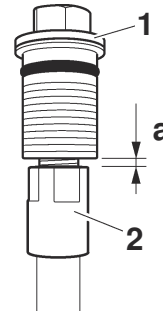

27. Tighten:


- Adjuster (damper assembly) “1”



Adjuster (damper assembly)
29 N·m (2.9 kgf·m, 21 lb·ft)

TIP

Hold the locknut “2” and tighten the adjuster.

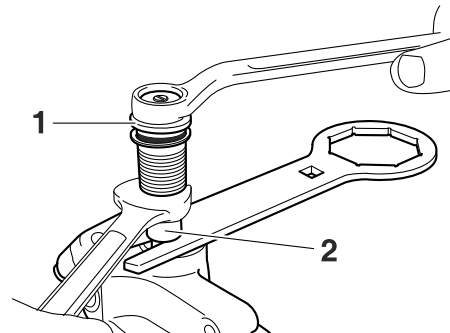


28. Install:

- Adjuster “1”

(to the inner tube)



Adjuster
55 N·m (5.5 kgf·m, 41 lb·ft)
LOCTITE®

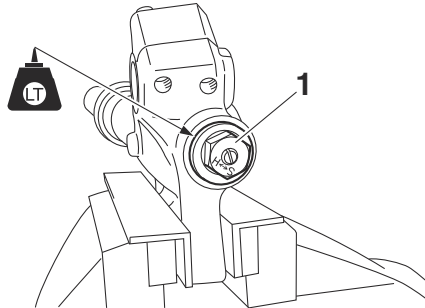

29. Fill:

- Front fork leg




Recommended oil
Yamaha Suspension Oil S1
Standard oil amount
280.0 cm³ (9.47 US oz, 9.88
Imp.oz)
Extent of adjustment
260–365 cm³ (8.79–12.34 US oz,
9.17–12.87 Imp.oz)

ECA24570

NOTICE

- Be sure to use the recommended oil. Other oils may have an adverse effect on front fork performance.
- When disassembling and assembling the front fork leg, do not allow any foreign material to enter the front fork.

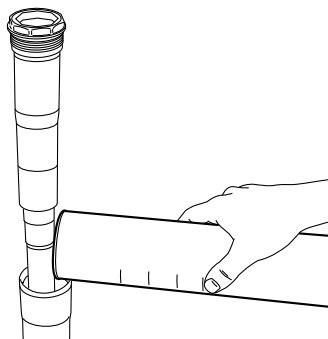


30. Install:

- Damper assembly “1”
 (to the outer tube)


TIP

Temporarily tighten the damper assembly.

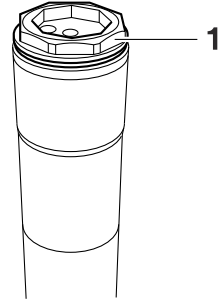

31. Install:

- Protector guide “1”

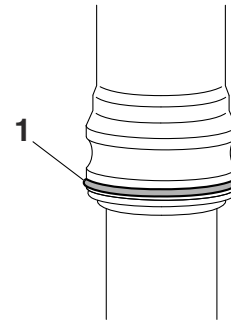

EAM30059


INSTALLING THE FRONT FORK LEGS

1. Install:

- Front fork “1”

TIP

- Temporarily tighten the lower bracket pinch bolts.
- Do not tighten the upper bracket pinch bolts yet.

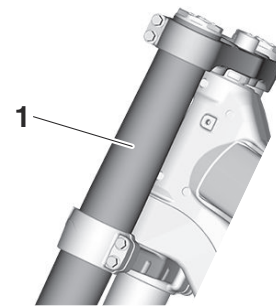

2. Tighten:

- Damper assembly “1”




Damper assembly
30 N·m (3.0 kgf·m, 22 lb·ft)

TIP

Use the cap bolt ring wrench “2” to tighten the damper assembly.



Cap bolt ring wrench
90890-01501
Cap bolt ring wrench
YM-01501

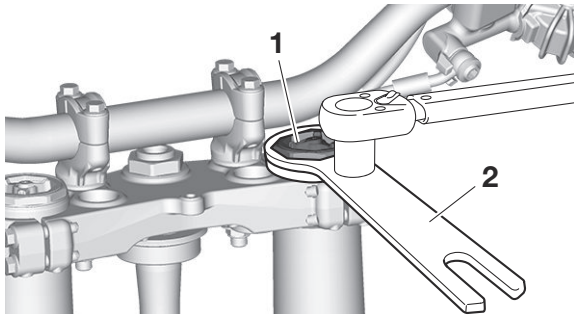


3. Adjust:

- Front fork top end “a”



Front fork top end (standard) “a”
2 mm (0.1 in)

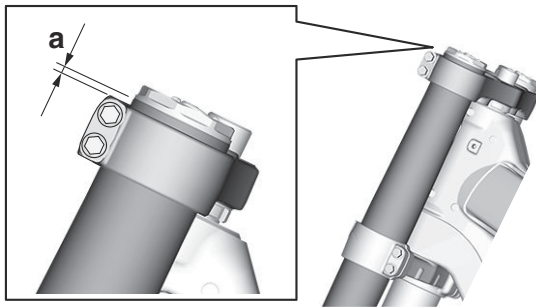

4. Tighten:

- Upper bracket pinch bolt “1”



Upper bracket pinch bolt
21 N·m (2.1 kgf·m, 15 lb·ft)

- Lower bracket pinch bolt “2”




Lower bracket pinch bolt
21 N·m (2.1 kgf·m, 15 lb·ft)

EWA19320



WARNING

Tighten the lower bracket to specified torque. If torqued too much, it may cause the front fork to malfunction.

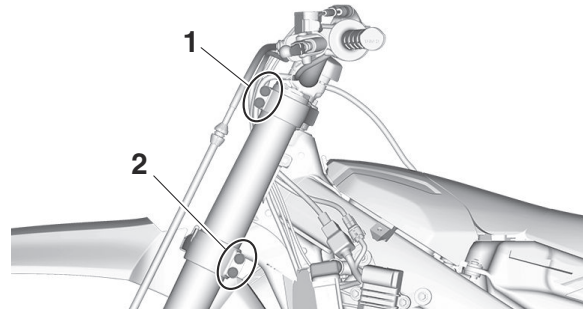


5. Install:

- Protector “1”
- Front fork protector bolt “2”



Front fork protector bolt
7 N·m (0.7 kgf·m, 5.2 lb·ft)

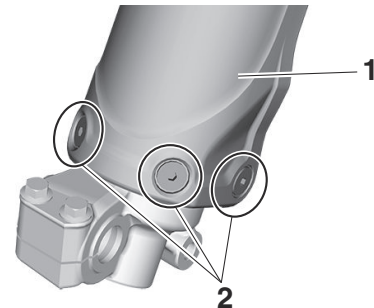


6. Adjust:

- Rebound damping force

TIP

Turn in the damping adjuster “1” finger-tight and then turn out to the originally set position.

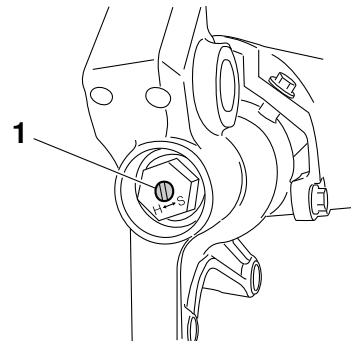


7. Adjust:

- Compression damping force

TIP


Turn in the damping adjuster “1” finger-tight and then turn out to the originally set position.

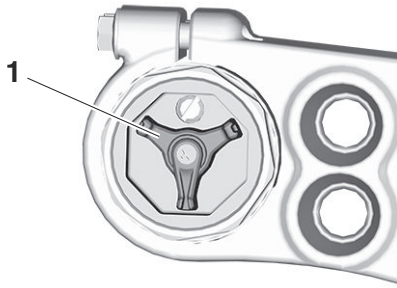

EAM20101

STEERING HEAD

Removing the lower bracket

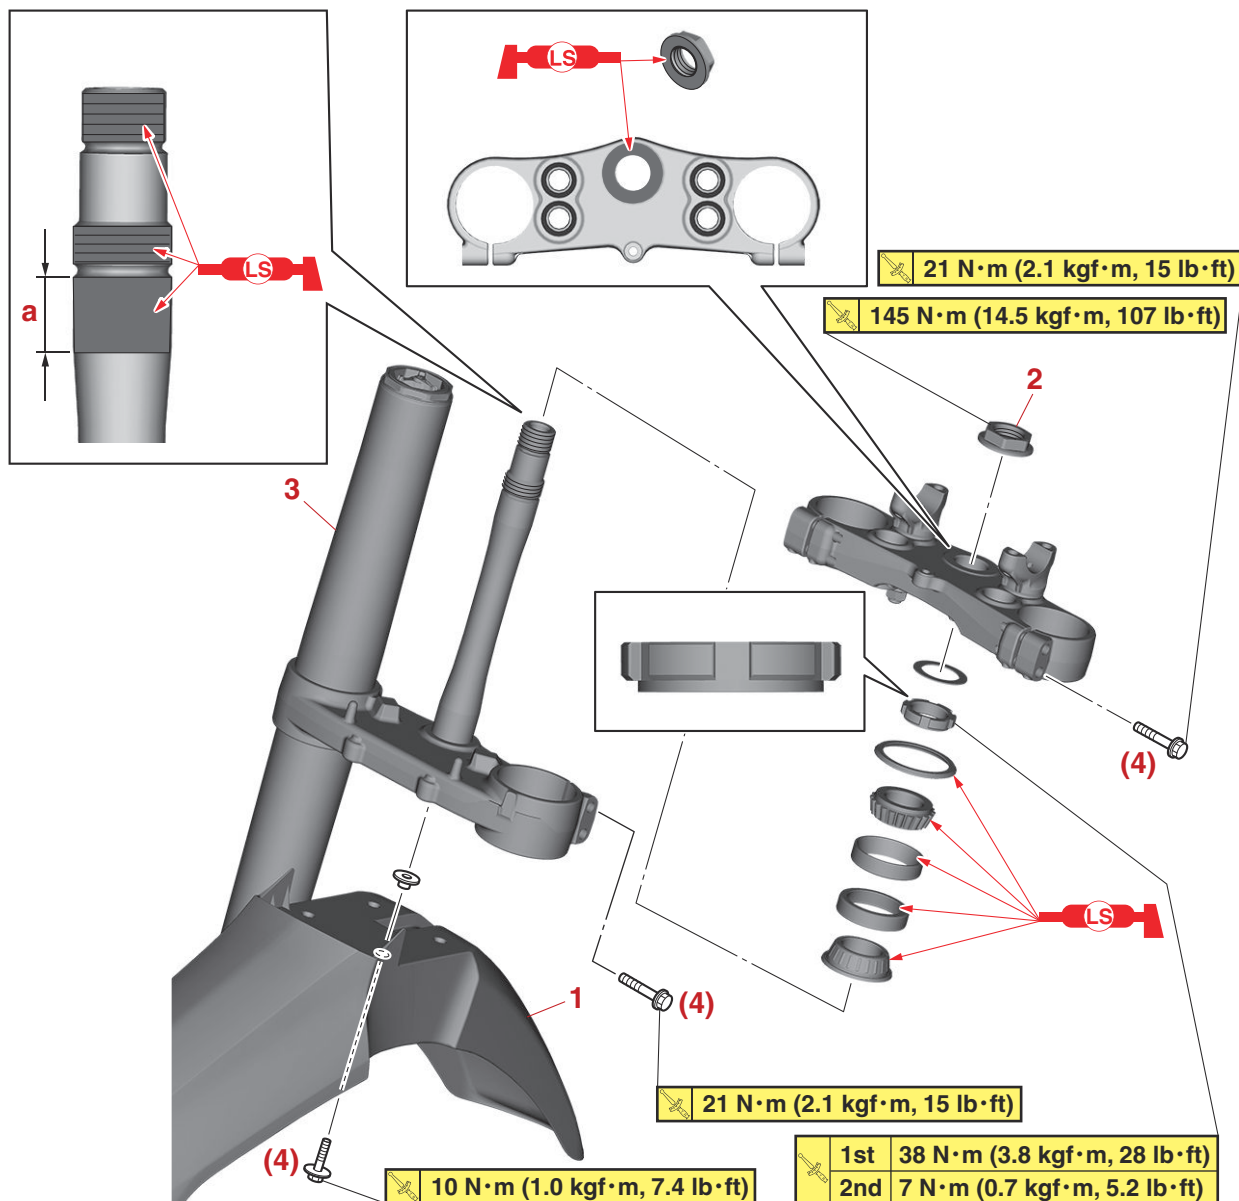

Order	Job/Parts to remove	Q'ty	Remarks
			Refer to "CHECKING AND ADJUSTING THE STEERING HEAD" on page 3-28.
			Use a maintenance stand to raise the front wheel off the ground.
	Number plate		Refer to "GENERAL CHASSIS" on page 4-1.
	Handlebar		Refer to "HANDLEBAR" on page 4-39.
1	Front fender	1	
2	Steering stem nut	1	
3	Front fork leg	2	Refer to "FRONT FORK" on page 4-45.

Removing the lower bracket

21 N·m (2.1 kgf·m, 15 lb·ft)

145 N·m (14.5 kgf·m, 107 lb·ft)

21 N·m (2.1 kgf·m, 15 lb·ft)

10 N·m (1.0 kgf·m, 7.4 lb·ft)

1st 38 N·m (3.8 kgf·m, 28 lb·ft)
2nd 7 N·m (0.7 kgf·m, 5.2 lb·ft)

Order **Job/Parts to remove** **Q'ty** **Remarks**

4	Upper bracket	1	
5	Washer	1	
6	Steering ring nut	1	
7	Lower bracket	1	["a" = Approx. 20.0 mm (0.79 in)]
8	Bearing race cover	1	
9	Upper bearing	1	
10	Bearing race	2	
11	Lower bearing	1	

EAM30060

REMOVING THE LOWER BRACKET

1. Use a maintenance stand to raise the front wheel off the ground.

EWA13120


WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Remove:
 - Ring nut "1"

TIP


Remove the ring nut with the steering nut wrench "2".

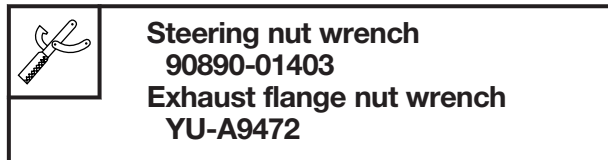

EWA13730

WARNING

Securely support the lower bracket so that there is no danger of it falling.

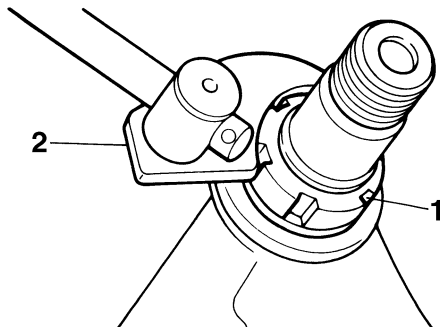

EAM30061

CHECKING THE STEERING HEAD

1. Wash with kerosene:
 - Bearing
 - Bearing race
2. Check:
 - Bearing
 - Bearing race

Damage/pitting → Replace.
3. Replace:
 - Bearing
 - Bearing race
 - a. Remove the bearing race from the steering head pipe with a long rod "1" and a hammer.
 - b. Remove the bearing race from the lower bracket with a chisel "2" and a hammer.
 - c. Install a new bearing race.



ECA14270

NOTICE

If the bearing race is not installed properly, the steering head pipe could be damaged.

TIP

Always replace the bearing and the bearing race as a set.

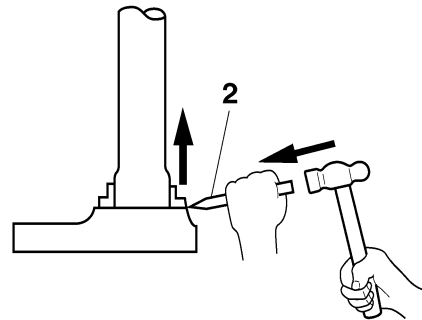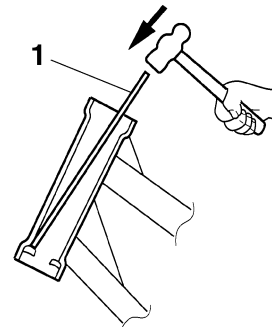

4. Check:
 - Upper bracket
 - Lower bracket (along with the steering stem)

Bends/cracks/damage → Replace.


EAM30062

INSTALLING THE STEERING HEAD

1. Install:
 - Lower bearing "1"

TIP

Apply the lithium-soap-based grease on the dust seal lip and bearing inner circumference.

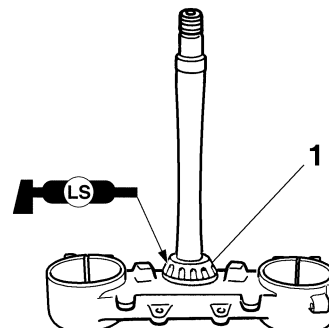


2. Install:

- Bearing race
- Upper bearing "1"
- Bearing race cover "2"

TIP

Apply the lithium-soap-based grease on the bearing and bearing race cover lip.

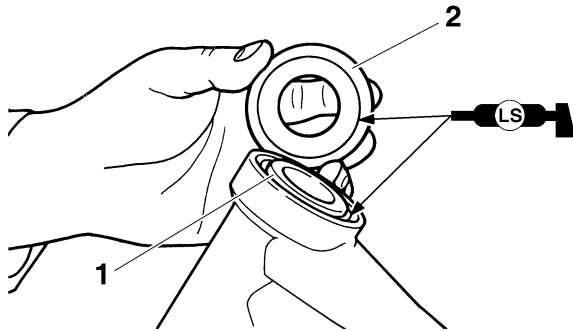


3. Install:

- Lower bracket "1"

TIP

Apply the lithium-soap-based grease on the bearing, the portion "a" and thread of the steering stem.

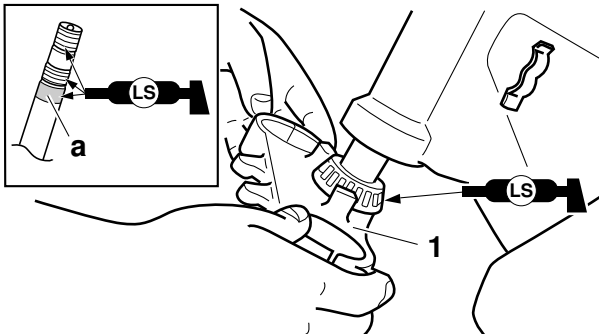

4. Install:

- Steering ring nut "1"





Steering ring nut
7 N·m (0.7 kgf·m, 5.2 lb·ft)

TIP


Install the steering ring nut with its stepped side "a" facing downward.

Tighten the steering ring nut with a steering nut wrench "2".

Refer to "CHECKING AND ADJUSTING THE STEERING HEAD" on page 3-28.

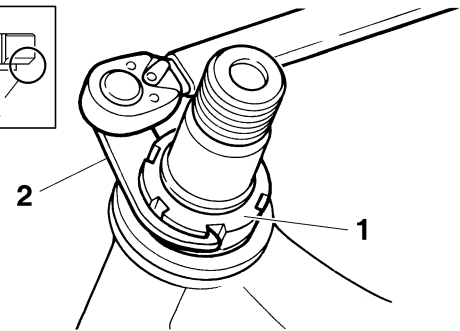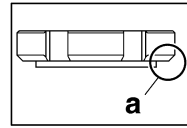


5. Check the steering stem by turning this lock to lock. If there is any binding, remove the steering stem and check the steering bearing.

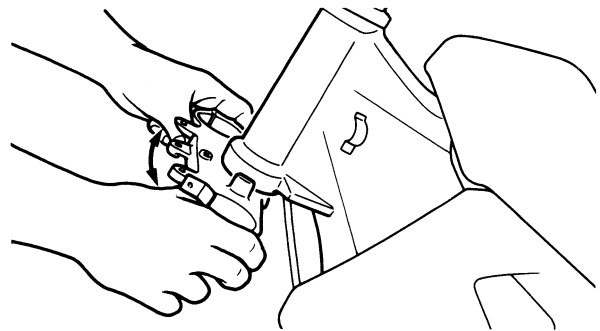

6. Install:

- Washer "1"

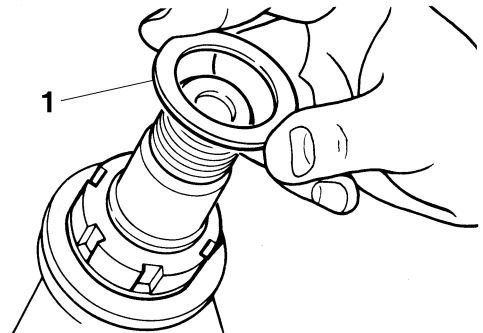


7. Install:

- Front fork "1"
- Upper bracket "2"

TIP

- Temporarily tighten the lower bracket pinch bolts.
- Do not tighten the upper bracket pinch bolts yet.

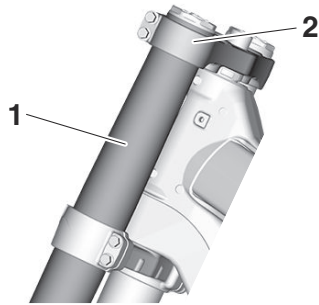

8. Install:


- Steering stem nut “1”



Steering stem nut
145 N·m (14.5 kgf·m, 107 lb·ft)

TIP

Apply the lithium-soap-based grease to the contact surface of the steering stem nut when installing.

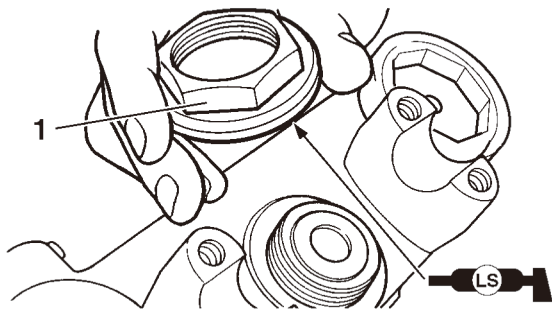


9. After tightening the nut, check the steering for smooth movement. If not, adjust the steering by loosening the steering ring nut little by little.

10. Adjust:

- Front fork top end “a”



Front fork top end (standard) “a”
2 mm (0.1 in)

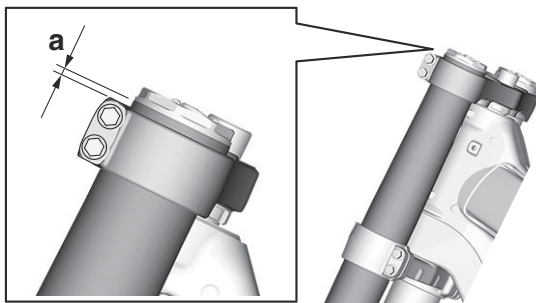

11. Tighten:

- Upper bracket pinch bolt “1”



Upper bracket pinch bolt
21 N·m (2.1 kgf·m, 15 lb·ft)

- Lower bracket pinch bolt “2”




Lower bracket pinch bolt
21 N·m (2.1 kgf·m, 15 lb·ft)

EWA19330

WARNING

Tighten the lower bracket to specified torque. If torqued too much, it may cause the front fork to malfunction.

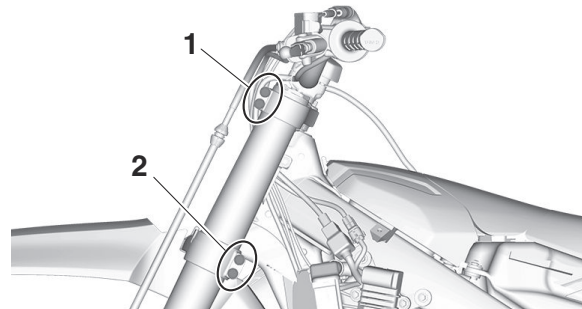


REAR SHOCK ABSORBER ASSEMBLY

EAM20102

REAR SHOCK ABSORBER ASSEMBLY


Removing the rear shock absorber assembly

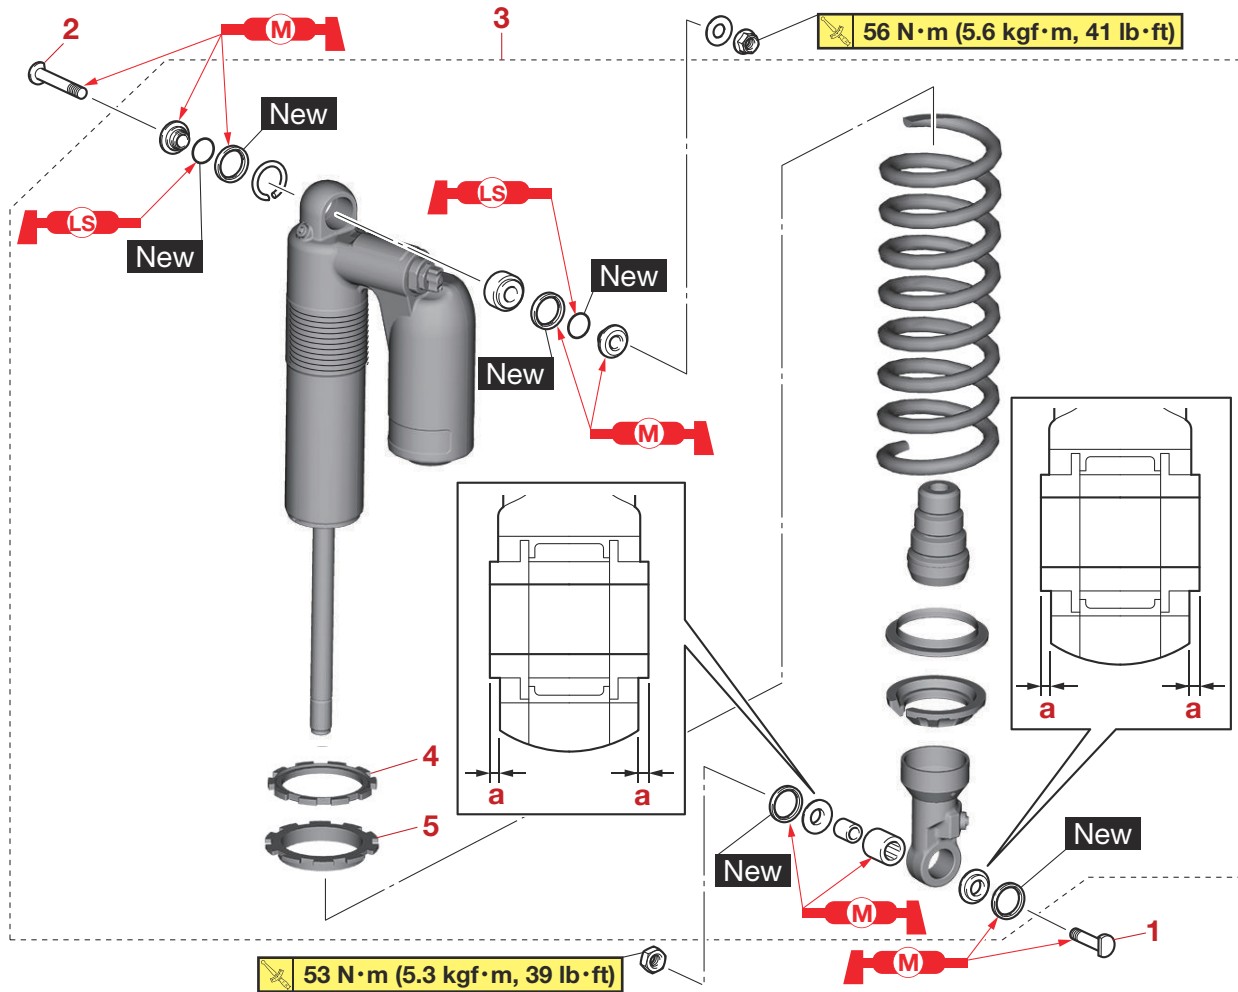

Order	Job/Parts to remove	Q'ty	Remarks
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
1	Rear shock absorber assembly lower bolt	1	
2	Rear shock absorber assembly upper bolt	1	
3	Rear shock absorber assembly	1	
4	Locknut	1	
5	Adjusting nut	1	

REAR SHOCK ABSORBER ASSEMBLY


Removing the rear shock absorber assembly

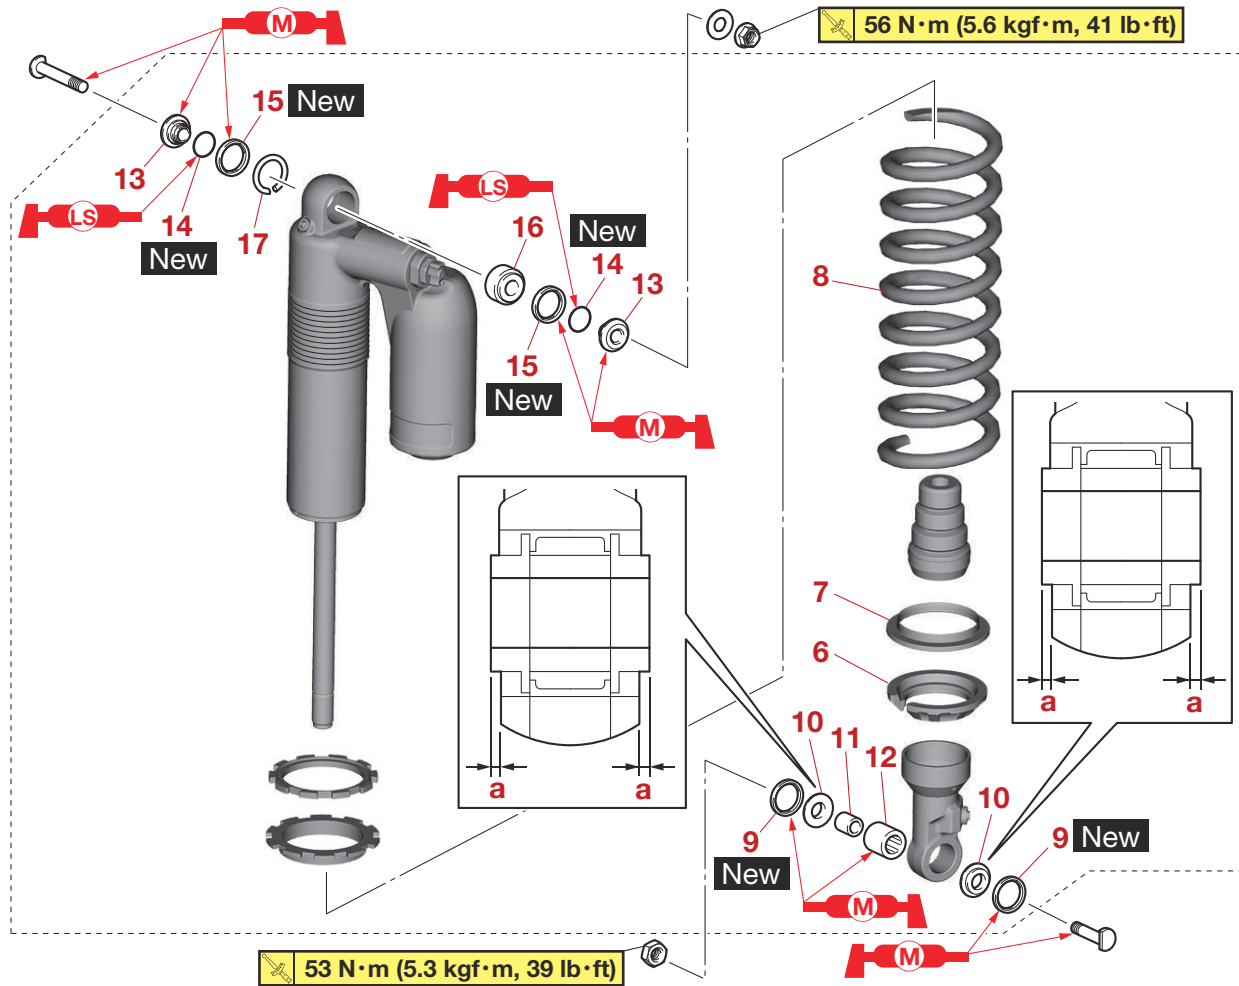

Order	Job/Parts to remove	Q'ty	Remarks
6	Spring guide (lower)	1	
7	Spring guide (upper)	1	
8	Spring	1	
9	Dust seal	2	
10	Collar	2	["a" = 0.3 mm (0.01 in) or more]
11	Bushing	1	
12	Bearing	1	
13	Collar	2	
14	O-ring	2	
15	Dust seal	2	
16	Bushing	1	
17	Stopper ring	1	

REAR SHOCK ABSORBER ASSEMBLY

Disassembling the relay arm

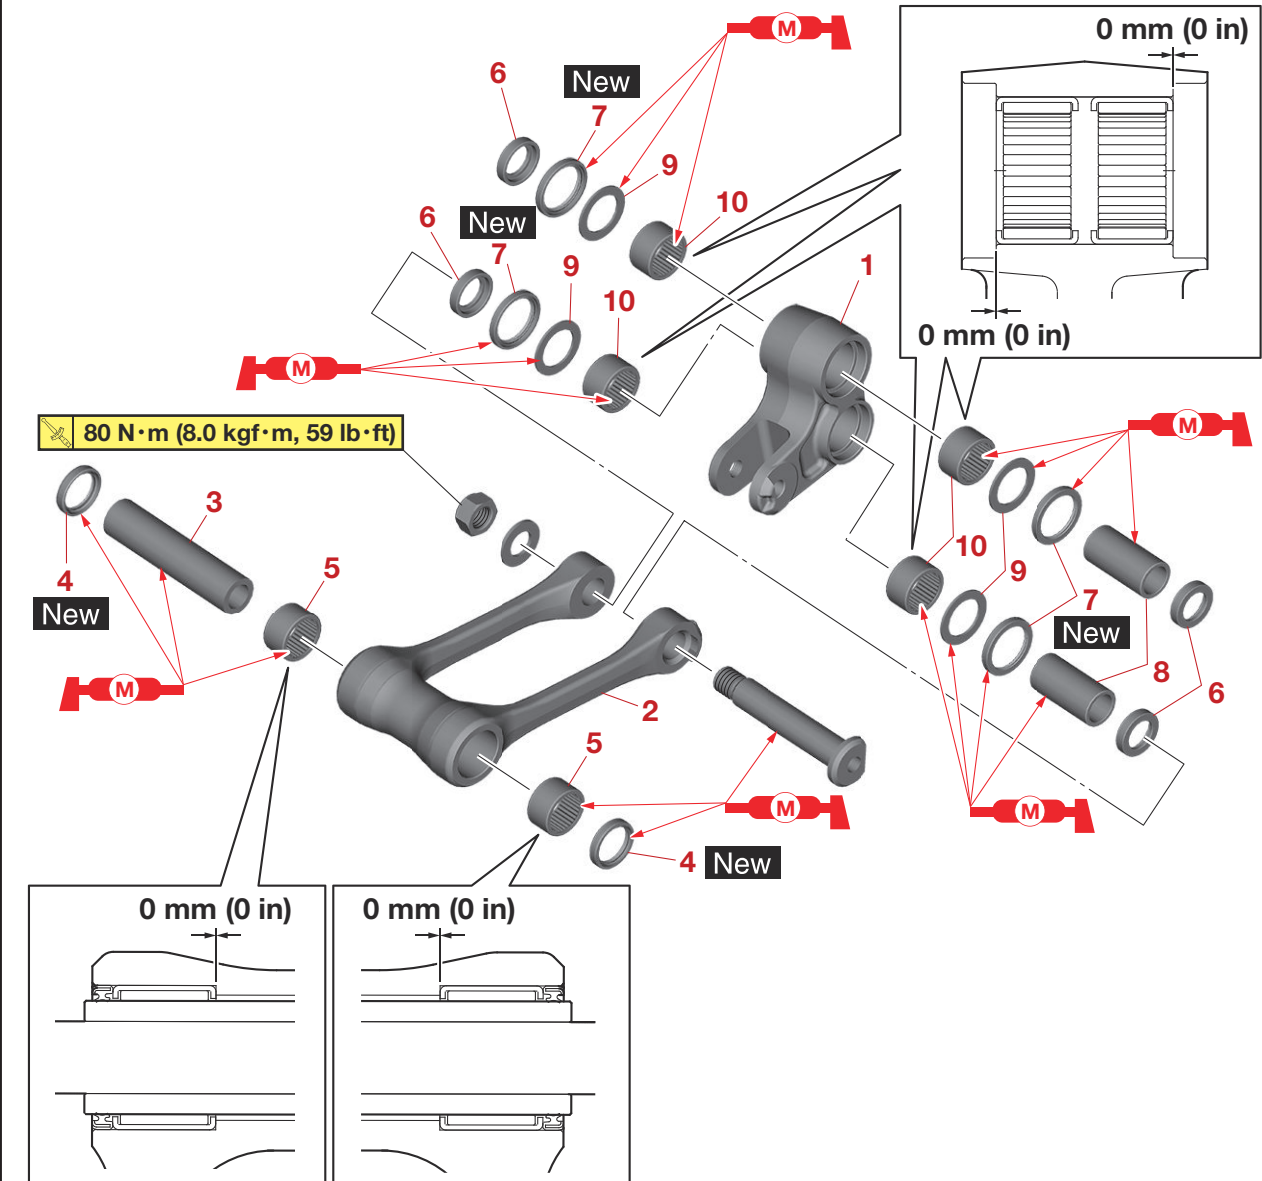

Order	Job/Parts to remove	Q'ty	Remarks
1	Relay arm	1	
2	Connecting arm	1	
3	Collar	1	
4	Oil seal	2	
5	Bearing	2	
6	Washer	4	
7	Oil seal	4	
8	Collar	2	
9	Washer	4	
10	Bearing	4	

REAR SHOCK ABSORBER ASSEMBLY

EAM30063

HANDLING THE REAR SHOCK ABSORBER

EWA13740

WARNING

This rear shock absorber contains highly compressed nitrogen gas. Before handling the rear shock absorber, read and make sure you understand the following information. The manufacturer cannot be held responsible for property damage or personal injury that may result from improper handling of the rear shock absorber.

- Do not tamper or attempt to open the rear shock absorber.
- Do not subject the rear shock absorber to an open flame or any other source of high heat. High heat can cause an explosion due to excessive gas pressure.
- Do not deform or damage the rear shock absorber in any way. Rear shock absorber damage will result in poor damping performance.

TIP

A break-in is required up to about 50 km of running.

EAM30064


DISPOSING OF A REAR SHOCK ABSORBER

Before disposing the rear shock absorber, be sure to extract the nitrogen gas from valve "1".

EWA19340

WARNING

- Wear protective glasses to prevent your eyes from damage due to possible gas or metal chips scattered.
- To dispose of a damaged or a worn-out rear shock absorber, take the unit to your Yamaha dealer for this disposal procedure.

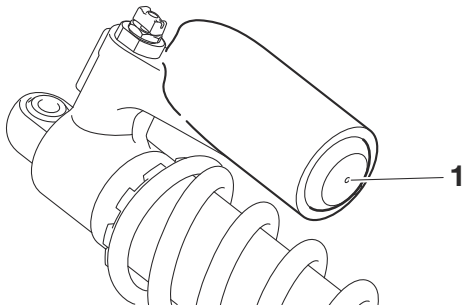

EAM30065

REMOVING THE REAR SHOCK ABSORBER ASSEMBLY

1. Use a maintenance stand to raise the rear

wheel off the ground.

EWA13120

WARNING


Securely support the vehicle so that there is no danger of it falling over.

2. Remove:

- Rear shock absorber assembly lower bolt "1"

TIP

While removing the rear shock absorber assembly lower bolt, hold the swingarm so that it does not drop down.

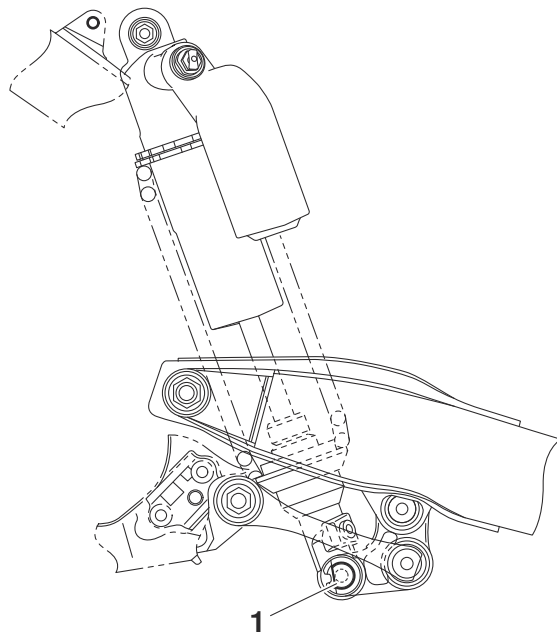

3. Remove:

- Rear shock absorber assembly upper bolt
- Rear shock absorber assembly

EAM30067

CHECKING THE REAR SHOCK ABSORBER ASSEMBLY

1. Check:

- Rear shock absorber rod
Bends/damage → Replace the rear shock absorber assembly.
- Rear shock absorber
Gas leaks/oil leaks → Replace the rear shock absorber assembly.
- Spring
Damage/wear → Replace.
- Spring guide
Damage/wear → Replace.
- Bearing
Damage/wear → Replace.
- Bolt

REAR SHOCK ABSORBER ASSEMBLY

Bends/damage/wear → Replace.

EAM30068

CHECKING THE CONNECTING ARM AND RELAY ARM

1. Check:
 - Connecting arm
 - Relay arm
 - Damage/wear → Replace.
2. Check:
 - Bearing
 - Collar
 - Damage/pitting/scratches → Replace the bearings and collars as a set.
3. Check:
 - Oil seal
 - Damage/pitting → Replace.

EAM30069

INSTALLING THE RELAY ARM

1. Lubricate:

- Oil seal
- Bearing
- Washer
- Collar




Recommended lubricant
Molybdenum disulfide grease

2. Install:

- Bearing “1”
- Washer “2”
- Oil seal “3” **New**
(into the relay arm “4”)
- Collar “5”



Installed depth “a”
0 mm (0 in)

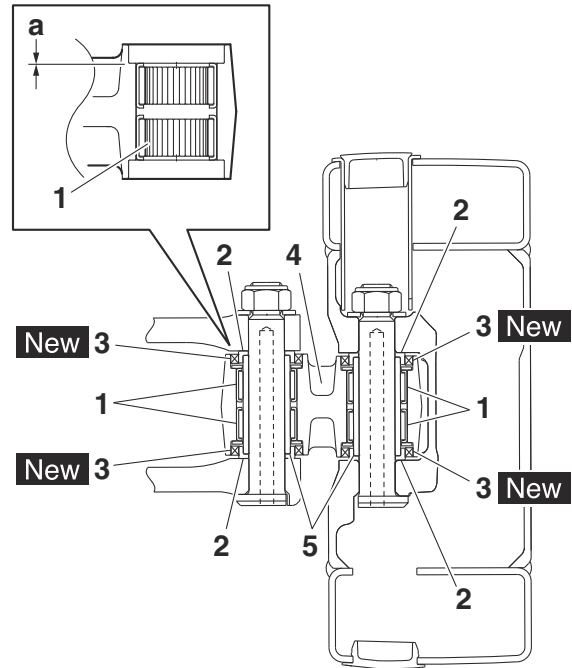

EAM30625


INSTALLING THE CONNECTING ARM

1. Install:

- Bearing “1”
- Oil seal “2” **New**
(into the connecting arm “3”)
- Collar “4”



Installed depth “a”
0 mm (0 in)

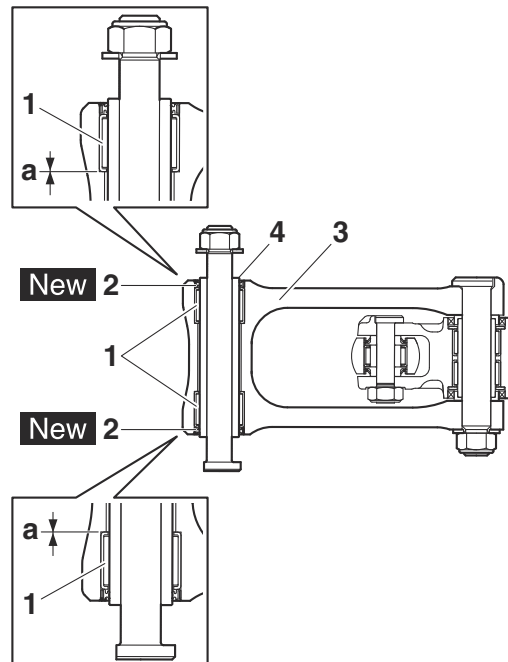

REAR SHOCK ABSORBER ASSEMBLY

EAM30070

INSTALLING THE REAR SHOCK ABSORBER ASSEMBLY

1. Lubricate:

- Bearing (lower side)
- Dust seal

	Recommended lubricant Molybdenum disulfide grease
---	--

ECA24580

NOTICE

Do not apply the grease to the bearing outer race because it will wear the rear shock absorber surface on which the bearing is press fitted.

2. Lubricate:

- O-ring

	Recommended lubricant Lithium-soap-based grease
---	--

3. Install:

- Bushing
- Stopper ring
(into the rear shock absorber assembly (upper side))

TIP

- Install the bushing parallel until the stopper ring groove appears by pressing its outer race.
- After installing the stopper ring, push back the bushing until it contacts the stopper ring.


4. Install:

- Bearing "1"
- Bushing "2"
- Collar "3"
- Dust seal "4" **New**
(into the rear shock absorber assembly (lower side))

TIP

Install the dust seals with their lips facing inward.

	Installed depth "a" 0.3 mm (0.01 in) or more
---	---

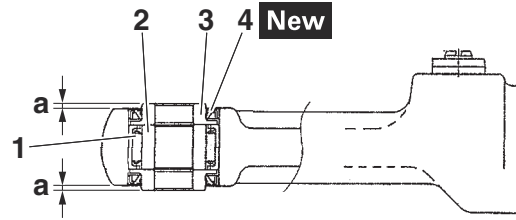

5. Lubricate:

- Connecting arm and frame bolt
- Relay arm and connecting arm bolt
- Relay arm and swingarm bolt
(circumference and threaded portion)
- Rear shock absorber assembly upper bolt
- Rear shock absorber assembly lower bolt

	Recommended lubricant Molybdenum disulfide grease
---	--

6. Install:

- Rear shock absorber assembly

TIP

- When installing the rear shock absorber assembly, lift up the swingarm.
- Install the rear shock absorber assembly upper bolt, and connecting arm bolt (frame side) from the right.
- Install the rear shock absorber assembly lower bolts, connecting arm bolt (relay arm side), and relay arm bolt (swingarm side) from the left.

7. Tighten:

- Rear shock absorber assembly upper nut

	Rear shock absorber assembly upper nut 56 N·m (5.6 kgf·m, 41 lb·ft)
---	--

- Connecting arm nut (frame side)

	Connecting arm nut (frame side) 80 N·m (8.0 kgf·m, 59 lb·ft)
---	---

- Connecting arm nut (relay arm side)

	Connecting arm nut (relay arm side) 80 N·m (8.0 kgf·m, 59 lb·ft)
---	---

- Relay arm nut (swingarm side)

	Relay arm nut (swingarm side) 70 N·m (7.0 kgf·m, 52 lb·ft)
---	---

REAR SHOCK ABSORBER ASSEMBLY

- Rear shock absorber assembly lower nut




**Rear shock absorber assembly
lower nut**
53 N·m (5.3 kgf·m, 39 lb·ft)

EAM20103

SWINGARM

Removing the swingarm

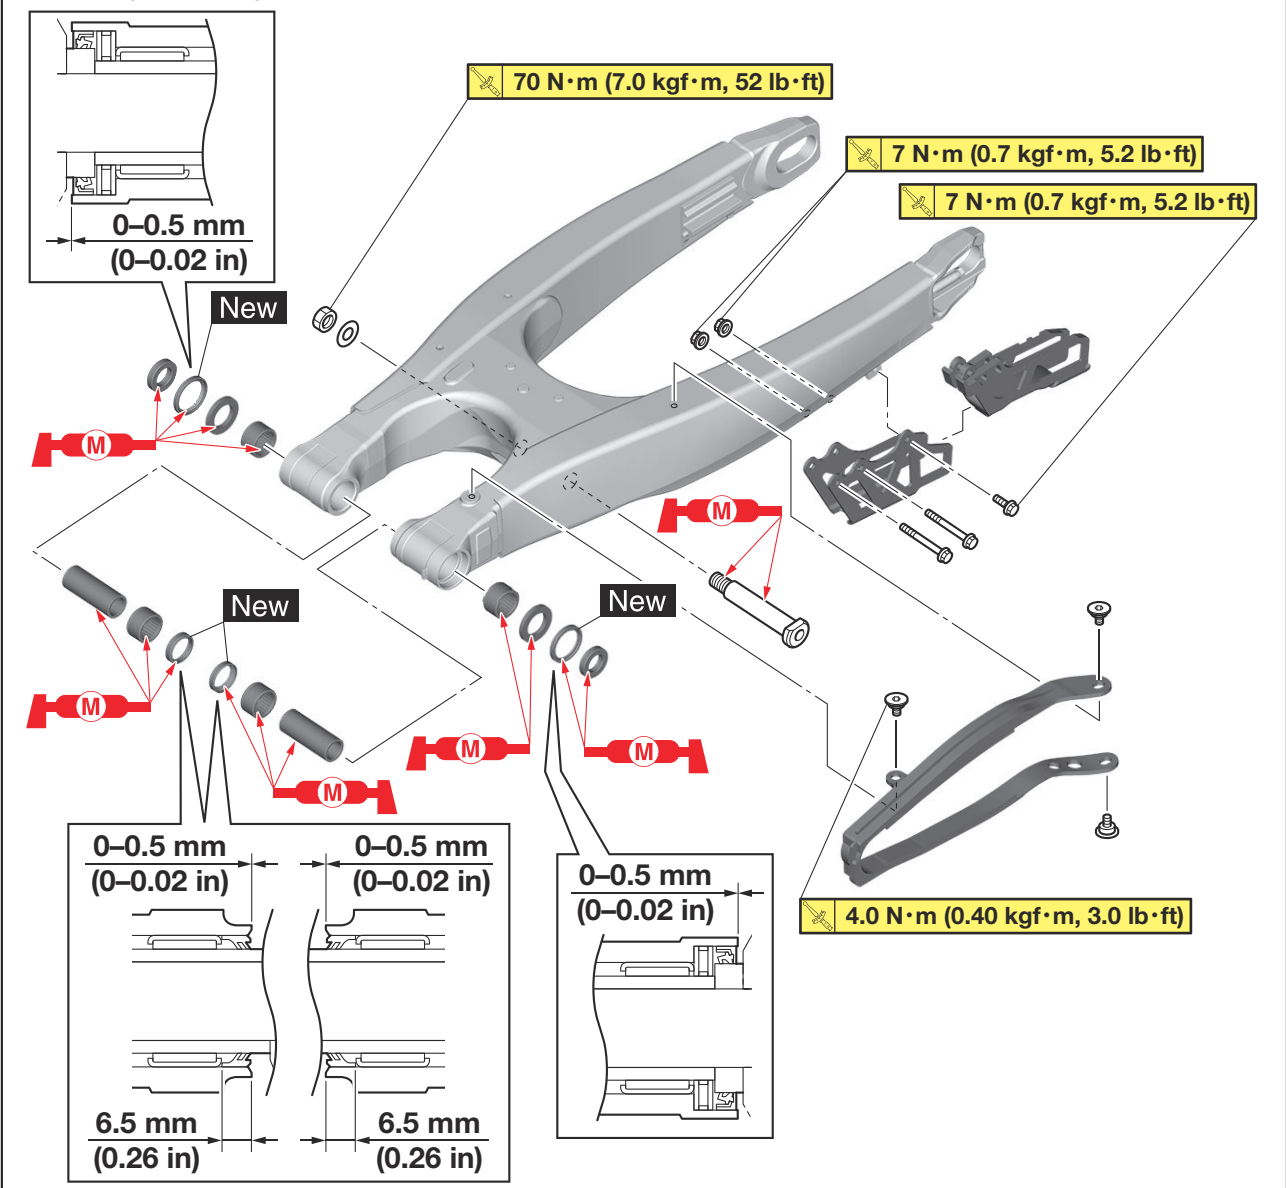

Order	Job/Parts to remove	Q'ty	Remarks
			Use a maintenance stand to raise the rear wheel off the ground.
	Rear brake caliper		Refer to "REAR BRAKE" on page 4-28.
	Bolt (brake pedal)		Refer to "ENGINE REMOVAL" on page 5-3.
	Drive chain		Refer to "CHAIN DRIVE" on page 4-74.

Removing the swingarm

The diagram illustrates the removal of a swingarm assembly. It shows the main swingarm body with various components numbered 1 through 8. Torque specifications are provided for several bolts: 70 N·m (7.0 kgf·m, 52 lb·ft) for the main swingarm bolt, 7 N·m (0.7 kgf·m, 5.2 lb·ft) for the drive chain support bolts, and 4.0 N·m (0.40 kgf·m, 3.0 lb·ft) for the drive chain support cover bolts. Clearance dimensions are specified as 0-0.5 mm (0-0.02 in) for several areas and 6.5 mm (0.26 in) for others. A 'New' label indicates that certain parts (2, 5, and 6) should be replaced with new ones. The diagram also shows the drive chain support and its cover.

Order	Job/Parts to remove	Q'ty	Remarks
1	Collar	2	
2	Oil seal	2	
3	Thrust bearing	2	
4	Bushing	2	
5	Oil seal	2	
6	Bearing	4	
7	Drive chain support	1	
8	Drive chain support cover	1	

EAM30071

REMOVING THE SWINGARM

1. Use a maintenance stand to raise the rear wheel off the ground.

EWA13120

WARNING


Securely support the vehicle so that there is no danger of it falling over.

2. Measure:

- Swingarm side play
- Swingarm vertical movement
 - a. Measure the tightening torque of the pivot shaft nut.

	Pivot shaft nut 75 N·m (7.5 kgf·m, 55 lb·ft)
---	---

- b. Check the swingarm side play “a” by moving the swingarm from side to side. If the swingarm has side-to-side play, check the bushings, the bearings, and the collars.
- c. Check the swingarm vertical movement “b” by moving the swingarm up and down.
If swingarm vertical movement is not smooth or if there is binding, check the bushings, the bearings, and the collars.

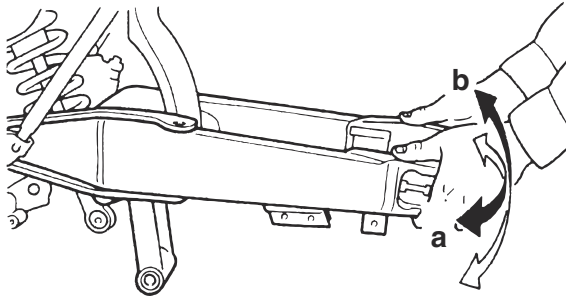

EAM30073

CHECKING THE SWINGARM

1. Check:
 - Swingarm
Bends/cracks/damage → Replace.
2. Check:
 - Pivot shaft
Roll the pivot shaft on a flat surface.
Bends → Replace.

EWA13770

WARNING

Do not attempt to straighten a bent pivot shaft.

3. Wash with kerosene:
 - Pivot shaft
 - Bushing

- Collar
 - Bearing
4. Check:
 - Oil seal
Damage → Replace.
 - Bearing
 - Bushing
Free play exists/unsmooth revolution/rust → Replace bearing and bushing as a set.

EAM30074

INSTALLING THE SWINGARM

1. Lubricate:

- Bearing
- Thrust bearing
- Collar
- Bushing
- Oil seal
- Pivot shaft

	Recommended lubricant Molybdenum disulfide grease
---	--


2. Install:

- Bearing “1”
- Oil seal “2” **New**
(to the swingarm)
- Collar “3”

	Installed depth “a” 0–0.5 mm (0–0.02 in) Installed depth “b” 6.5 mm (0.26 in)
---	--

TIP

First install the outer and then the inner bearings to a specified depth from inside.

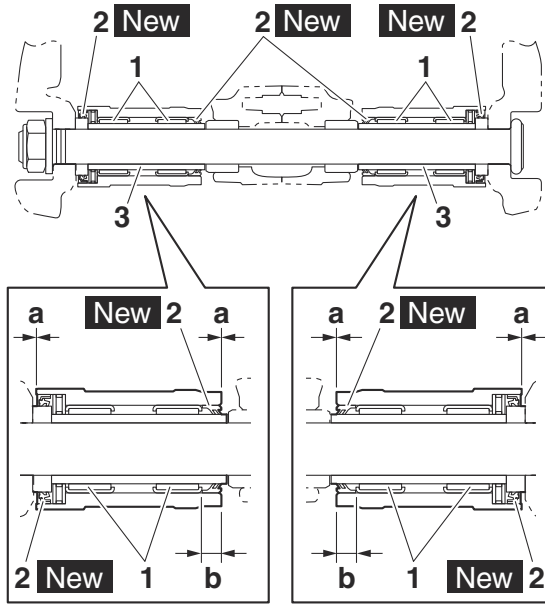

3. Install:

- Swingarm



Pivot shaft nut
75 N·m (7.5 kgf·m, 55 lb·ft)

TIP

- Install the pivot shaft from the right.
- Apply lithium-soap-based grease onto the threads and contact surface of the pivot shaft nut.

4. Install:



- Drive chain support “1”
- Drive chain support cover “2”



Drive chain support nut
7 N·m (0.7 kgf·m, 5.2 lb·ft)
Bolt (drive chain support)
7 N·m (0.7 kgf·m, 5.2 lb·ft)

TIP

- Align the projection “a” on the drive chain support with the part “b” of the drive chain support cover, and then install.
- Align the slit “c” in the drive chain support with swingarm stay as shown, and then install the drive chain support.

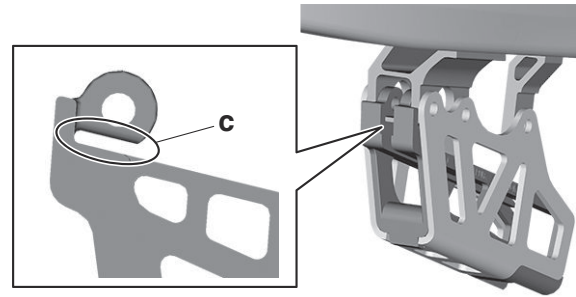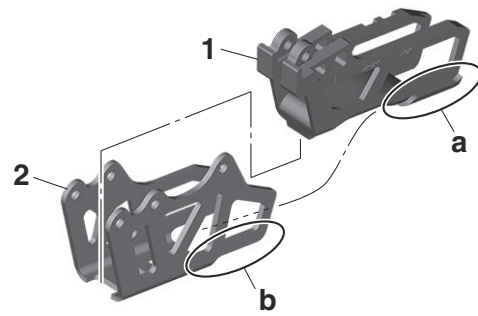

5. Install:

- Rear wheel
Refer to “REAR WHEEL” on page 4-12.

6. Adjust:

- Drive chain slack
Refer to “DRIVE CHAIN SLACK” on page 3-27.



Drive chain slack (Maintenance Stand)
50.0–60.0 mm (1.97–2.36 in)

EAM20104

CHAIN DRIVE

Removing the drive chain

1

2

3

4

5

New

7 N·m (0.7 kgf·m, 5.2 lb·ft)

90 N·m (9.0 kgf·m, 66 lb·ft)

Order	Job/Parts to remove	Q'ty	Remarks
1	Drive chain	1	
2	Drive sprocket cover	1	
3	Drive sprocket nut	1	
4	Lock washer	1	
5	Drive sprocket	1	

EAM30075

REMOVING THE DRIVE CHAIN

1. Stand the vehicle on a level surface.


EWA13120

WARNING

Securely support the vehicle so that there is no danger of it falling over.

2. Remove:

- Master link clip
- Master link “1”
- Master link plate “2”
- Drive chain “3”

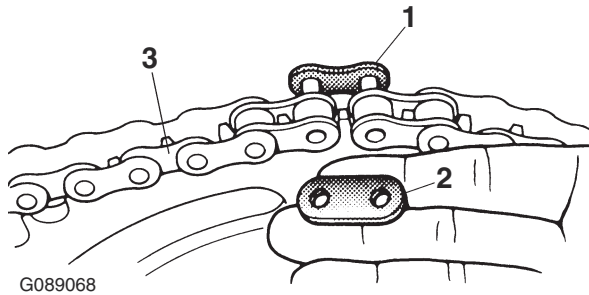

EAM30076


CHECKING THE DRIVE CHAIN

1. Measure:


- 15-link section of the drive chain
- Out of specification → Replace the drive chain.

	15-link length limit 242.9 mm (9.56 in)
---	--

- a. Measure the length “a” between the inner sides of the pins and the length “b” between the outer sides of the pins on a 15-link section of the drive chain as shown in the illustration.

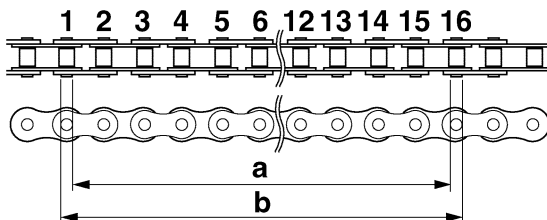

- b. Calculate the length “c” of the 15-link section of the drive chain using the following formula.
- Drive chain 15-link section length “c” = (length “a” between pin inner sides + length “b” between pin outer sides)/2

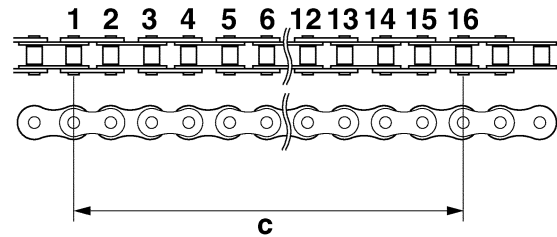


TIP

- When measuring a 15-link section of the drive chain, make sure that the drive chain is taut.
- Perform this procedure 2–3 times, at a different location each time.


2. Check:

- Drive chain
- Stiffness → Clean, lubricate, or replace.

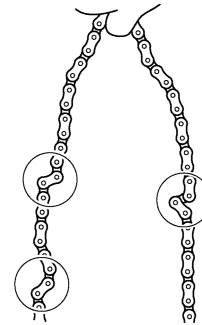


3. Clean:

- Drive chain
 - Wipe the drive chain with a clean cloth.
 - Put the drive chain in kerosene and remove any remaining dirt.
 - Remove the drive chain from the kerosene and completely dry it.

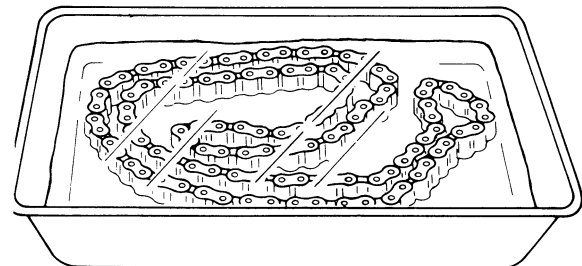

4. Check:

- Drive chain roller “1”
- Damage/wear → Replace the drive chain.
- Drive chain side plate “2”
- Damage/wear → Replace the drive chain.

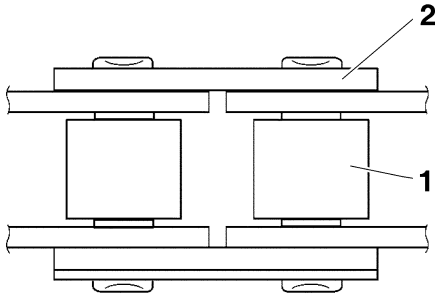

5. Lubricate:
- Drive chain

EAM30077


CHECKING THE DRIVE SPROCKET

1. Check:

- Drive sprocket

More than 1/4 tooth wear "a" → Replace the drive sprocket and the rear wheel sprocket as a set.

Bent tooth → Replace the drive sprocket and the rear wheel sprocket as a set.

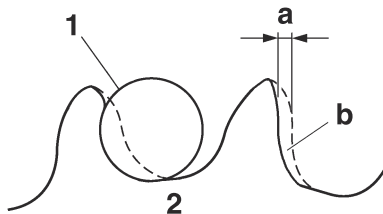

- b. Correct

1. Drive chain roller
2. Drive sprocket

EAM30078

CHECKING THE REAR WHEEL SPROCKET

Refer to "CHECKING AND REPLACING THE REAR WHEEL SPROCKET" on page 4-14.

EAM30079

INSTALLING THE DRIVE CHAIN



1. Install:

- Master link "1"
- Master link plate "2"
- Master link clip "3" **New**

EWA20250

WARNING

When installing the joint clip, always keep the direction as shown in the figure.

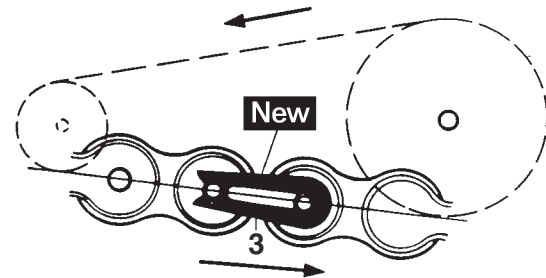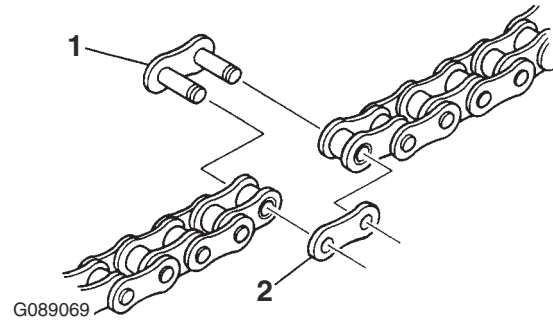

G089070

2. Lubricate:

- Drive chain

3. Install:

- Drive sprocket
- Lock washer **New**
- Drive sprocket nut



Drive sprocket nut
90 N·m (9.0 kgf·m, 66 lb·ft)
LOCTITE®

ECA14300

NOTICE

Never install a new drive chain onto worn drive chain sprockets; this will dramatically shorten the drive chain's life.

TIP

After the drive sprocket nut has been tightened to specification, firmly bend the lock washer tabs "a" along the flat of the drive sprocket nut.



4. Adjust:

- Drive chain slack

Refer to "DRIVE CHAIN SLACK" on page

3-27.



Drive chain slack (Maintenance Stand)
50.0–60.0 mm (1.97–2.36 in)

ECA24590

NOTICE

A drive chain that is too tight will overload the engine and other vital parts, and one that is too loose can skip and damage the swingarm or cause an accident. Therefore, keep the drive chain slack within the specified limits.

ENGINE

LUBRICATION SYSTEM CHART AND DIAGRAMS.....	5-1
ENGINE OIL LUBRICATION CHART.....	5-1
 ENGINE REMOVAL.....	 5-3
REMOVING THE ENGINE.....	5-8
INSTALLING THE ENGINE.....	5-8
INSTALLING THE EXHAUST PIPE AND MUFFLER.....	5-9
 CAMSHAFT.....	 5-11
REMOVING THE CAMSHAFT.....	5-14
CHECKING THE CAMSHAFT.....	5-14
CHECKING THE TIMING CHAIN AND CAMSHAFT SPROCKET.....	5-15
CHECKING THE TIMING CHAIN TENSIONERS.....	5-16
CHECKING THE DECOMPRESSION SYSTEM.....	5-16
INSTALLING THE CAMSHAFTS.....	5-16
 CYLINDER HEAD.....	 5-19
REMOVING THE CYLINDER HEAD.....	5-21
CHECKING THE TIMING CHAIN GUIDE (INTAKE SIDE).....	5-21
CHECKING THE CYLINDER HEAD.....	5-21
INSTALLING THE CYLINDER HEAD.....	5-21
 VALVES AND VALVE SPRINGS.....	 5-24
REMOVING THE VALVES.....	5-26
CHECKING THE VALVES AND VALVE GUIDES.....	5-27
CHECKING THE VALVE SEATS.....	5-28
CHECKING THE VALVE SPRINGS.....	5-29
CHECKING THE VALVE LIFTERS.....	5-30
INSTALLING THE VALVES.....	5-30
 CYLINDER AND PISTON.....	 5-32
REMOVING THE PISTON.....	5-33
CHECKING THE CYLINDER AND PISTON.....	5-33
CHECKING THE PISTON RINGS.....	5-34
CHECKING THE PISTON PIN.....	5-35
INSTALLING THE PISTON AND CYLINDER.....	5-35
 GENERATOR.....	 5-37
REMOVING THE GENERATOR.....	5-40
CHECKING THE GENERATOR.....	5-40
CHECKING THE WOODRUFF KEY.....	5-40
INSTALLING THE GENERATOR.....	5-40
 ELECTRIC STARTER.....	 5-42
CHECKING THE STARTER MOTOR.....	5-44
ASSEMBLING THE STARTER MOTOR.....	5-44

CLUTCH	5-46
REMOVING THE CLUTCH	5-52
CHECKING THE FRICTION PLATES	5-52
CHECKING THE CLUTCH PLATES	5-52
CHECKING THE CLUTCH SPRING	5-52
CHECKING THE COLLAR	5-53
CHECKING THE PRESSURE PLATE	5-53
CHECKING THE PUSH ROD	5-53
CHECKING THE PRIMARY DRIVE GEAR	5-53
CHECKING THE PRIMARY DRIVEN GEAR	5-53
INSTALLING THE CLUTCH RELEASE	5-54
INSTALLING THE CLUTCH	5-54
DISASSEMBLING THE CLUTCH MASTER CYLINDER	5-57
CHECKING THE CLUTCH MASTER CYLINDER	5-58
ASSEMBLING THE CLUTCH MASTER CYLINDER	5-58
INSTALLING THE CLUTCH MASTER CYLINDER	5-58
REMOVING THE CLUTCH RELEASE CYLINDER	5-59
CHECKING THE CLUTCH RELEASE CYLINDER	5-59
INSTALLING THE CLUTCH RELEASE CYLINDER	5-60
 SHIFT SHAFT	5-61
REMOVING THE SEGMENT	5-63
CHECKING THE SHIFT SHAFT	5-63
CHECKING THE STOPPER LEVER	5-63
INSTALLING THE SHIFT SHAFT	5-63
 STARTER CLUTCH	5-66
REMOVING THE BALANCER GEAR	5-68
CHECKING THE STARTER CLUTCH	5-68
INSTALLING THE BALANCER GEAR	5-68
 OIL PUMP	5-71
CHECKING THE OIL PUMP	5-72
ASSEMBLING THE OIL PUMP	5-72
INSTALLING THE OIL PUMP	5-72
 CRANKCASE	5-73
DISASSEMBLING THE CRANKCASE	5-77
CHECKING THE TIMING CHAIN GUIDE (EXHAUST SIDE)	5-77
CHECKING THE CRANKCASE	5-77
CHECKING THE OIL STRAINER	5-78
ASSEMBLING THE CRANKCASE	5-78
 CRANKSHAFT AND BALANCER SHAFT	5-80
REMOVING THE CRANKSHAFT	5-81
CHECKING THE CRANKSHAFT	5-81
INSTALLING THE CRANKSHAFT	5-82
 TRANSMISSION	5-83
REMOVING THE TRANSMISSION	5-86

CHECKING THE SHIFT FORKS.....	5-86
CHECKING THE SHIFT DRUM ASSEMBLY.....	5-86
CHECKING THE TRANSMISSION.....	5-86
INSTALLING THE TRANSMISSION.....	5-87


LUBRICATION SYSTEM CHART AND DIAGRAMS

EAM20185

LUBRICATION SYSTEM CHART AND DIAGRAMS

EAM30526

ENGINE OIL LUBRICATION CHART

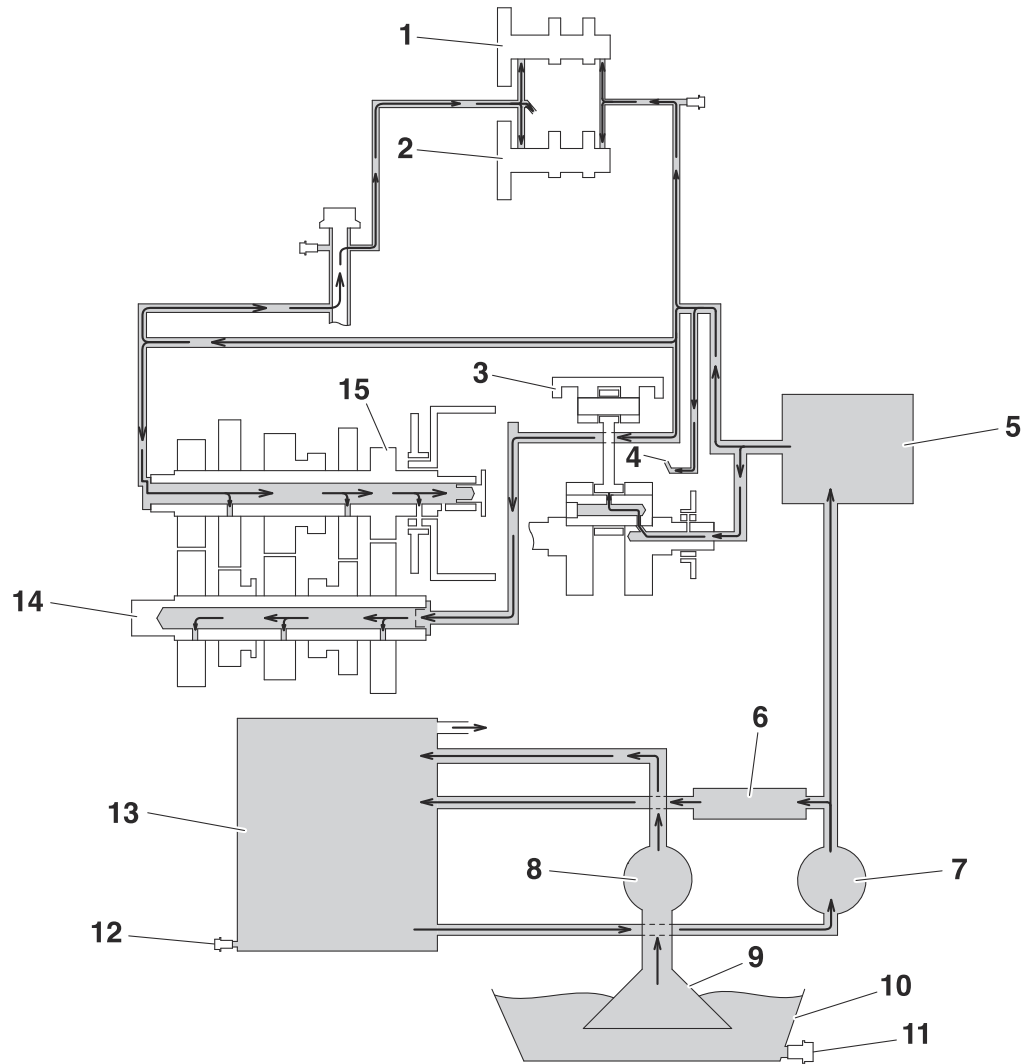


LUBRICATION SYSTEM CHART AND DIAGRAMS

1. Intake camshaft
2. Exhaust camshaft
3. Piston
4. Oil nozzle
5. Oil filter element
6. Relief valve
7. Oil feed pump
8. Scavenging pump
9. Oil strainer
10. Oil pan
11. Oil pan bolt
12. Oil tank bolt
13. Oil tank
14. Drive axle
15. Main axle

EAM20105

ENGINE REMOVAL

Removing the exhaust pipe

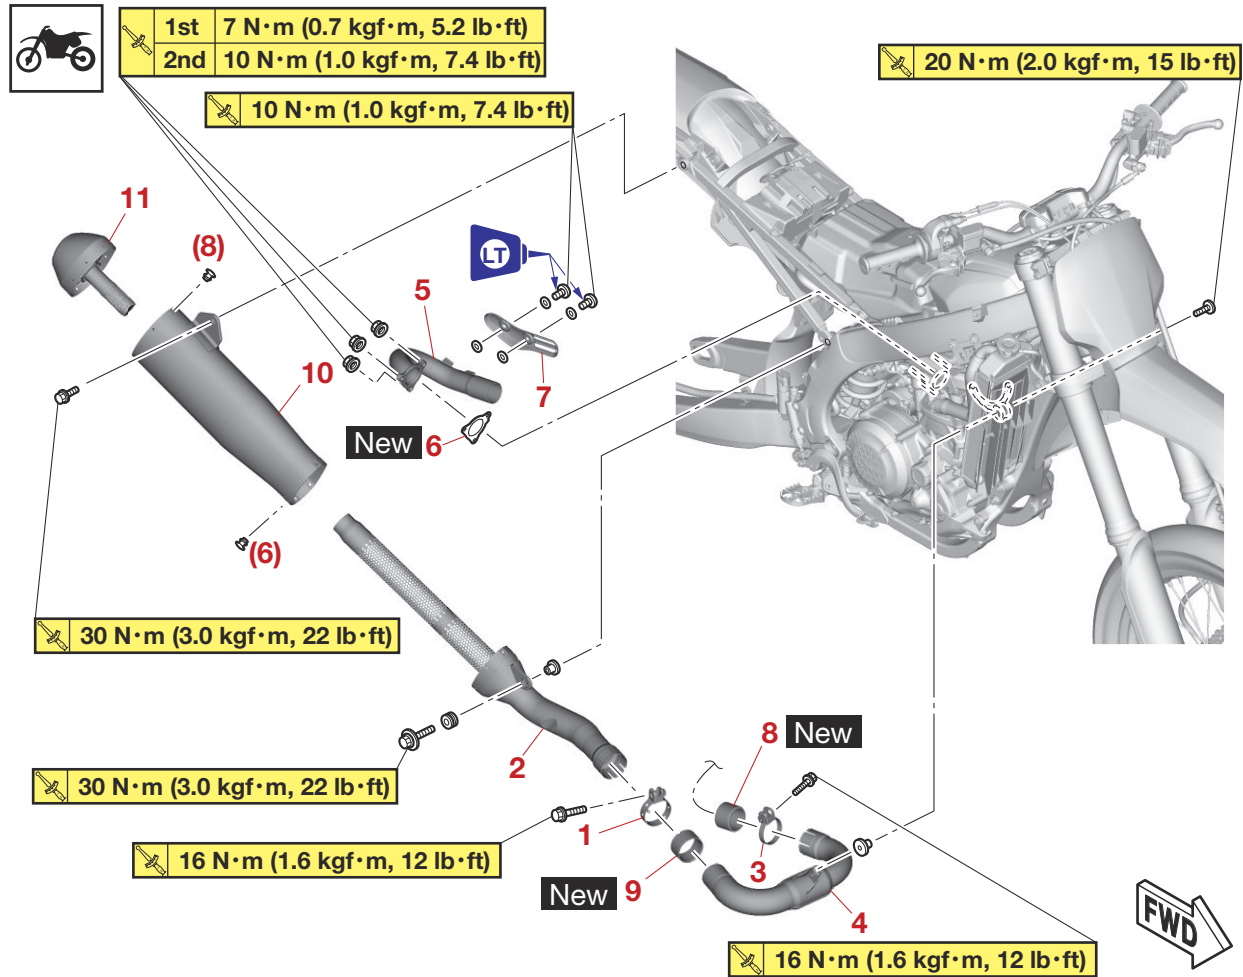

Order	Job/Parts to remove	Q'ty	Remarks
	Side cover (right)		Refer to "GENERAL CHASSIS" on page 4-1.
1	Silencer clamp	1	Loosen.
2	Silencer	1	
3	Exhaust pipe 2 clamp	1	Loosen.
4	Exhaust pipe 2	1	
5	Exhaust pipe 1	1	
6	Gasket	1	
7	Exhaust pipe 1 protector	1	
8	Gasket	1	
9	Gasket	1	
10	Silencer body	1	
11	Silencer cap	1	

Removing the electronic parts



7 N·m (0.7 kgf·m, 5.2 lb·ft)


(2)

3.5 N·m (0.35 kgf·m, 2.6 lb·ft)

(2)

New

LS

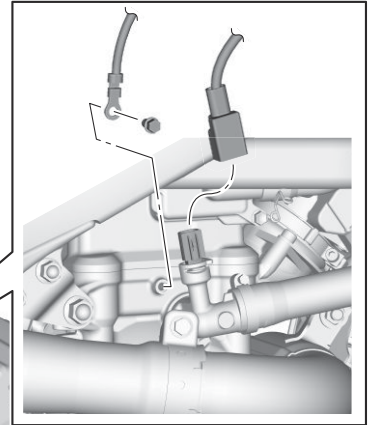


Order	Job/Parts to remove	Q'ty	Remarks
			Use a maintenance stand to raise the front wheel off the ground.
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left)		Refer to "GENERAL CHASSIS" on page 4-1.

Removing the electronic parts




7 N·m (0.7 kgf·m, 5.2 lb·ft)

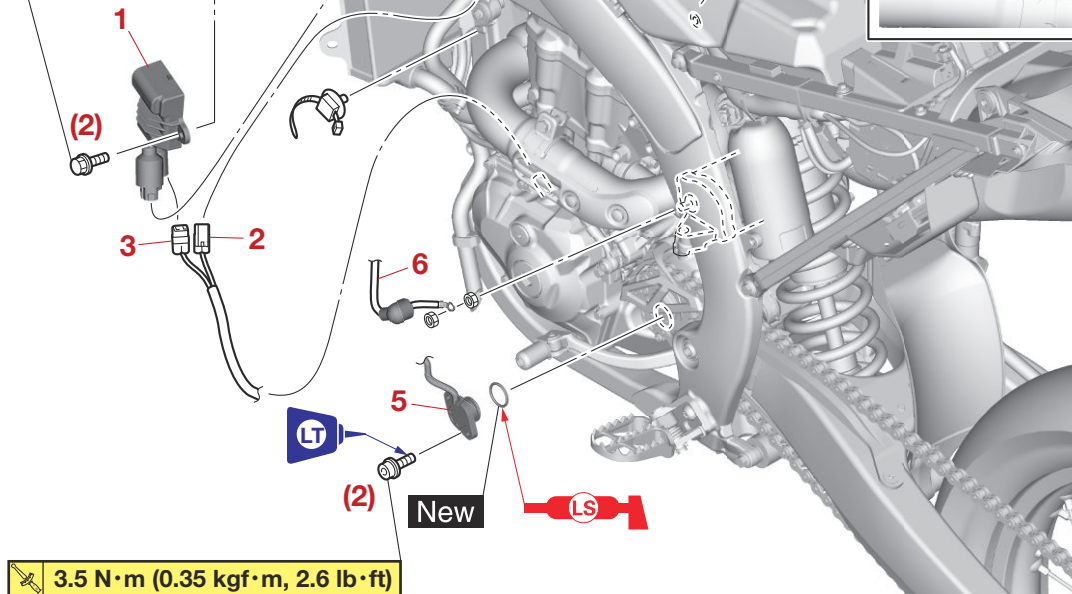

3.5 N·m (0.35 kgf·m, 2.6 lb·ft)


Order	Job/Parts to remove	Q'ty	Remarks
1	Rectifier/regulator	1	
2	Stator coil assembly coupler	1	Disconnect.
3	Crankshaft position sensor coupler	1	Disconnect.
4	Coolant temperature sensor coupler	1	
5	Gear position switch	1	
6	Starter motor lead	1	Disconnect.
7	Engine ground lead terminal	1	Disconnect.

Removing the engine

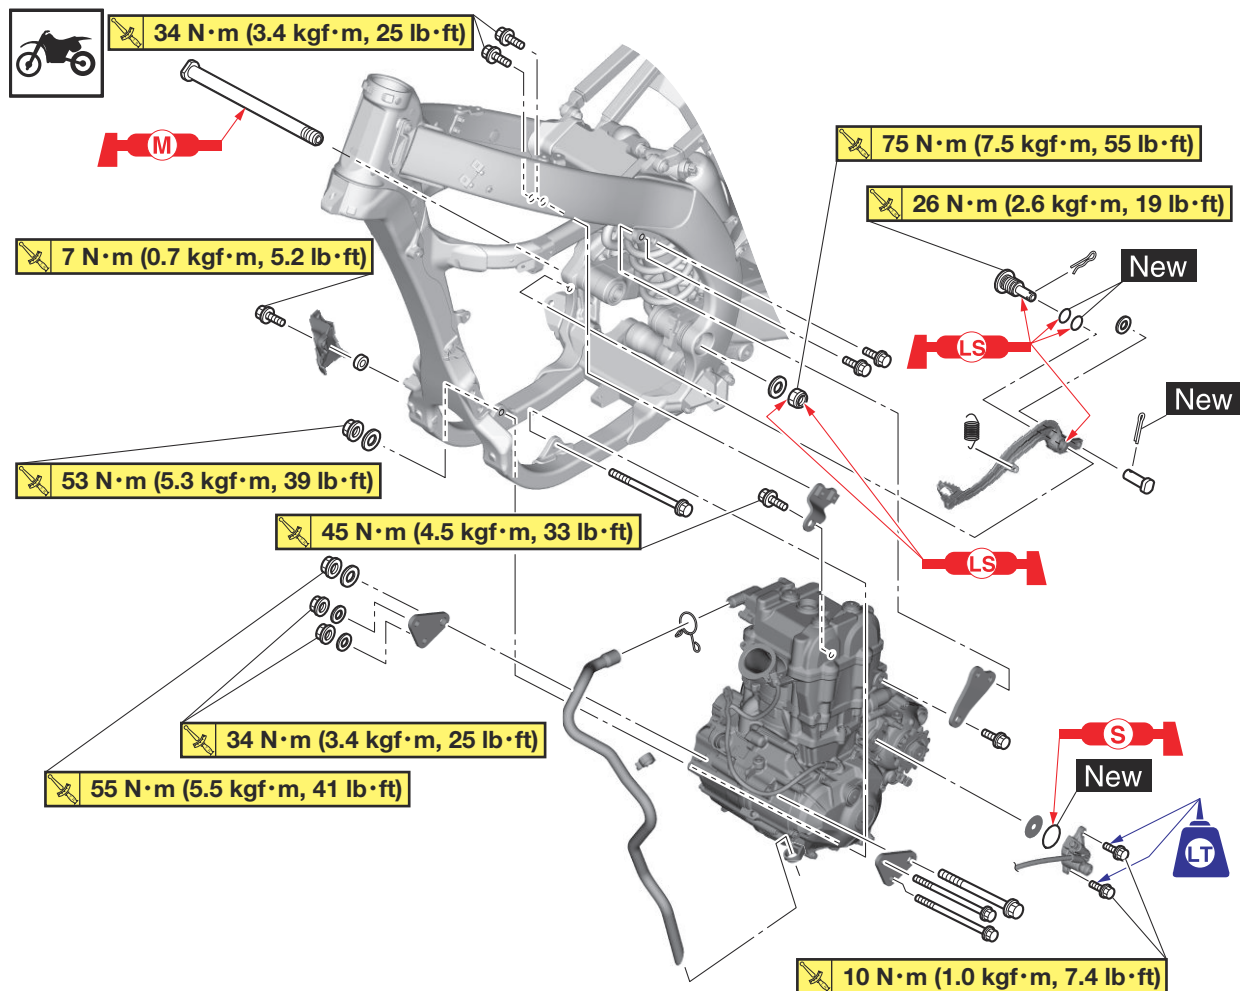

Order	Job/Parts to remove	Q'ty	Remarks
			Use a maintenance stand to raise the front wheel off the ground.
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
	Exhaust pipe/Silencer		Refer to "ENGINE REMOVAL" on page 5-3.
	Air filter case		Refer to "THROTTLE BODY" on page 7-4.
	Throttle body		Refer to "THROTTLE BODY" on page 7-4.
	Shift pedal/Drive sprocket		Refer to "SHIFT SHAFT" on page 5-61. Refer to "CHAIN DRIVE" on page 4-74.

Removing the engine

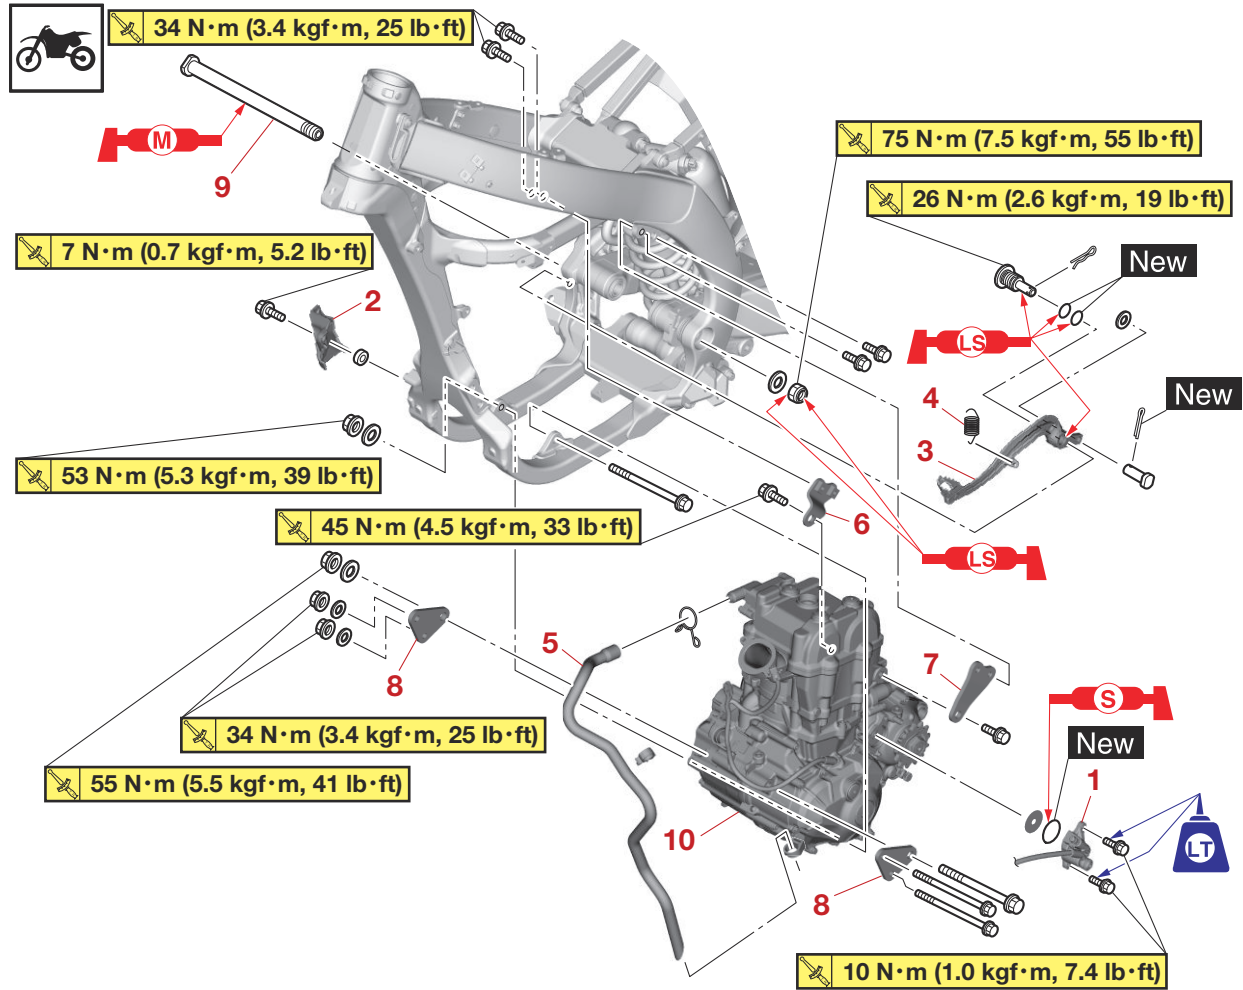

Order	Job/Parts to remove	Q'ty	Remarks
	Starter motor		Disconnect. Refer to "ELECTRIC STARTER" on page 5-42.
	Spark plug cap		Disconnect. Refer to "THROTTLE BODY" on page 7-4.
	Radiator hose 1/3/4		Disconnect. Refer to "RADIATOR" on page 6-3.
1	Clutch release cylinder assembly	1	
2	Engine guard	1	
3	Brake pedal	1	
4	Spring	1	
5	Cylinder head breather hose	1	
6	Upper engine bracket (right)	1	
7	Upper engine bracket (left)	1	
8	Lower engine bracket	2	
9	Pivot shaft	1	
10	Engine	1	

EAM30161


REMOVING THE ENGINE

1. Remove:

- Exhaust pipe 2

TIP

Put the exhaust pipe 2 into the state as shown by moving this, and then remove it.

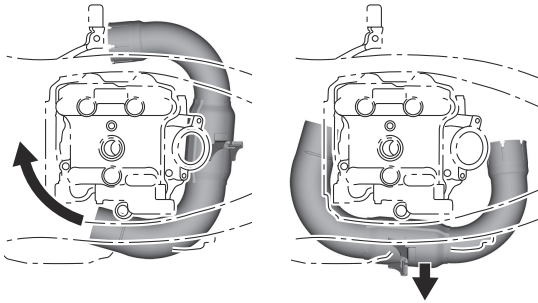


2. Remove:

- Pivot shaft "1"

TIP

If the pivot shaft is pulled all the way out, the swingarm will come loose. If possible, insert a shaft of similar diameter into the other side of the swingarm to support it.

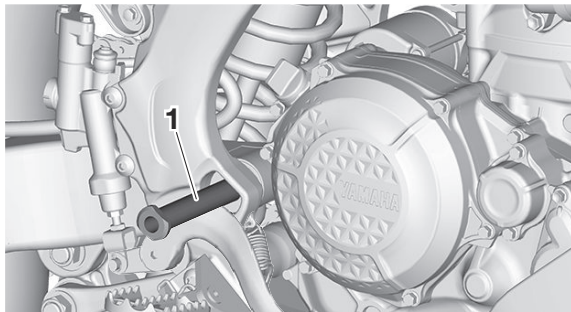


3. Remove:

- Engine "1"
(from the right side)

TIP

- Make sure that the couplers, the hoses, and the cables are disconnected.
- Lift up the engine, and remove this from its lower part toward the right of the chassis.

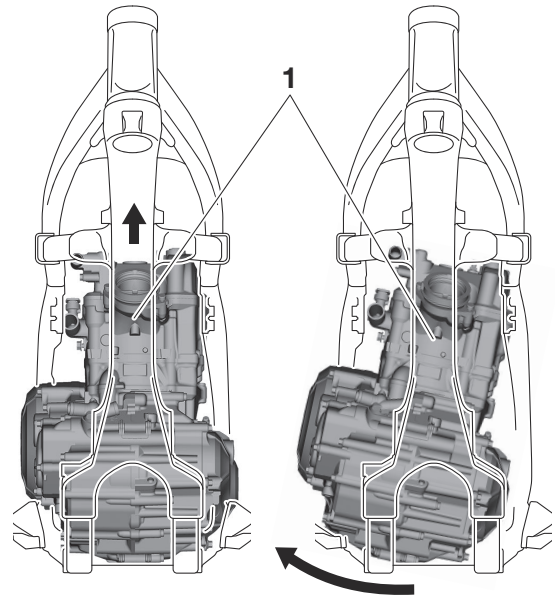

EAM30164

INSTALLING THE ENGINE

1. Install:

- Engine "1"
(from the right side)
- Pivot shaft "2"



Pivot shaft nut
75 N·m (7.5 kgf·m, 55 lb-ft)

- Engine mounting bolt (lower side) "3"



Engine mounting bolt (lower side)
53 N·m (5.3 kgf·m, 39 lb-ft)

- Lower engine bracket "4"
- Engine bracket bolt (front side) "5"



Engine bracket bolt (front side)
34 N·m (3.4 kgf·m, 25 lb-ft)

- Engine mounting bolt (front side) "6"



Engine mounting bolt (front side)
55 N·m (5.5 kgf·m, 41 lb-ft)

- Upper engine bracket "7"
- Engine bracket bolt (upper side) "8"



Engine bracket bolt (upper side)
34 N·m (3.4 kgf·m, 25 lb-ft)


- Engine mounting bolt (upper side) "9"



Engine mounting bolt (upper side)
45 N·m (4.5 kgf·m, 33 lb·ft)

TIP

- Apply molybdenum disulfide grease to the pivot shaft.
- Apply lithium-soap-based grease onto the threads and contact surface of the pivot shaft nut.

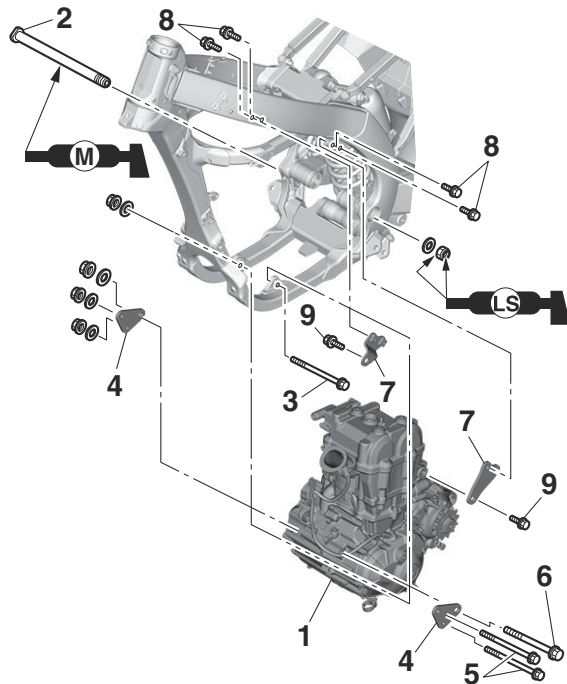

EAM30167

INSTALLING THE EXHAUST PIPE AND MUFFLER

1. Install:


- Gasket **New**
- Exhaust pipe 1 "1"
- Exhaust pipe nut "2"



Exhaust pipe nut
10 N·m (1.0 kgf·m, 7.4 lb·ft)


TIP

First temporarily tighten all nuts to 7 N·m (0.7 kgf·m, 5.2 lb·ft). Then retighten them to 10 N·m (1.0 kgf·m, 7.4 lb·ft).

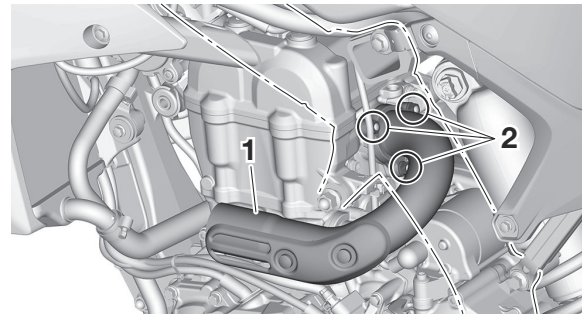


2. Install:

- Exhaust pipe 2 clamp
- Exhaust pipe 2 "1"
- Exhaust pipe bracket bolt "2"

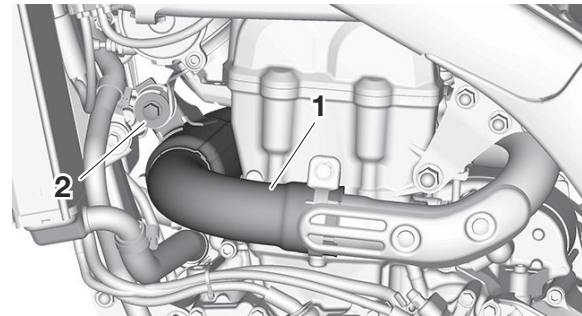

TIP

Make sure that the clamp "3" does not ride on the projection "a" on the exhaust pipe "4" or silencer "5". Be sure to insert the projection "b" into the slot in the exhaust pipe (or silencer).

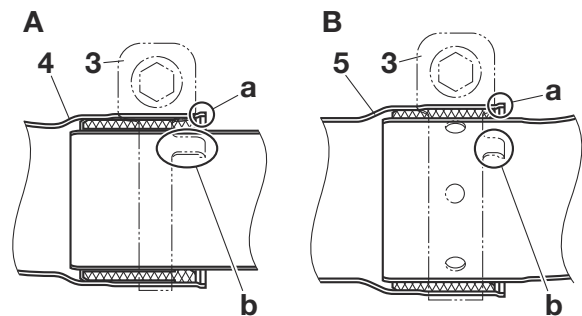


- A. Exhaust pipe 1 and exhaust pipe 2
B. Exhaust pipe 2 and silencer

3. Install:

- Silencer clamp
- Silencer "1"
- Silencer bolt "2"



Silencer bolt
30 N·m (3.0 kgf·m, 22 lb·ft)

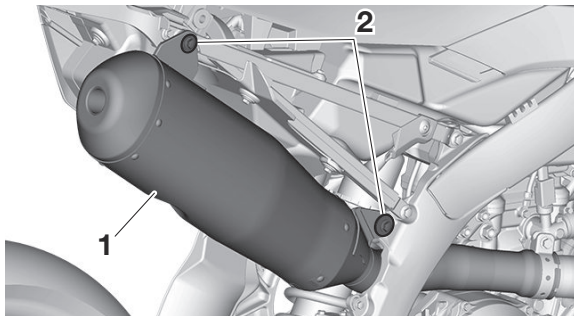

4. Tighten:

- Exhaust pipe bracket bolt



Exhaust pipe bracket bolt
20 N·m (2.0 kgf·m, 15 lb·ft)

- Exhaust pipe 2 clamp



**Exhaust pipe clamp bolt (exhaust
pipe 2 clamp)**
16 N·m (1.6 kgf·m, 12 lb·ft)

- Silencer clamp



**Exhaust pipe clamp bolt (silencer
clamp)**
16 N·m (1.6 kgf·m, 12 lb·ft)


TIP

Tighten while checking that their front and rear joints are inserted in position.

EAM20106

CAMSHAFT


Removing the cylinder head cover

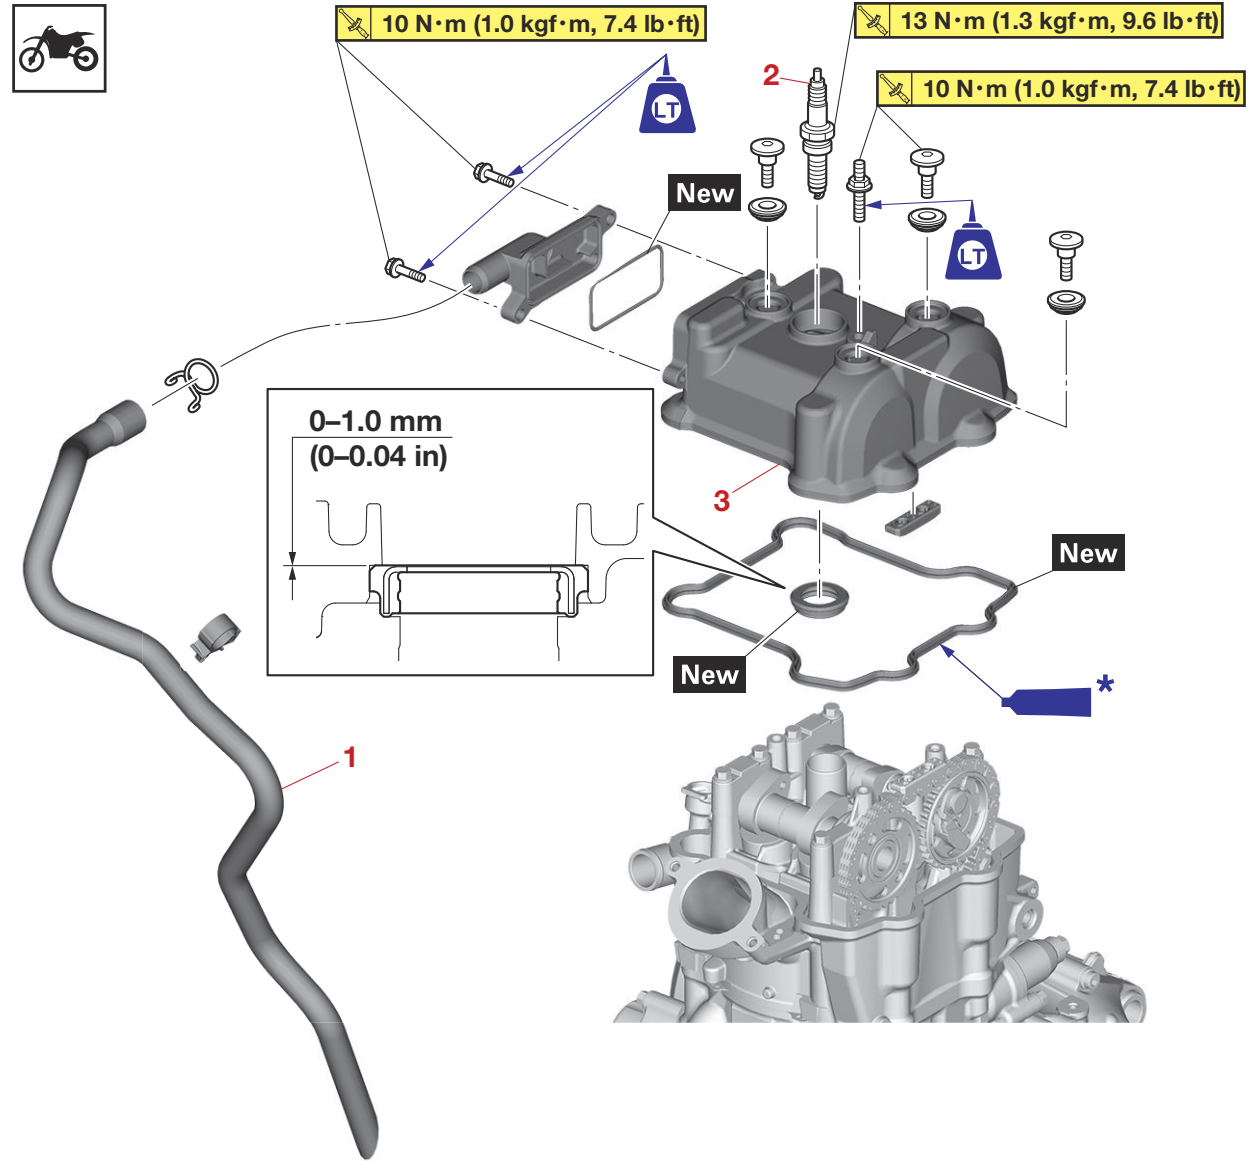

* Three bond No. 1541C®

Order	Job/Parts to remove	Q'ty	Remarks
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
1	Cylinder head breather hose	1	
2	Spark plug	1	
3	Cylinder head cover	1	


Removing the cylinder head cover

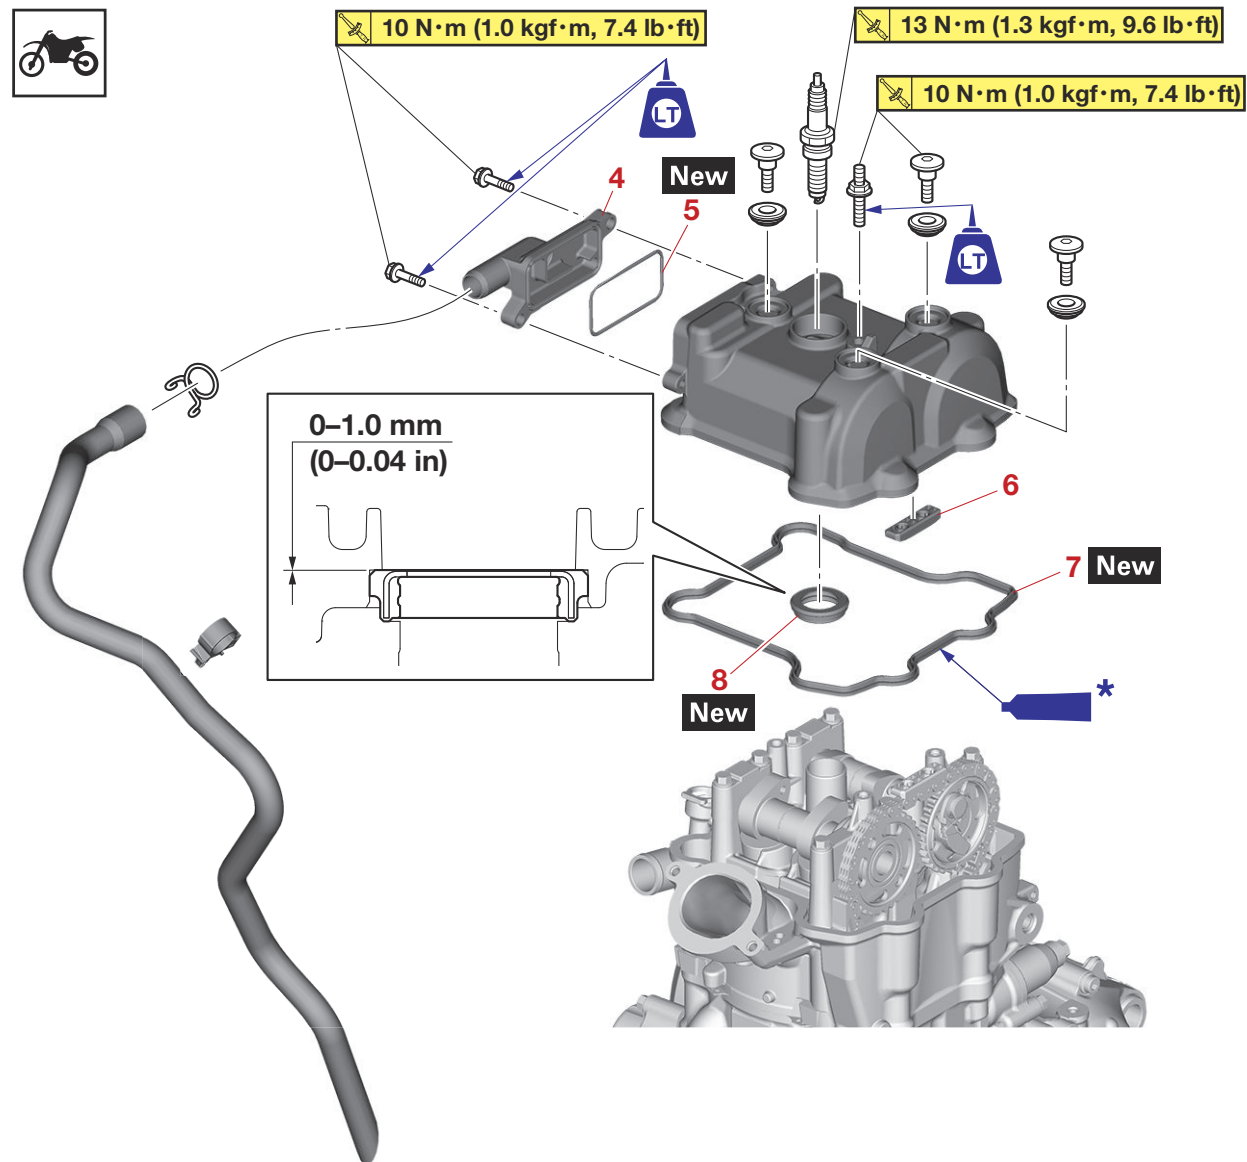

* Three bond No. 1541C®

Order	Job/Parts to remove	Q'ty	Remarks
4	Cylinder head cover breather plate	1	
5	Gasket	1	
6	Timing chain guide (top side)	1	
7	Cylinder head cover gasket	1	
8	Gasket	1	

Removing the camshaft

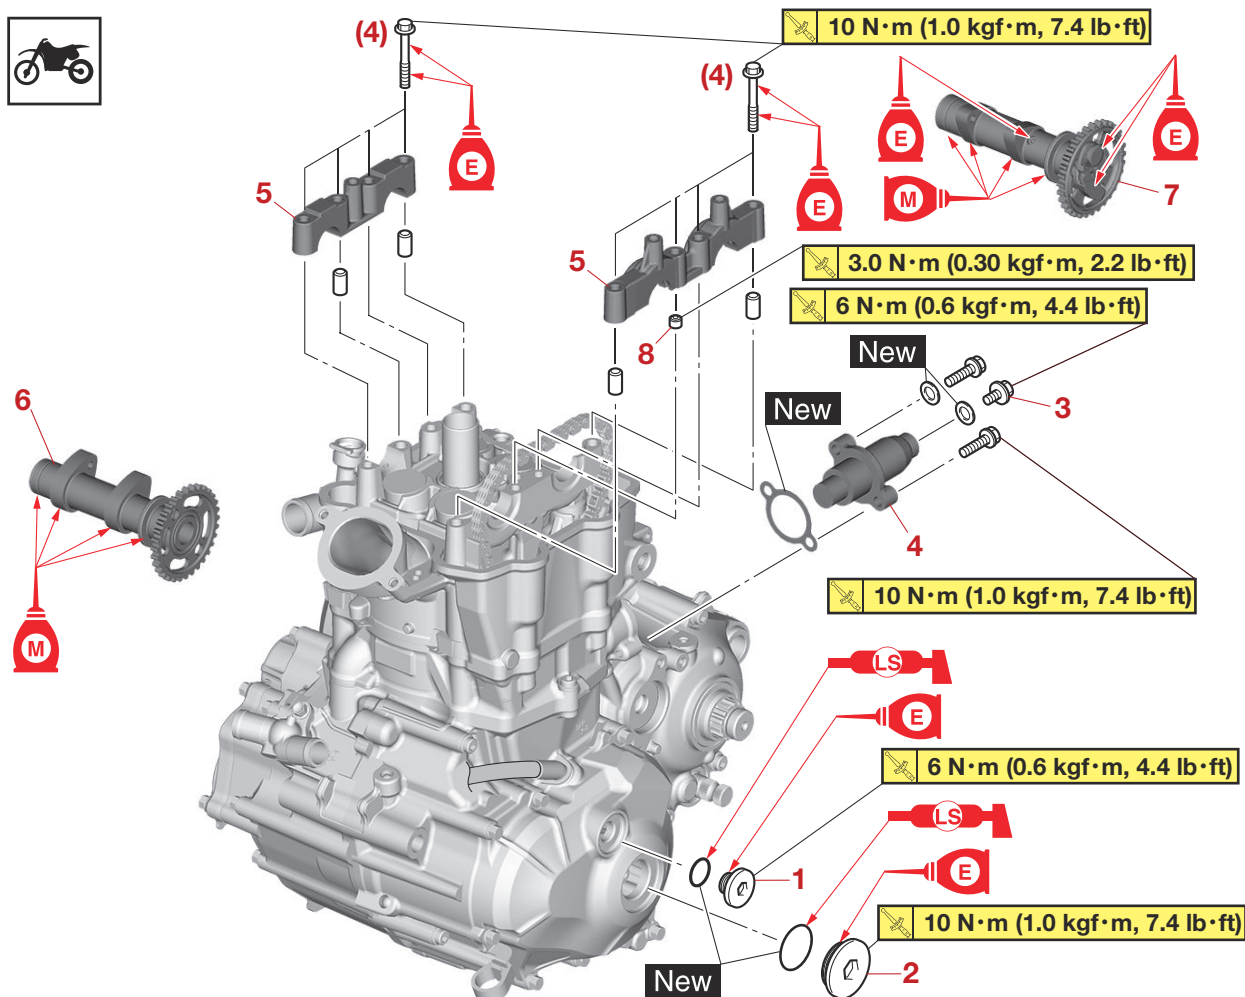


Order	Job/Parts to remove	Q'ty	Remarks
1	Timing mark accessing screw	1	
2	Crankshaft end accessing screw	1	
3	Timing chain tensioner cap bolt	1	
4	Timing chain tensioner	1	
5	Camshaft cap	2	
6	Intake camshaft	1	
7	Exhaust camshaft	1	
8	Oil nozzle	1	

EAM30080

REMOVING THE CAMSHAFT


1. Remove:

- Timing mark accessing screw “1”
- Crankshaft end accessing screw “2”

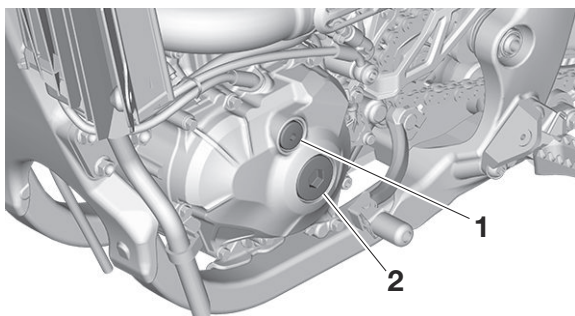


2. Align:

- Alignment mark
 - Turn the crankshaft counterclockwise with a wrench.
 - Align the top dead center (TDC) mark “a” on the generator rotor with the alignment mark “b” on the crankcase cover.

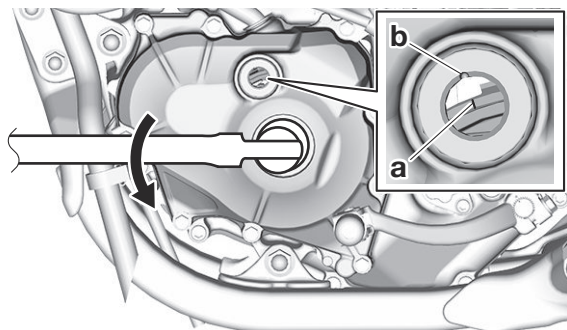


TIP

Check that the alignment marks “c” on the camshaft sprockets are aligned with the edge of the camshaft cap surfaces “d”.

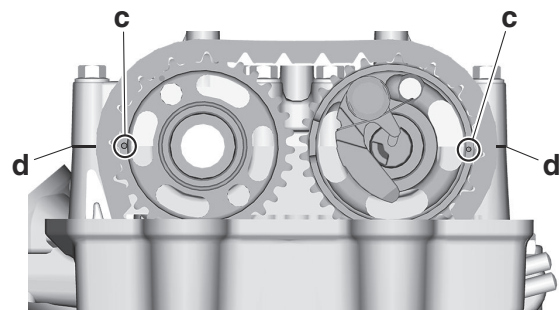

3. Remove:

- Timing chain tensioner cap bolt “1”
- Timing chain tensioner “2”
- Gasket

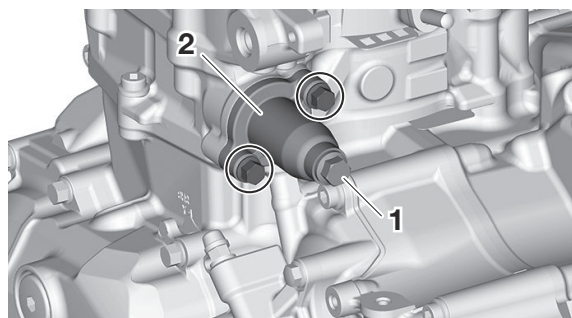

4. Remove:

- Camshaft cap bolt “1”
- Camshaft cap “2”


TIP

Remove the camshaft cap bolts in a crisscross pattern, working from the outside in.

ECA24610

NOTICE

The bolts (camshaft cap) must be removed evenly to prevent damage to the cylinder head, camshafts or camshaft caps.

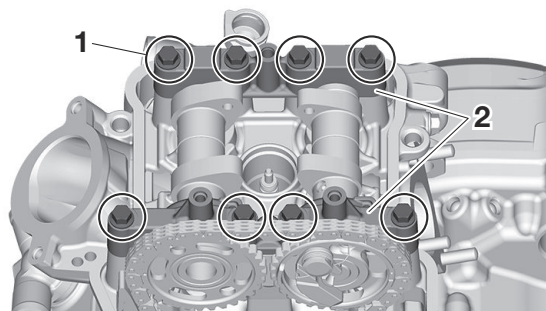


5. Remove:

- Exhaust camshaft “1”
- Intake camshaft “2”

TIP

Attach a wire “3” to the timing chain to prevent it from falling into the crankcase.

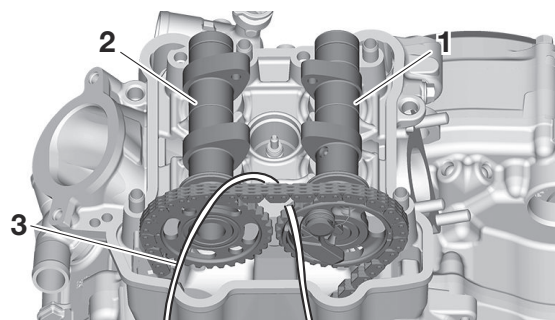

EAM30081

CHECKING THE CAMSHAFT

1. Check:

- Camshaft lobe


Blue discoloration/pitting/scratches → Replace the camshaft.

2. Measure:

- Camshaft lobe dimensions “A”
Out of specification → Replace the camshaft.



Camshaft lobe dimensions
Lobe height limit (Intake)
 38.030 mm (1.4972 in)
Lobe height limit (Exhaust)
 34.170 mm (1.3453 in)

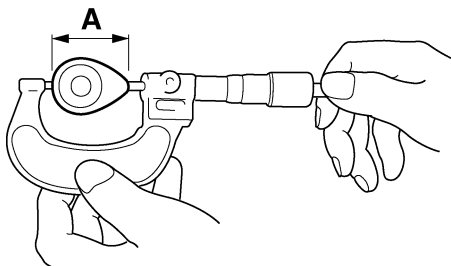


3. Measure:

- Camshaft-journal-to-camshaft-cap clearance
Out of specification → Measure the camshaft journal diameter.



Camshaft-journal-to-camshaft-cap clearance
 0.028–0.062 mm (0.0011–0.0024 in)

- Install the camshaft into the cylinder head.
- Position a strip of Plastigauge® “1” onto the camshaft journal as shown.

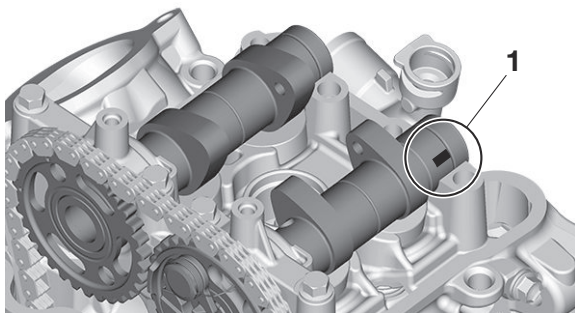

- Install the dowel pins and the camshaft caps.


TIP

- Tighten the camshaft cap bolts in a crisscross pattern from innermost to outer caps.
- Do not turn the camshaft when measuring the camshaft journal-to-camshaft cap clearance.



Camshaft cap bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

- Remove the camshaft caps and then measure the width of the Plastigauge® “1”.

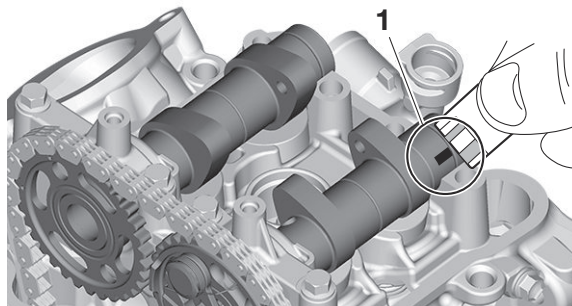


4. Measure:

- Camshaft journal diameter “a”
Out of specification → Replace the camshaft.
Within specification → Replace the cylinder head and the camshaft caps as a set.



Camshaft journal diameter
22.002–22.015 mm (0.8662–0.8667 in)

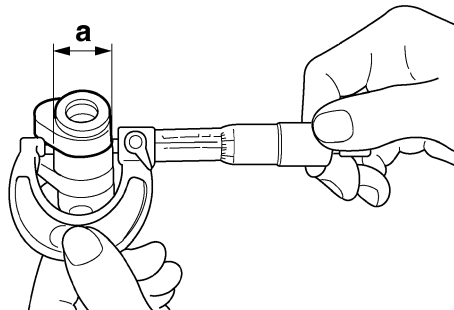

EAM30082


CHECKING THE TIMING CHAIN AND CAMSHAFT SPROCKET

1. Check:

- Timing chain “1”
Damage/stiffness → Replace the timing chain and camshaft as a set.

2. Check:

- Camshaft sprocket
More than 1/4 tooth wear “a” → Replace the camshaft and the timing chain as a set.


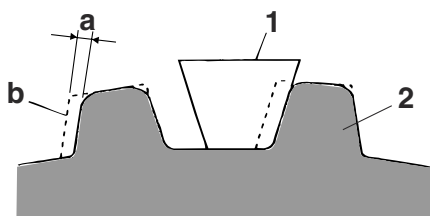


- a. 1/4 tooth
- b. Correct
- 1. Timing chain roller
- 2. Camshaft sprocket

EAM30083

CHECKING THE TIMING CHAIN TENSIONERS


1. Check:
 - Timing chain tensioner
 - Crack/damage → Replace.
 - a. While pressing the tensioner rod lightly with your fingers, use a thin screwdriver "1" to wind the tensioner rod up fully clockwise.
 - b. When releasing the screwdriver by pressing lightly with your fingers, make sure that the tensioner rod will come out smoothly.
 - c. If not, replace the tensioner assembly.

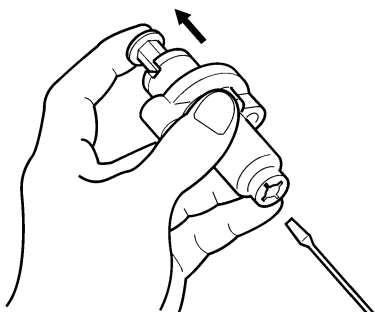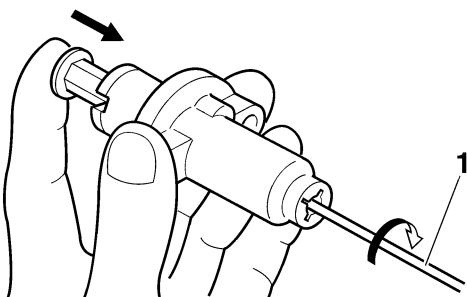

EAM30084

CHECKING THE DECOMPRESSION SYSTEM


1. Check:
 - Decompression system
 - a. Check that the decompressor cam "1" moves smoothly.
 - b. Check that the decompressor lever pin "2" projects from the camshaft.

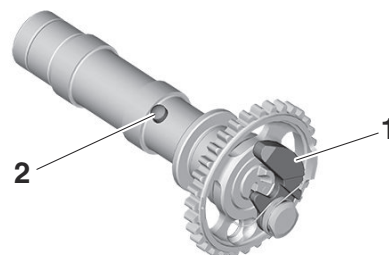

EAM30085

INSTALLING THE CAMSHAFTS

1. Install:
 - Exhaust camshaft "1"
 - Intake camshaft "2"

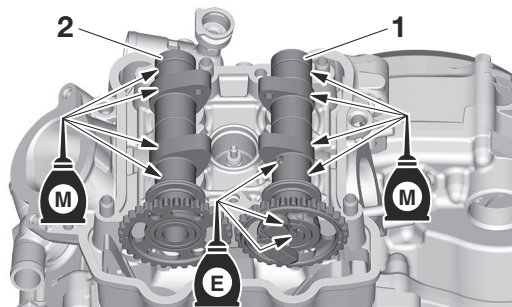


- a. Turn the crankshaft counterclockwise with a wrench.

TIP

- Apply molybdenum disulfide oil to the camshafts.
- Apply the engine oil on the decompression system.


- b. Align the top dead center (TDC) mark "a" on the generator rotor with the alignment mark "b" on the crankcase cover.

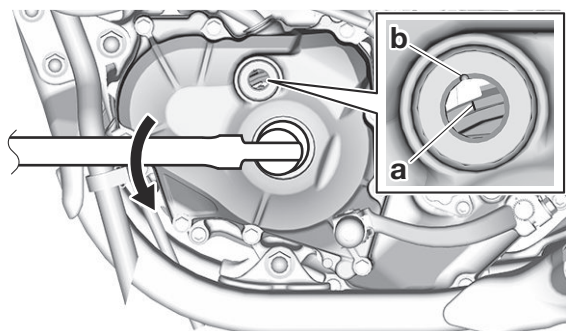

- c. Fit the timing chain “3” onto both camshaft sprockets and install the camshafts on the cylinder head.

TIP

Check that the alignment marks “c” on the camshaft sprockets are aligned with the edge of the camshaft cap surfaces “d”.

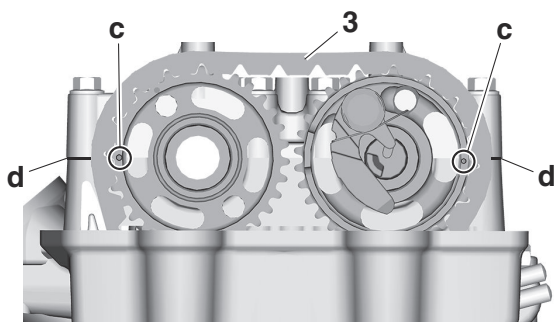

ECA24620

NOTICE

Do not turn the crankshaft during the camshaft installation. Damage or improper valve timing will result.

- d. Install the camshaft caps and the camshaft cap bolts.



Camshaft cap bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)


TIP

- Apply the engine oil to the threads and contact surfaces.
- Tighten the bolts to the specified torque in two or three steps in the proper tightening sequence as shown.

ECA24630


NOTICE

The bolts (camshaft cap) must be tightened evenly, or damage to the cylinder head, camshaft caps, and camshaft will result.

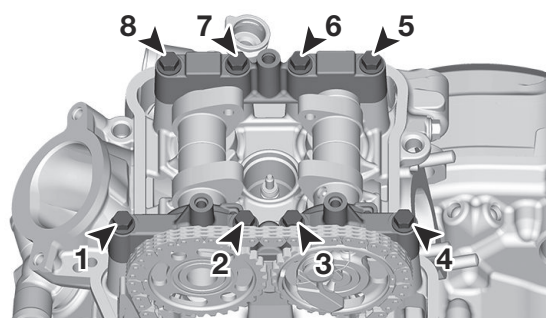

2. Install:


- Timing chain tensioner
 - a. While pressing the tensioner rod lightly with your fingers, use a thin screwdriver to wind the tensioner rod up fully clockwise.

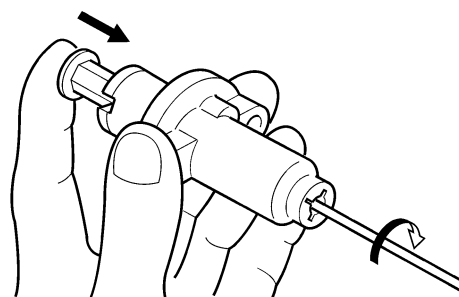

- b. With the tensioner rod fully wound and the chain tensioner “UP” mark “a” facing upward, install the gasket “1”, the timing chain tensioner “2”, and the gasket “3”, and tighten the bolts “4”.




Timing chain tensioner bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

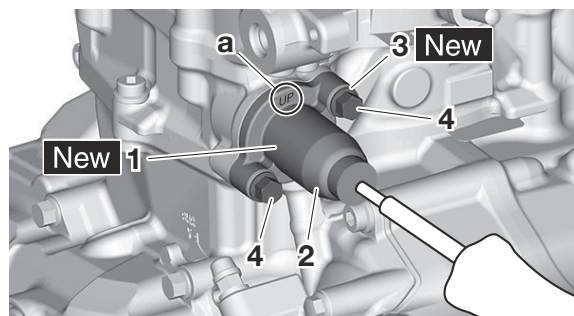

- c. Release the screwdriver, check that the tensioner rod comes out smoothly, and tighten the gasket “5” and the cap bolt “6”.




Timing chain tensioner cap bolt
6 N·m (0.6 kgf·m, 4.4 lb·ft)

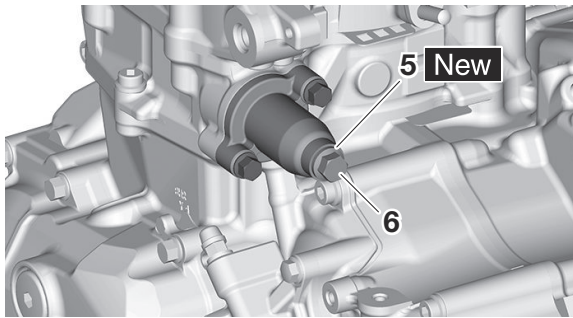

3. Turn:
 - Crankshaft
Counterclockwise several turns.
4. Check:
 - Top dead center (TDC) mark on the generator rotor
Align with the crankcase alignment mark.
 - Camshaft match marks
Align with the cylinder head surface.
Out of alignment → Adjust.
5. Install:
 - Timing chain guide (top side) “1”
 - Cylinder head cover gasket “2” **New**
 - Gasket (spark plug hole) “3” **New**
 - Cylinder head cover “4”
 - Bolt (cylinder head cover) “5”

**TIP**

Before installation, apply the Three bond No. 1541C® to the cylinder head cover gasket.

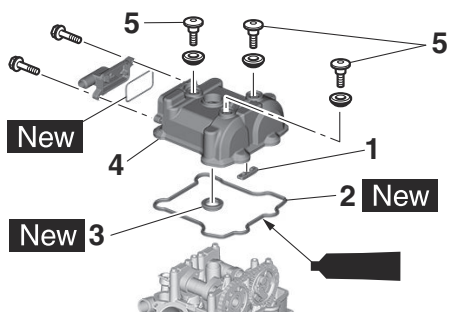


6. Install:
 - Cylinder head breather hose
 - Spark plug



EAM20107

CYLINDER HEAD


Removing the cylinder head

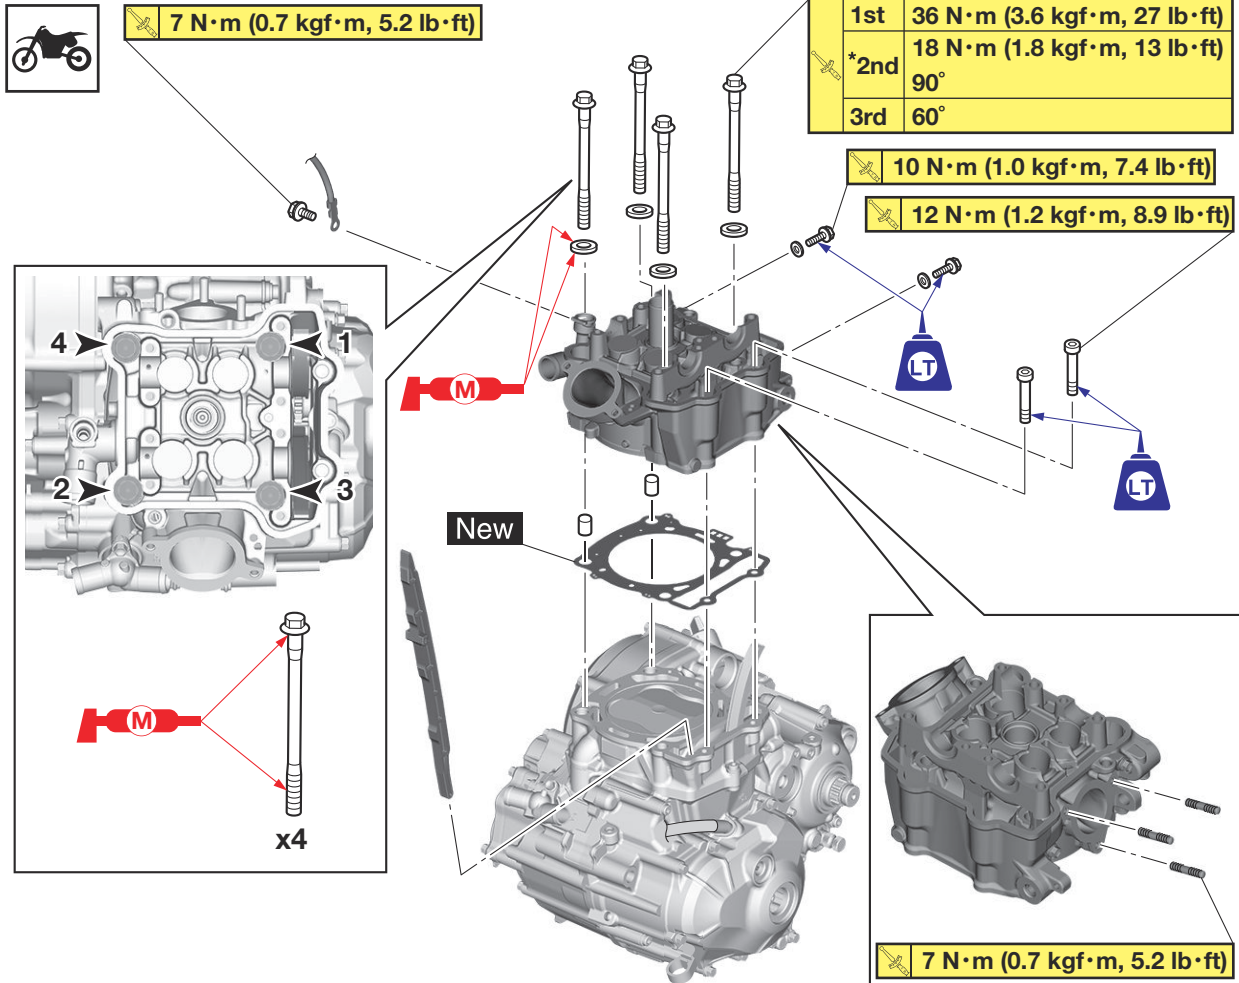

* Following the tightening order, loosen the bolt one by one, and then retighten it to the specific torque and the specified angle (after loosening a bolt, retighten it before loosening the next bolt).

Order	Job/Parts to remove	Q'ty	Remarks
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
	Exhaust pipe/Silencer		Refer to "ENGINE REMOVAL" on page 5-3.
	Radiator hose		Disconnect.
	Coolant temperature sensor coupler		Disconnect.
	Throttle body		Refer to "THROTTLE BODY" on page 7-4.
	Camshaft		Refer to "CAMSHAFT" on page 5-11.
	Upper engine bracket		Refer to "ENGINE REMOVAL" on page 5-3.

Removing the cylinder head

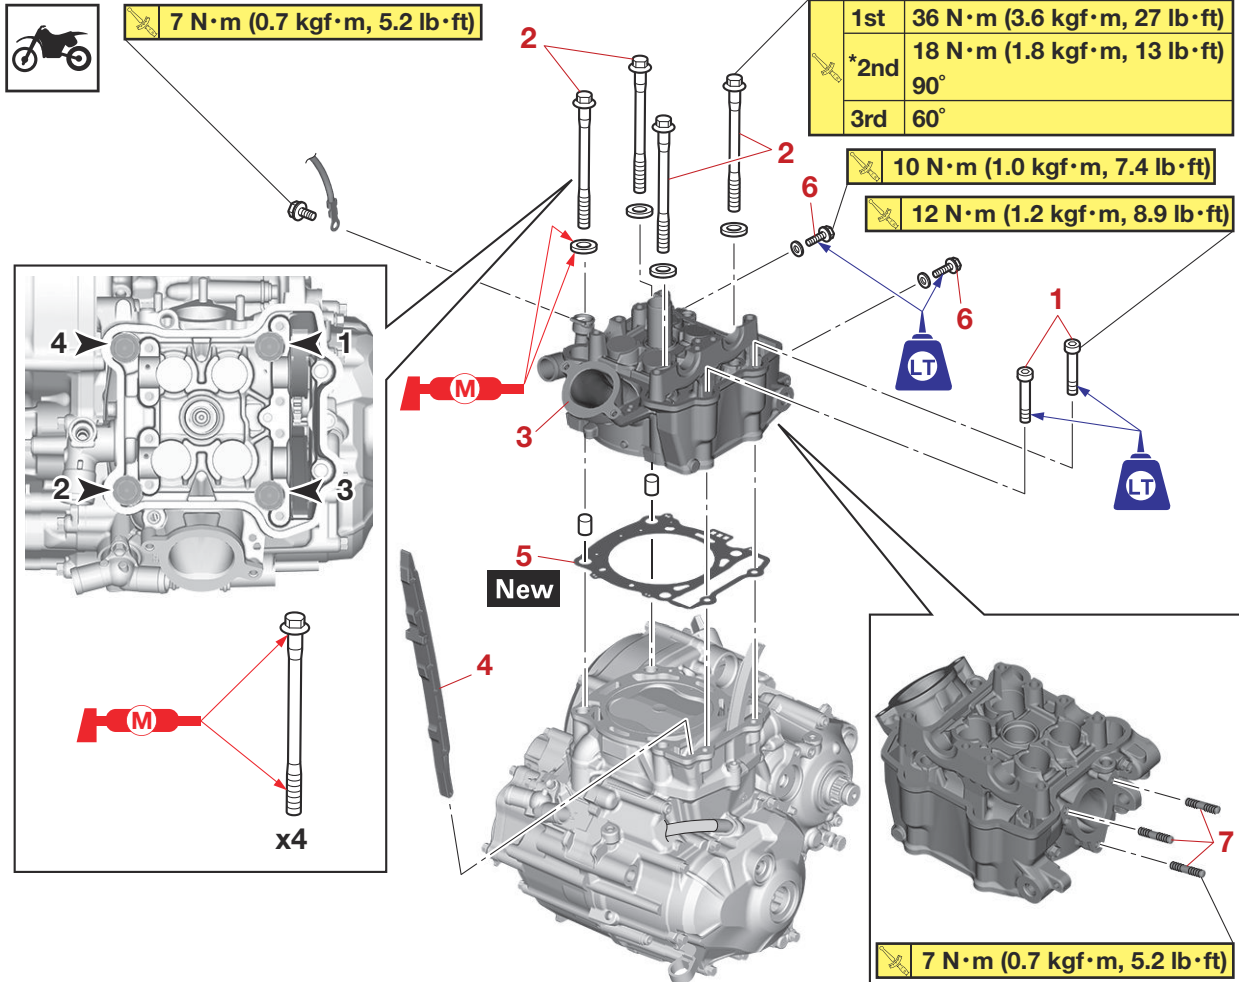

* Following the tightening order, loosen the bolt one by one, and then retighten it to the specific torque and the specified angle (after loosening a bolt, retighten it before loosening the next bolt).

Order	Job/Parts to remove	Q'ty	Remarks
1	Bolt (cylinder head)	2	
2	Bolt (cylinder head)	4	
3	Cylinder head	1	
4	Timing chain guide (intake side)	1	
5	Cylinder head gasket	1	
6	Oil passage plug	2	
7	Cylinder head stud bolt	3	Tighten until they contact the bottom.

EAM30086

REMOVING THE CYLINDER HEAD



1. Remove:

- Cylinder head bolt

TIP

- Loosen the bolts in the proper sequence as shown.
- Loosen each bolt 1/2 of a turn at a time. After fully loosening all the bolts, remove them.

- M6 × 45 mm (1.77 in): [1]–[2]
- M10 × 129 mm (5.08 in): [3], [4], [5], [6]

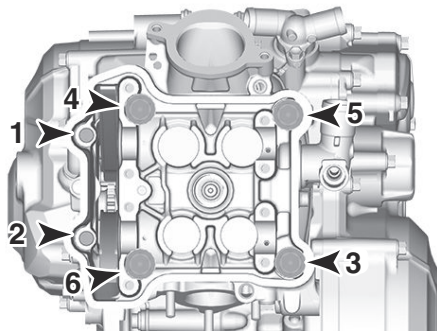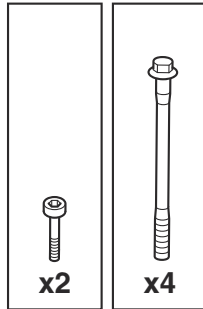

Refer to “CHECKING THE VALVE SEATS” on page 5-28.

- Cylinder head coolant passages
Mineral deposits/rust → Eliminate.

3. Measure:

- Cylinder head warpage
Out of specification → Resurface the cylinder head.




Warpage limit
0.05 mm (0.0020 in)

- Place a straightedge and a thickness gauge across the cylinder head.
- Measure the warpage.
- If the limit is exceeded, resurface the cylinder head as follows.
- Place a 400–600 grit wet sandpaper on a surface plate, and resurface the cylinder head using a figure-eight sanding pattern.

TIP

To ensure an even surface, turn the cylinder head several times.

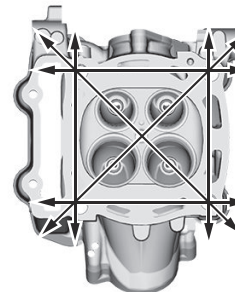

EAM30087

CHECKING THE TIMING CHAIN GUIDE (INTAKE SIDE)

1. Check:

- Timing chain guide (intake side)
Damage/wear → Replace.

EAM30088

CHECKING THE CYLINDER HEAD

1. Eliminate:

- Combustion chamber carbon deposits

TIP

Use a rounded scraper, not a sharp instrument, in order not to damage or scratch the spark plug bore threads.

2. Check:

- Cylinder head
Damage/scratches → Replace.

TIP

When replacing the cylinder head, replace also the valve.

EAM30089


INSTALLING THE CYLINDER HEAD

1. Install:

- Timing chain guide (intake side) “1”
- Dowel pin “2”
- Cylinder head gasket “3” **New**
- Cylinder head “4”


TIP

- While pulling up the timing chain, install the timing chain guide (intake side) and the cylinder head.
- Install the cylinder head gasket as shown in the illustration.

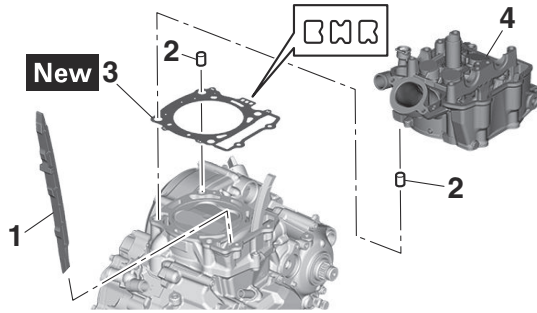

2. Install:

- Washer "1"
- Bolt "2"
- Bolt "3"

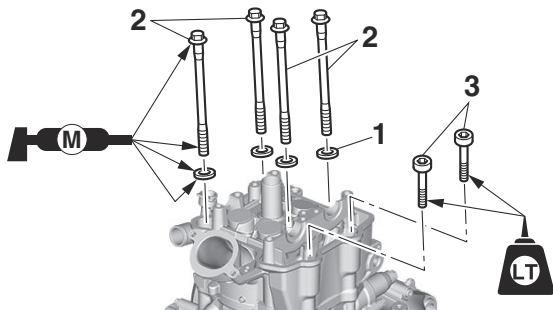


TIP

Tighten the bolts using the following procedure.


- Wash the threads and contact surfaces of the bolts, the contact surfaces of the washers, the contact surface of the cylinder head, and the threads of the crankcase.
- Apply molybdenum disulfide grease to the threads and contact surfaces of the bolts and to both contact surfaces of the washers.
- Install the washers and the bolts.
- Install the bolts in the tightening sequence shown until the bolt and washer are lightly seated against the cylinder head.
- Tighten the bolts to the specified torque in two or three steps in the proper tightening sequence as shown.



Bolt [1]–[4]
1st
36 N·m (3.6 kgf·m, 27 lb·ft)

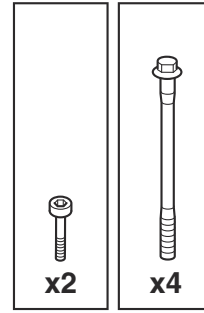

FWD

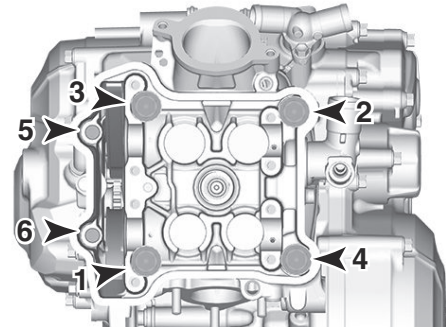

f. Remove the bolt [1].

TIP


Remove the bolt [1] only without loosening any other bolt.

- Again apply molybdenum disulfide grease to the thread and contact surface of the bolts and to both contact surface of the washer.
- Retighten the bolt.




Bolt [1]
2nd
18 N·m (1.8 kgf·m, 13 lb·ft)

- Put a mark on the corner "1" of the bolt (cylinder head) and the cylinder head "2" as shown.

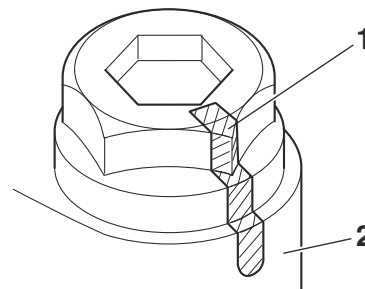

- Retighten the bolt (cylinder head) in the proper tightening sequence.

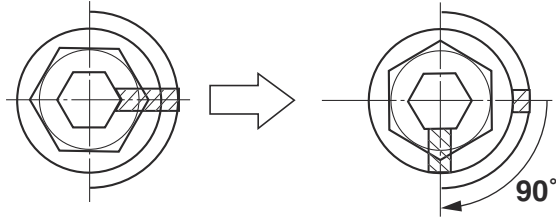

	Bolt [1] Specified angle 90°
---	--


- k. Perform the same procedure with the bolts [2]–[4] one by one and applying the tightening sequence (f)–(j) as shown for the bolt [1].

TIP

Do not loosen any other bolt until one bolt is completely tightened.

	Bolt [2]–[4] 2nd 18 N·m (1.8 kgf·m, 13 lb·ft) Specified angle 90°
--	---

- l. Retighten the bolt (cylinder head) in the proper tightening sequence.

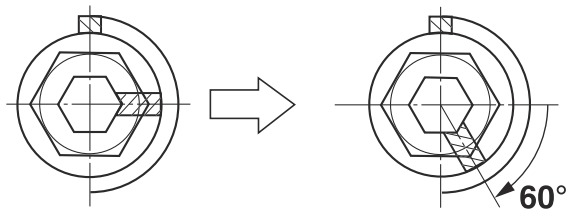

	Final Specified angle 60°
---	---


- m. Tighten the bolts to the specified torque.

	Bolt [5], [6] 12 N·m (1.2 kgf·m, 8.9 lb·ft) LOCTITE®
---	--

EAM20108

VALVES AND VALVE SPRINGS


Removing the valves and valve springs

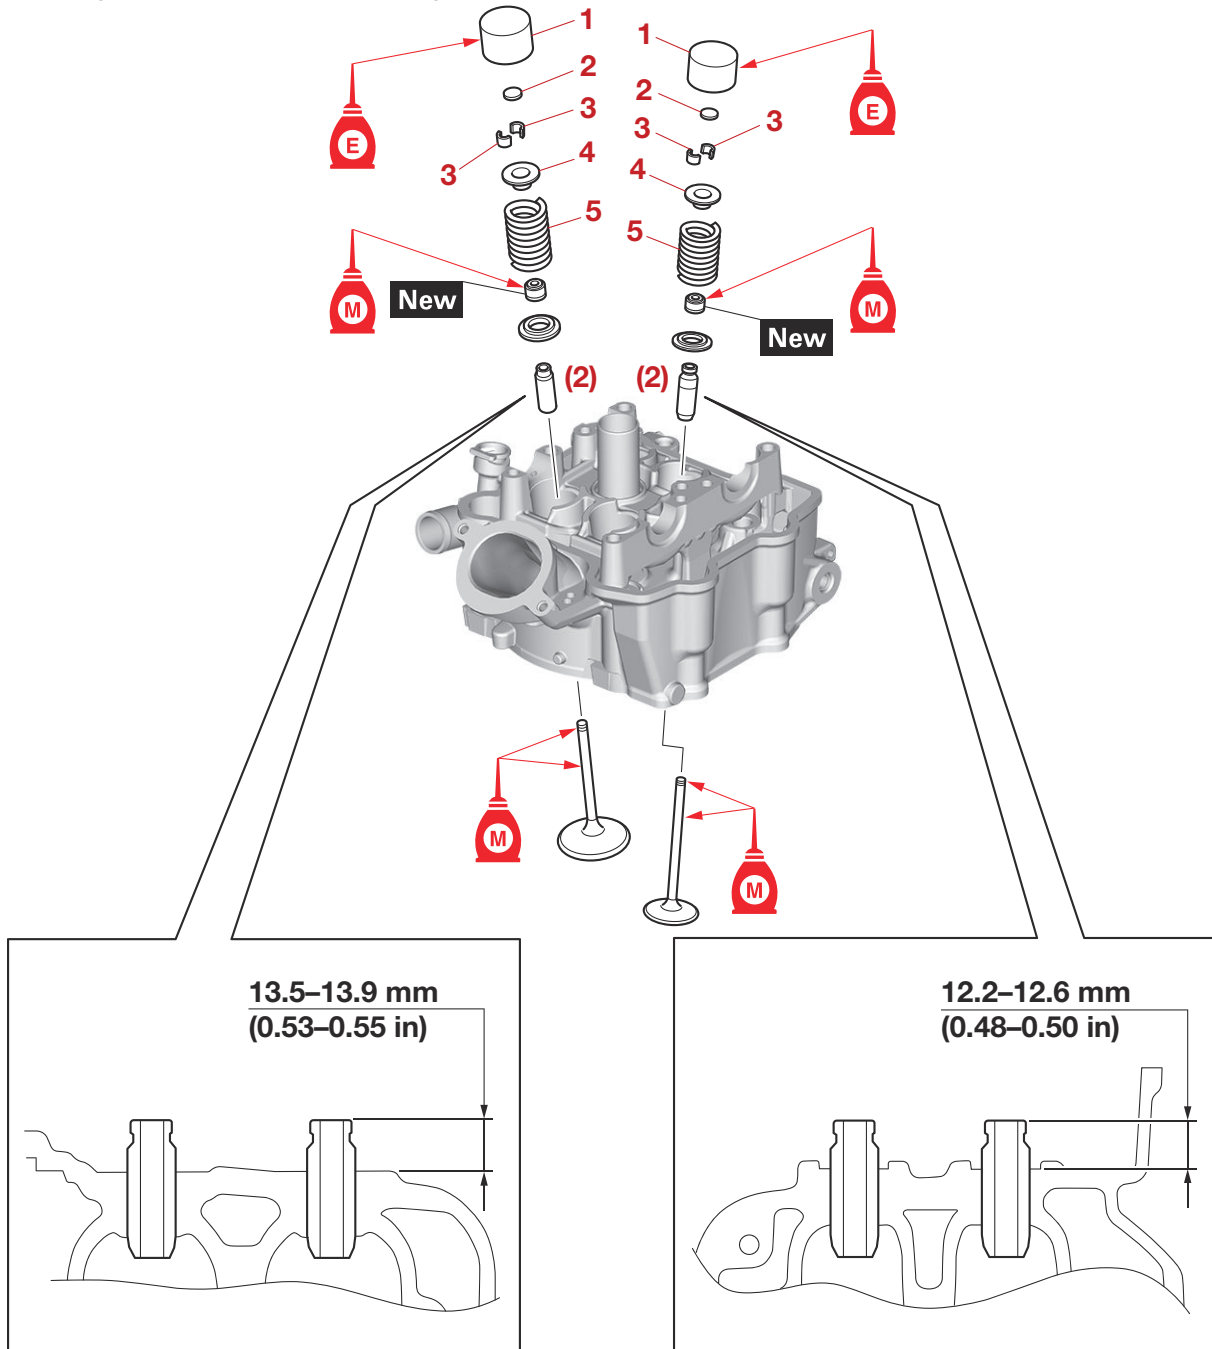

Order	Job/Parts to remove	Q'ty	Remarks
	Cylinder head		Refer to "CYLINDER HEAD" on page 5-19.
1	Valve lifter	4	
2	Adjusting pad	4	
3	Valve cotter	8	
4	Valve spring retainer	4	
5	Valve spring	4	

VALVES AND VALVE SPRINGS

Removing the valves and valve springs

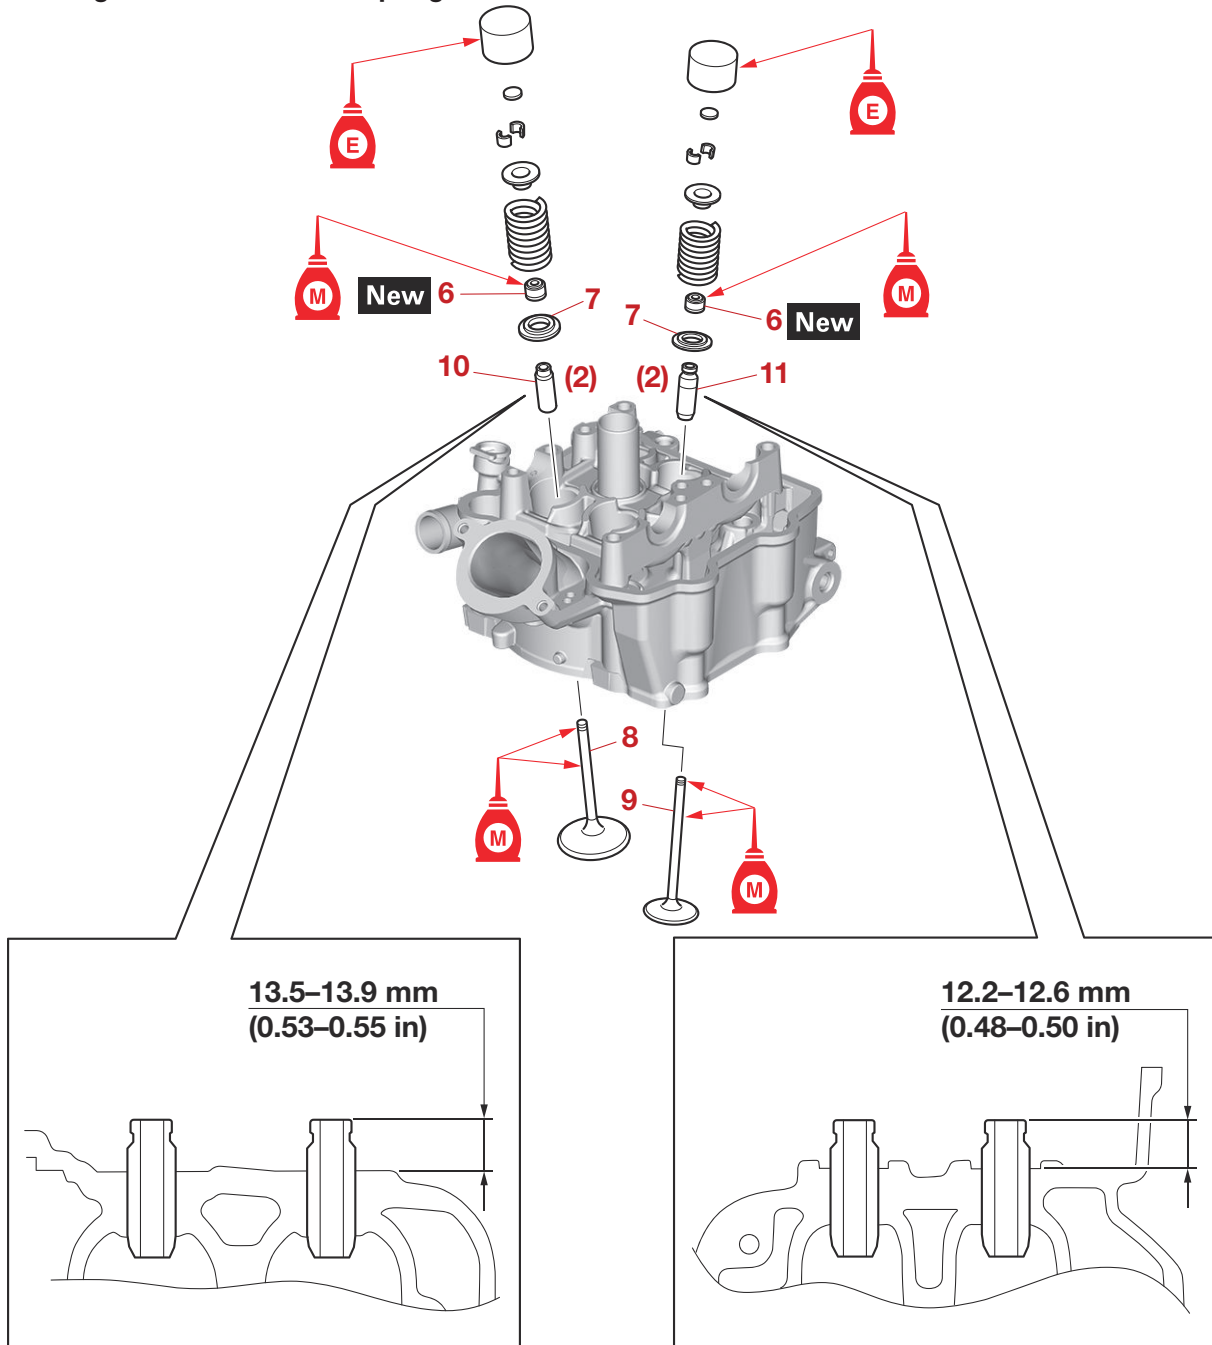

Order	Job/Parts to remove	Q'ty	Remarks
6	Valve stem seal	4	
7	Valve spring seat	4	
8	Intake valve	2	
9	Exhaust valve	2	
10	Intake valve guide	2	
11	Exhaust valve guide	2	

EAM30090

REMOVING THE VALVES

TIP



Before removing the internal parts of the cylinder head (e.g., valves, valve springs, valve seats), make sure that the valves are properly sealed.

1. Remove:

- Valve lifter “1”
- Adjusting pad “2”

TIP

- Place a cloth in the timing chain space to prevent adjusting pads from falling into the crankcase.
- Make a note of the positions of valve lifters and adjusting pads so that they can be reinstalled in their original places.

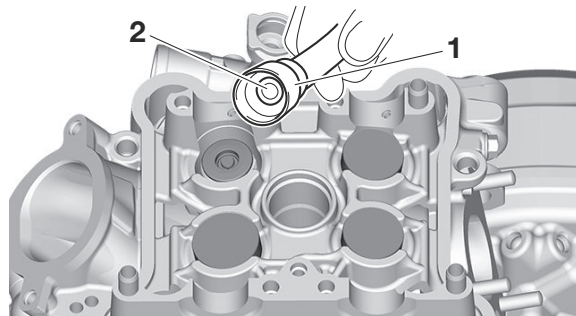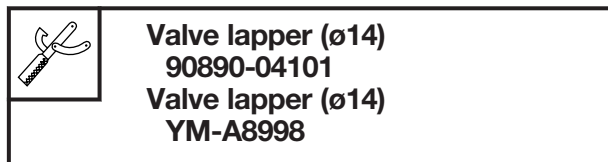


EX		
IN		

2. Check:

- Valve sealing
Leakage at the valve seat → Check the valve face, the valve seat, and the valve seat contact width.
Refer to “CHECKING THE VALVE SEATS” on page 5-28.
- a. Pour a clean solvent “a” into the intake and exhaust ports.
- b. Check that the valves are properly sealed.

TIP

Check that there are no kerosene leaks from the valve seat “1”.


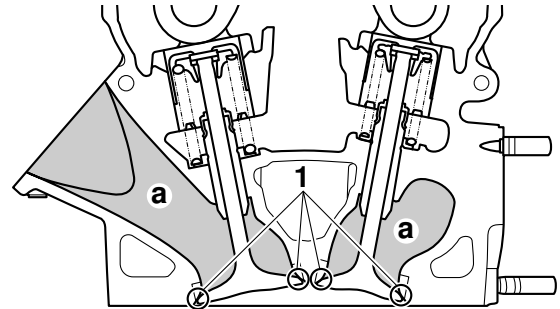


3. Remove:

- Valve cotter “1”

TIP

Remove the valve cotters by compressing the valve spring with the valve spring compressor “2” and the valve spring compressor attachment “3”.

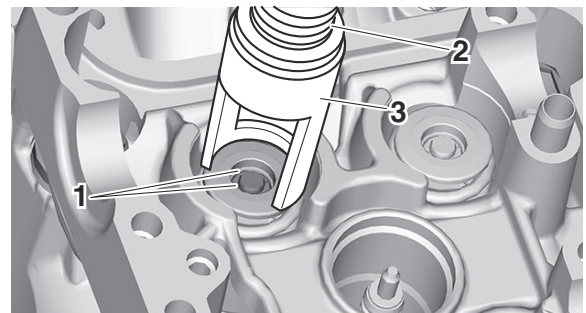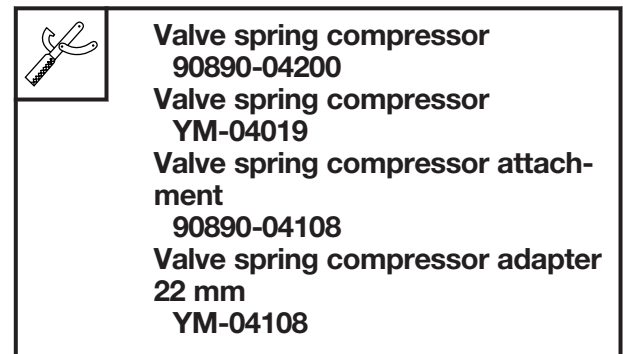


4. Remove:

- Valve spring retainer “1”
- Valve spring “2”
- Valve “3”
- Valve stem seal “4”
- Valve spring seat “5”

TIP

Identify the position of each part very carefully so that it can be reinstalled in its original place.

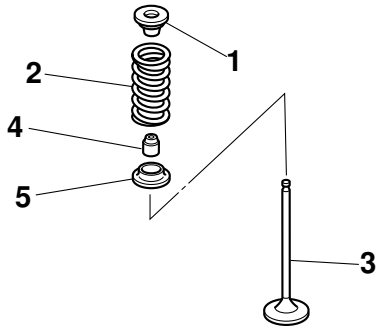

EAM30091

CHECKING THE VALVES AND VALVE GUIDES



1. Measure:

- Valve-stem-to-valve-guide clearance
Out of specification → Replace the valve guide.

Valve-stem-to-valve-guide clearance =
Valve guide inside diameter "a" -
Valve stem diameter "b"



Valve-stem-to-valve-guide clearance limit (intake)
0.080 mm (0.0032 in)
Valve-stem-to-valve-guide clearance limit (exhaust)
0.100 mm (0.0039 in)

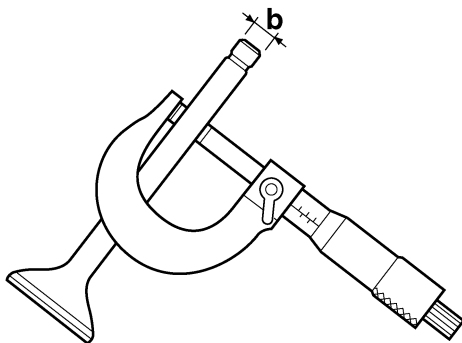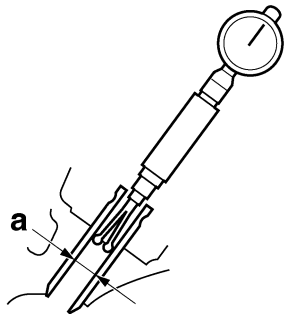


- ### 2. Replace:
- Valve guide

TIP

To ease valve guide removal and installation,

and to maintain the correct fit, heat the cylinder head to 100 °C (212 °F) in an oven.


- ### a. Remove the valve guide with the valve guide remover "1".

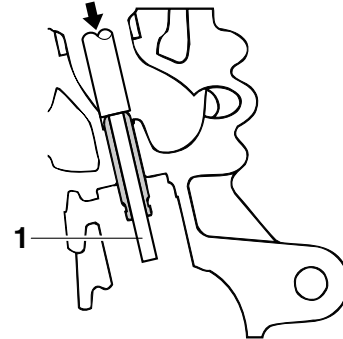


- ### b. Install the new valve guide with the valve guide installer "1" and the valve guide remover "2".



Valve guide installation height "a"
Intake
13.5–13.9 mm (0.53–0.55 in)
Exhaust
12.2–12.6 mm (0.48–0.50 in)

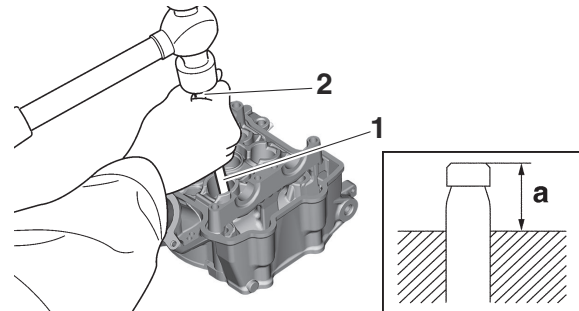

- ### c. After installing the valve guide, expand the hole in the valve guide with the valve guide reamer "3" to obtain the proper valve-stem-to-valve-guide clearance.

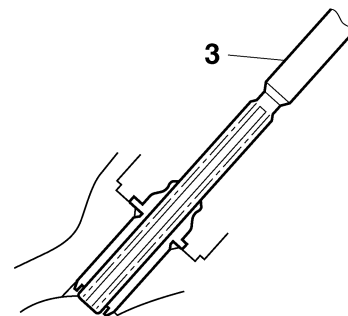

TIP

After replacing the valve guide, reface the valve seat.



Valve guide remover & installer set (ø5.5)
 90890-04016
Valve guide remover (5.5 mm)
 YM-01122
Valve guide reamer (5.5 mm)
 90890-01196
Valve guide reamer (5.5 mm)
 YM-01196


3. Eliminate:
 - Carbon deposits
 (from the valve face and valve seat)
4. Check:
 - Valve face
 Pitting/wear → Grind the valve face.
 - Valve stem end
 Mushroom shape or diameter larger than the body of the valve stem → Replace the valve.
5. Measure:
 - Valve stem runout
 Out of specification → Replace the valve.

TIP

- When installing a new valve, always replace the valve guide.
- If the valve is removed or replaced, always replace the valve stem seal.



Valve stem runout
 0.020 mm (0.0008 in)

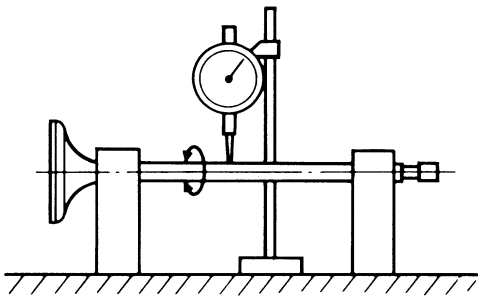


EAM30092

CHECKING THE VALVE SEATS


1. Eliminate:
 - Carbon deposits
 (from the valve face and valve seat)
2. Check:
 - Valve seat
 Pitting/wear → Replace the cylinder head.
3. Measure:
 - Valve seat contact width "a"
 Out of specification → Replace the cylinder head.



Valve seat contact width limit (in-take)
 1.5 mm (0.06 in)
Valve seat contact width limit (exhaust)
 1.5 mm (0.06 in)

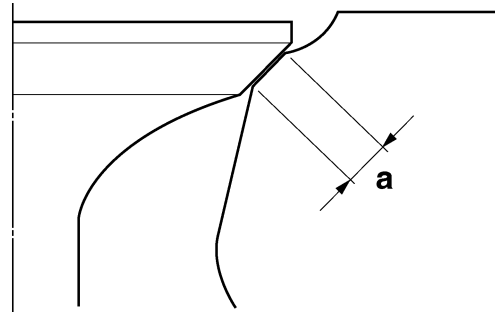


- a. Apply blue layout fluid "b" onto the valve face.

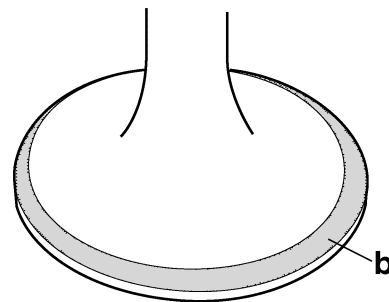

- b. Install the valve into the cylinder head.
- c. Press the valve through the valve guide and onto the valve seat to make a clear impression.
- d. Measure the valve seat contact width "c".

TIP

Where the valve seat and the valve face are in contact with each other, the blueing will have been removed.

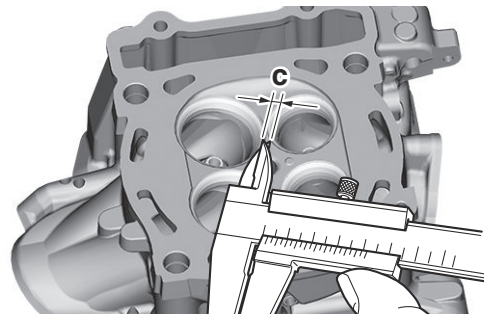

4. Lap:
 - Valve face
 - Valve seat

ECA24640

NOTICE

This model uses titanium intake and exhaust valves.

Do not use the valves used for lapping the valve seat. Always replace the valves used for lapping with new ones.

TIP


- When replacing the cylinder head, replace also the valves with new ones without them.
- When replacing the valves or the valve guides, use new valves to lap the valve seats, and then replace them with new valves.

- Apply a coarse lapping compound "a" to the valve face.

ECA13790

NOTICE

Do not let the lapping compound enter the gap between the valve stem and the valve guide.

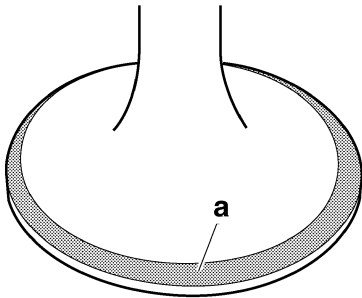


- Apply molybdenum disulfide oil onto the valve stem.
- Install the valve into the cylinder head.
- Turn the valve until the valve face and the valve seat are evenly polished, then clean off all of the lapping compound.


TIP

While turning the valve lapper, tap and lap the valve seat.

- Apply a fine lapping compound to the valve face, and repeat the above steps.
- After every lapping step, be sure to clean off all of the lapping compound from the valve face and the valve seat.
- Apply blue layout fluid "b" onto the valve face.

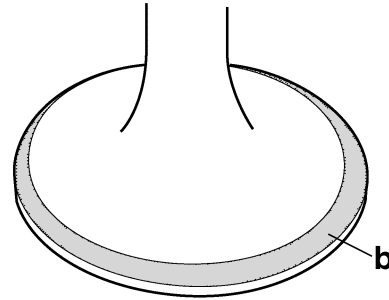

- Install the valve into the cylinder head.
- Press the valve through the valve guide and onto the valve seat to make a clear impression.
- Measure the valve seat contact width "c" again. If the valve seat contact width is out of specification, reface and lap the valve seat.

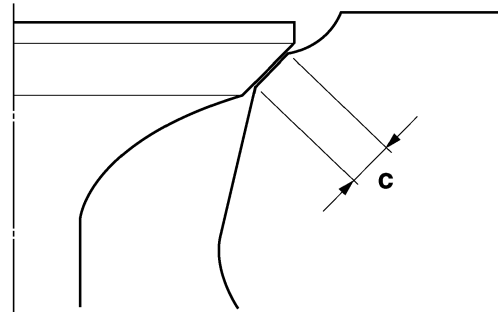

EAM30093

CHECKING THE VALVE SPRINGS

- Measure:

- Valve spring free length "a"

Out of specification → Replace the valve spring.




Free length limit (intake)

36.65 mm (1.44 in)

Free length limit (exhaust)

37.34 mm (1.47 in)

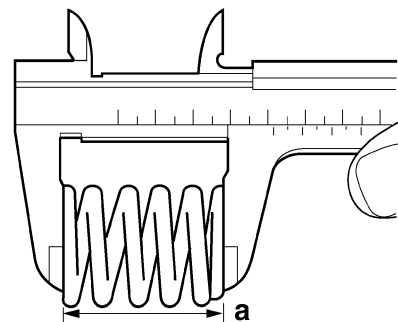


EAM30094

CHECKING THE VALVE LIFTERS

1. Check:

- Valve lifter

Damage/scratches → Replace the valve lifters and cylinder head.

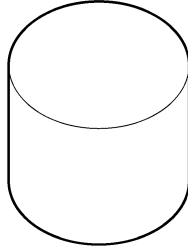


I1170701

EAM30095

INSTALLING THE VALVES


1. Clean:

- Valve stem end

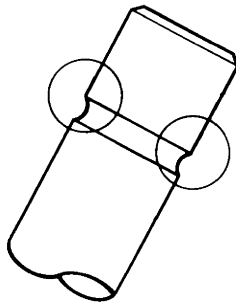

2. Lubricate:

- Valve stem "1"
- Valve stem seal "2"

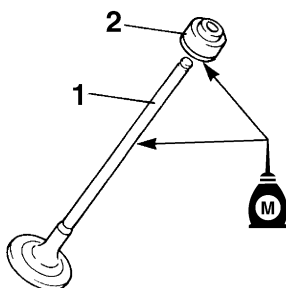


3. Install:

- Spring seat "1"
- Valve stem seal "2" **New**
- Valve "3"
- Valve spring "4"
- Valve spring retainer "5"

(to the cylinder head)

TIP

- Make sure each valve is installed in its original place.
- Install the valve springs with the larger pitch "a" facing up.

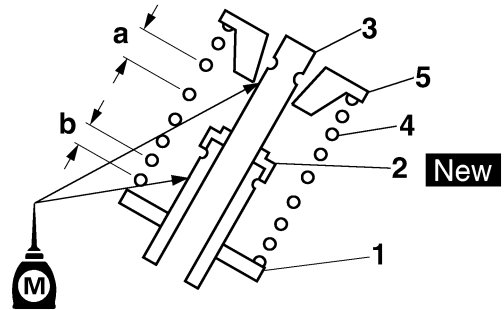

b. Smaller pitch

4. Install:

- Valve cotter "1"

TIP

Install the valve cotters by compressing the valve spring with the valve spring compressor "2" and the valve spring compressor attachment "3".



Valve spring compressor
90890-04200


Valve spring compressor
YM-04019

Valve spring compressor attach-
ment

90890-04108

Valve spring compressor adapter
22 mm

YM-04108

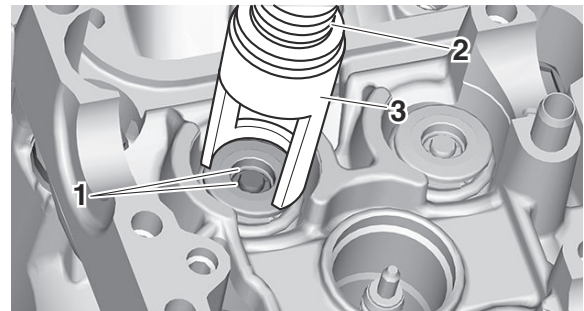


5. To fasten the valve cotters onto the valve stem, lightly tap the valve tip with a soft-face hammer.

ECA13800

NOTICE


Hitting the valve tip with excessive force

could damage the valve.

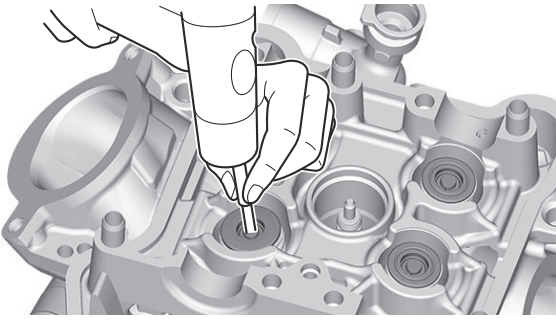

6. Lubricate:

- Adjusting pad “1”
- Valve lifter “2”

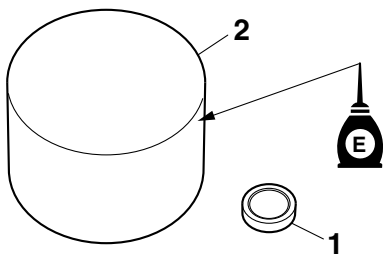

7. Install:

- Adjusting pad
- Valve lifter


TIP

- Check that the valve lifter turns smoothly when rotated with your finger.
- Make sure that the valve lifter and the adjusting pad are reinstalled in their original positions.

EAM20109

CYLINDER AND PISTON

Removing the cylinder and piston

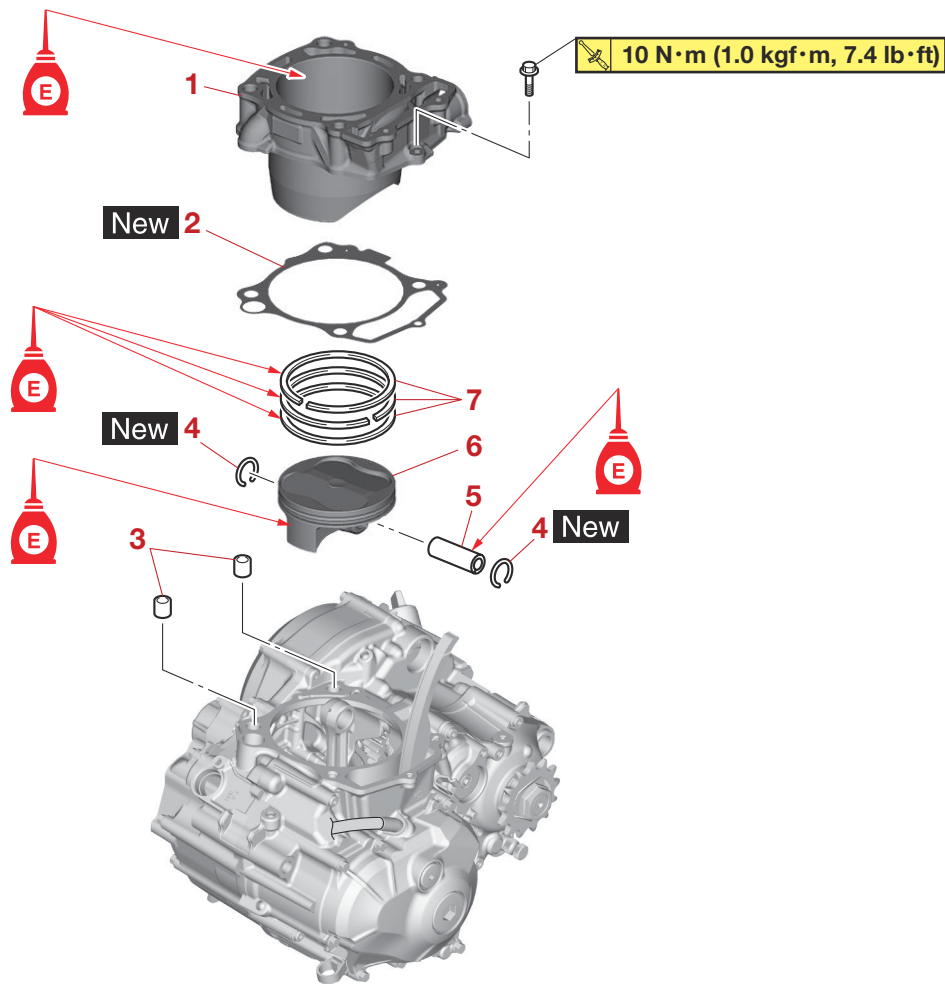

Order	Job/Parts to remove	Q'ty	Remarks
	Cylinder head		Refer to "CYLINDER HEAD" on page 5-19.
1	Cylinder body	1	
2	Gasket	1	
3	Dowel pin	2	
4	Piston pin clip	2	
5	Piston pin	1	
6	Piston	1	
7	Piston ring set	1	

EAM30096

REMOVING THE PISTON

1. Remove:

- Piston pin clip “1”
- Piston pin “2”
- Piston “3”



ECA13810

NOTICE

Do not use a hammer to drive the piston pin out.

TIP

- Before removing the piston pin clip, cover the crankcase opening with a cloth to prevent the piston pin clip from falling into the crankcase.
- Before removing the piston pin, deburr the piston pin clip's groove and the piston pin's bore area. If the piston pin groove is deburred and the piston pin is still difficult to remove, use the piston pin puller set “4”.

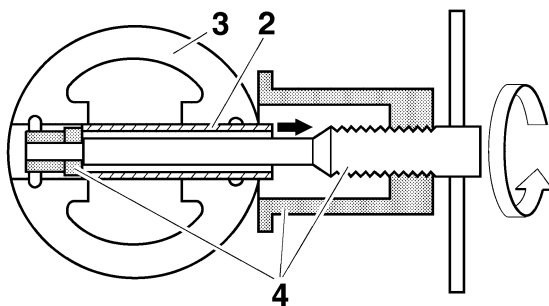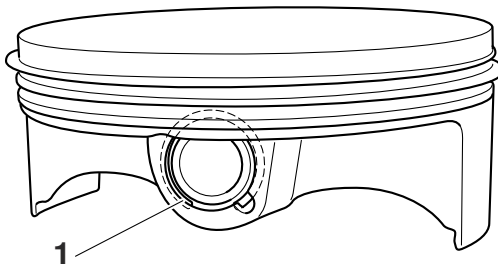


2. Remove:

- Top ring
- 2nd ring
- Oil ring

TIP

When removing a piston ring, open the end gap with your fingers and lift the opposite end gap of

the piston ring over the piston crown.

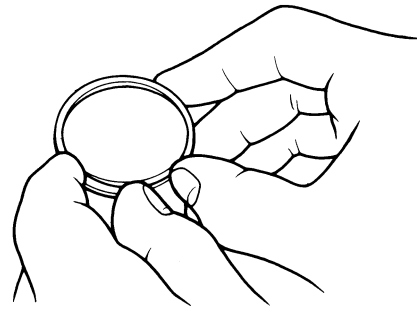

EAM30097

CHECKING THE CYLINDER AND PISTON

1. Check:

- Piston wall (Sidewall)
 - Cylinder wall
- Vertical scratches → Replace the cylinder, and replace the piston and piston rings as a set.

2. Measure:


- Piston-to-cylinder clearance
 - a. Measure the cylinder bore “C” with the cylinder bore gauge.

TIP

Measure the cylinder bore “C” by taking side-to-side and front-to-back measurements of the cylinder.

	Bore
	97.000–97.010 mm (3.8189–3.8193 in)
	Wear limit
	97.060 mm (3.8213 in)


“C” = maximum of D₁, D₂, D₃, D₄, D₅, D₆

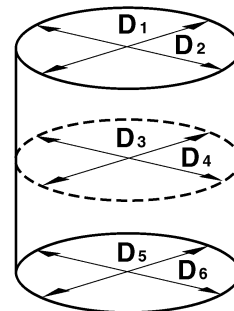

- If out of specification, rebore or replace the cylinder, and replace the piston and the piston rings as a set.
- Measure the piston outside diameter “a” at the measuring point (from piston skirt bottom) “b” with the micrometer.



Diameter
96.955–96.970 mm (3.8171–3.8177 in)
Measuring point (from piston skirt bottom)
9.0 mm (0.35 in)

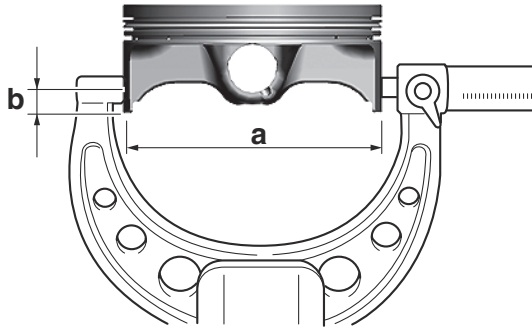

- d. If out of specification, replace the cylinder, the piston, and the piston rings as a set.
- e. Calculate the piston-to-cylinder clearance with the following formula.

Piston-to-cylinder clearance =
Cylinder bore “C” - Piston diameter



Piston-to-cylinder clearance
0.010–0.045 mm (0.0004–0.0018 in)
Limit
0.15 mm (0.006 in)

- f. If out of specification, replace the cylinder, the piston, and the piston rings as a set.

EAM30098

CHECKING THE PISTON RINGS

1. Measure:


- Piston ring side clearance
Out of specification → Replace the piston and piston rings as a set.

TIP

Before measuring the piston ring side clearance, eliminate any carbon deposits from the piston ring grooves and piston rings.



Top ring
Ring side clearance
0.015–0.065 mm (0.0006–0.0026 in)
Side clearance limit
0.120 mm (0.0047 in)
2nd ring
Ring side clearance
0.020–0.060 mm (0.0008–0.0024 in)
Side clearance limit
0.100 mm (0.0039 in)

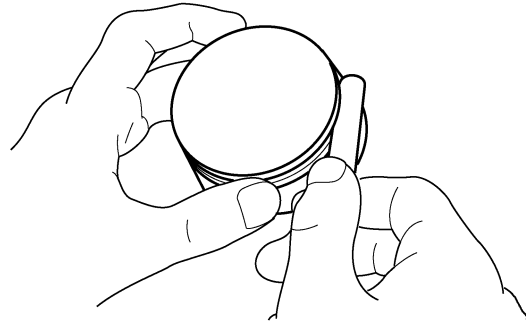

2. Install:

- Piston ring
(into the cylinder)

TIP

Use the piston crown to level the piston ring near bottom of cylinder “a”, where cylinder wear is lowest.

3. Measure:


- Piston ring end gap
Out of specification → Replace the piston ring.

TIP

The oil ring expander spacer's end gap cannot be measured. If the oil ring rail's gap is excessive, replace the oil ring as a set.



Top ring
End gap limit
0.55 mm (0.0217 in)
2nd ring
End gap limit
0.85 mm (0.0335 in)

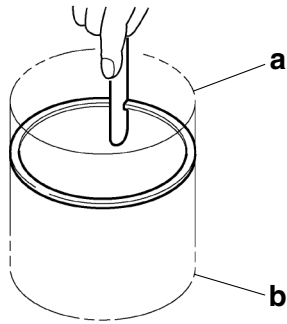

b. Upper of cylinder

EAM30099



CHECKING THE PISTON PIN

1. Check:

- Piston pin
Blue discoloration/grooves → Replace the piston pin and then check the lubrication system.


2. Measure:

- Piston pin outside diameter “a”
Out of specification → Replace the piston pin.

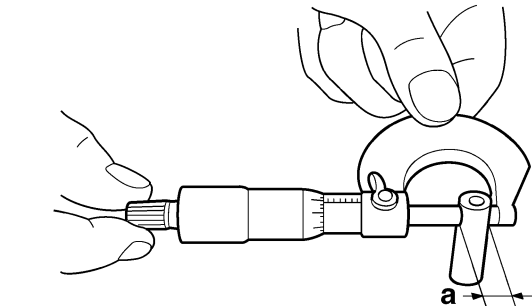

3. Measure:

- Piston pin bore inside diameter “b”
Out of specification → Replace the piston.

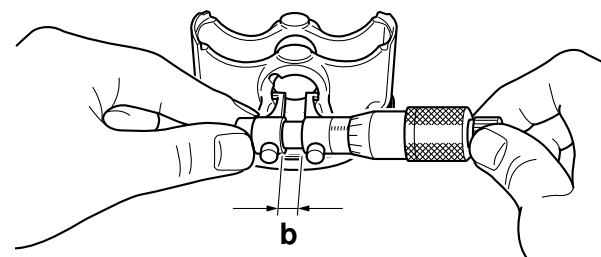

EAM30100



INSTALLING THE PISTON AND CYLINDER

1. Install:

- Oil ring expander “1”
- Lower oil ring rail “2”
- Upper oil ring rail “3”
- 2nd ring “4”
- Top ring “5”

TIP

Be sure to install the piston rings so that the manufacturer’s marks or numbers face up.

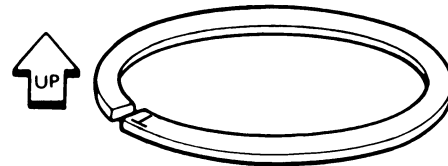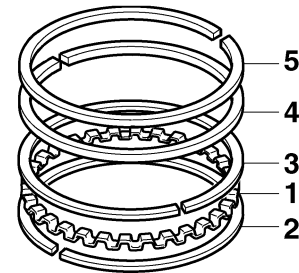


2. Install:


- Piston “1”
- Piston pin “2”
- Piston pin clip “3” **New**

TIP

- Apply the engine oil to the piston and piston pin.
- Install the piston with the mark “a” on it pointing to its exhaust (rear) side.
- Before installing the piston pin clip, cover the crankcase opening with a cloth to prevent the clip from falling into the crankcase.
- Make sure that the end of the piston pin clip is not positioned at the cutout in the piston.

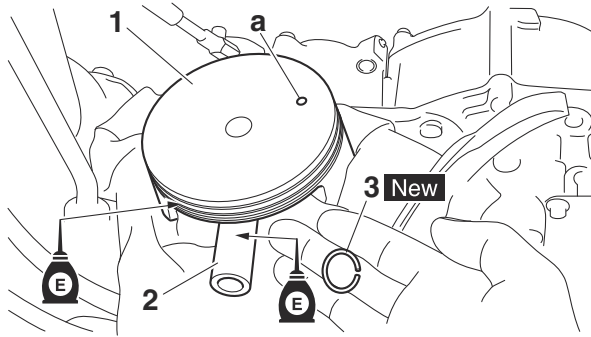

(exhaust side) through the timing chain cavity.

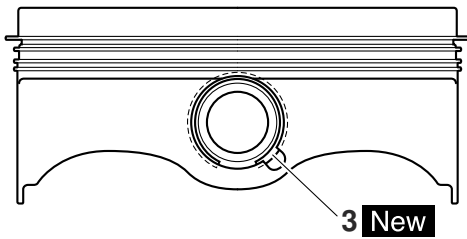


3. Lubricate:

- Piston
- Piston ring
- Cylinder

4. Offset:

- Piston ring end gap

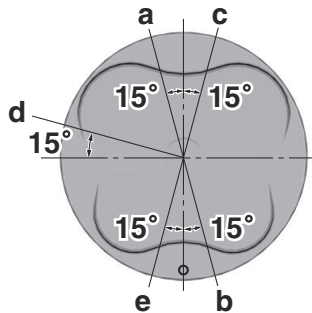

- a. Top ring
- b. 2nd ring
- c. Upper oil ring rail
- d. Oil ring expander
- e. Lower oil ring rail

5. Install:

- Gasket **New**
- Dowel pin
- Cylinder

	Cylinder bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)
--	--


TIP

- While compressing the piston rings with one hand, install the cylinder with the other hand.
- Pass the timing chain and timing chain guide

EAM20183

GENERATOR


Removing the stator coil assembly

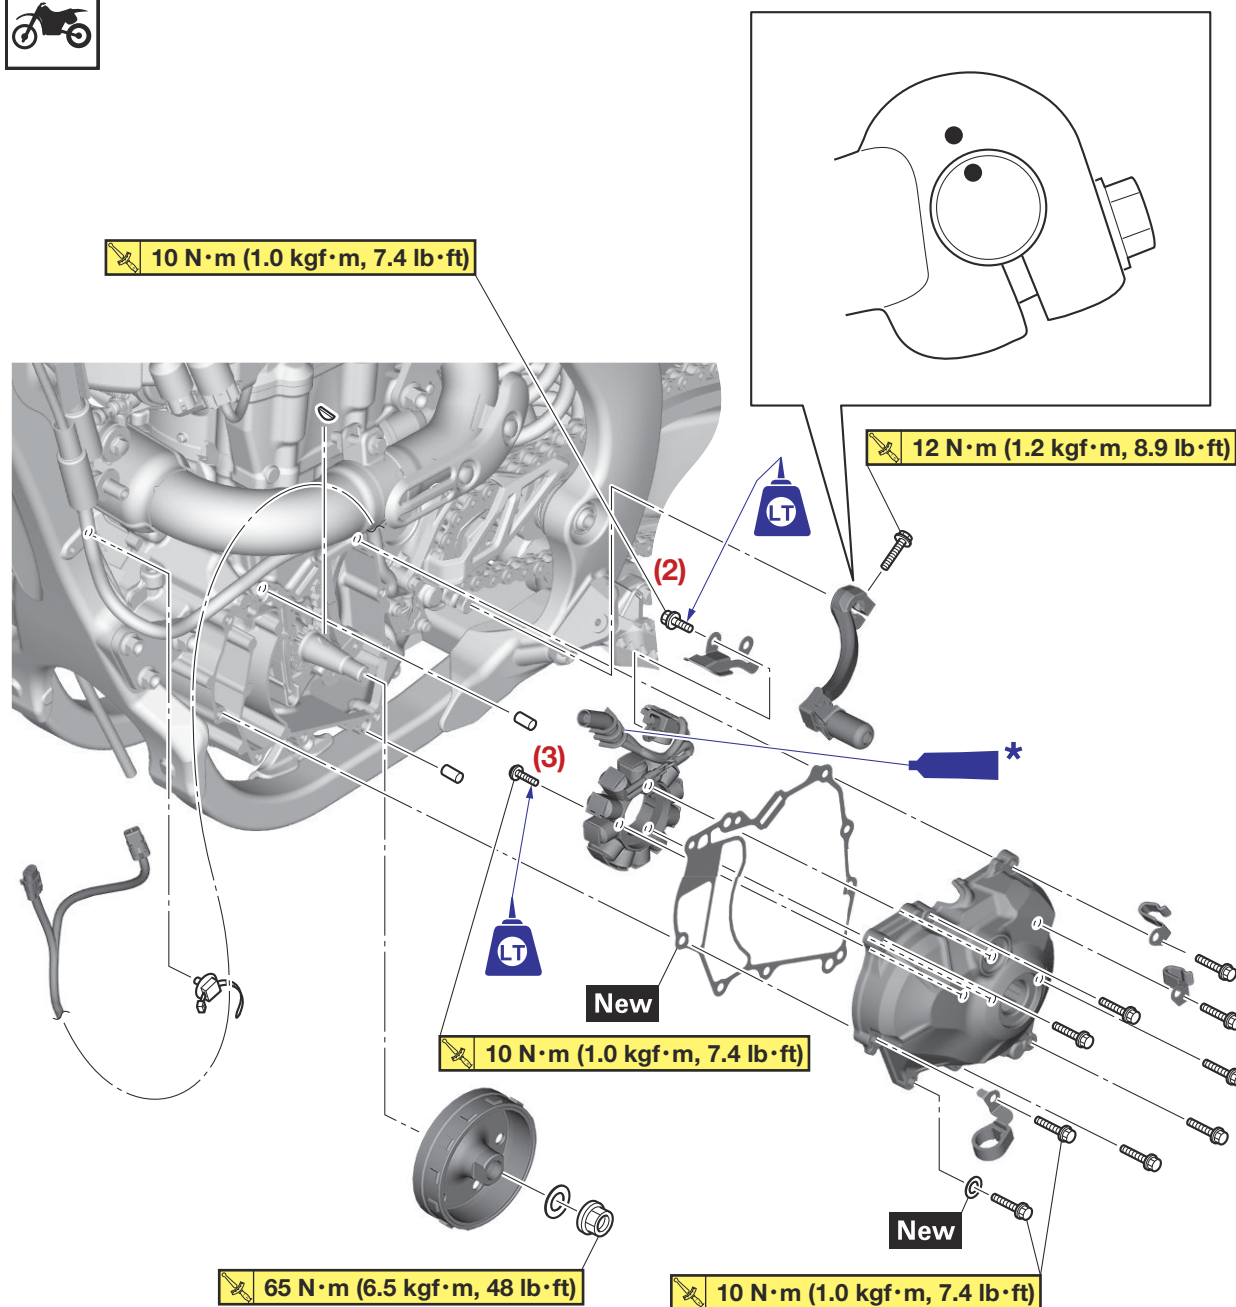

* Yamaha bond No. 1215 (Three bond No. 1215®)

Order	Job/Parts to remove	Q'ty	Remarks
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-14.
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left)		Refer to "GENERAL CHASSIS" on page 4-1.


Removing the stator coil assembly

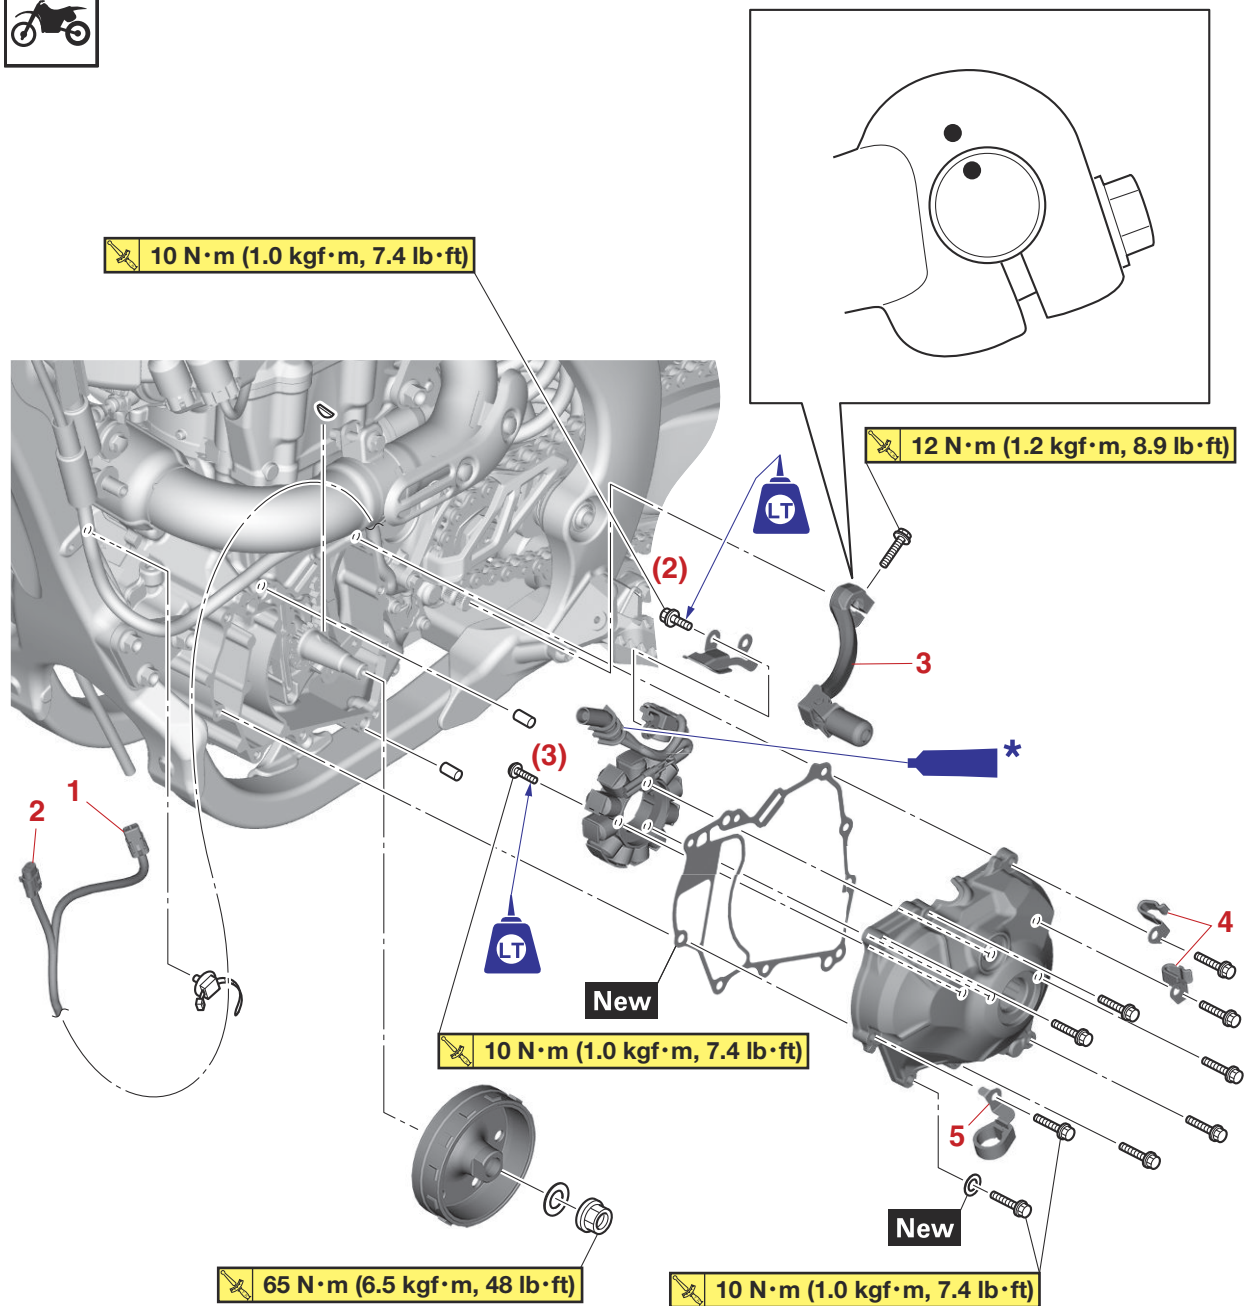

*** Yamaha bond No. 1215 (Three bond No. 1215®)**

Order	Job/Parts to remove	Q'ty	Remarks
1	Stator coil assembly coupler	1	Disconnect.
2	Crankshaft position sensor coupler	1	Disconnect.
3	Shift pedal	1	When installing, align the punch marks on the shift pedal and the shift shaft.
4	Clamp	2	
5	Holder	1	

Removing the stator coil assembly

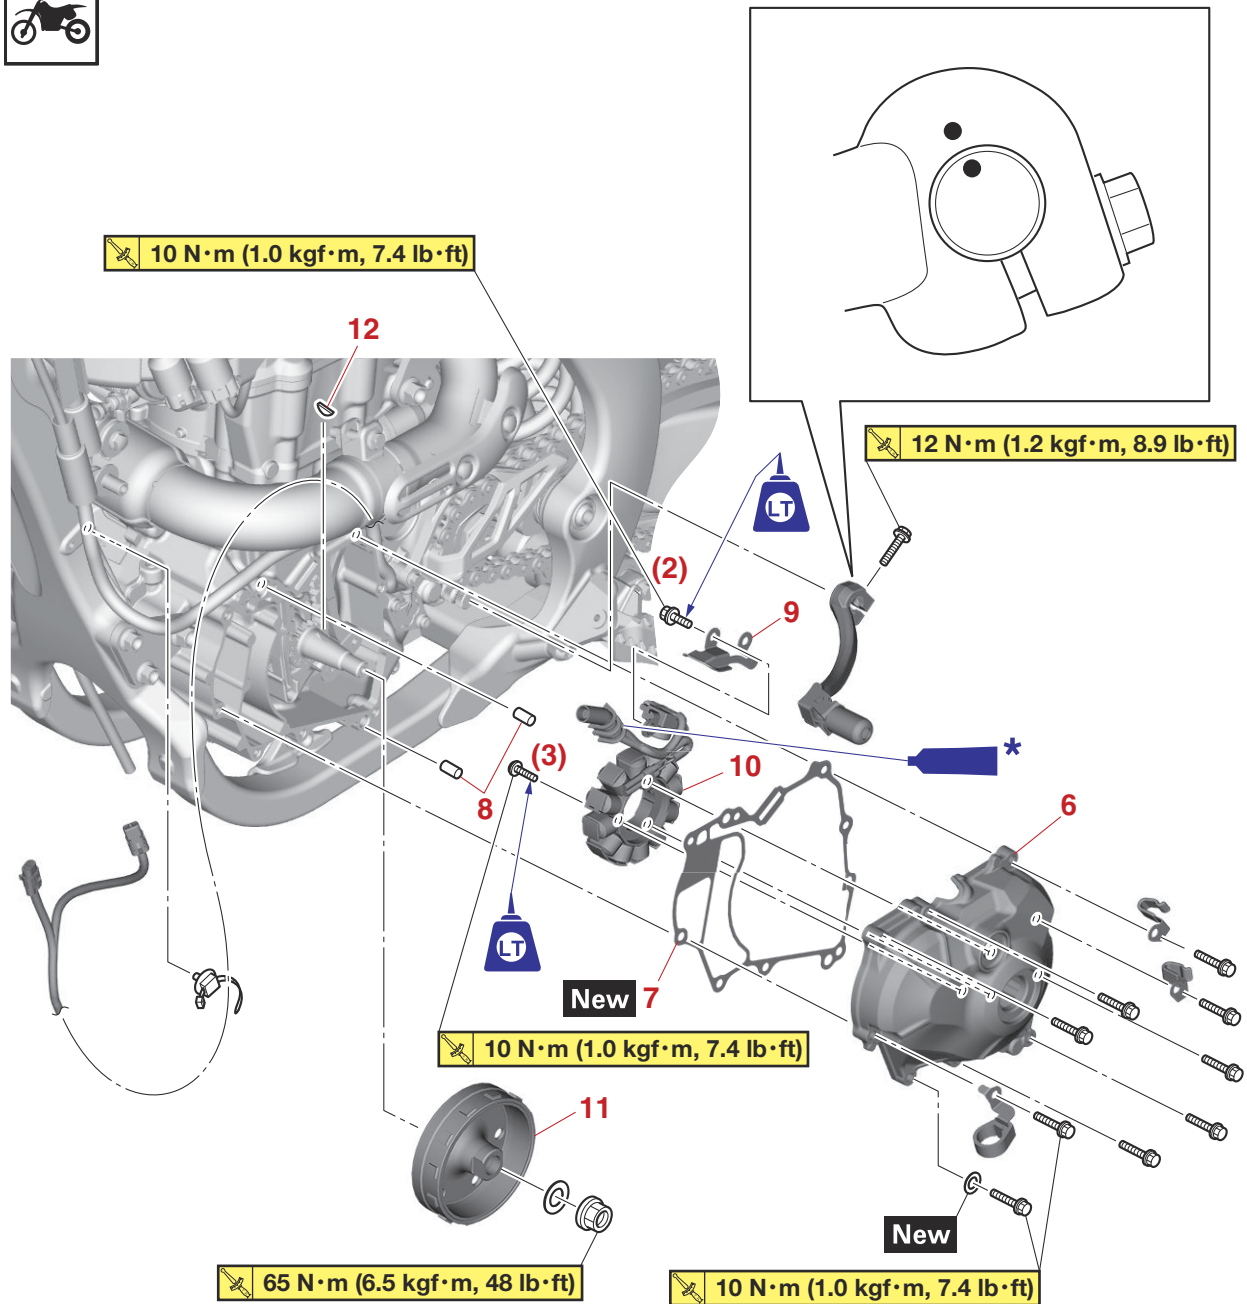


*** Yamaha bond No. 1215 (Three bond No. 1215®)**

Order	Job/Parts to remove	Q'ty	Remarks
6	Crankcase cover (left)	1	
7	Gasket	1	
8	Dowel pin	2	
9	Clamp	1	
10	Stator coil assembly	1	
11	Generator rotor	1	
12	Woodruff key	1	


EAM30487

REMOVING THE GENERATOR

1. Remove:
 - Nut (generator rotor) "1"
 - Washer

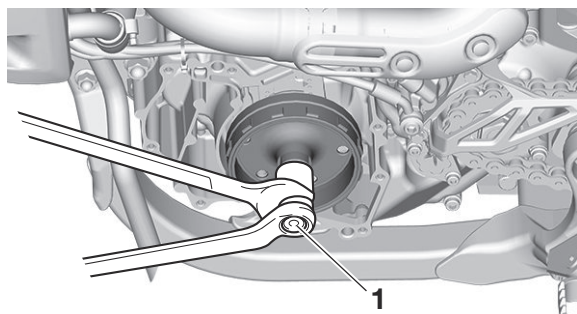


2. Remove:
 - Generator rotor "1"
 - (with the rotor puller "2")
 - Woodruff key

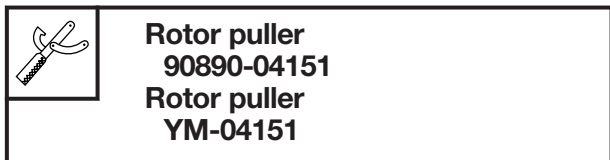

EAM30488

CHECKING THE GENERATOR


1. Check:
 - Generator rotor "1" inner surface "a"
 - Stator coil assembly "2" outer surface "b"
 Damage → Inspect the crankshaft runout and crankshaft bearing.

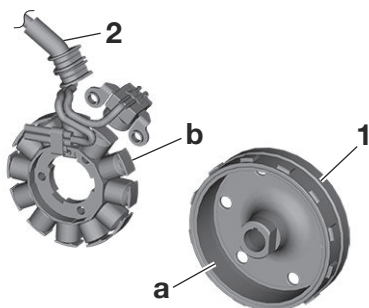

EAM30377

CHECKING THE WOODRUFF KEY

1. Check:
 - Woodruff key "1"
 Damage → Replace.

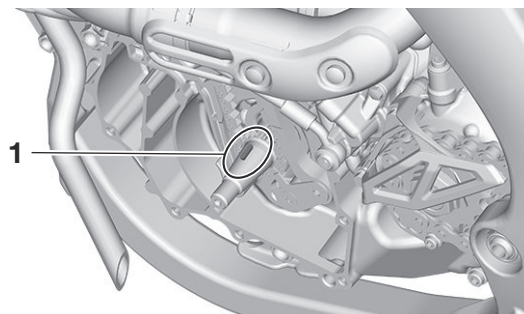

EAM30489

INSTALLING THE GENERATOR

1. Install:
 - Stator coil assembly "1"
 - Screw (stator coil assembly) "2"





- Crankshaft position sensor "3"
- Bolt (crankshaft position sensor) "4"



TIP

- Apply the sealant to the grommet of the stator coil assembly lead.
- Tighten the stator coil assembly screws using the T25 bit.
- Pass the stator coil assembly lead through the crankcase cover side.

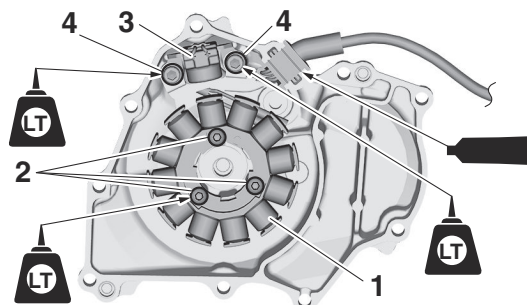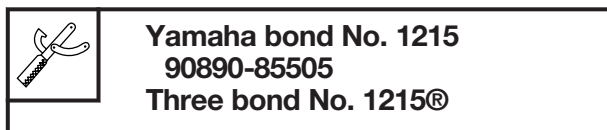


2. Install:

- Woodruff key “1”
- Generator rotor “2”

TIP

- Clean the contact surfaces of the tapered portions of the crankshaft and generator rotor.
- When installing the woodruff key, make sure that its flat surface “a” is in parallel with the crankshaft center line “b”.
- When installing the generator rotor, align the keyway “c” of the generator rotor with the woodruff key.

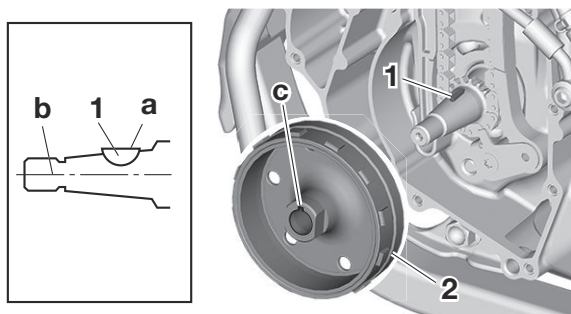


3. Install:

- Washer
- Nut (generator rotor) “1”



Nut (generator rotor)
65 N·m (6.5 kgf·m, 48 lb·ft)

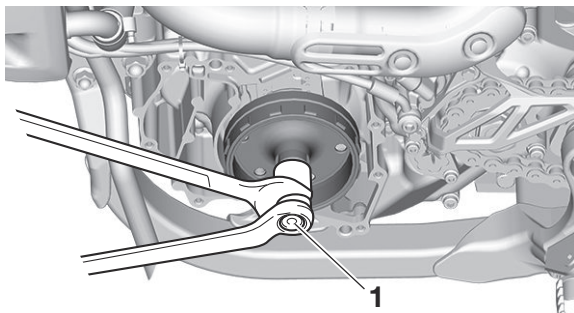

4. Install:


- Dowel pin “1”
- Gasket (crankcase cover (left)) “2” **New**
- Crankcase cover (left) “3”
- Lead holder “4”
- Holder “5”
- Crankcase cover bolt (left) “6”
- Washer **New**
- Engine oil drain bolt (oil tank) “7”



Crankcase cover bolt (left)
10 N·m (1.0 kgf·m, 7.4 lb·ft)
Engine oil drain bolt (oil tank)
10 N·m (1.0 kgf·m, 7.4 lb·ft)


TIP

Tighten the bolts in stages and in a crisscross pattern.

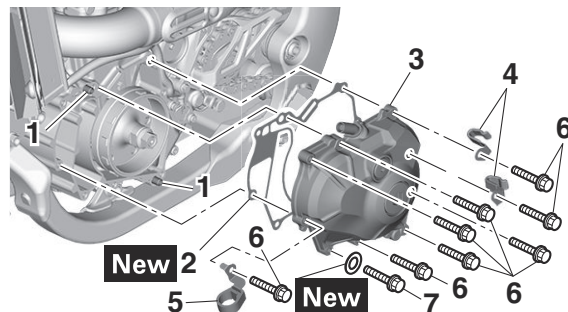

5. Connect:


- Stator coil assembly lead
Refer to “CABLE ROUTING DIAGRAM” on page 2-17.

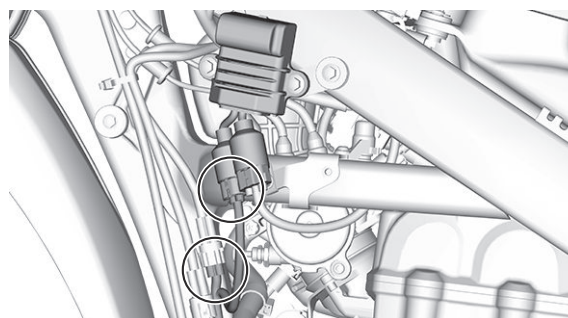

EAM20110


ELECTRIC STARTER

Removing the starter motor

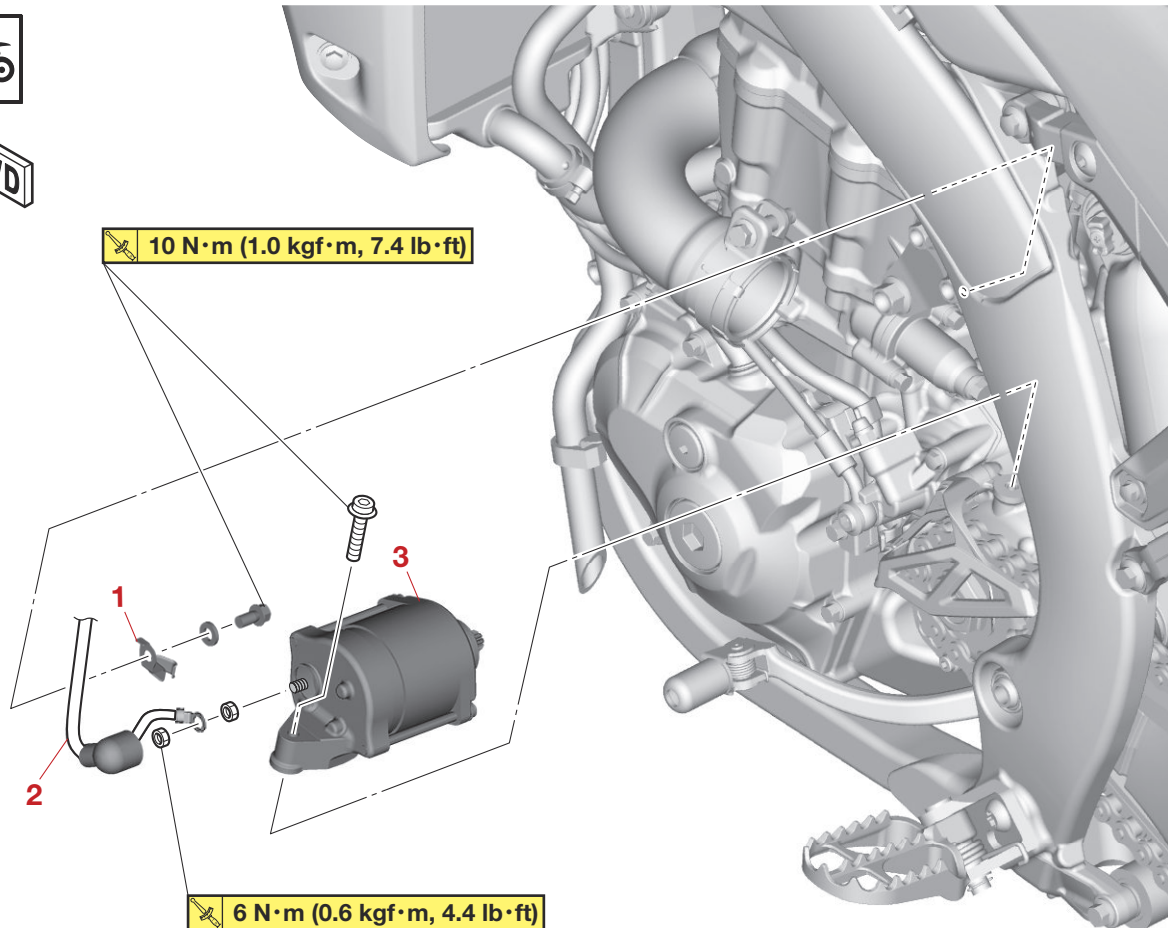

Order	Job/Parts to remove	Q'ty	Remarks
	Exhaust pipe		Refer to "ENGINE REMOVAL" on page 5-3.
1	Clamp	1	
2	Starter motor lead	1	When removing or installing the installation nut of the starter motor lead, be sure to hold the nut on the starter motor side firmly in place using a spanner.
3	Starter motor	1	

Disassembling the starter motor

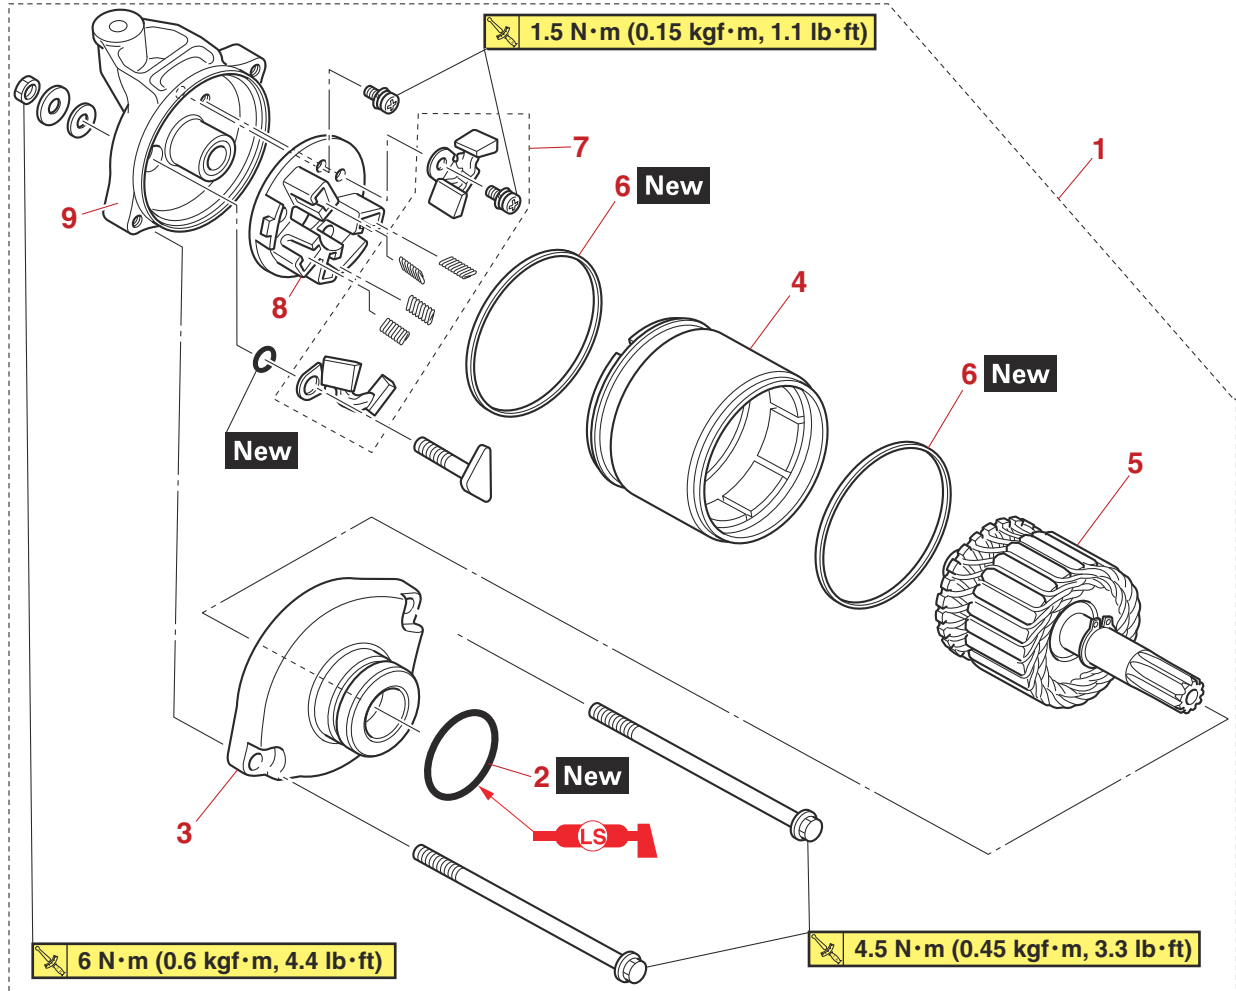

Order	Job/Parts to remove	Q'ty	Remarks
1	Starter motor assembly	1	
2	O-ring	1	
3	Starter motor front cover	1	
4	Starter motor yoke	1	
5	Armature assembly	1	
6	Gasket	2	
7	Brush set	1	
8	Brush holder	1	
9	Starter motor rear cover	1	

EAM30106

CHECKING THE STARTER MOTOR

1. Check:

- Commutator
Dirt → Clean with 600 grit sandpaper.

2. Measure:


- Mica undercut "a"
Out of specification → Scrape the mica to the proper measurement with a hacksaw blade that has been grounded to fit the commutator.



Mica undercut (depth)
2.40 mm (0.09 in)

TIP

The mica of the commutator must be undercut to ensure proper operation of the commutator.

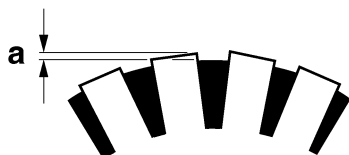


3. Check:

- Armature assembly
 - Connect the digital circuit tester to the armature coil and check the continuity.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tachometer
YU-A1927

- If there is no continuity, replace the starter motor.

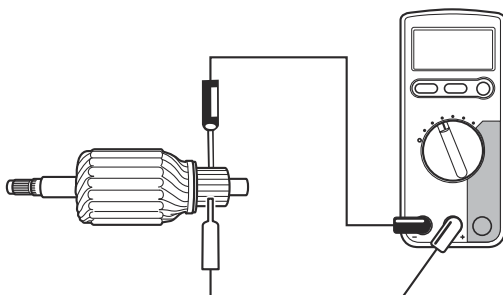


4. Measure:

- Brush length "a"
Out of specification → Replace the brush set.



Brush overall length limit
5.5 mm (0.22 in)

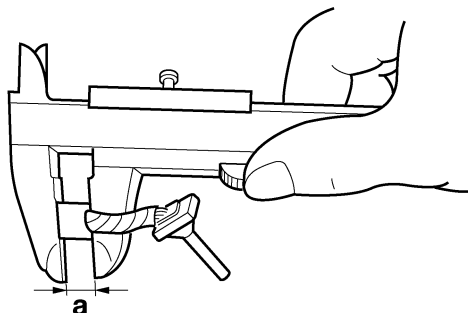

5. Measure:

- Brush spring force
Out of specification → Replace the brush set.



Brush spring force
4.80–7.20 N (489–734 gf, 17.28–25.92 oz)

6. Check:

- Gear teeth
Damage/wear → Replace the starter motor.

7. Check:

- Oil seal
Damage/wear → Replace the defective part(s).

EAM30107


ASSEMBLING THE STARTER MOTOR

1. Install:

- Brush spring "1"
- Brush "2"

TIP

Install the brush holder using the screws "a".

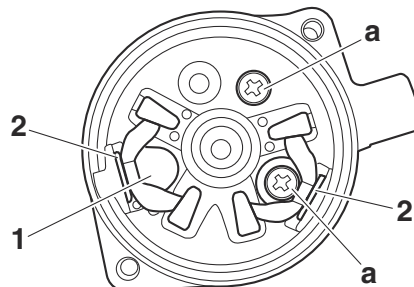


2. Install:

- Starter motor rear cover "1"
- O-ring **New**
- Starter motor yoke "2"

TIP

Install the starter motor rear cover with its projection "a" facing the groove "b" of the starter

motor yoke.

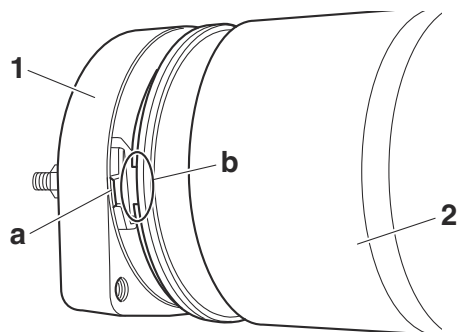


3. Install:

- Circlip
- Plain washer
- O-ring **New**
- Washer (starter motor front cover)
- Starter motor front cover "1"

TIP

Align the match mark "a" on the starter motor yoke with the match mark "b" on the starter motor front cover.

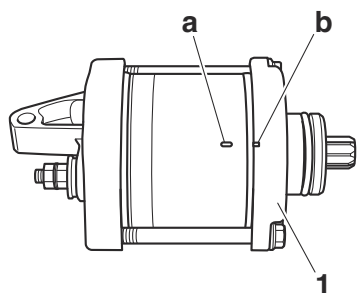

4. Install:

- Bolt
- O-ring **New**

TIP

Apply the lithium-soap-based grease on the O-ring.


5. Install:

- Starter motor
- Starter motor bolt




Starter motor bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

EAM20111

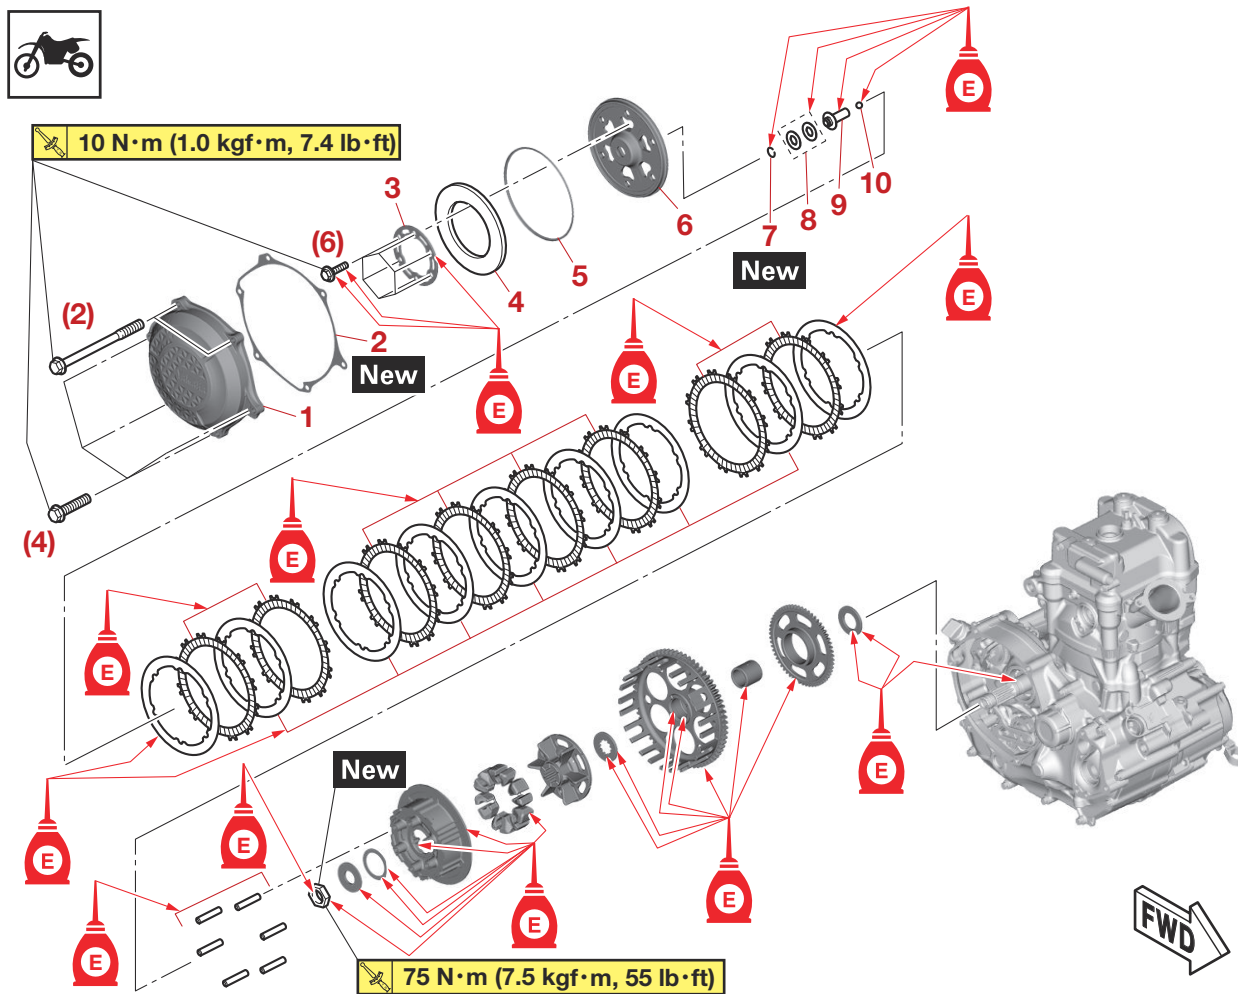CLUTCH**Removing the clutch**


Order	Job/Parts to remove	Q'ty	Remarks
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-14.
1	Clutch cover	1	
2	Gasket	1	
3	Pressure plate 1	1	
4	Clutch spring	1	
5	Spring retainer	1	
6	Pressure plate 2	1	
7	Circlip	1	
8	Bearing	1	
9	Push rod 1	1	
10	Ball	1	

Removing the clutch

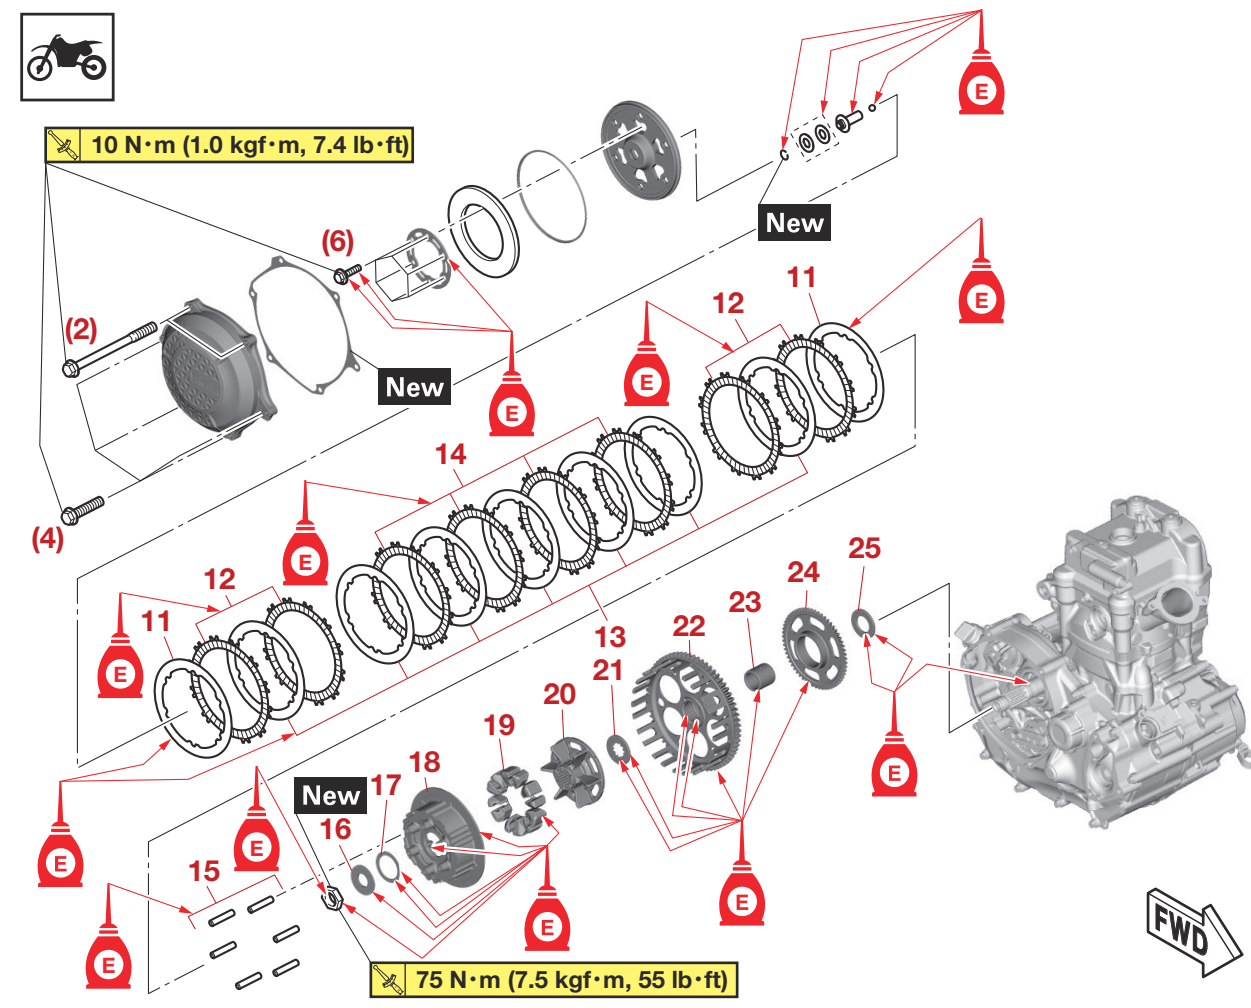


Order	Job/Parts to remove	Q'ty	Remarks
11	Clutch plate 2	2	[Thickness: 1.0 mm (0.04 in)]
12	Friction plate 2	4	Blue paint on the outer circumference, including 1 pawl head only.
13	Clutch plate 1	7	[Thickness: 1.4 mm (0.06 in)]
14	Friction plate 1	4	
15	Collar	6	
16	Spacer	1	
17	Washer	1	
18	Sleeve	1	
19	Absorber	6	
20	Clutch boss	1	
21	Washer	1	
22	Primary driven gear	1	
23	Collar	1	
24	Idle gear	1	
25	Washer	1	

Removing the crankcase cover (right)

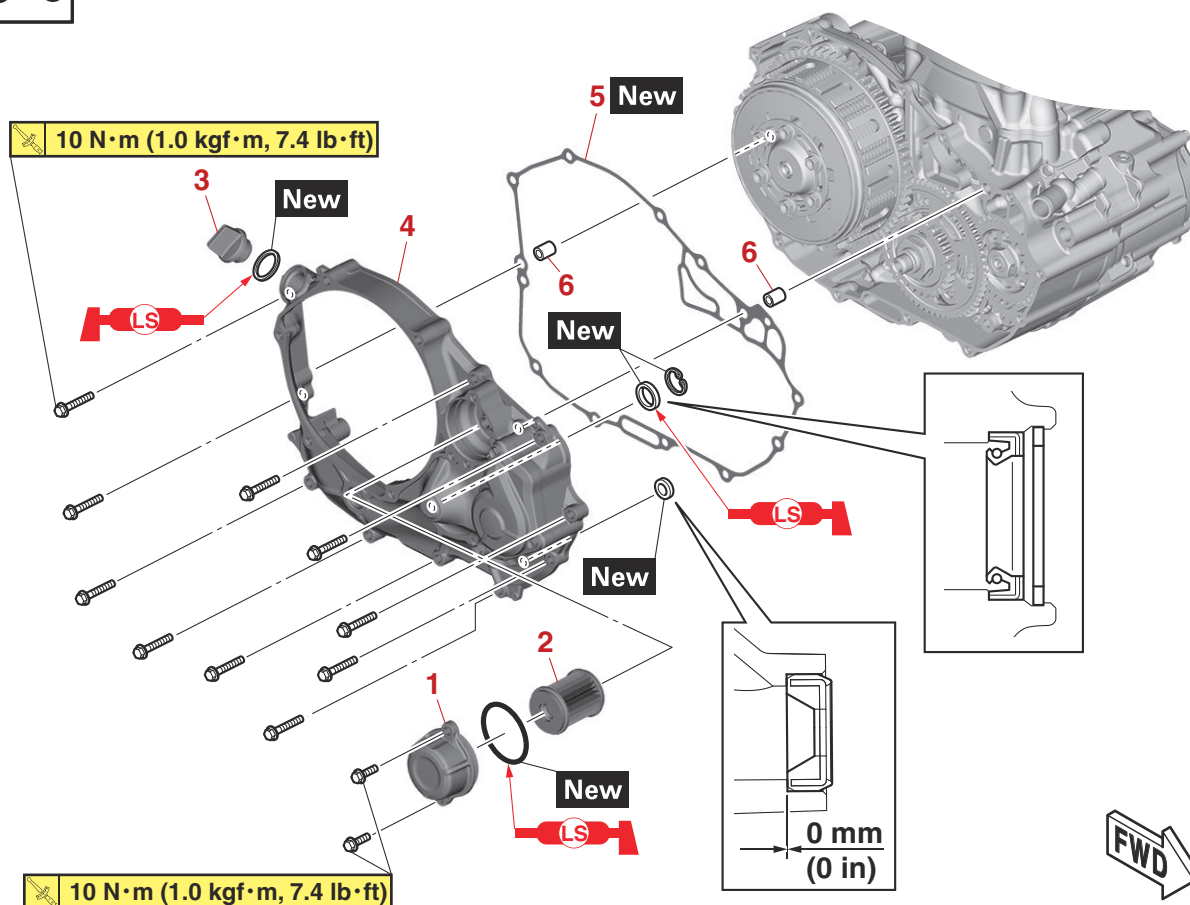


Order	Job/Parts to remove	Q'ty	Remarks
	Right engine guard		Refer to "ENGINE REMOVAL" on page 5-3.
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-14.
	Coolant		Drain. Refer to "CHANGING THE COOLANT" on page 3-23.
	Brake pedal		Refer to "ENGINE REMOVAL" on page 5-3.
	Clutch cover		Refer to "CLUTCH" on page 5-46.
1	Oil filter element cover	1	
2	Oil filter element	1	
3	Oil filler cap	1	
4	Crankcase cover (right)	1	
5	Gasket	1	
6	Dowel pin	2	

Removing the clutch master cylinder

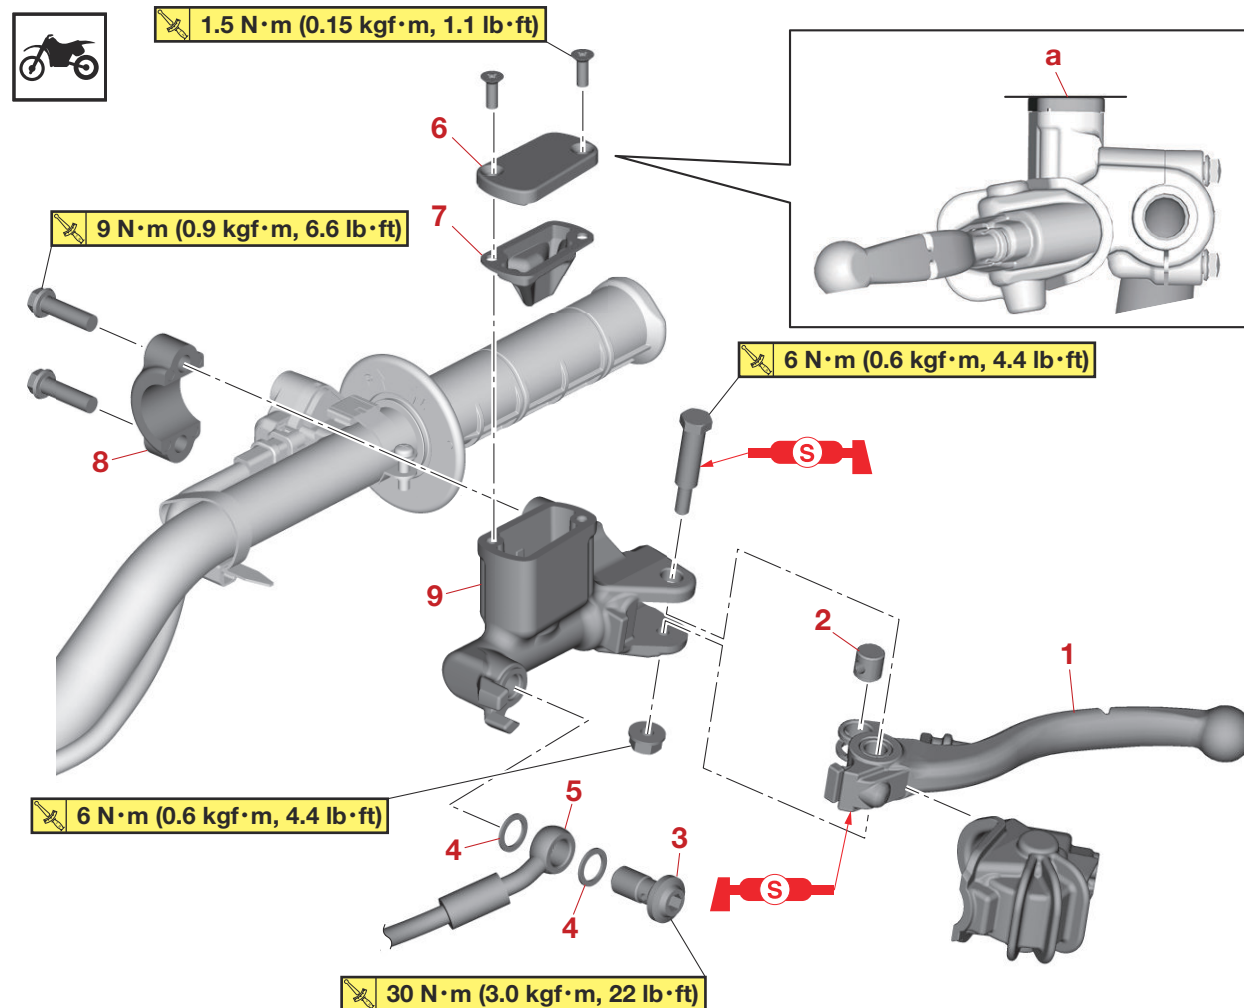


Order	Job/Parts to remove	Q'ty	Remarks
	Clutch fluid		Drain. Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" on page 3-16.
1	Clutch lever	1	
2	Bushing	1	
3	Clutch hose union bolt	1	
4	Copper washer	2	
5	Clutch hose	1	
6	Clutch master cylinder reservoir cap	1	Adjust the clutch master cylinder so that the top "a" of the clutch master cylinder reservoir cap is horizontal.
7	Clutch master cylinder reservoir diaphragm	1	
8	Clutch master cylinder holder	1	
9	Clutch master cylinder	1	

Disassembling the clutch master cylinder

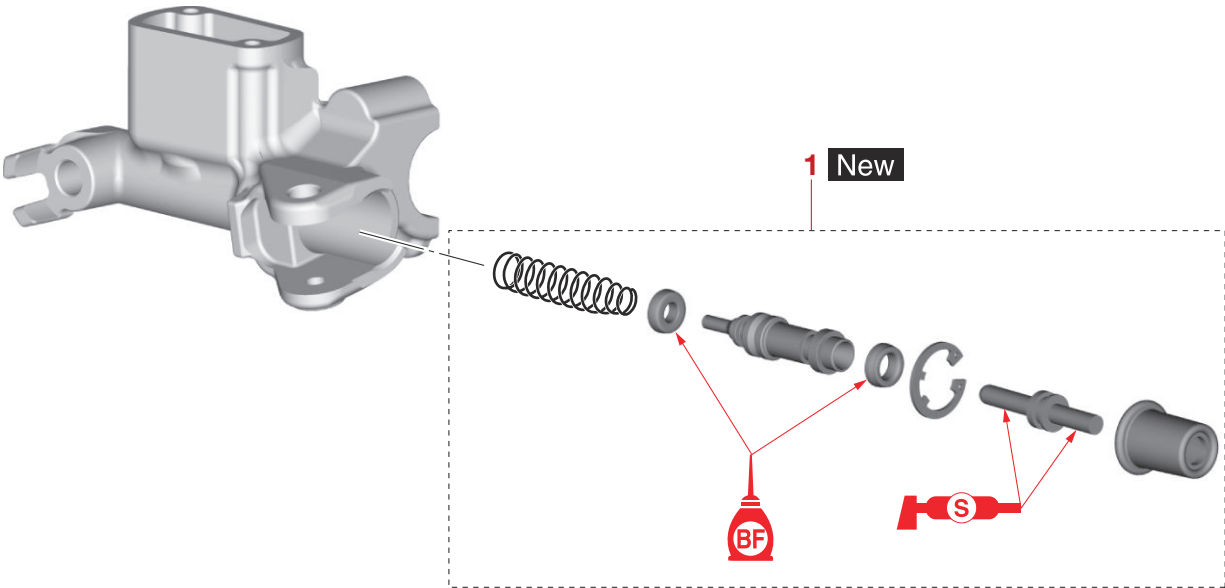

Order	Job/Parts to remove	Q'ty	Remarks
1	Master cylinder kit	1	

Removing the clutch release

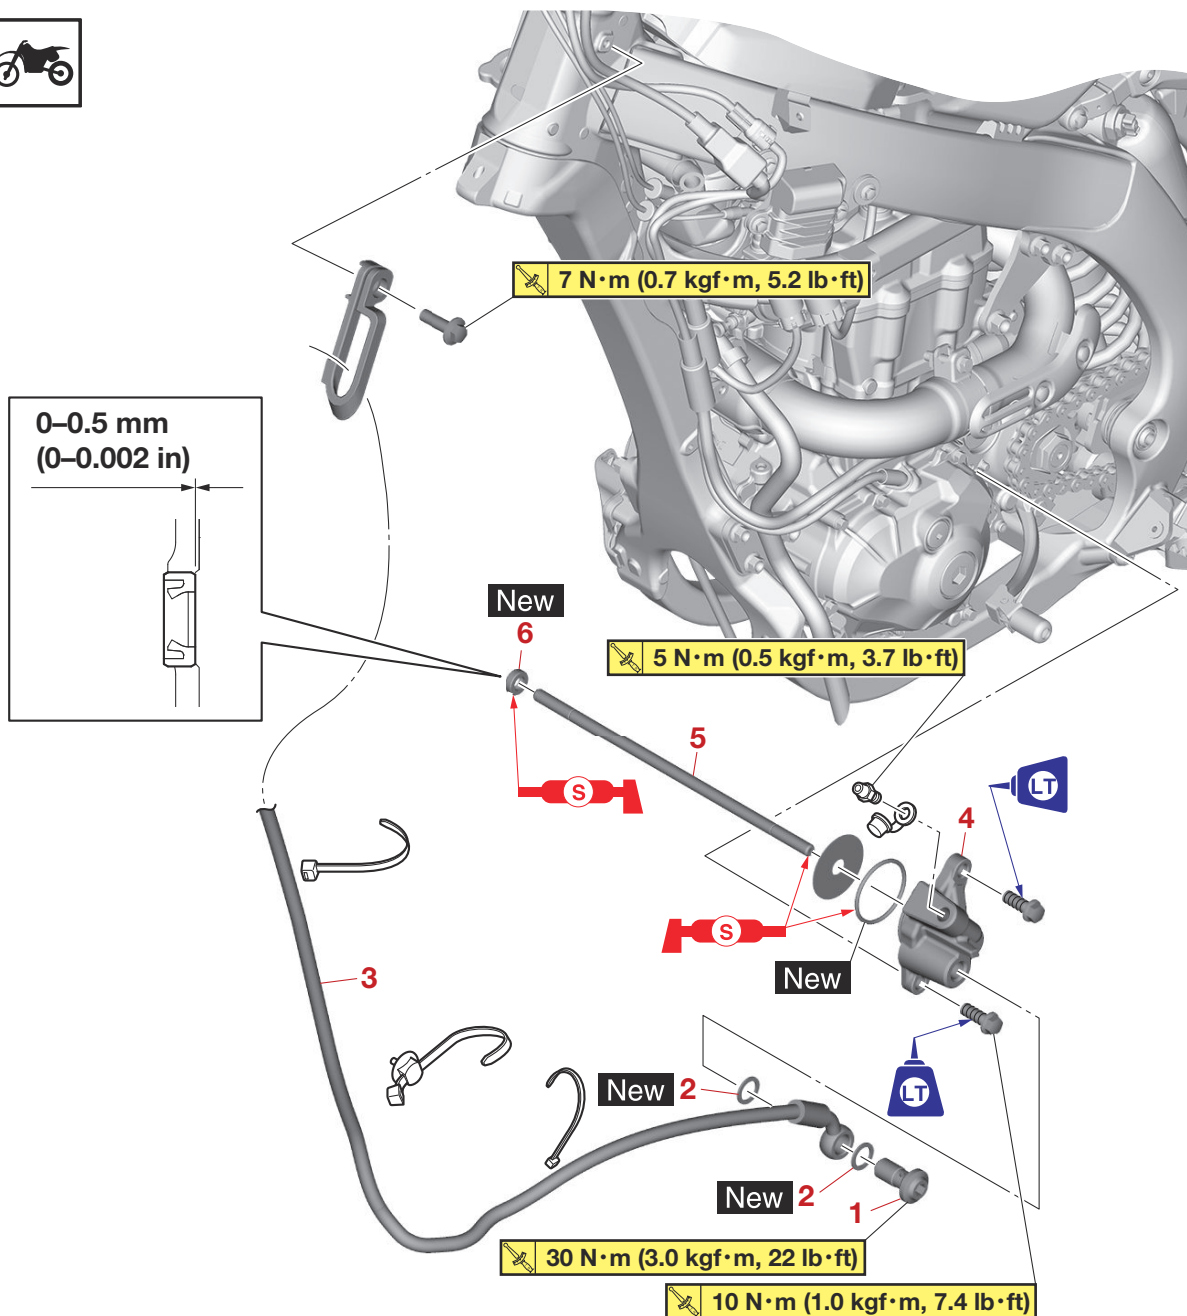

Order	Job/Parts to remove	Q'ty	Remarks
	Drive sprocket cover		Refer to "CHAIN DRIVE" on page 4-74.
	Clutch fluid		Drain. Refer to "BLEEDING THE HYDRAULIC CLUTCH SYSTEM" on page 3-16.
1	Clutch hose union bolt	1	
2	Copper washer	2	
3	Clutch hose	1	
4	Clutch release cylinder	1	
5	Push rod 2	1	
6	Oil seal	1	

EAM30108


REMOVING THE CLUTCH

1. Loosen:

- Clutch boss nut “1”
 - a. Raise the staked part “a” of the clutch boss nut as shown in the illustration.

TIP

- When raising the staked part, take care not to affect the threaded part where the nut will be attached.
- Make sure that the staked part is fully raised to the same curvature as before staking.

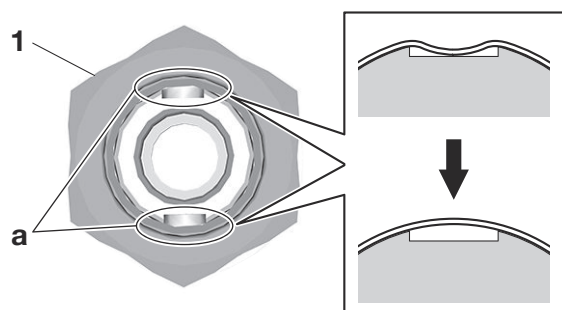



b. Loosen the clutch boss nut.

2. Remove:

- Clutch boss nut “1”
- Spacer “2”
- Washer “3”
- Sleeve “4”
- Absorber
- Clutch boss

TIP

While holding the sleeve with the clutch holder “5”, loosen the clutch boss nut.

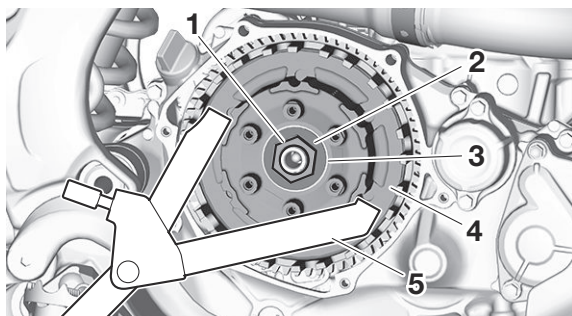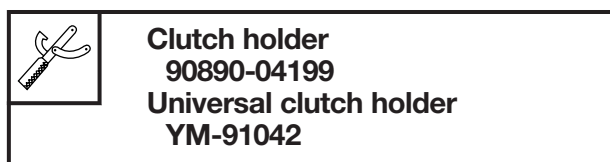

EAM30109

CHECKING THE FRICTION PLATES

1. Check:

- Friction plate

Damage/wear → Replace the friction plates as a set.

2. Measure:

- Friction plate thickness
Out of specification → Replace the friction plates as a set.

TIP

Measure it at four points on the friction plate.



Friction plate 1 thickness
2.12–2.28 mm (0.083–0.090 in)
Wear limit
2.02 mm (0.080 in)
Friction plate 2 thickness
2.12–2.28 mm (0.083–0.090 in)
Wear limit
2.02 mm (0.080 in)

EAM30110

CHECKING THE CLUTCH PLATES

1. Check:

- Clutch plate
Damage → Replace the clutch plates as a set.

2. Measure:

- Clutch plate warpage
(with a surface plate and thickness gauge)
Out of specification → Replace the clutch plates as a set.



Thickness gauge
90890-03268
Feeler gauge set
YU-26900-9



Warpage limit
0.10 mm (0.004 in)

EAM30111

CHECKING THE CLUTCH SPRING

1. Check:

- Spring retainer
Damage → Replace.

2. Check:


- Clutch spring
Damage → Replace the clutch spring.

3. Measure:

- Clutch spring free height
Out of specification → Replace the clutch spring.



Clutch spring free height
4.59 mm (0.18 in)
Clutch spring free height limit
4.36 mm (0.17 in)

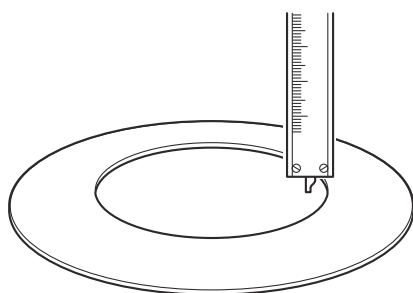


EAM30629

CHECKING THE COLLAR

1. Check:
 - Collar "1"
 Damage/pitting/wear → Replace the collars as a set.

TIP

Pitting on the collar will cause erratic clutch operation.

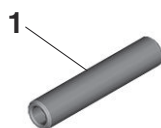

EAM30114


CHECKING THE PRESSURE PLATE

1. Check:
 - Pressure plate
 Crack/damage → Replace.

EAM30484

CHECKING THE PUSH ROD

1. Check:
 - Push rod 1 "1"
 - Bearing "2"
 - Ball "3"
 - Push rod 2 "4"
 Cracks/damage/wear → Replace.

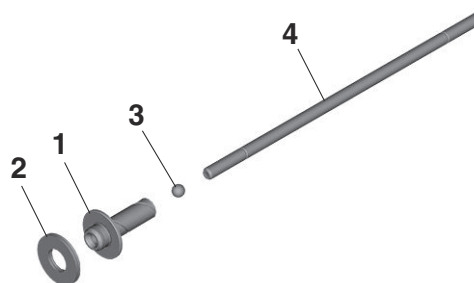

2. Measure:
 - Push rod 2 bending limit
 Out of specification → Replace.



Push rod bending limit
0.10 mm (0.004 in)

EAM30117

CHECKING THE PRIMARY DRIVE GEAR

1. Check:
 - Primary drive gear
 Damage/wear → Replace the primary drive and primary driven gears as a set.
 Excessive noise during operation → Replace the primary drive and primary driven gears as a set.
2. Check:
 - Primary-drive-gear-to-primary-driven-gear free play
 Free play exists → Replace the primary drive and primary driven gears as a set.


EAM30118

CHECKING THE PRIMARY DRIVEN GEAR

1. Check:
 - Primary driven gear
 Damage/wear → Replace the primary drive and primary driven gears as a set.
 Excessive noise during operation → Replace the primary drive and primary driven gears as a set.
2. Check:
 - Primary driven gear dogs "1"
 Damage/pitting/wear → Deburr the primary driven gear dogs or replace the primary driven gear.

TIP

Pitting on the primary driven gear dogs will cause erratic clutch operation.

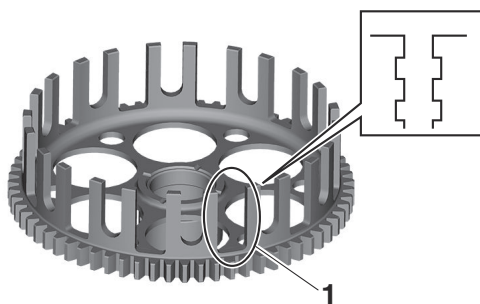

EAM30639


INSTALLING THE CLUTCH RELEASE

1. Install:

- Oil seal “1” **New**



Installed depth “a”
0.0–0.5 mm (0.00–0.02 in)

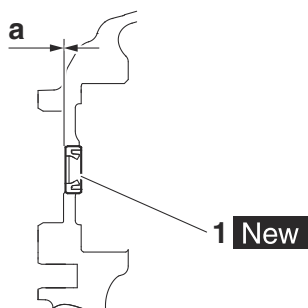

2. Install:


- Push rod 2 “1”
- Washer “2”
- O-ring “3” **New**
- Clutch release cylinder assembly “4”



Clutch release cylinder bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)
LOCTITE®

TIP

Apply silicone grease on the O-ring, the seal lip and the push rod end.

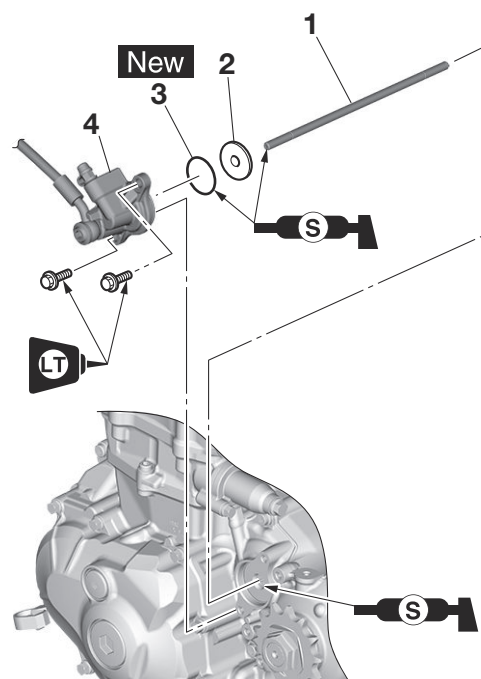

EAM30121

INSTALLING THE CLUTCH

1. Install:


- Oil seal “1” **New**
- Circlip “2” **New**
- Check ball seat “3”

TIP

- Apply the lithium-soap-based grease on the oil seal lip.
- Install the oil seal in parallel with its manufacture’s marks or numbers facing inward.




Installed depth “a”
0 mm (0 in)

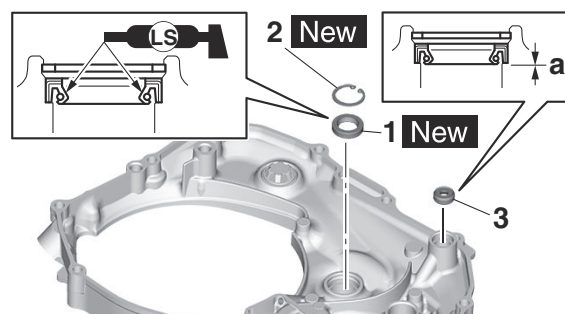

2. Install:

- Dowel pin “1”
- Gasket “2” **New**

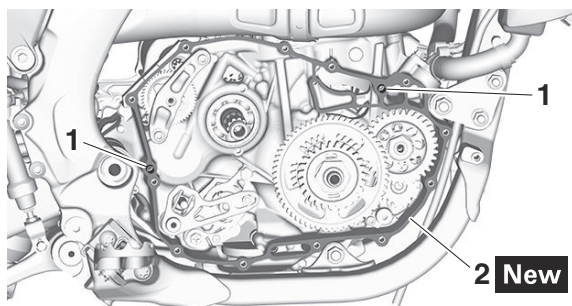

3. Install:


- Crankcase cover (right) “1”
- Crankcase cover bolt (right) “2”



Crankcase cover bolt (right)
10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP

Tighten the crankcase cover bolts (right) in stages and in a crisscross pattern.

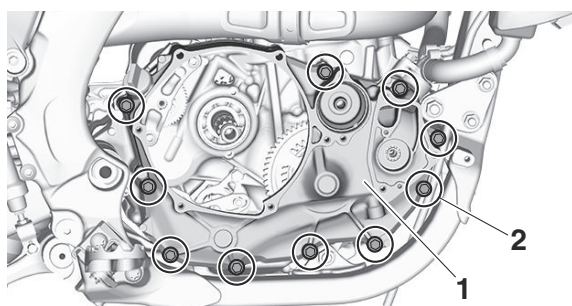


4. Install:

- Washer “1”
- Idle gear “2”
- Collar “3”
- Primary driven gear “4”
- Washer “5”
- Clutch boss “6”
- Absorber “7”
- Sleeve “8”
- Washer “9”
- Spacer “10”
- Clutch boss nut “11” **New**

TIP

- Apply engine oil to the main axle.
- Apply engine oil to the contact surfaces of the washer “1”.
- Apply engine oil to the inner surface of the collar “3”.
- Apply engine oil to the inner surface and the contact surfaces of the primary driven gear “4”.
- Apply engine oil to the contact surfaces of the washer “5”.

- Apply engine oil to the absorber “7”.
- Apply engine oil to the inner surface and the contact surfaces of the sleeve “8”.
- Apply engine oil to the contact surfaces of the washer “9”.
- Apply engine oil to the contact surfaces of the spacer “10”.
- Apply the engine oil on the threads and contact surface of the clutch boss nut “11”.
- Do not tighten the clutch boss nut “11” with the washer “9” caught in the stepped portion of the spacer “10”.

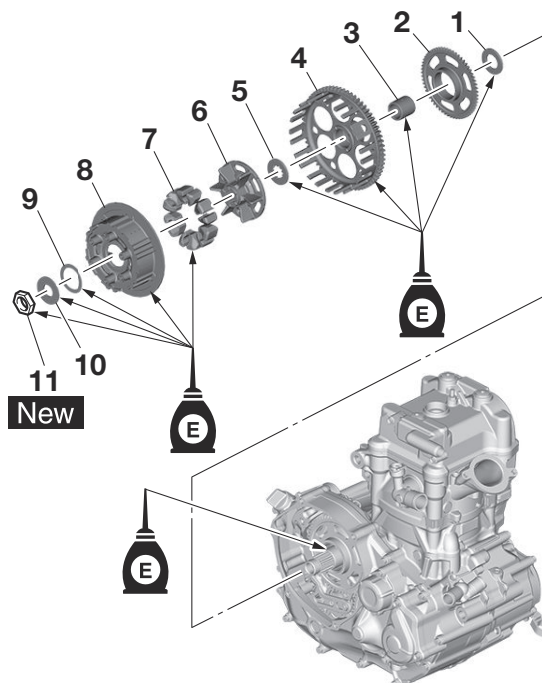

5. Tighten:

- Clutch boss nut “11” **New**



Clutch boss nut
75 N·m (7.5 kgf·m, 55 lb·ft)

ECA24660

NOTICE



Make sure to tighten to specification; otherwise, it may damage the other part that is fastened together.

TIP

- Use the clutch holder “2” to hold the sleeve.
- After tightening the clutch boss nut, make sure that the washer “3” can rotate freely.
- Stake the clutch boss nut at cutouts “a” in the main axle. Take care not to affect the threaded part where the nut will be attached.



Clutch holder
90890-04199
Universal clutch holder
YM-91042

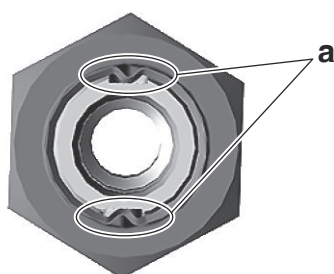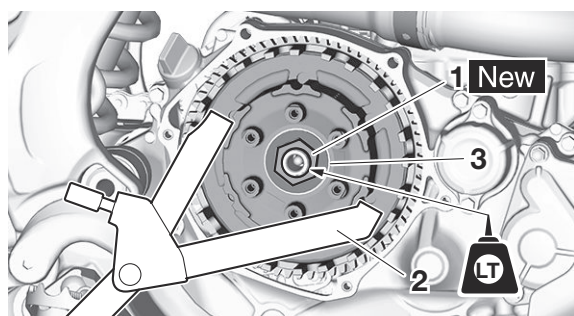


6. Install:

- Collar "1"
- Clutch plate 2 (thickness: 1.0 mm (0.04 in)) "2"
- Friction plate 2 (painted) "3"
- Clutch plate 1 (thickness: 1.4 mm (0.06 in)) "4"
- Friction plate 1 (unpainted) "5"

TIP

- The friction plate 2 has blue paint on one pawl head on the outer circumference with the pawls.
- Install the clutch plates and friction plates alternately on the sleeve, starting with a clutch plate and ending with a clutch plate.
- From the clutch boss side, install the friction plates and clutch plates in the order of the illustrations.
- Apply the engine oil on the collars, friction plates, and clutch plates.

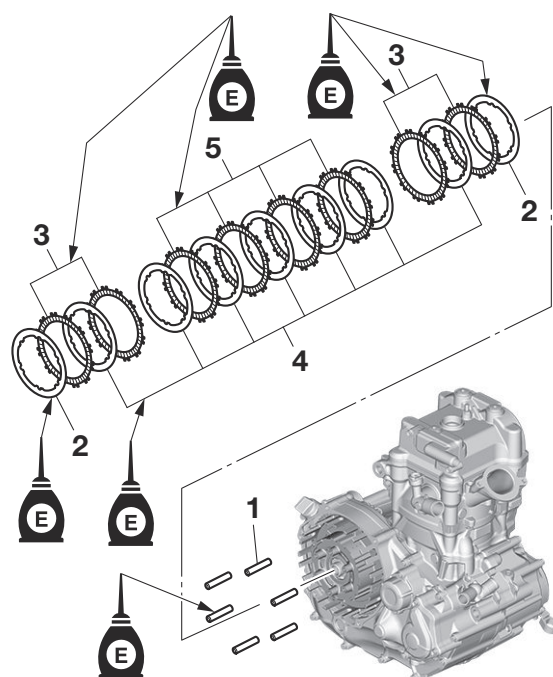


7. Install:

- Bearing "1"
- Circlip "2" **New** (to the push rod 1 "3")

TIP

Apply the engine oil on the bearing and push rod 1.

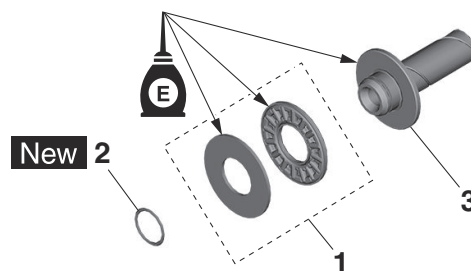


8. Install:

- Ball "1"
- Push rod 1 "2"


TIP

Apply the engine oil on the push rod 1 and ball.

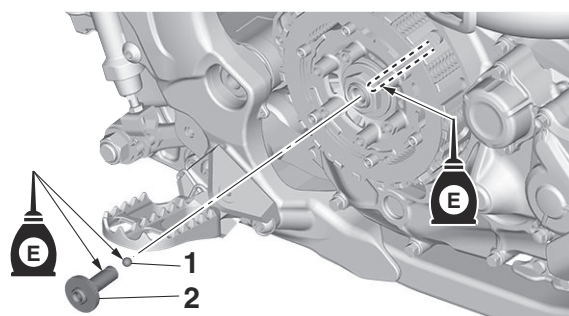

9. Install:

- Pressure plate 2 “1”

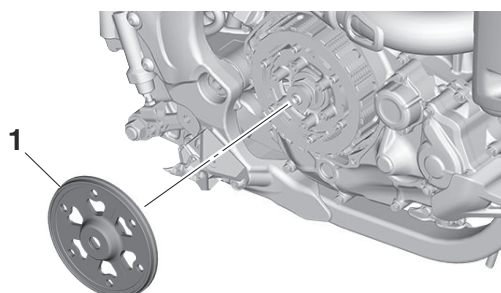


10. Install:

- Spring retainer “1”
- Clutch spring “2”
- Pressure plate 1 “3”
- Bolt (pressure plate 1) “4”

	Bolt (pressure plate 1) 10 N·m (1.0 kgf·m, 7.4 lb·ft)
--	--

TIP

- Apply the engine oil on the threads and contact surface of the bolts, and contact surface of the pressure plate 1.
- First temporarily tighten all bolts to 4.0 N·m (0.40 kgf·m, 3.0 lb·ft) in a crisscross pattern. Then retighten them to 10 N·m (1.0 kgf·m, 7.4 lb·ft) in a crisscross pattern.

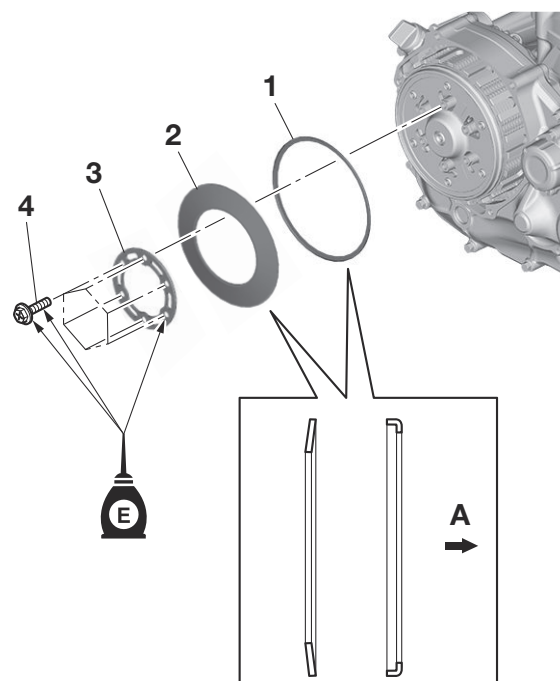

A. Engine side


11. Install:

- Gasket “1” **New**
- Clutch cover “2”
- Clutch cover bolt (long) “3”
- Clutch cover bolt (short) “4”

	Clutch cover bolt 10 N·m (1.0 kgf·m, 7.4 lb·ft)
--	--

TIP

Tighten the bolts in stages and in a crisscross pattern.

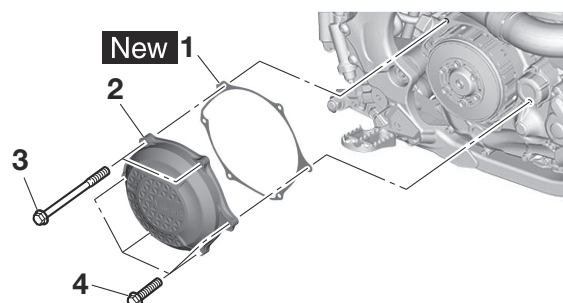

EAM30670

DISASSEMBLING THE CLUTCH MASTER CYLINDER

ECA13840

NOTICE

- Clutch components rarely require disassembly.
- Therefore, always follow these preventive measures:

- **Never disassemble clutch components unless absolutely necessary.**
- **If any connection on the hydraulic clutch system is disconnected, the entire clutch system must be disassembled, drained, cleaned, properly filled, and bled after reassembly.**
- **Never use solvents on internal clutch components.**
- **Use only clean or new clutch fluid for cleaning clutch components.**
- **Clutch fluid may damage painted surfaces and plastic parts. Therefore, always clean up any spilt fluid immediately.**
- **Avoid clutch fluid coming into contact with the eyes as it can cause serious injury.**
- **First aid for clutch fluid entering the eyes:**
- **Flush with water for 15 minutes and get immediate medical attention.**


TIP

Before disassembling the clutch master cylinder, drain the clutch fluid from the entire clutch system.

1. Remove:
 - Clutch hose union bolt “1”
 - Copper washer “2”
 - Clutch hose “3”

TIP

To collect any remaining clutch fluid, place a container under the master cylinder and the end of the clutch hose.

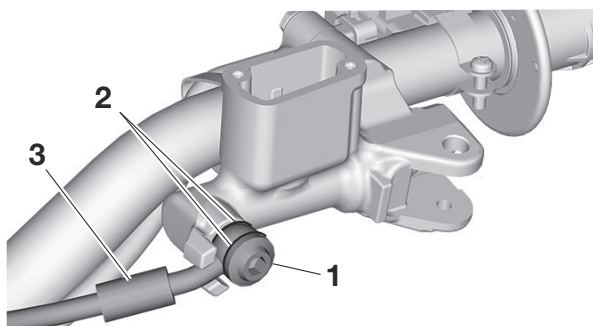

EAM30671

CHECKING THE CLUTCH MASTER CYLINDER

1. Check:
 - Clutch master cylinder body
Cracks/damage → Replace the clutch master cylinder.
 - Clutch fluid delivery passage (clutch master cylinder body)
Obstruction → Blow out with compressed

air.

2. Check:
 - Clutch master cylinder
 - Clutch master cylinder kit
Rust/scratches/wear → Replace the clutch master cylinder and clutch master cylinder kit as a set.
3. Check:
 - Clutch master cylinder reservoir
Cracks/damage → Replace.
 - Clutch master cylinder reservoir diaphragm
Damage/wear → Replace.
4. Check:
 - Clutch hose
Cracks/damage/wear → Replace.

EAM30672

ASSEMBLING THE CLUTCH MASTER CYLINDER

EWA13340

⚠ WARNING

- **Before installation, all internal clutch components must be cleaned and lubricated with clean or new clutch fluid.**
- **Never use solvents on internal clutch components as they will cause the piston seals to swell and distort.**
- **Whenever a clutch master cylinder is disassembled, replace the piston seals.**



**Specified brake and clutch fluid
DOT 4**


EAM30673

INSTALLING THE CLUTCH MASTER CYLINDER

1. Install:
 - Clutch master cylinder “1”
 - Clutch master cylinder holder “2”

TIP

- Install the clutch lever holder with the “UP” mark facing up.
- Align the end of the clutch lever holder with the paint mark “a” on the left handlebar.
- First, tighten the upper bolt, then the lower bolt.

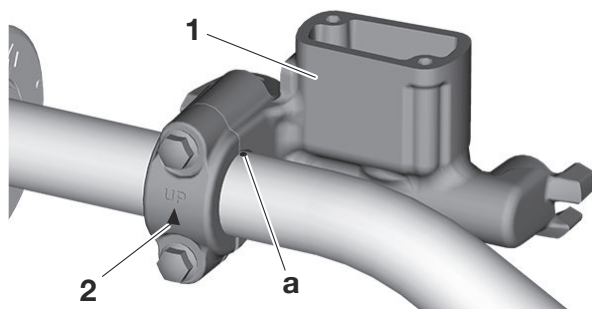

2. Install:

- Copper washer “1” **New**
- Clutch hose “2”
- Clutch hose union bolt “3”



Clutch hose union bolt
30 N·m (3.0 kgf·m, 22 lb·ft)


EWA18510

WARNING

Proper clutch hose routing is essential to insure safe vehicle operation.

TIP

- When installing the clutch hose to the clutch master cylinder, the white paint dot “a” on the clutch pipe should point to the front side of the vehicle as shown, and then align it with the protrusion “b” on the clutch master cylinder.
- Turn the handlebars to the left and to the right to make sure the clutch hose does not touch other parts (e.g., wire harness, cables, leads). Correct if necessary.

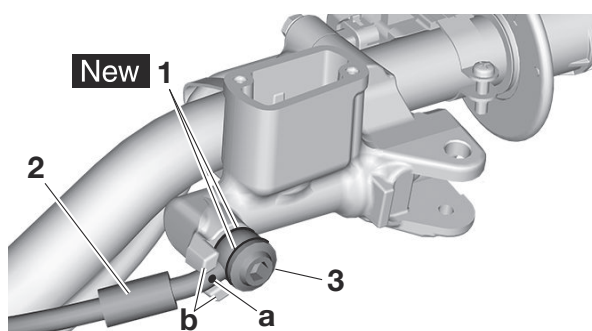

3. Fill:

- Clutch master cylinder reservoir (with the specified amount of the specified brake and clutch fluid)



Specified brake and clutch fluid
DOT 4

EWA17270

WARNING

- Use only the designated clutch fluid. Other

clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.

- Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.
- When refilling, be careful that water does not enter the clutch master cylinder reservoir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

ECA13420

NOTICE

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.

TIP

In order to ensure a correct reading of the clutch fluid level, make sure the top of the clutch master cylinder reservoir is horizontal.

4. Bleed:

- Clutch system
Refer to “BLEEDING THE HYDRAULIC CLUTCH SYSTEM” on page 3-16.

5. Check:

- Clutch fluid level
Refer to “CHECKING THE CLUTCH FLUID” on page 3-16.

6. Check:

- Clutch lever operation
Soft or spongy feeling → Bleed the clutch system.
Refer to “BLEEDING THE HYDRAULIC CLUTCH SYSTEM” on page 3-16.

EAM30674

REMOVING THE CLUTCH RELEASE CYLINDER

1. Remove:

- Clutch hose union bolt
- Copper washer
- Clutch hose

TIP

Put the end of the clutch hose into a container and pump out the clutch fluid carefully.

EAM30675

CHECKING THE CLUTCH RELEASE CYLINDER

1. Check:

- Clutch release cylinder body

Cracks/damage → Replace the clutch release cylinder.

EAM30676

INSTALLING THE CLUTCH RELEASE CYLINDER

1. Install:

- Copper washer “1” **New**
- Clutch hose “2”
- Clutch hose union bolt “3”



Clutch hose union bolt
30 N·m (3.0 kgf·m, 22 lb·ft)

EWA18510




WARNING

Proper clutch hose routing is essential to insure safe vehicle operation.

ECA18370

NOTICE

When installing the clutch hose onto the clutch release cylinder, make sure the pipe “a” touches the projection “b” on the clutch release cylinder body.

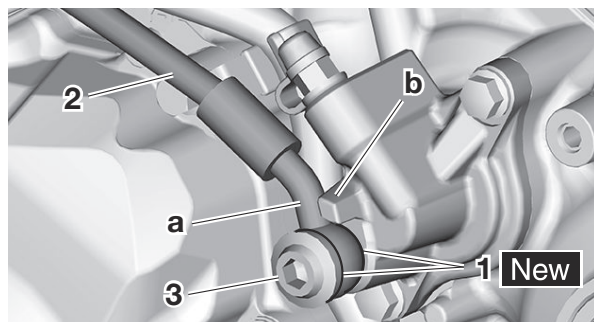

2. Fill:

- Clutch master cylinder reservoir (with the specified amount of the specified brake and clutch fluid)



Specified brake and clutch fluid
DOT 4

EWA17270



WARNING

- **Use only the designated clutch fluid. Other clutch fluids may cause the rubber seals to deteriorate, causing leakage and poor clutch performance.**
- **Refill with the same type of clutch fluid that is already in the system. Mixing clutch fluids may result in a harmful chemical reaction, leading to poor clutch performance.**
- **When refilling, be careful that water does not enter the clutch master cylinder reser-**

voir. Water will significantly lower the boiling point of the clutch fluid and could cause vapor lock.

ECA13420

NOTICE

Clutch fluid may damage painted surfaces or plastic parts. Therefore, always clean up any spilt clutch fluid immediately.

TIP

In order to ensure a correct reading of the clutch fluid level, make sure that the top of the clutch master cylinder reservoir is horizontal.

3. Bleed:

- Clutch system
Refer to “BLEEDING THE HYDRAULIC CLUTCH SYSTEM” on page 3-16.

4. Check:

- Clutch fluid level
Refer to “CHECKING THE CLUTCH FLUID” on page 3-16.


5. Check:

- Clutch lever operation
Soft or spongy feeling → Bleed the clutch system.
Refer to “BLEEDING THE HYDRAULIC CLUTCH SYSTEM” on page 3-16.

EAM20113


SHIFT SHAFT

Removing the shift shaft and stopper lever

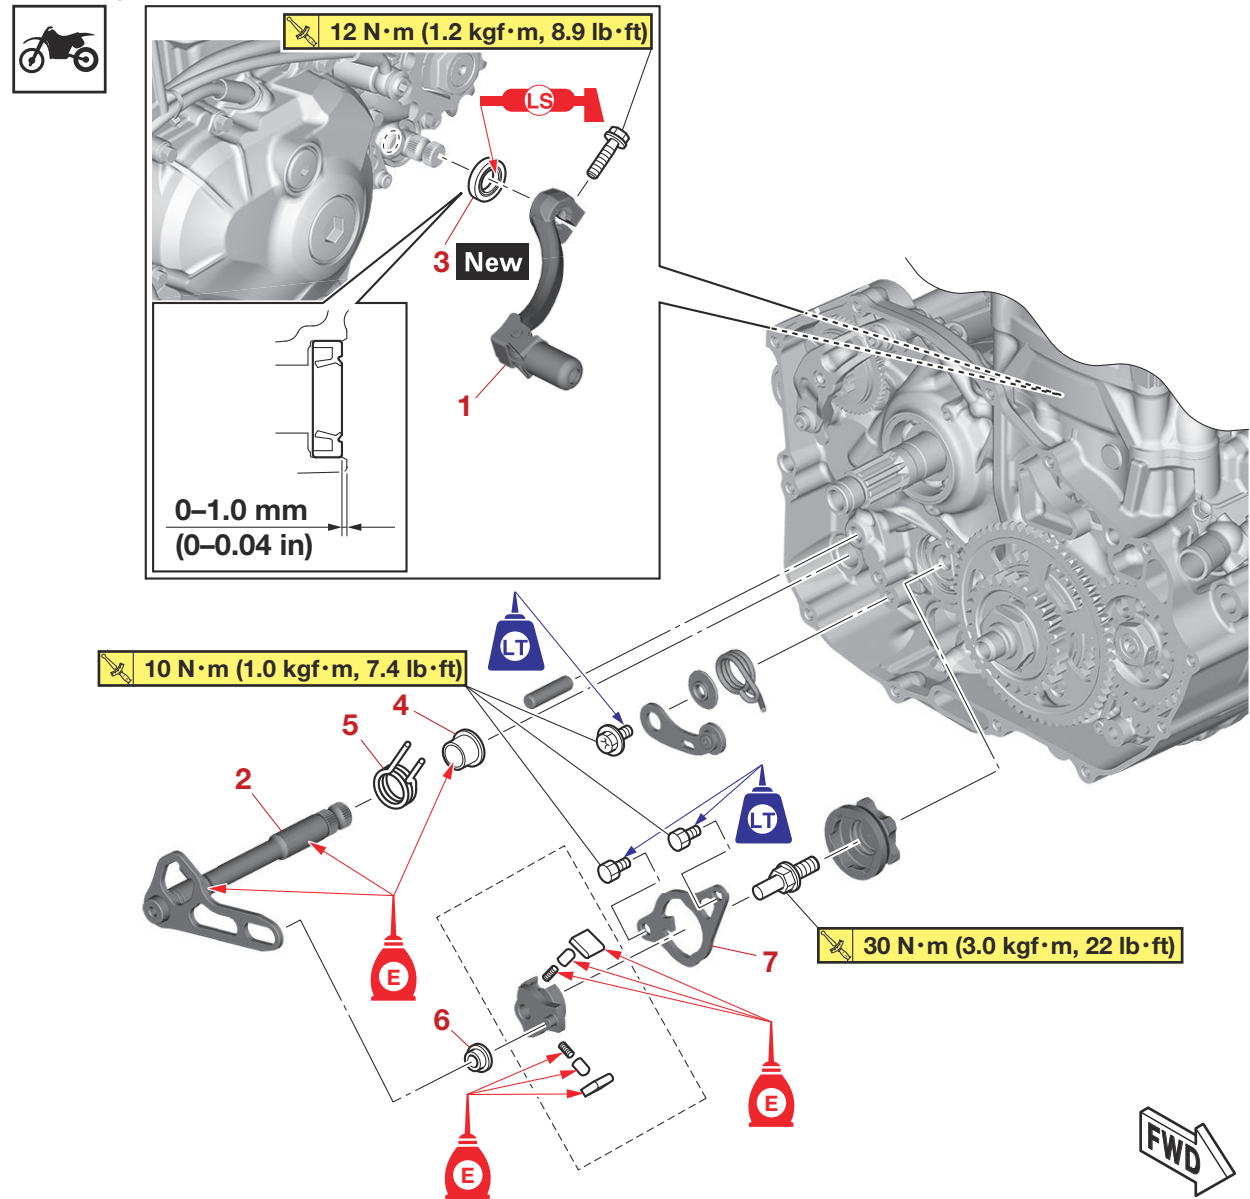

Order	Job/Parts to remove	Q'ty	Remarks
	Idle gear		Refer to "CLUTCH" on page 5-46.
1	Shift pedal	1	
2	Shift shaft	1	
3	Oil seal	1	
4	Collar	1	
5	Shift shaft spring	1	
6	Roller	1	
7	Shift guide	1	

Removing the shift shaft and stopper lever

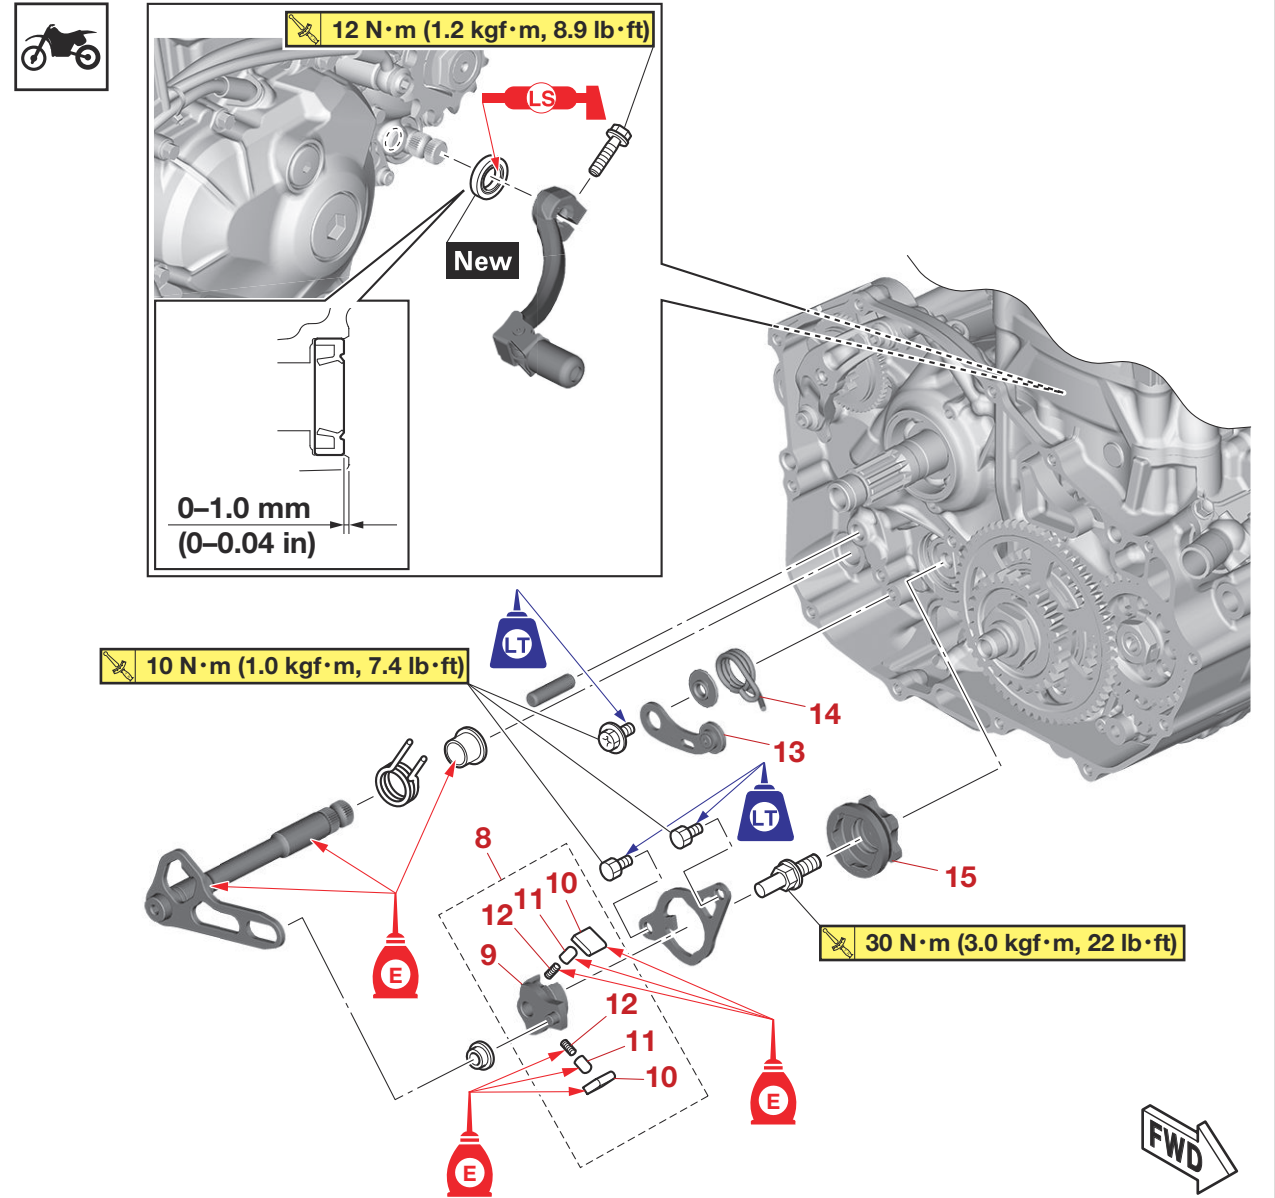

Order	Job/Parts to remove	Q'ty	Remarks
8	Shift lever assembly	1	
9	Shift lever	1	
10	Pawl	2	
11	Pawl pin	2	
12	Spring	2	
13	Stopper lever	1	
14	Stopper lever spring	1	
15	Segment	1	

EAM30124

REMOVING THE SEGMENT

1. Remove:
 - Bolt (segment) “1”
 - Segment “2”



TIP

Turn the segment counterclockwise until it stops and loosen the bolt.

ECA24670

NOTICE


If the segment gets an impact, the stopper lever may be damaged. Take care not to give an impact to it when removing the bolt.

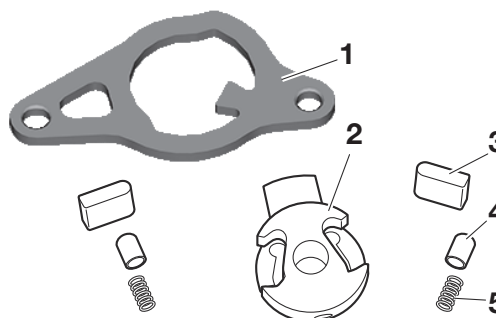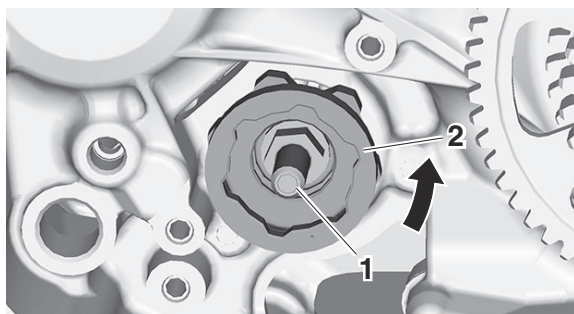

EAM30127

CHECKING THE STOPPER LEVER


1. Check:
 - Stopper lever “1”
Wear/damage → Replace.
 - Stopper lever spring “2”
Broken → Replace.

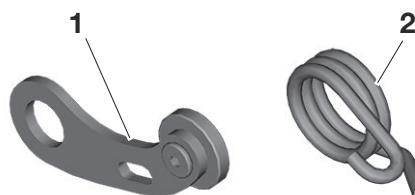

EAM30125

CHECKING THE SHIFT SHAFT

1. Check:
 - Shift shaft “1”
Bends/damage/wear → Replace.
 - Shift shaft spring “2”
Damage/wear → Replace.

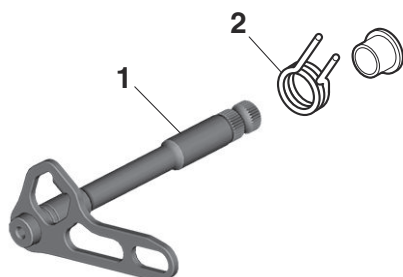

2. Check:
 - Shift guide “1”
 - Shift lever “2”
 - Pawl “3”
 - Pawl pin “4”
 - Spring “5”
Wear/damage → Replace.


EAM30131

INSTALLING THE SHIFT SHAFT

1. Install:
 - Stopper lever spring “1”
 - Collar “2”
 - Stopper lever “3”
 - Bolt (stopper lever) “4”



Bolt (stopper lever)
10 N·m (1.0 kgf·m, 7.4 lb·ft)
LOCTITE®

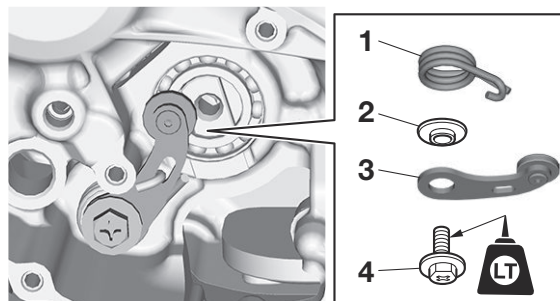

2. Install:
 - Segment “1”
 - Segment bolt



Segment bolt
30 N·m (3.0 kgf·m, 22 lb·ft)


TIP

- Align the projections “a” on the segment with the slits “b” on the shift drum.
- With the stopper lever pushed down, install the segment.

ECA24680

NOTICE

If the segment gets an impact, the stopper lever may be damaged. Take care not to give an impact to it when tightening the bolt.

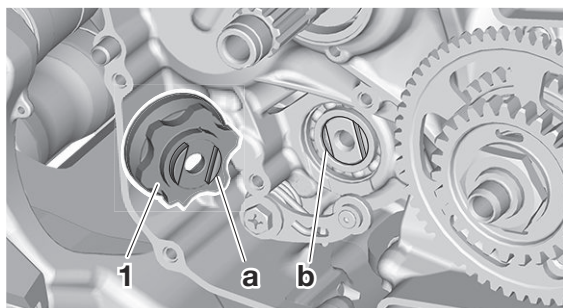


3. Install:

- Spring “1”
 - Pawl pin “2”
 - Pawl “3”
- (to the shift lever)

TIP

Apply the engine oil on the spring, pawl pin and pawl.

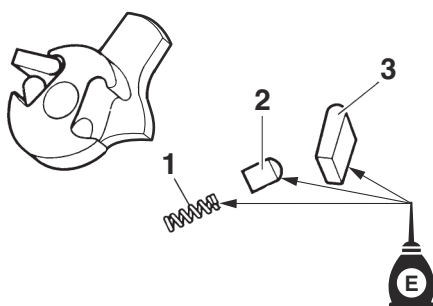

4. Install:


- Shift lever assembly
- (to the shift guide)

5. Install:

- Shift lever assembly “1”
- Shift guide “2”

TIP

The shift lever assembly is installed at the same time as the shift guide.

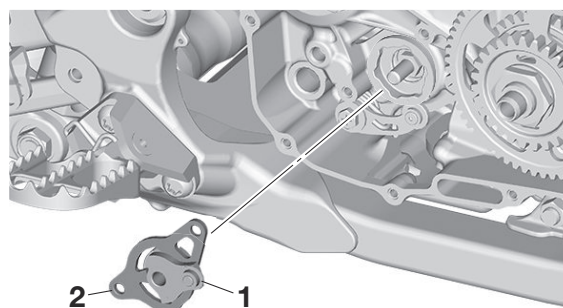


6. Tighten:

- Shift guide bolt “1”



Shift guide bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)
LOCTITE®

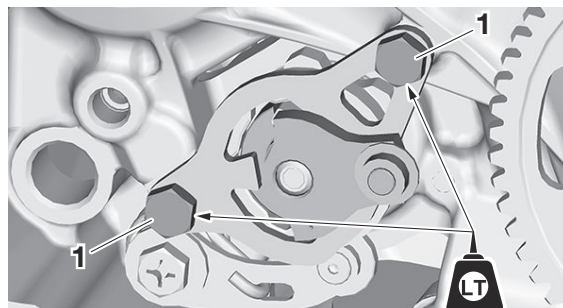


7. Install:

- Dowel pin “1”
- Roller “2”
- Shift shaft spring “3” (to the shift shaft)
- Collar “4” (to the shift shaft)
- Shift shaft “5”

TIP

Apply the engine oil on the shift shaft.

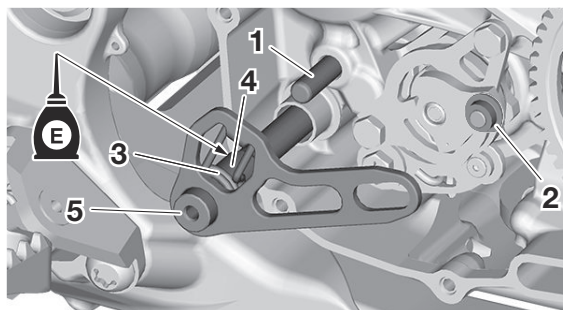

8. Install:

- Oil seal **New**

9. Install:


- Shift pedal “1”
- Shift pedal bolt “2”



Shift pedal bolt
12 N·m (1.2 kgf·m, 8.9 lb·ft)

TIP


Align the punch mark “a” on the shift shaft with the punch mark “b” in the shift pedal.

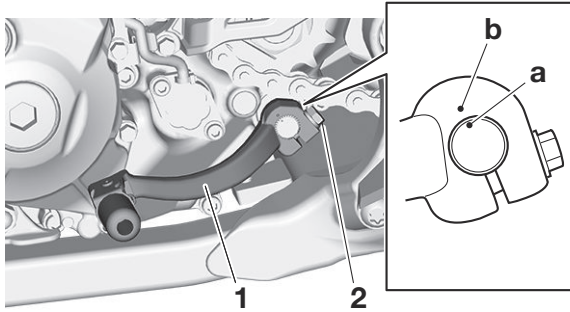

EAM20175


STARTER CLUTCH

Removing the balancer gear

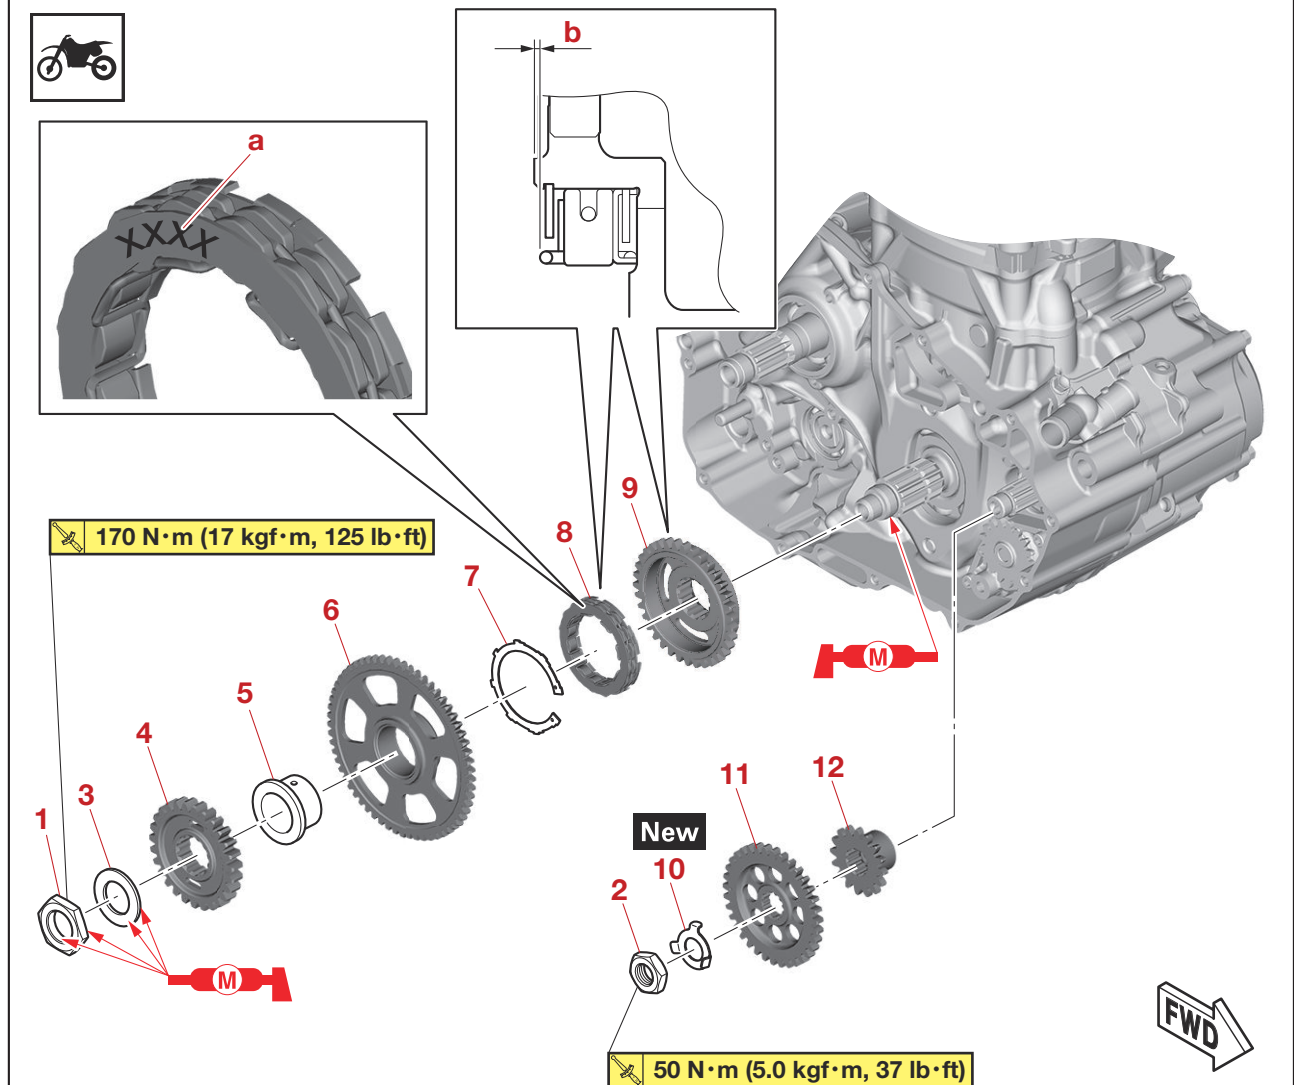

Order	Job/Parts to remove	Q'ty	Remarks
	Idle gear		Refer to "CLUTCH" on page 5-46.
	Crankcase cover (right)		Refer to "CLUTCH" on page 5-46.
1	Primary drive gear nut	1	
2	Balancer driven gear nut	1	
3	Washer	1	
4	Primary drive gear	1	
5	Collar	1	
6	Starter reduction gear	1	
7	Circlip	1	
8	Starter clutch assembly	1	["a": Manufacturer's mark]
9	Balancer drive gear	1	["b": 0.7 mm (0.03 in) or more]
10	Lock washer	1	
11	Balancer driven gear	1	
12	Oil pump drive gear	1	

Removing the damper assembly

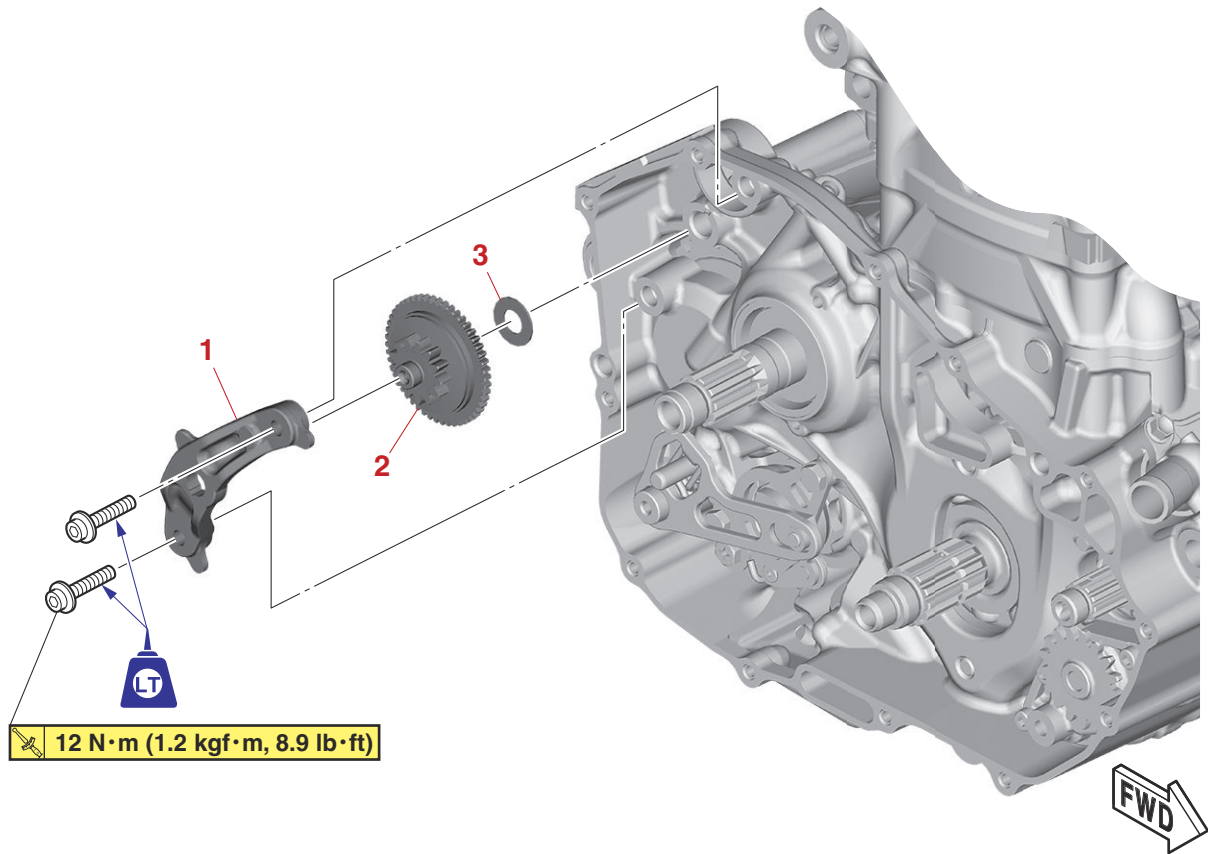

Order	Job/Parts to remove	Q'ty	Remarks
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-14.
	Clutch		Refer to "CLUTCH" on page 5-46.
1	Holder	1	
2	Damper assembly	1	
3	Washer	1	



EAM30624

REMOVING THE BALANCER GEAR


1. Straighten the lock washer tab.
2. Loosen:
 - Balancer driven gear nut “1”
 - Primary drive gear nut “2”

TIP

Place an aluminum plate “a” between the teeth of the balancer drive gear “3” and balancer driven gear “4”.

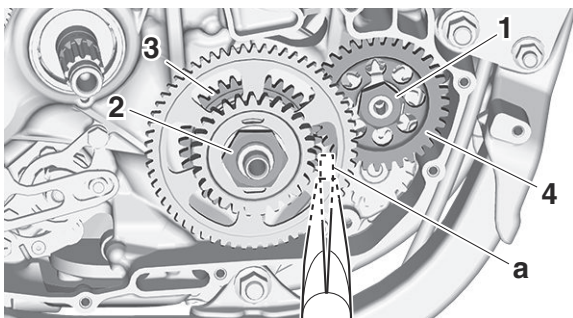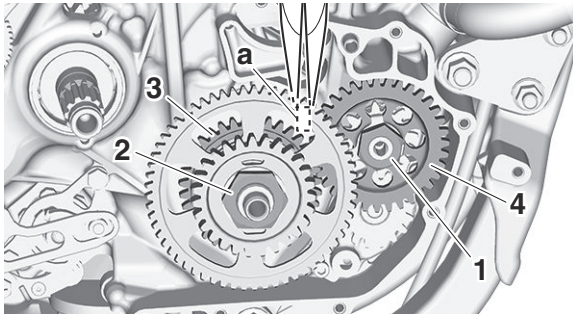

3. Check:
 - Primary drive gear “1”
 - Starter reduction gear “2”
 - Balancer drive gear “3”
 - Balancer driven gear “4”
 - Oil pump drive gear “5”
 Wear/damage → Replace.

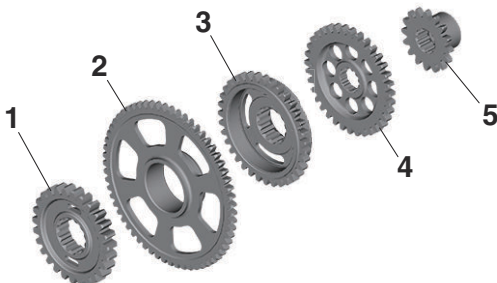


EAM30140

CHECKING THE STARTER CLUTCH

1. Remove:
 - Starter clutch assembly
 Refer to “OIL PUMP” on page 5-71.


2. Check:

- Starter clutch assembly
- Burrs/chips/roughness/wear → Replace the starter clutch assembly.

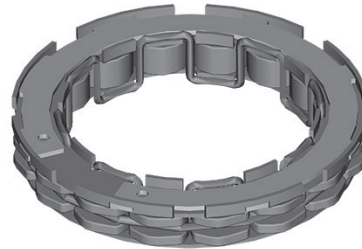

3. Check:

- Starter clutch operation
 - a. Install the starter clutch onto the balancer drive gear “1”, and then install onto the starter reduction gear “2”.
 - b. When turning the balancer drive gear counterclockwise “A”, it should turn freely, otherwise the starter clutch is faulty and must be replaced.
 - c. When turning the balancer drive gear clockwise “B”, the starter clutch and the balancer drive gear should engage, otherwise the starter clutch is faulty and must be replaced.

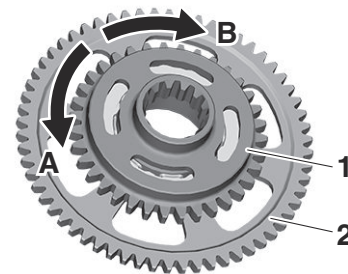

EAM30630


INSTALLING THE BALANCER GEAR

1. Install:
 - Oil pump drive gear
 - Balancer driven gear “1”

TIP

Install the balancer driven gear and balancer shaft with their lower splines “a” aligning with each other.


STARTER CLUTCH

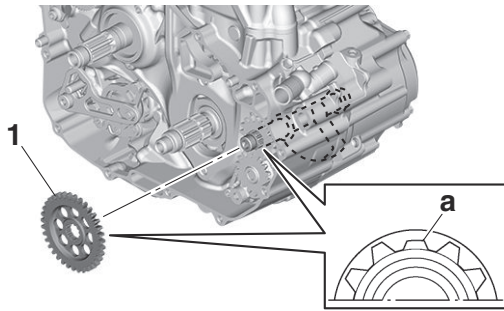

2. Install:
- Balancer drive gear “1”

TIP

- Align the punched mark “a” on the balancer drive gear with the punched mark “b” on the balancer driven gear.
- Install the balancer drive gear and crankshaft with the lower splines “c” aligning with each other.

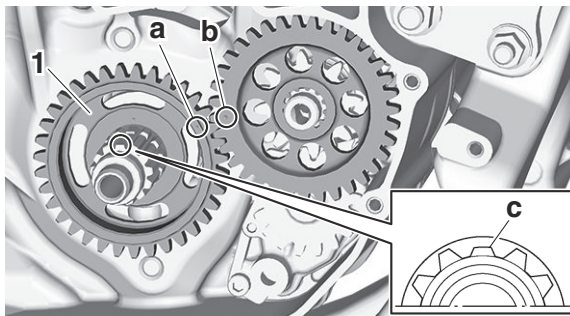

3. Wash:
- Threaded portion of the crankshaft
 - Contact surface of the washer
 - Threaded portion and contact surface of the primary drive gear nut

TIP

Thoroughly clean the threaded portion of the crankshaft, contact surface of the washer, and threaded portion and contact surface of the primary drive gear nut to remove the oil.

4. Install:
- Lock washer “1” **New**
 - Balancer driven gear nut “2”



Balancer driven gear nut
50 N·m (5.0 kgf·m, 37 lb·ft)

- Starter clutch assembly “3”



Installed depth “a”
0.7 mm (0.03 in) or more

- Circlip “4”
- Starter reduction gear “5”


- Collar “6”
- Primary drive gear “7”
- Washer “8”
- Primary drive gear nut “9”





Primary drive gear nut
170 N·m (17 kgf·m, 125 lb·ft)

TIP

- Apply molybdenum disulfide grease to the threaded portion of the crankshaft.
- Apply engine oil to the starter clutch assembly.
- Install the starter clutch assembly with its manufacturer's mark facing outward.
- Install the starter clutch assembly so that the clearance "a" between the starter clutch assembly and the balancer drive gear is 0.7 mm (0.03 in) or more.
- Apply engine oil to the inner surface and the contact surfaces of the starter reduction gear.
- Apply molybdenum disulfide grease to the contact surface of the washer.
- Apply molybdenum disulfide grease to the contact surface and threaded portion of the primary drive gear nut.
- Place an aluminum plate "b" between the teeth of the balancer drive gear "10" and balancer driven gear "11".

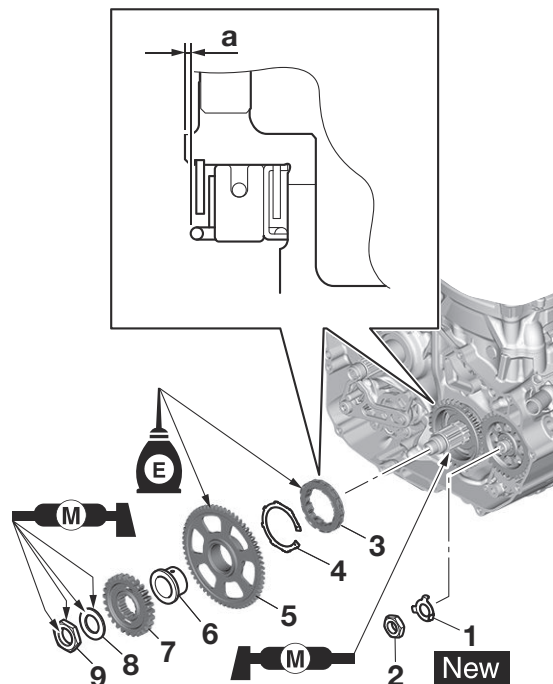

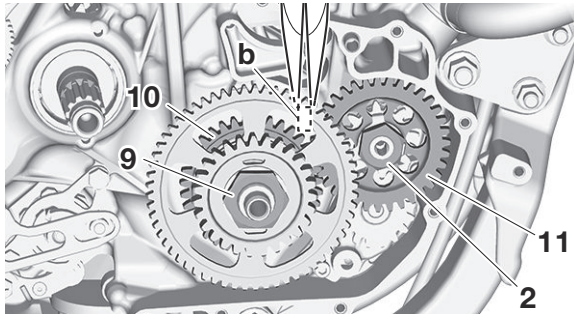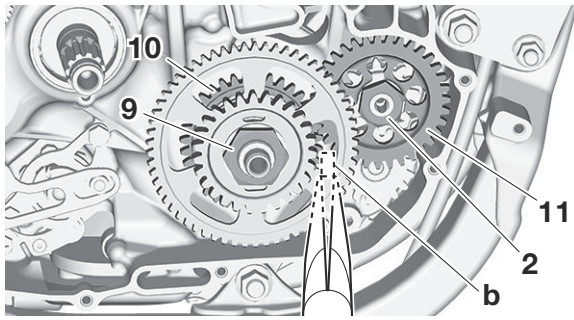


5. Bend the lock washer tab.

EAM20182

OIL PUMP

Removing the oil pump

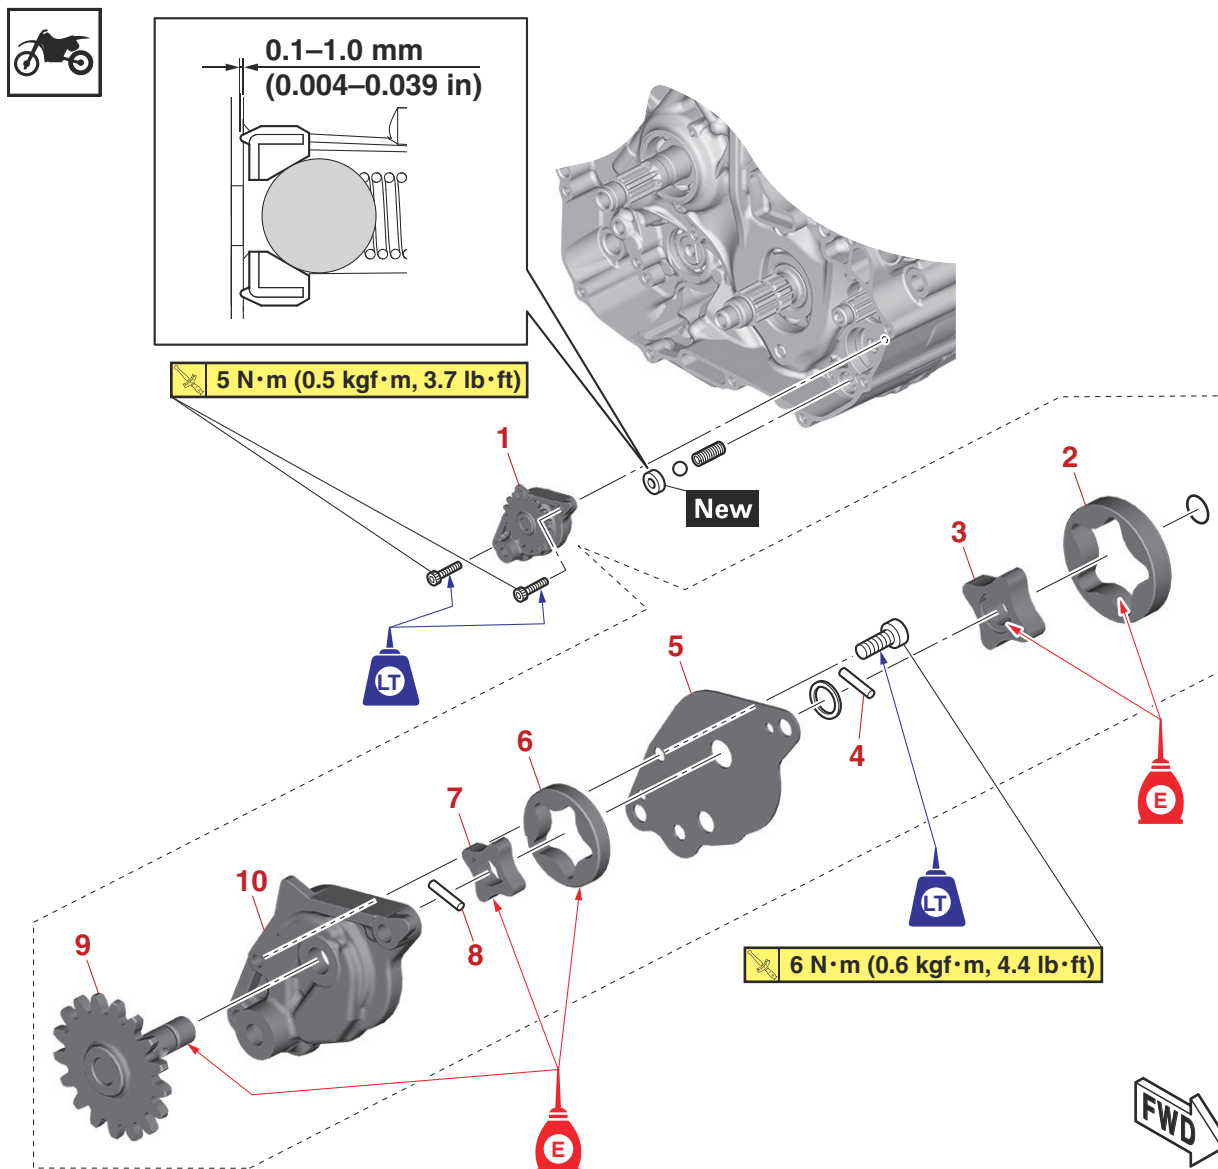

Order	Job/Parts to remove	Q'ty	Remarks
	Oil pump drive gear		Refer to "STARTER CLUTCH" on page 5-66.
1	Oil pump assembly	1	
2	Outer rotor 1	1	
3	Inner rotor 1	1	
4	Dowel pin	1	
5	Oil pump cover	1	
6	Outer rotor 2	1	
7	Inner rotor 2	1	
8	Dowel pin	1	
9	Oil pump drive shaft	1	
10	Oil pump housing	1	

EAM30136

CHECKING THE OIL PUMP

1. Check:
 - Oil pump cover
 - Oil pump drive shaft
 - Oil pump housing
 - Cracks/damage/wear → Replace the oil pump assembly.
2. Check:
 - Oil pump operation
 - Rough movement → Repeat step (1) or replace the oil pump assembly.


EAM30137

ASSEMBLING THE OIL PUMP

1. Install:
 - Oil pump drive shaft “1”
 - Dowel pin “2”
 - Inner rotor 2 “3”
 - Outer rotor 2 “4”

TIP


- Apply the engine oil on the oil pump drive shaft, inner rotor 2, and outer rotor 2.
- Fit the dowel pin into the slit in the inner rotor 2.

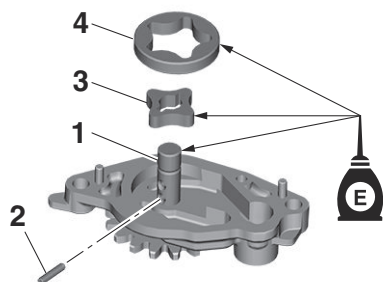

2. Install:
 - Oil pump cover “1”
 - Oil pump cover bolt “2”



Oil pump cover bolt
6 N·m (0.6 kgf·m, 4.4 lb·ft)
LOCTITE®

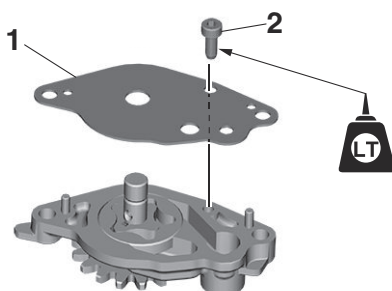


3. Install:
 - Washer
 - Dowel pin “1”

- Inner rotor 1 “2”
- Outer rotor 1 “3”
- Circlip “4”

TIP

- Apply the engine oil on the inner rotor 1 and outer rotor 1.
- Fit the dowel pin into the groove in the inner rotor 1.

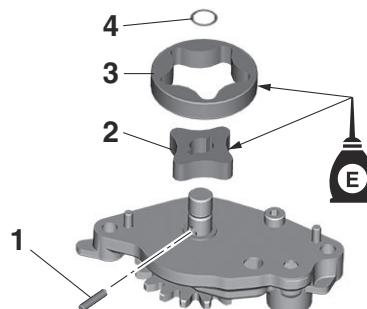


EAM30486

INSTALLING THE OIL PUMP

1. Install:
 - Oil pump assembly “1”
 - Oil pump assembly bolt “2”



Oil pump assembly bolt
5 N·m (0.5 kgf·m, 3.7 lb·ft)
LOCTITE®

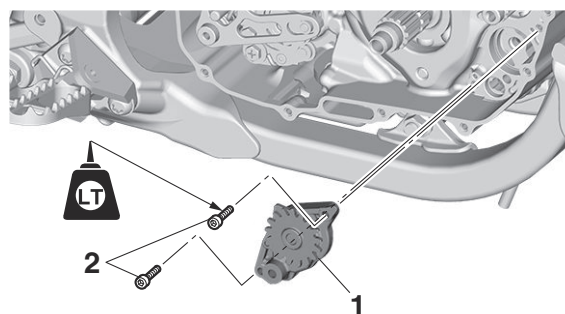

ECA13890


NOTICE

After tightening the bolts, make sure the oil pump turns smoothly.

EAM20116

CRANKCASE


Separating the crankcase

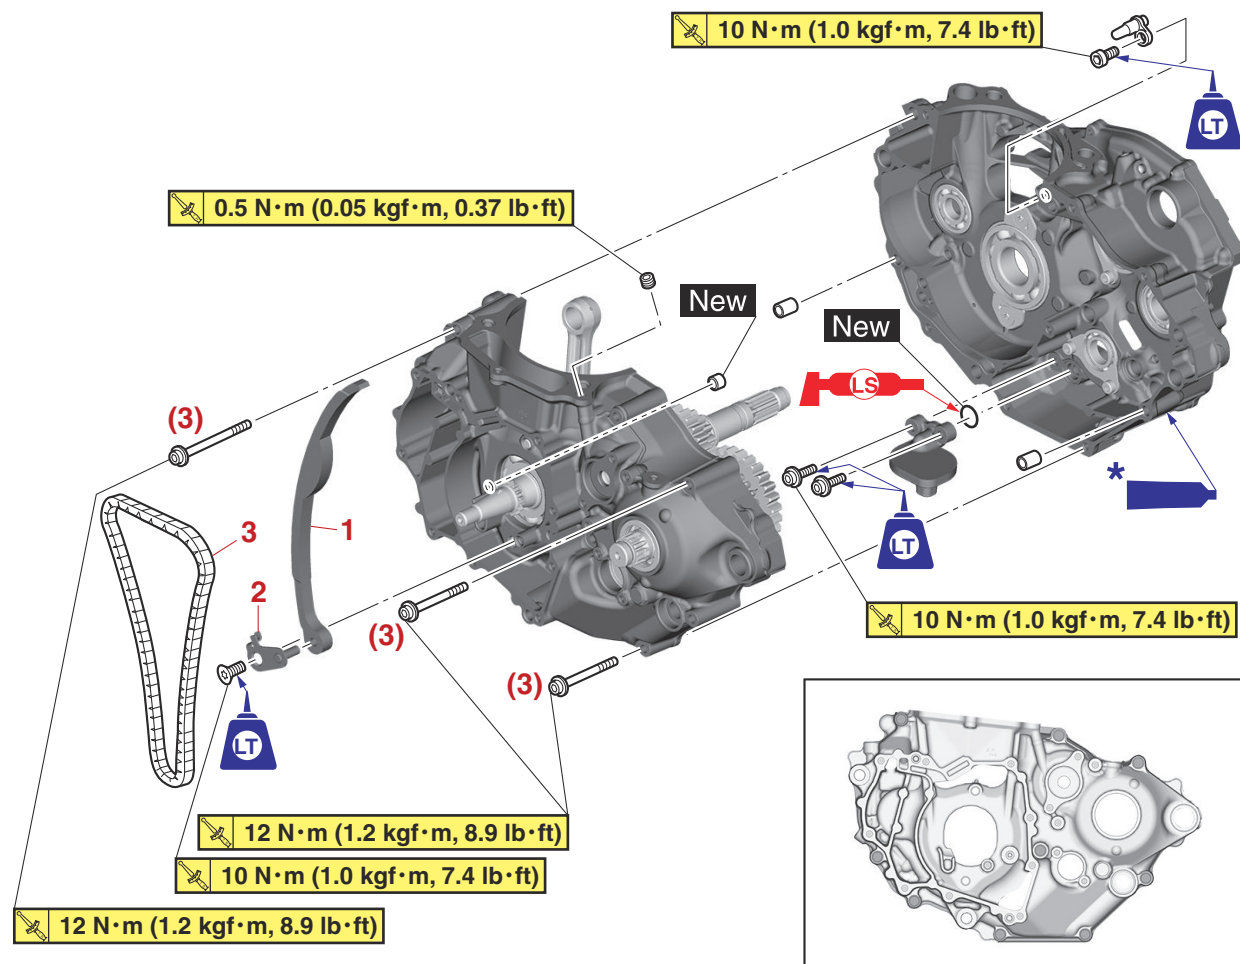

* Yamaha bond No. 1215 (Three bond No. 1215®)

Order	Job/Parts to remove	Q'ty	Remarks
	Engine		Refer to "ENGINE REMOVAL" on page 5-3.
	Piston		Refer to "CYLINDER AND PISTON" on page 5-32.
	Oil pump		Refer to "OIL PUMP" on page 5-71.
	Segment		Refer to "SHIFT SHAFT" on page 5-61.
	Stator coil assembly		Refer to "GENERATOR" on page 5-37.
	Clutch release/Push rod 2		Refer to "CLUTCH" on page 5-46.
1	Timing chain guide (exhaust side)	1	
2	Timing chain guide stopper plate	1	
3	Timing chain	1	


Separating the crankcase

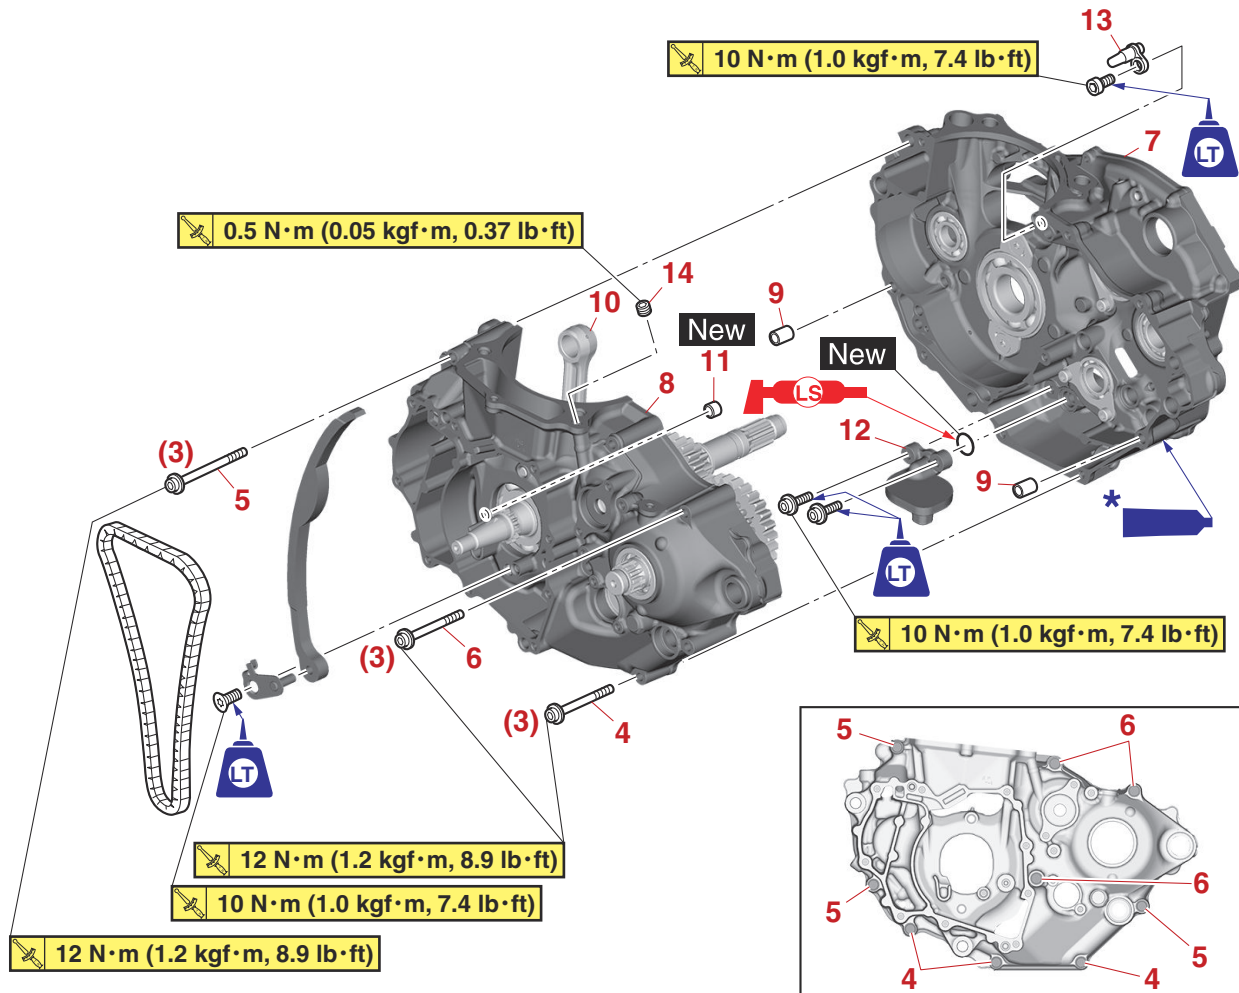

* Yamaha bond No. 1215 (Three bond No. 1215®)

Order	Job/Parts to remove	Q'ty	Remarks
4	Bolt	3	[L = 45 mm (1.77 in)]
5	Bolt	3	[L = 75 mm (2.95 in)]
6	Bolt	3	[L = 60 mm (2.36 in)]
7	Crankcase (left)	1	
8	Crankcase (right)	1	
9	Dowel pin	2	
10	Crankshaft	1	
11	Gasket	1	
12	Oil strainer	1	
13	Oil nozzle 1	1	
14	Oil nozzle 2	1	

Removing the bearing and oil seal (left)

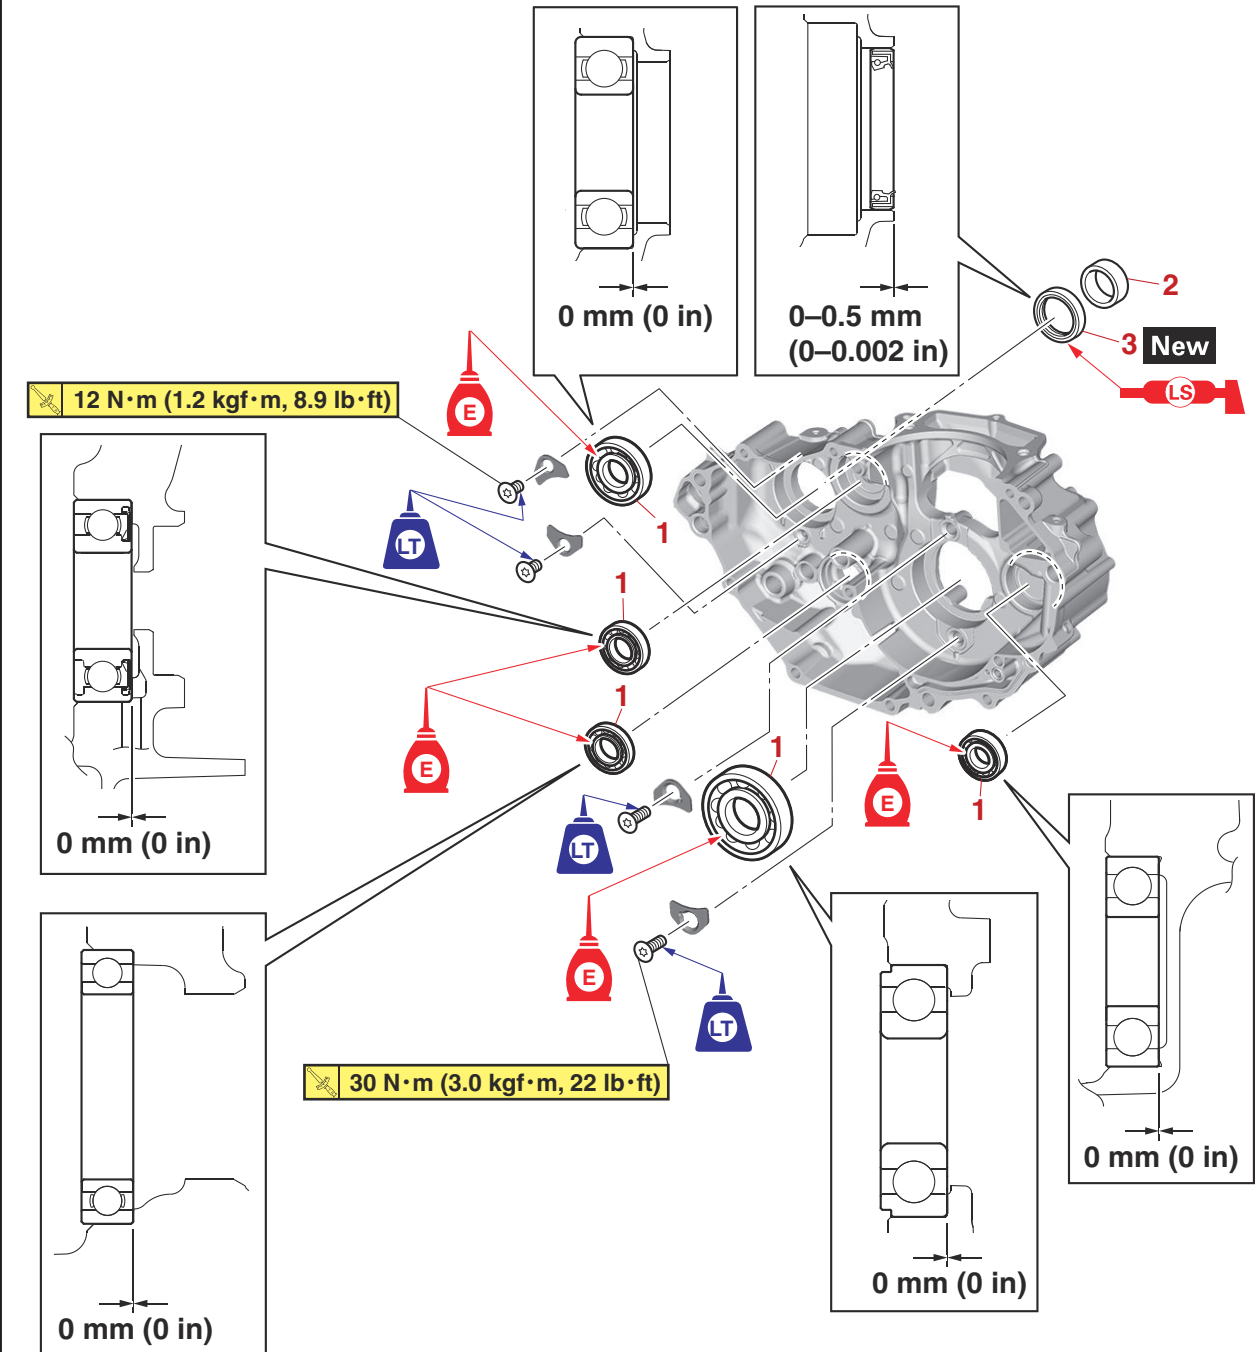

Order	Job/Parts to remove	Q'ty	Remarks
	Transmission		Refer to "TRANSMISSION" on page 5-83.
	Shift drum/Shift fork		Refer to "TRANSMISSION" on page 5-83.
1	Bearing	5	
2	Collar	1	
3	Oil seal	1	

Removing the bearing and oil seal (right)

12 N·m (1.2 kgf·m, 8.9 lb·ft)

0 mm (0 in)

0 mm (0 in)

30 N·m (3.0 kgf·m, 22 lb·ft)

12 N·m (1.2 kgf·m, 8.9 lb·ft)

0 mm (0 in)

0 mm (0 in)

0 mm (0 in)


Order	Job/Parts to remove	Q'ty	Remarks
1	Bearing	5	

EAM30147

DISASSEMBLING THE CRANKCASE

1. Separate:

- Right crankcase
- Left crankcase
 - a. Remove the crankcase bolts.

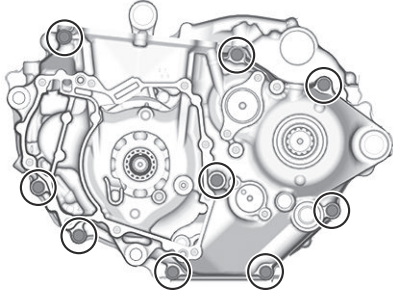

TIP

Loosen each bolt 1/4 of a turn at a time and after all the bolts are loosened, remove them.

- b. Remove the right crankcase "1".



TIP

- Place the crankcase with its left side downward and split it by inserting a screwdriver tip into the splitting slit "a" in the crankcase.
- Lift the right crankcase horizontally while lightly patting the crankcase splitting slit and the engine mounting boss using a soft hammer, and leave the crankshaft and the transmission with the left crankcase.

ECA24690

NOTICE


Use soft hammer to tap on the case half. Tap only on reinforced portions of case. Do not tap on gasket mating surface. Work slowly and carefully. Make sure the case halves separate evenly. If the cases do not separate, check for a remaining case bolt or fitting. Do not force.

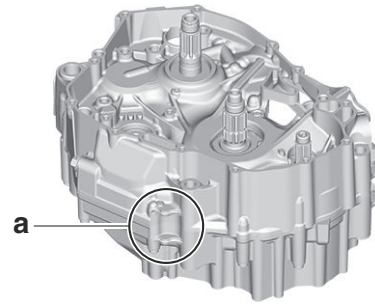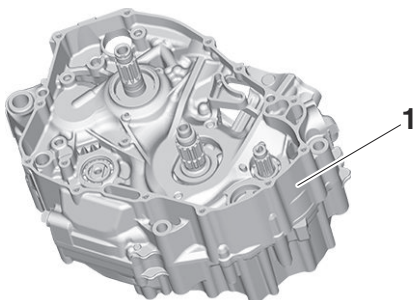

- c. Remove the dowel pins and O-ring.
- ### 2. Remove:
- Bearing "1"

TIP

- Remove the bearing from the crankcase by pressing its inner race.
- Do not use the removed bearing.

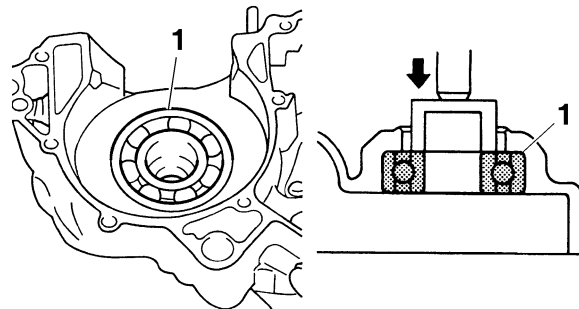

EAM30490

CHECKING THE TIMING CHAIN GUIDE (EXHAUST SIDE)

1. Check:

- Timing chain
 - Stiffness → Replace the camshaft sprocket, timing chain and crankshaft sprocket as a set.

2. Check:

- Timing chain guide
 - Damage/wear → Replace.

EAM30150

CHECKING THE CRANKCASE

1. Wash:

- Crankcase

TIP

- Wash the crankcase in a mild solvent.
- Remove any remaining gasket from the crankcase mating surface.

2. Check:

- Crankcase
 - Crack/damage → Replace.
- Oil delivery passages
 - Obstruction → Blow out with compressed

air.

EAM30641

CHECKING THE OIL STRAINER

1. Check:



- Oil strainer
Damage → Replace.
Contaminants → Clean with solvent.

EAM30152

ASSEMBLING THE CRANKCASE

1. Install:

- Oil seal “1” **New**
(to the left crankcase)

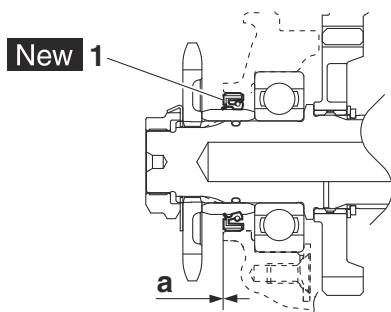

2. Install:

- Bearing cover plate





TIP

Install the bearing by pressing its outer race parallel.

3. Apply:

- Sealant
(to the crankcase mating surface)

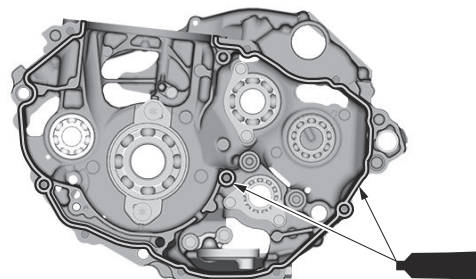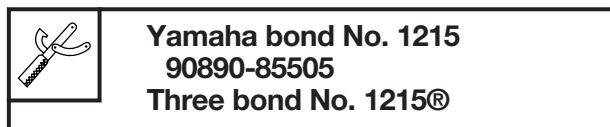


4. Install:

- Oil nozzle 1 “1”
(to the right crankcase)



- Oil nozzle 2 “2”
(to the left crankcase)




- Dowel pin “3”
- Gasket “4” **New**
(to the left crankcase)
- Crankcase “5”
(to the left crankcase)



TIP

- Fit the right crankcase onto the left crankcase. Tap lightly on the case with soft hammer.
- When installing the crankcase, the connecting rod should be positioned at top dead center (TDC).
- Tighten the bolts in a crisscross pattern in two stages, with 1/4 turn each.

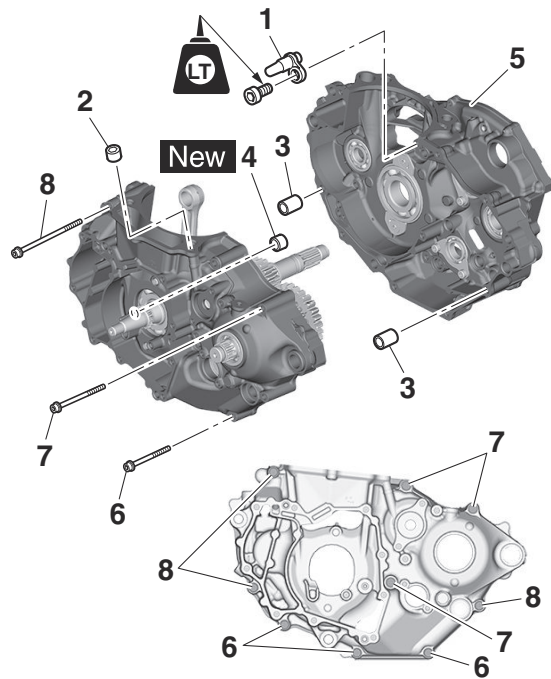


- 6. 45 mm (1.77 in)
- 7. 60 mm (2.36 in)
- 8. 75 mm (2.95 in)

EAM20184

CRANKSHAFT AND BALANCER SHAFT

Removing the crankshaft assembly and balancer shaft

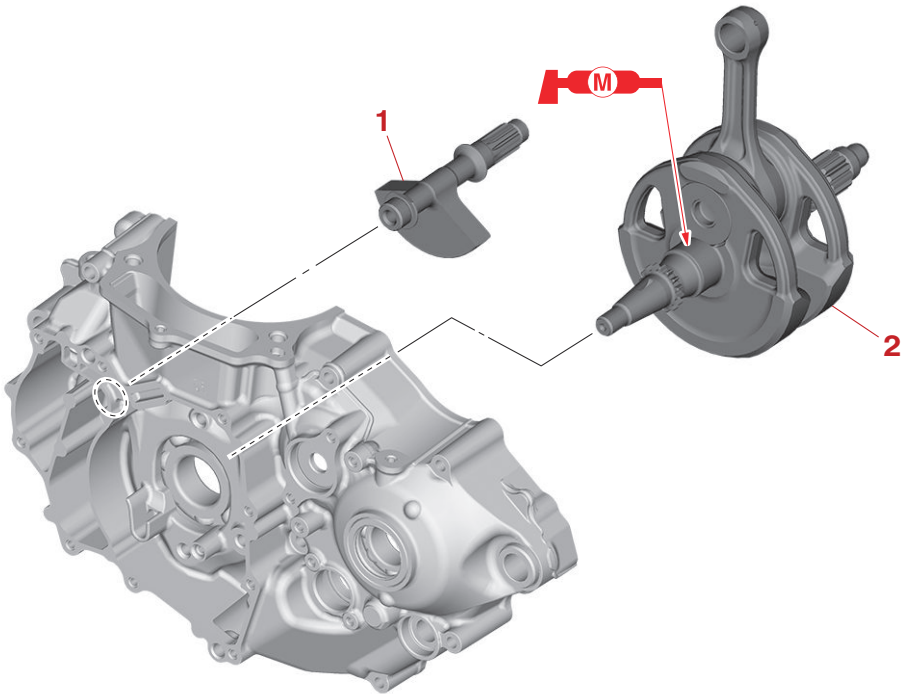

Order	Job/Parts to remove	Q'ty	Remarks
	Crankcase		Separate. Refer to "CRANKCASE" on page 5-73.
	Transmission		Refer to "TRANSMISSION" on page 5-83.
1	Balancer shaft	1	
2	Crankshaft assembly	1	

CRANKSHAFT AND BALANCER SHAFT


EAM30491

REMOVING THE CRANKSHAFT

1. Remove:
 - Balancer shaft "1"

TIP

Remove the balancer shaft with its flat side "a" facing the crankshaft.

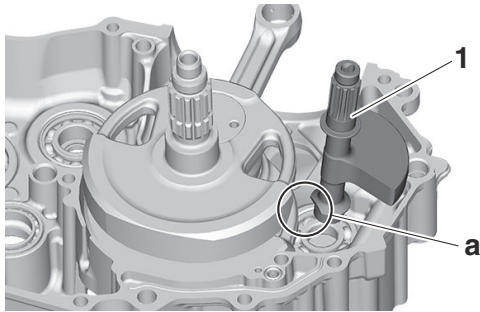



2. Remove:
 - Crankshaft assembly "1"

TIP

Remove the crankshaft assembly by using the crankcase separating tool "2".



Crankcase separating tool
90890-04152
Crankcase separating tool
YU-A9642

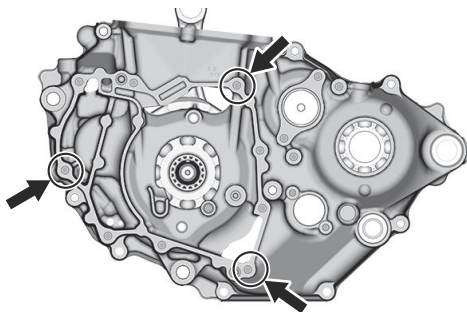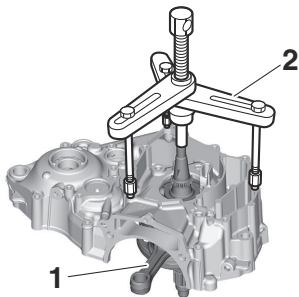

EAM30492

CHECKING THE CRANKSHAFT

1. Measure:
 - Crankshaft runout "a"

Out of specification → Replace the crank-


shaft.

TIP

Turn the crankshaft slowly.



Runout limit
0.030 mm (0.0012 in)

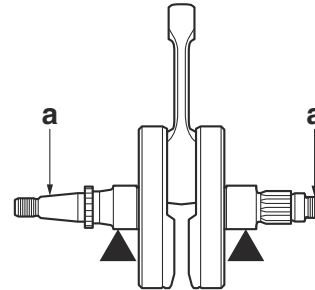


2. Measure:
 - Crank assembly width "a"

Out of specification → Replace the crankshaft.




Crank assembly width
61.93–62.00 mm (2.438–2.441 in)

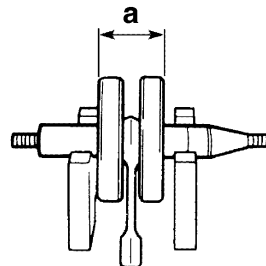

3. Check:
 - Crankshaft sprocket "1"

Damage → Replace the crankshaft.

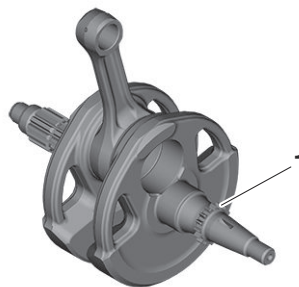

4. Check:
 - Crankshaft journal oil passage

Obstruction → Blow out with compressed air.

EAM30493

INSTALLING THE CRANKSHAFT

1. Install:


- Crankshaft assembly

TIP

Install the crankshaft assembly with the crankshaft installer pot "1", crankshaft installer bolt "2", adapter (M12) "3" and spacer "4".



Crankshaft installer pot
90890-01274
Installing pot
YU-90058
Crankshaft installer bolt
90890-01275
Bolt
YU-90060
Adapter (M12)
90890-01278
Adapter #3
YU-90063
Spacer (crankshaft installer)
90890-04081
Pot spacer
YM-91044

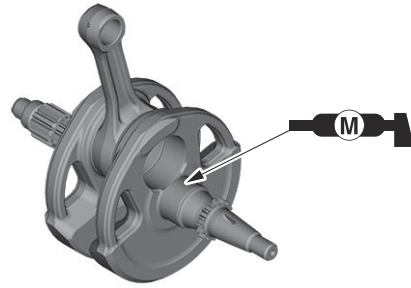


ECA24700

NOTICE

- To avoid scratching the crankshaft and to ease the installation procedure, lubricate the oil seal lips with lithium-soap-based grease.
- In order to prevent the crankshaft seizure, apply molybdenum disulfide grease.

TIP

Hold the connecting rod at top dead center (TDC) with one hand while turning the nut of the crankshaft installer bolt with the other. Turn the crankshaft installer bolt until the crankshaft assembly bottoms against the bearing.

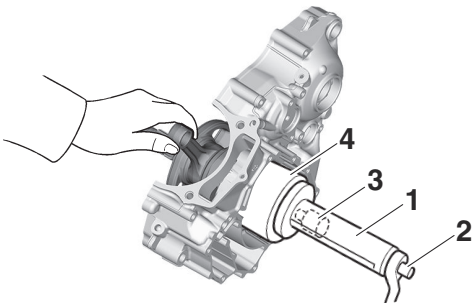

EAM20118


TRANSMISSION

Removing the transmission, shift drum assembly, and shift forks

The diagram illustrates the removal of the transmission, shift drum assembly, and shift forks. It shows an exploded view of the components, including the engine, crankcase, and internal parts like the shift drum and shift forks. Callouts 'M' and 'E' indicate specific parts, and a 'New' label points to a new O-ring. A red LS wrench is shown at the top right.


Order	Job/Parts to remove	Q'ty	Remarks
	Engine		Refer to "ENGINE REMOVAL" on page 5-3.
	Crankcase		Separate. Refer to "CRANKCASE" on page 5-73.

Removing the transmission, shift drum assembly, and shift forks

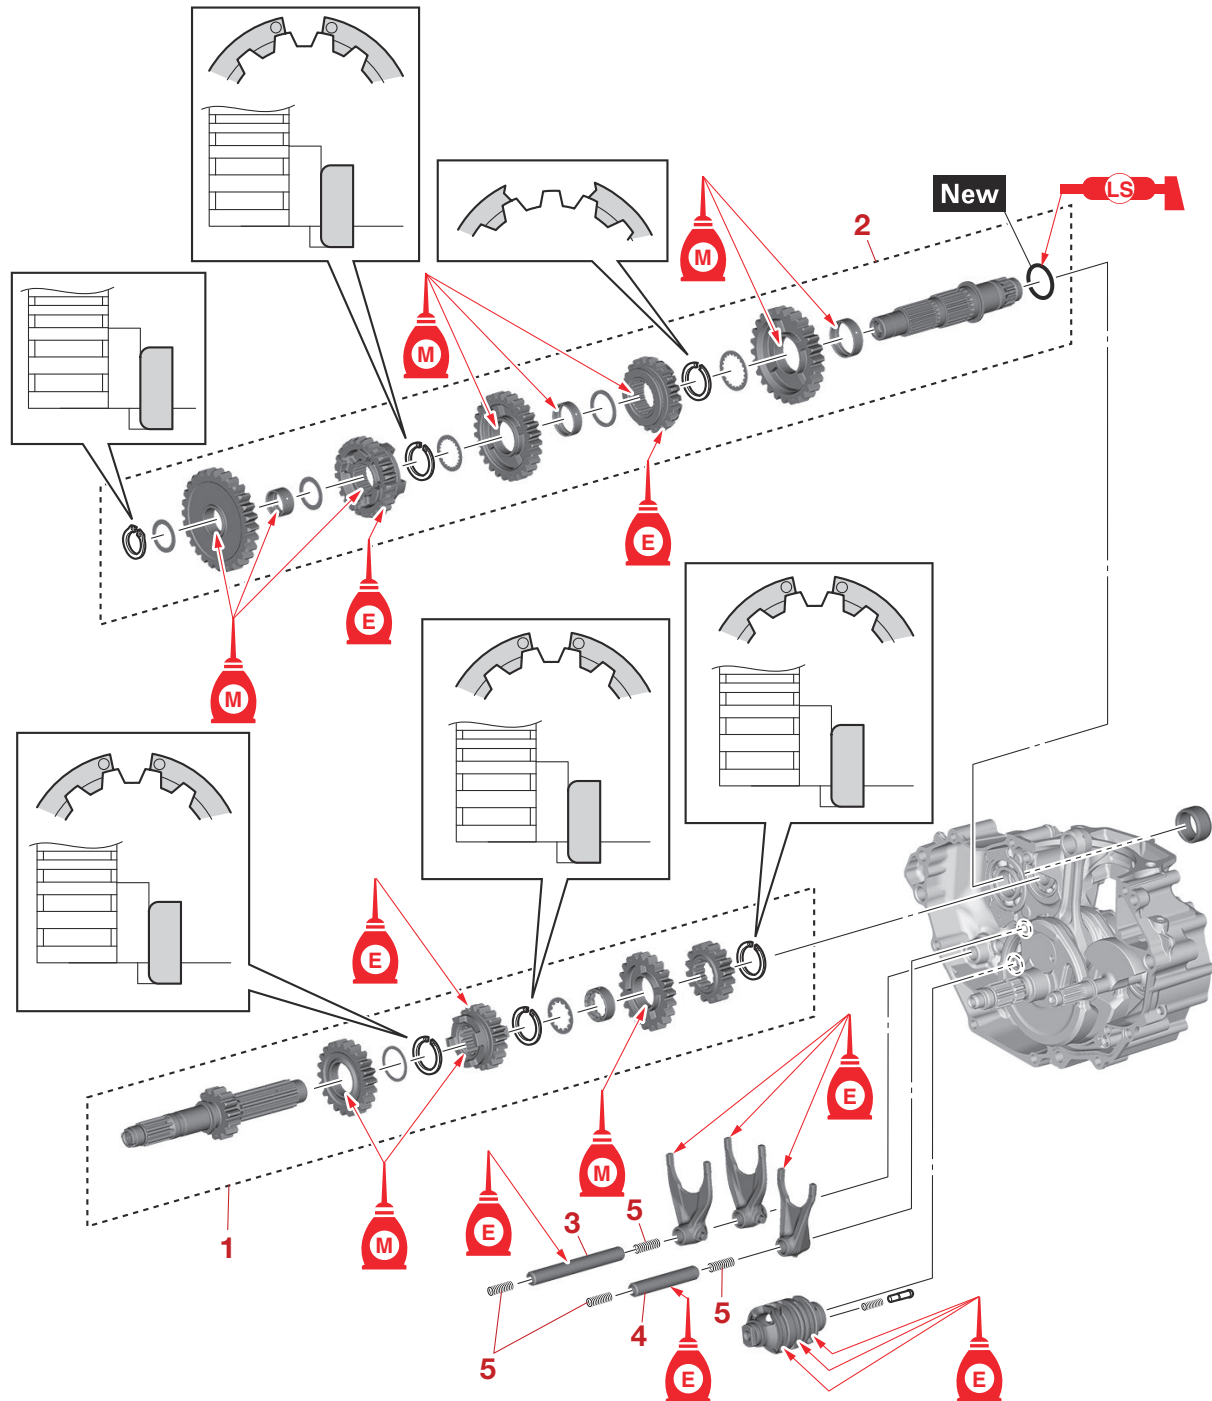

Order	Job/Parts to remove	Q'ty	Remarks
1	Main axle	1	
2	Drive axle	1	
3	Long shift fork guide bar	1	
4	Short shift fork guide bar	1	
5	Spring	4	

Removing the transmission, shift drum assembly, and shift forks

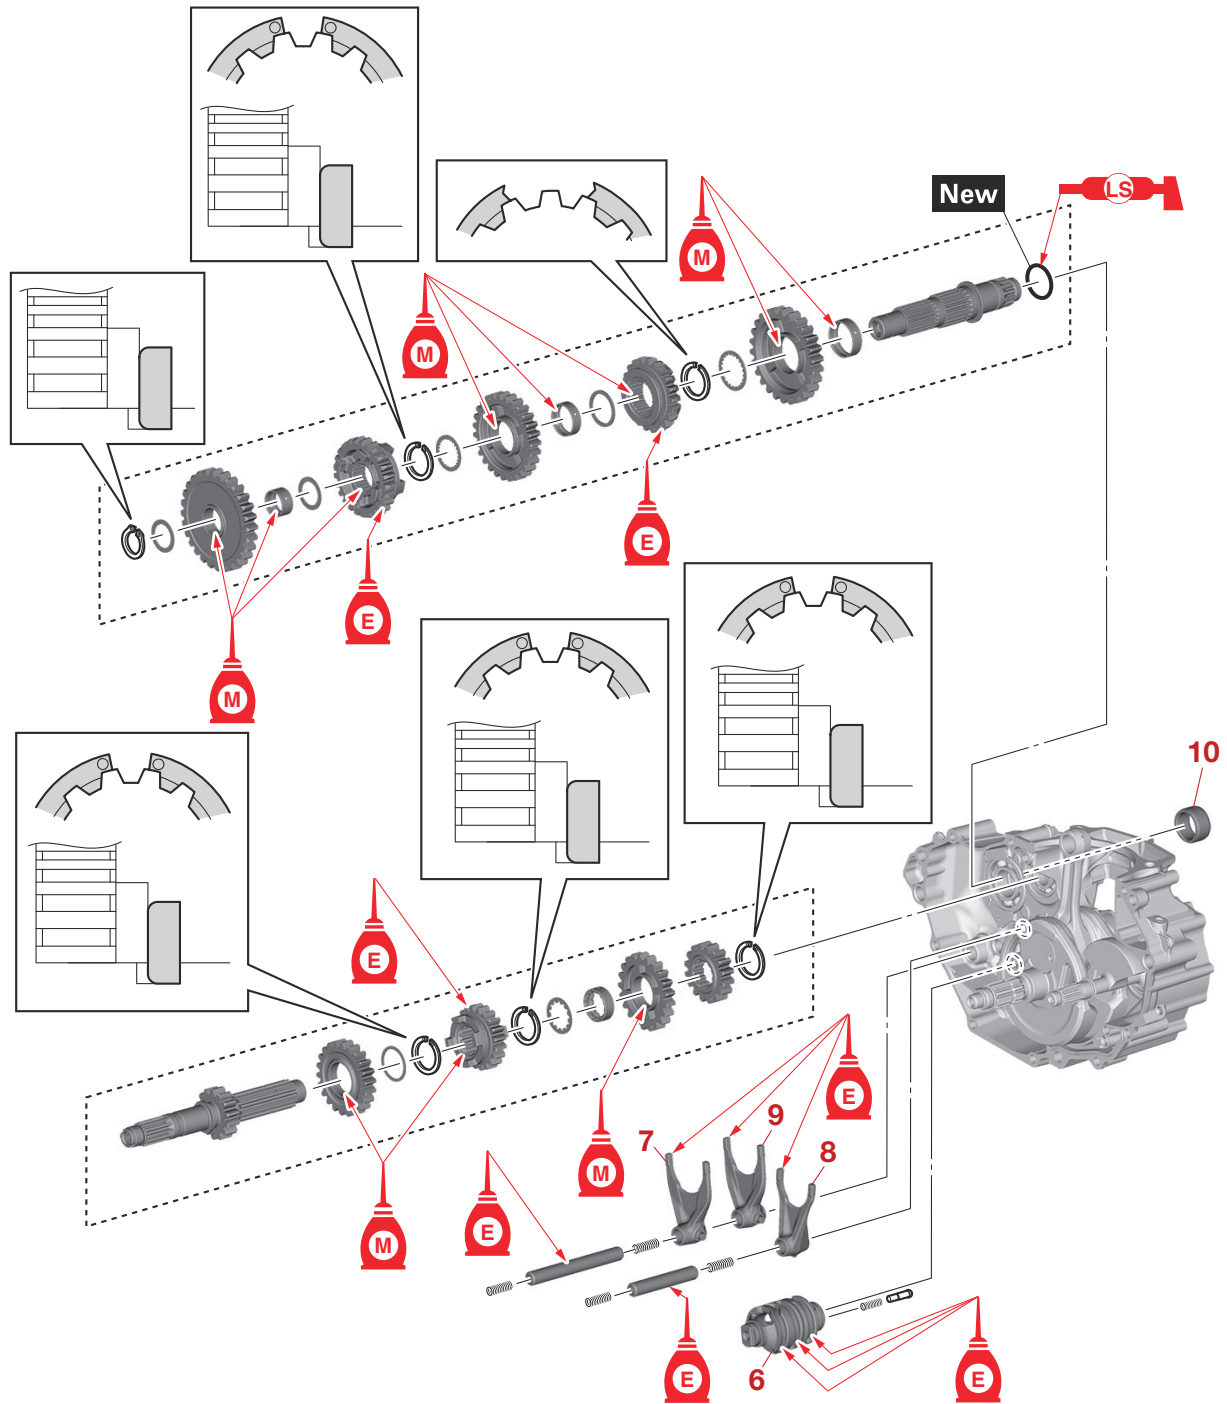

Order	Job/Parts to remove	Q'ty	Remarks
6	Shift drum	1	
7	Shift fork 3 (R)	1	
8	Shift fork 2 (C)	1	
9	Shift fork 1 (L)	1	
10	Collar	1	

EAM30153


REMOVING THE TRANSMISSION

1. Remove:

- Long shift fork guide bar "1"
- Short shift fork guide bar "2"
- Shift drum "3"
- Shift fork 3 (R) "4"
- Shift fork 2 (C) "5"
- Shift fork 1 (L) "6"
- Main axle "7"
- Drive axle "8"
- Collar "9"

TIP

- Remove assembly with the collar "9" installed to the crankcase.
- Make a note of the position of each part. Pay particular attention to the location and direction of shift forks.
- Remove the main axle and the drive axle all together by tapping the drive axle lightly with a soft hammer.

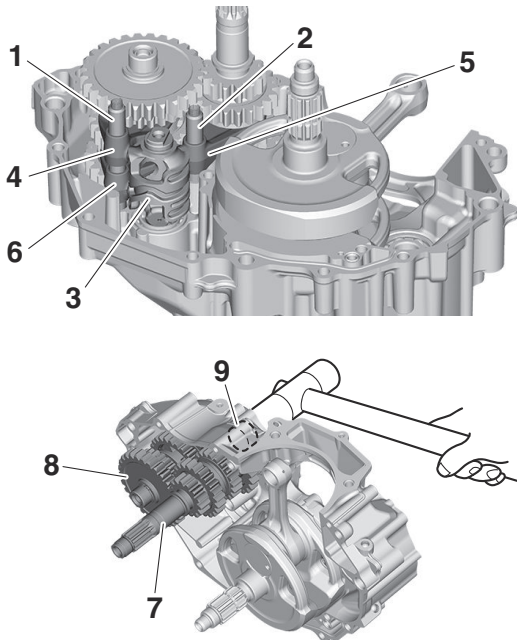


EAM30154

CHECKING THE SHIFT FORKS

1. Check:

- Shift fork cam follower "1"
 - Shift fork pawl "2"
- Bends/damage/scoring/wear → Replace the shift fork.

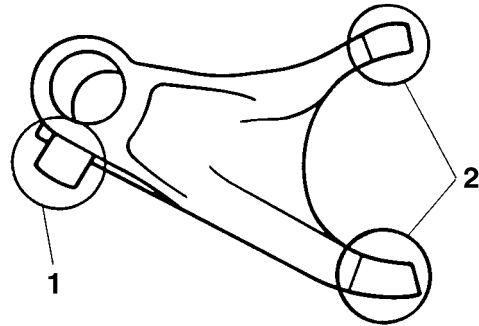

2. Check:

- Shift fork guide bar
Roll the shift fork guide bar on a flat surface.
Bends → Replace.


EWA12840

⚠ WARNING

Do not attempt to straighten a bent shift fork guide bar.

3. Check:

- Shift fork movement
(along the shift fork guide bar)
Rough movement → Replace the shift forks and shift fork guide bar as a set.

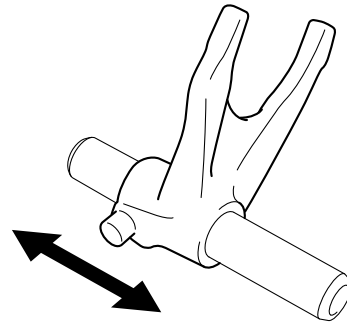

EAM30155

CHECKING THE SHIFT DRUM ASSEMBLY

1. Check:

- Shift drum groove
Damage/scratches/wear → Replace the shift drum assembly.
- Shift drum segment
Damage/wear → Replace the shift drum assembly.

EAM30156


CHECKING THE TRANSMISSION

1. Measure:

- Main axle runout
(with a centering device and dial gauge "1")
Out of specification → Replace the main axle.




Main axle runout limit
0.08 mm (0.0032 in)

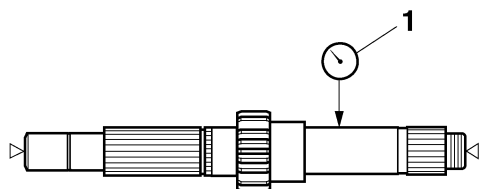

2. Measure:

- Drive axle runout
(with a centering device and dial gauge "1")
Out of specification → Replace the drive axle.

	Drive axle runout limit 0.08 mm (0.0032 in)
--	--

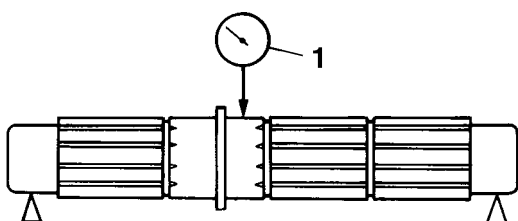

3. Check:

- Transmission gear
Blue discoloration/pitting/wear → Replace the defective gear(s).
- Transmission gear dog
Cracks/damage/rounded edges → Replace the defective gear(s).

4. Check:

- Transmission gear movement
Rough movement → Replace the defective gear(s).

EAM30157

INSTALLING THE TRANSMISSION


1. Install:

- 4th pinion gear (22T) "1"
- 3rd pinion gear (20T) "2"
- Collar "3"
- 5th pinion gear (21T) "4"
- 2nd pinion gear (16T) "5"
(to the main axle "6")

TIP

Before installation, apply molybdenum disulfide oil to the inner and end surface of the idler gear and to the inner surface of the sliding gear, then

install.

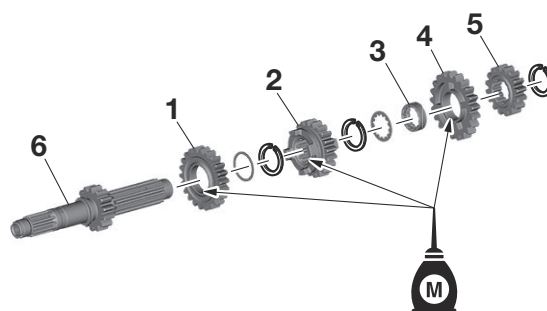


2. Install:

- Collar "1"
- 2nd wheel gear (26T) "2"
- 5th wheel gear (21T) "3"
- 3rd wheel gear (27T) "4"
- 4th wheel gear (25T) "5"
- Collar "6"
- 1st wheel gear (28T) "7"
- O-ring "8" **New**
(to the drive axle "9")

TIP

- Before installation, apply molybdenum disulfide oil to the inner and end surface of the idler gear and the collar and to the inner surface of the sliding gear, then install.
- Apply the lithium-soap-based grease on the O-ring.


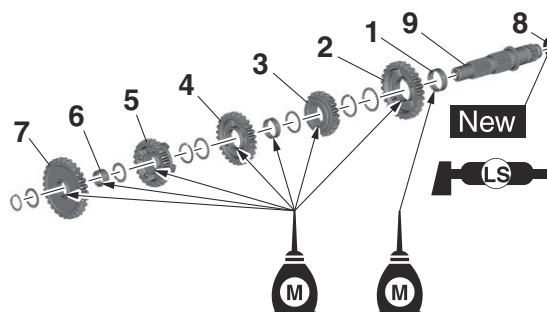


3. Install:

- Washer "1"
- Circlip "2" **New**

TIP


- Be sure the circlip sharp-edged corner "a" is positioned opposite side to the washer and gear "b".
- Install the circlip with its ends "c" settled evenly on the spline crests.

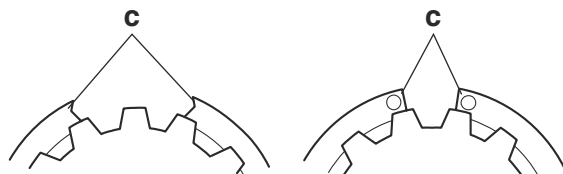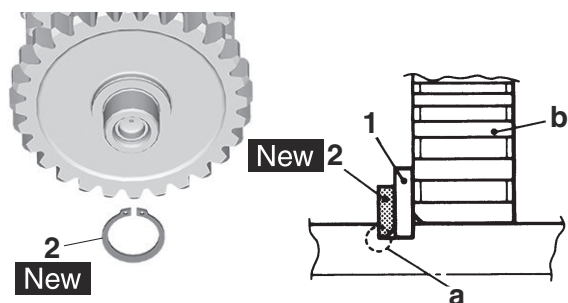

4. Install:
- Collar "1"

TIP


- Apply the lithium-soap-based grease on the oil seal lip.
- When installing the collar into the crankcase, pay careful attention to the crankcase oil seal lip.

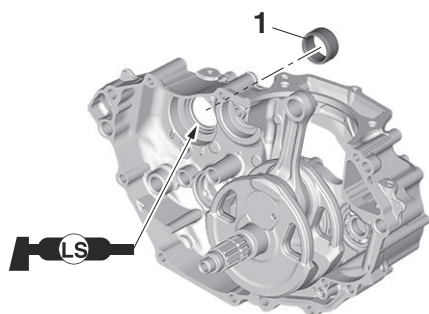

5. Install:
- Main axle "1"
 - Drive axle "2"

TIP


- Install to the left crankcase simultaneously.
- Apply engine oil to the main axle and the drive axle bearing.


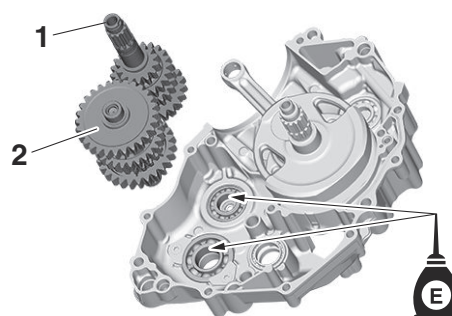


6. Install:
- Shift fork 1 (L) "1"
 - Shift fork 2 (C) "2"
 - Shift fork 3 (R) "3"
 - Shift drum "4"
- (to the main axle and the drive axle)

TIP

- Apply engine oil to the shift fork grooves.
- Apply engine oil to the shift drum groove and the bearing contact surface.
- Mesh the shift fork 1 (L) with the 5th wheel gear "5" and shift fork 3 (R) with the 4th wheel gear "6" on the drive axle.
- Mesh the shift fork 2 (C) with the 3rd pinion gear "7" on the main axle.

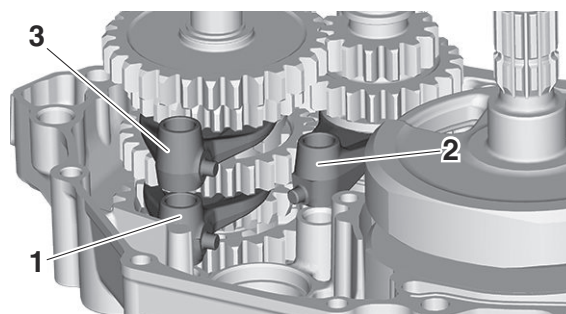

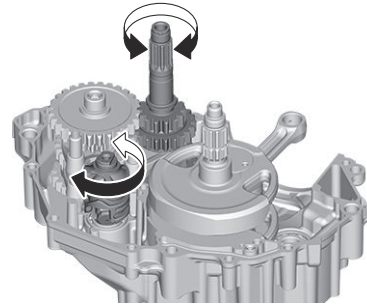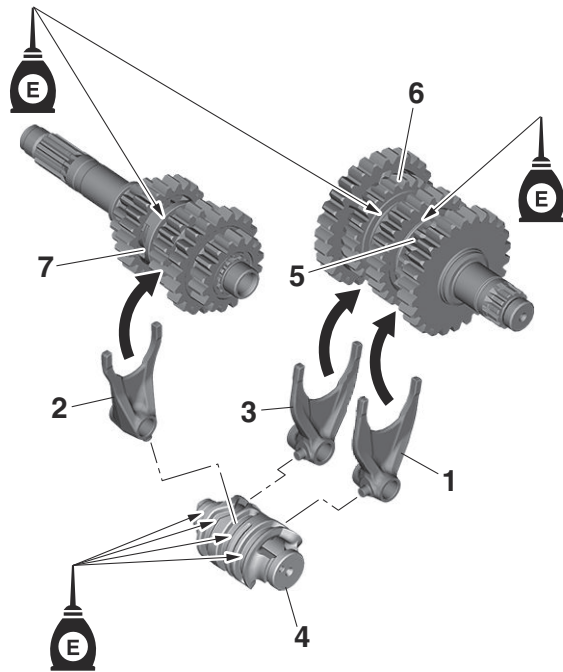


7. Install:

- Long shift fork guide bar “1”
- Short shift fork guide bar “2”
- Spring “3”

TIP

- Screw the spring into the shift fork guide bar lightly beforehand.
- Apply the engine oil on the shift fork guide bars.

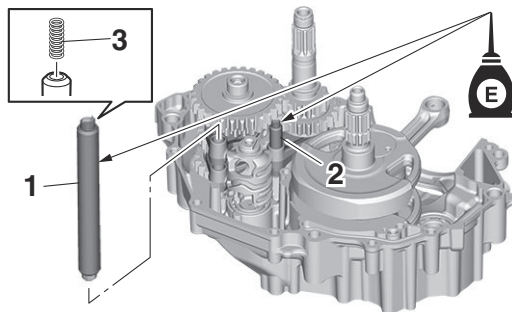

8. Check:


- Operation of shift drum and shift fork
 - Transmission operation
- Unsmooth operation → Repair.

COOLING SYSTEM

COOLING SYSTEM DIAGRAMS.....	6-1
RADIATOR.....	6-3
CHECKING THE RADIATOR.....	6-5
INSTALLING THE RADIATOR.....	6-5
WATER PUMP.....	6-7
DISASSEMBLING THE WATER PUMP.....	6-9
CHECKING THE WATER PUMP.....	6-9
ASSEMBLING THE WATER PUMP.....	6-9

EAM20186

COOLING SYSTEM DIAGRAMS

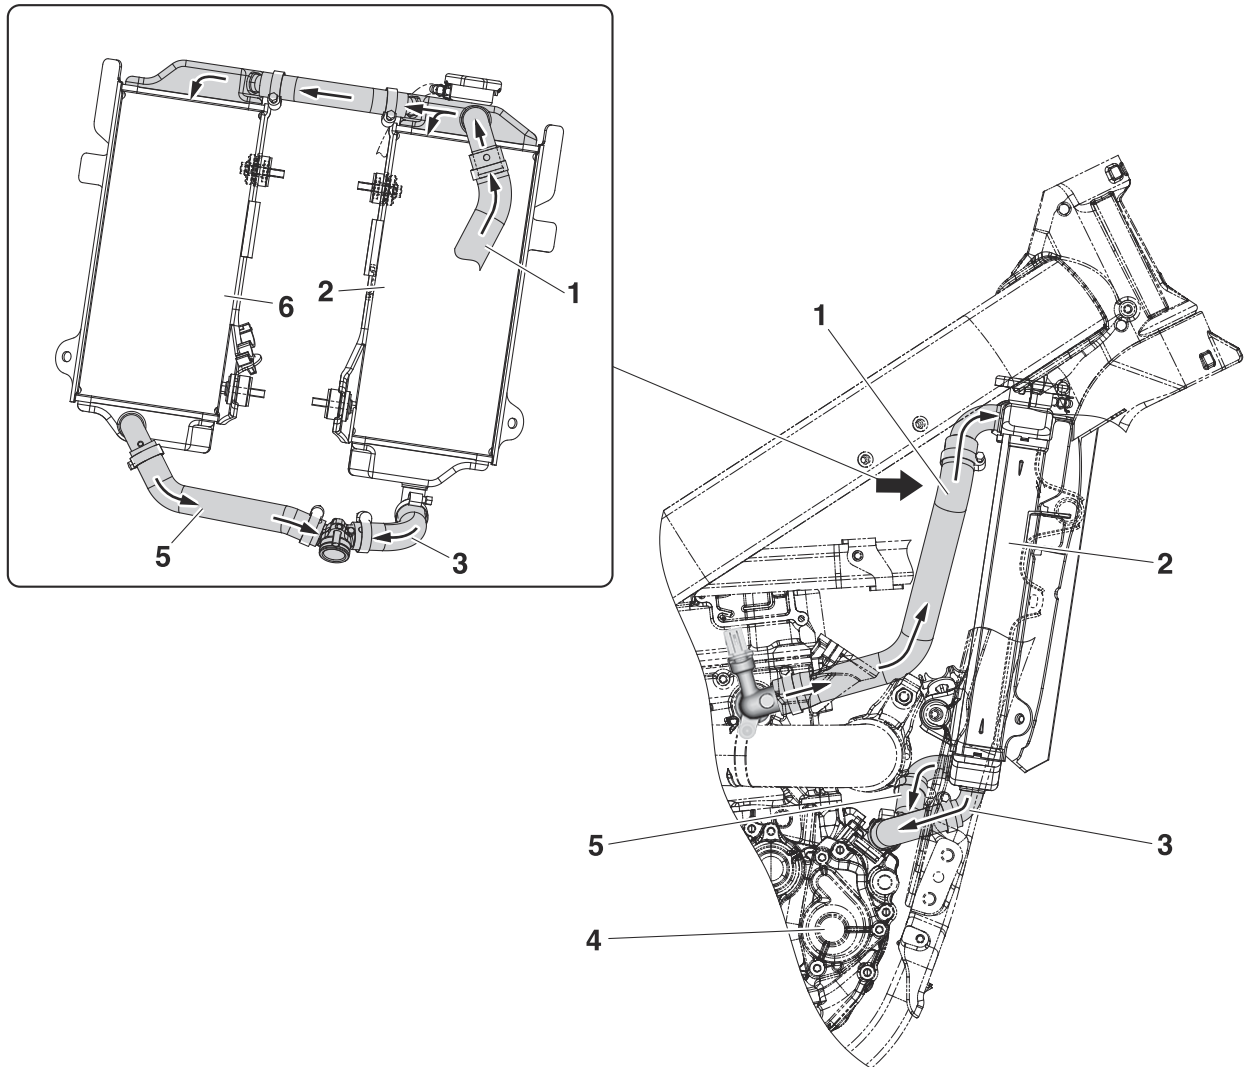


1. Radiator hose 1
2. Radiator (right)
3. Radiator hose 4
4. Water pump
5. Radiator hose 3
6. Radiator (left)

EAM20138


RADIATOR

Removing the radiator

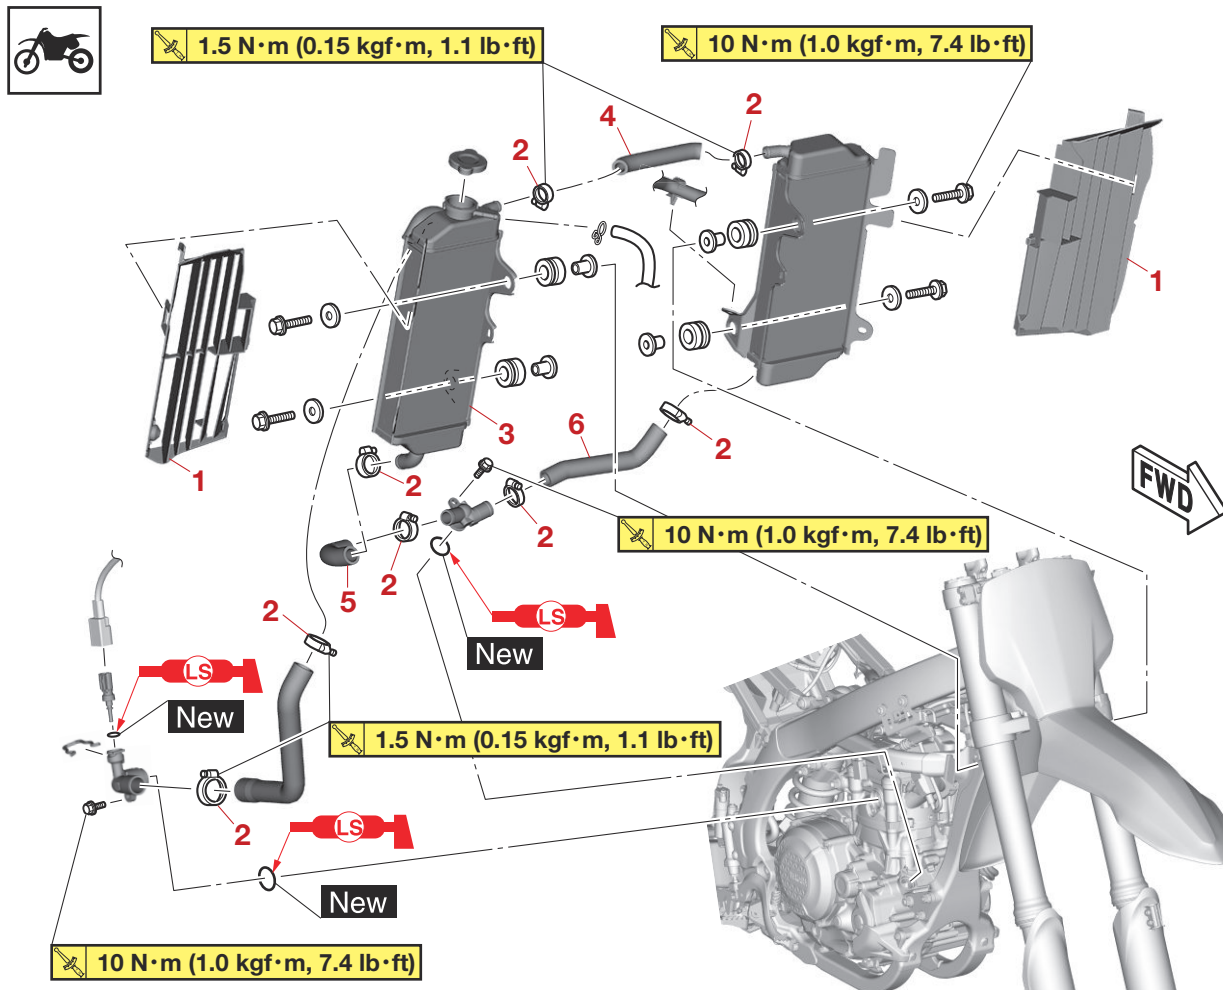

Order	Job/Parts to remove	Q'ty	Remarks
	Coolant		Drain. Refer to "CHANGING THE COOLANT" on page 3-23.
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
	Air filter case		Refer to "THROTTLE BODY" on page 7-4.
1	Radiator guard	2	
2	Radiator hose clamp	8	Loosen.
3	Radiator (right)	1	
4	Radiator hose 2	1	
5	Radiator hose 4	1	
6	Radiator hose 3	1	

Removing the radiator

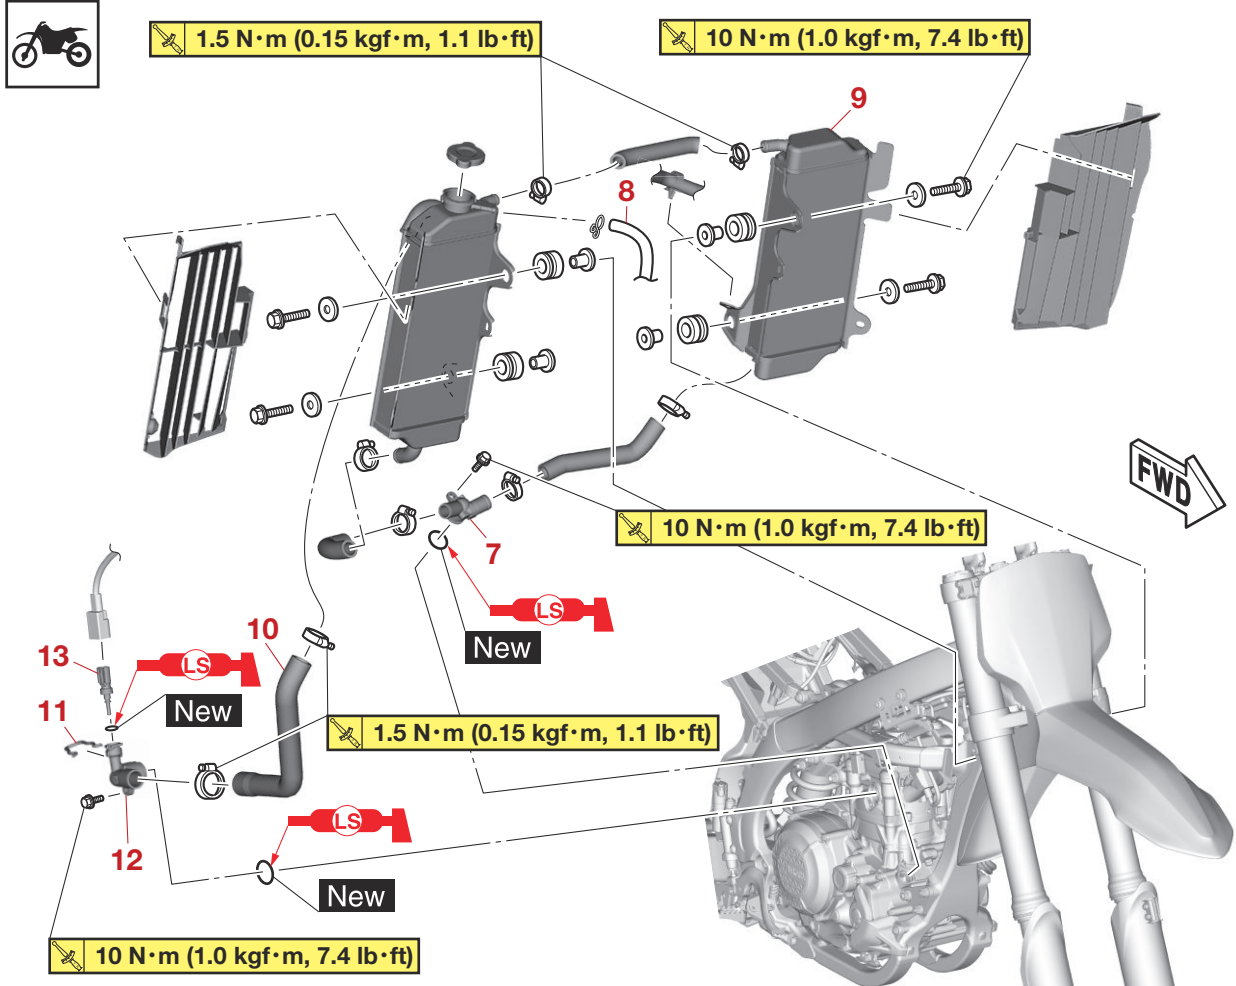

Order	Job/Parts to remove	Q'ty	Remarks
7	Radiator pipe 2	1	
8	Radiator breather hose	1	
9	Radiator (left)	1	
10	Radiator hose 1	1	
11	Clip	1	
12	Radiator pipe 1	1	
13	Coolant temperature sensor	1	

EAM30341

CHECKING THE RADIATOR

EWA13030

WARNING

A hot radiator is under pressure. Therefore, do not remove the radiator cap when the engine is hot. Scalding hot fluid and steam may be blown out, which could cause serious injury. When the engine has cooled, open the radiator cap as follows:


Place a thick rag or a towel over the radiator cap and slowly turn the radiator cap counterclockwise toward the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the radiator cap and turn it counterclockwise to remove.

1. Check:

- Radiator fin “1”
Obstructions → Clean.
Apply compressed air to the rear of the radiator.
Damage → Repair or replace.

TIP

Correct any flattened fins with a thin, flat-head screwdriver.

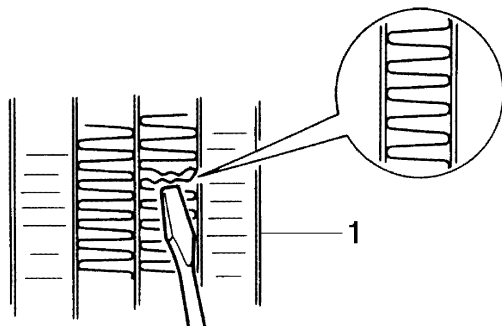

2. Check:

- Radiator hose
- Radiator pipe
Crack/damage → Replace.

3. Check:

- Radiator cap valve opening pressure
 - a. Install the radiator cap tester adapter “2” and the radiator cap tester “3” to the radiator cap “1”, and activate the tester to check whether it can stay for 5 to 10 seconds within standard pressure values.

TIP

Before attaching the cap to the tester, apply water to its sealing surface.



Radiator cap valve opening pressure

107.9–137.3 kPa (1.08–1.37
kgf/cm², 15.6–19.9 psi)

No stay → Replace.



Radiator cap tester

90890-01325

Mityvac cooling system tester kit


YU-24460-A

Radiator cap tester adapter

90890-01352

Pressure tester adapter

YU-33984

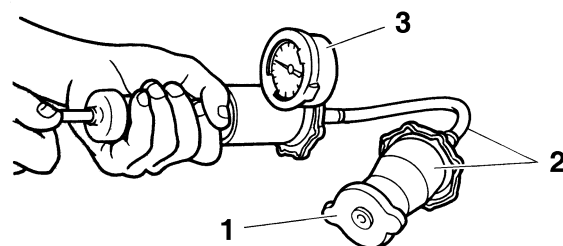

EAM30506

INSTALLING THE RADIATOR

1. Fill:

- Cooling system
(with the specified amount of the recommended coolant)
Refer to “CHANGING THE COOLANT” on page 3-23.

2. Check:

- Cooling system
Leaks → Repair or replace any faulty part.

3. Install:

- Radiator cap tester “1”
- Radiator cap tester adapter “2”



Radiator cap tester

90890-01325

Mityvac cooling system tester kit


YU-24460-A

Radiator cap tester adapter

90890-01352

Pressure tester adapter

YU-33984

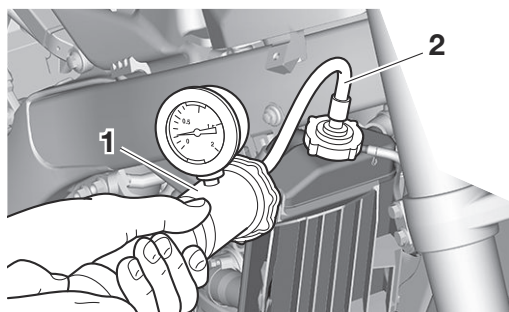

4. Activate the tester to apply the test pressure.



Cooling system leak test pressure
137.3 kPa (1.37 kgf/cm², 19.9 psi)

ECA24270

NOTICE

- Do not apply such a high pressure as exceeds the test pressure.
- Make sure that a checkup after the cylinder head gasket is replaced is made after 3 minutes of warm-up.
- Make sure that coolant is filled up to the upper level beforehand.

5. Check:

- Pressure value
No stay for 5 to 10 seconds at the test pressure value → Correct.
- Radiator
- Radiator hose connection
Coolant leaks → Correct or replace.
- Radiator hose
Bulges → Replace.

EWA19090


WARNING

When the radiator cap tester is removed, coolant will spout; therefore, cover it with a cloth beforehand.

EAM20139


WATER PUMP

Removing the water pump

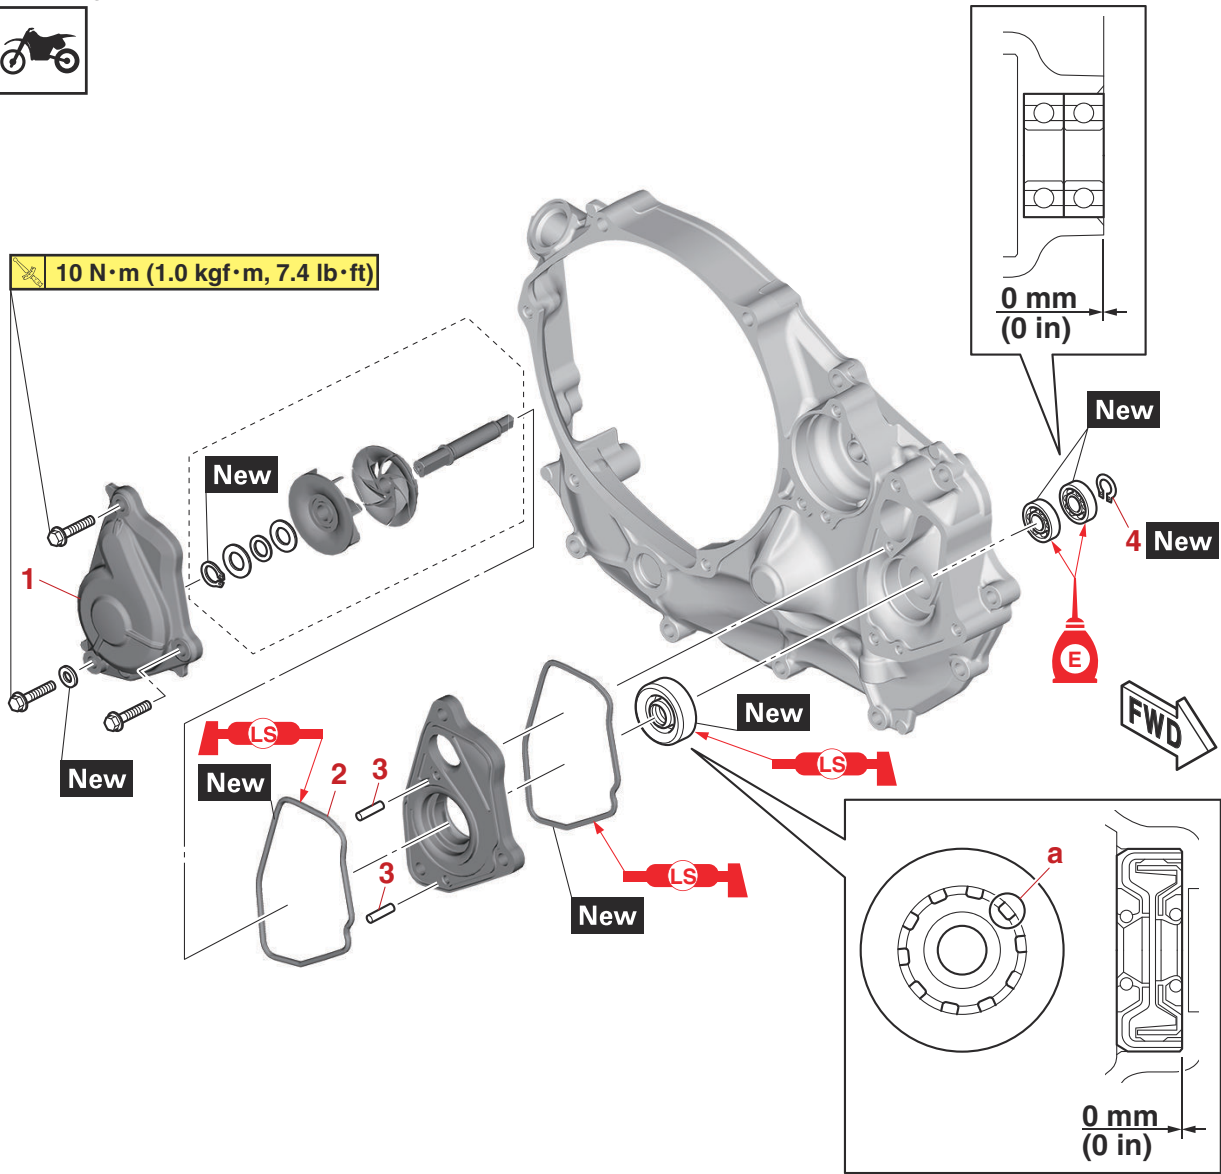

Order	Job/Parts to remove	Q'ty	Remarks
	Coolant		Drain. Refer to "CHANGING THE COOLANT" on page 3-23.
	Engine oil		Drain. Refer to "CHANGING THE ENGINE OIL" on page 3-14.
	Crankcase cover (right)		Refer to "CLUTCH" on page 5-46.
1	Water pump housing cover	1	
2	O-ring	1	
3	Dowel pin	2	
4	Circlip	1	

Removing the water pump

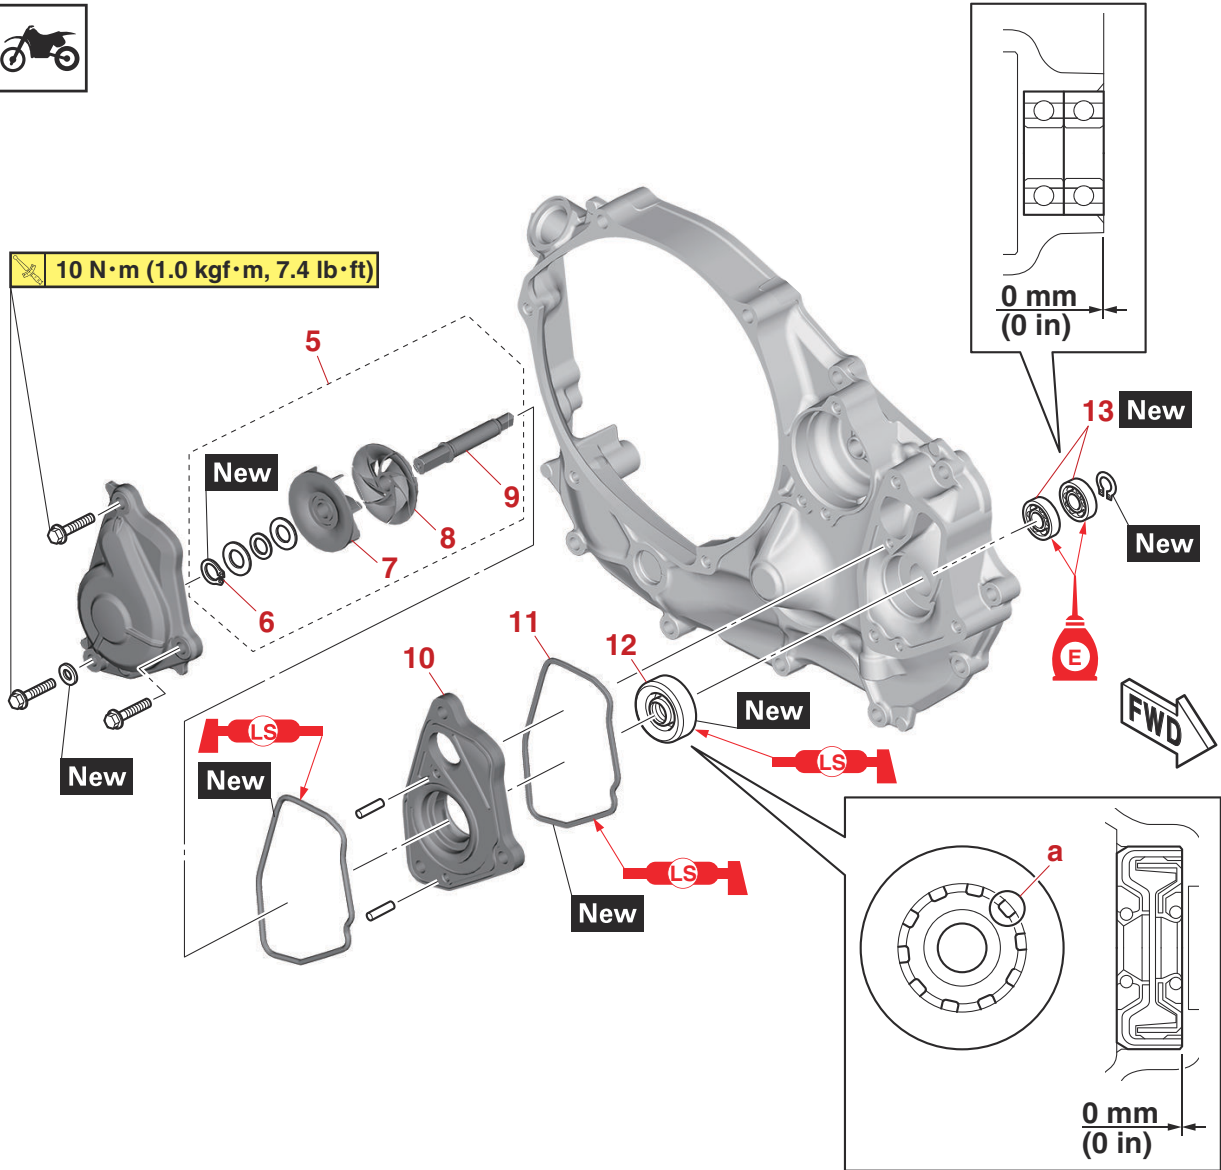

Order	Job/Parts to remove	Q'ty	Remarks
5	Impeller shaft assembly	1	
6	Circlip	1	
7	Impeller 1	1	
8	Impeller 2	1	
9	Impeller shaft	1	
10	Water pump housing	1	
11	O-ring	1	
12	Oil seal	1	Make sure the projections "a" on the oil seal point to the outside, and then install the oil seal.
13	Bearing	2	

EAM30494


DISASSEMBLING THE WATER PUMP

TIP

- Remove the oil seal when the coolant level changes frequently more than usual, coolant has discolored, or engine oil has become milky.
- Do not use the removed oil seal.

1. Remove:

- Oil seal “1”

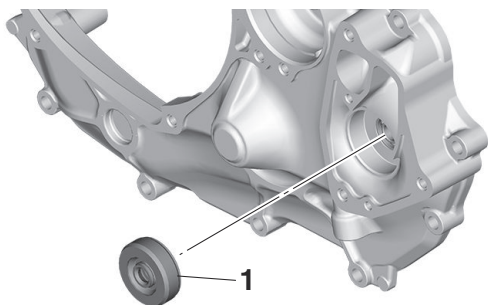

EAM30259


CHECKING THE WATER PUMP

1. Check:

- Water pump housing cover
- Impeller shaft
- Impeller
- Cracks/damage/wear → Replace.

2. Check:

- Bearing
- Rotate the inner race with your finger.
- Rough spot/seizure → Replace.

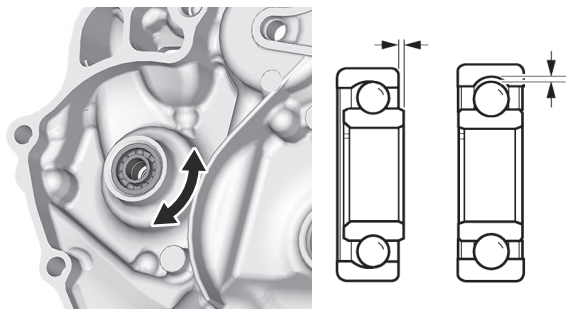

EAM30262


ASSEMBLING THE WATER PUMP

1. Install:

- Oil seal “1” **New**

TIP

- Apply the lithium-soap-based grease on the oil seal lip.
- Make sure the projections “a” on the oil seal point to the outside, and then install the oil seal.

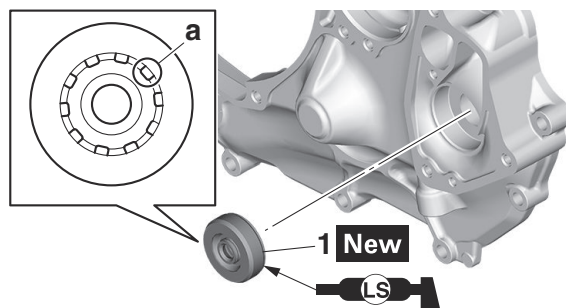


2. Install:

- Bearing “1” **New**

TIP

Install the bearings by pressing its outer race parallel.

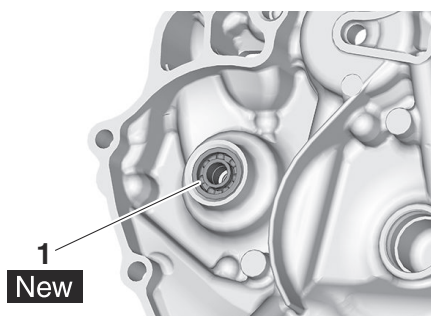


3. Install:

- O-ring “1” **New**
- Water pump housing “2”
- Impeller shaft assembly “3”
- Circlip “4” **New**


TIP

Take care so that the oil seal lip is not damaged or the spring does not slip off its position.

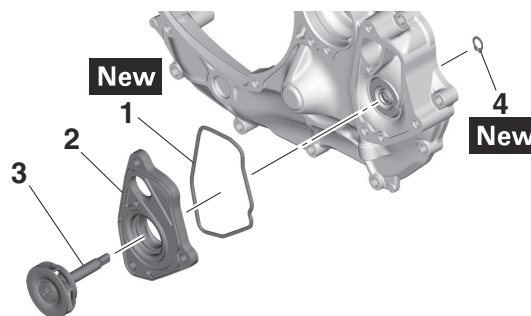

4. Install:

- Dowel pin “1”
- O-ring “2” **New**

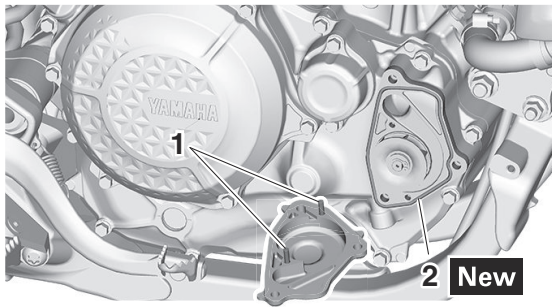

5. Install:

- Water pump housing cover “1”
- Water pump housing bolt “2”




Water pump housing bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

- Washer “3” **New**
- Coolant drain bolt “4”



Coolant drain bolt
10 N·m (1.0 kgf·m, 7.4 lb·ft)

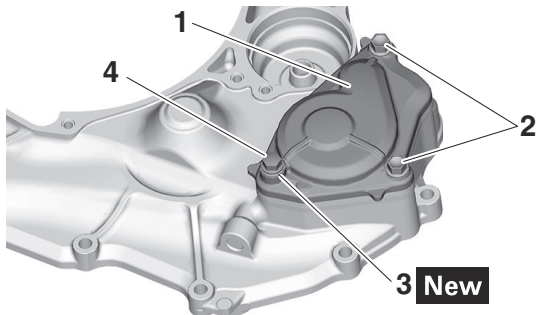


FUEL SYSTEM

FUEL TANK	7-1
REMOVING THE FUEL TANK.....	7-2
REMOVING THE FUEL PUMP.....	7-2
CHECKING THE FUEL PUMP BODY.....	7-2
CHECKING THE FUEL PUMP OPERATION.....	7-2
INSTALLING THE FUEL PUMP.....	7-2
INSTALLING THE FUEL TANK.....	7-3
 THROTTLE BODY	7-4
CHECKING THE INJECTOR.....	7-7
CHECKING THE THROTTLE BODY.....	7-7
CHECKING THE FUEL PRESSURE.....	7-7
ADJUSTING THE THROTTLE POSITION SENSOR.....	7-8
INSTALLING THE AIR FILTER CASE ASSEMBLY BRACKET.....	7-8

EAM20140

FUEL TANK

Removing the fuel tank

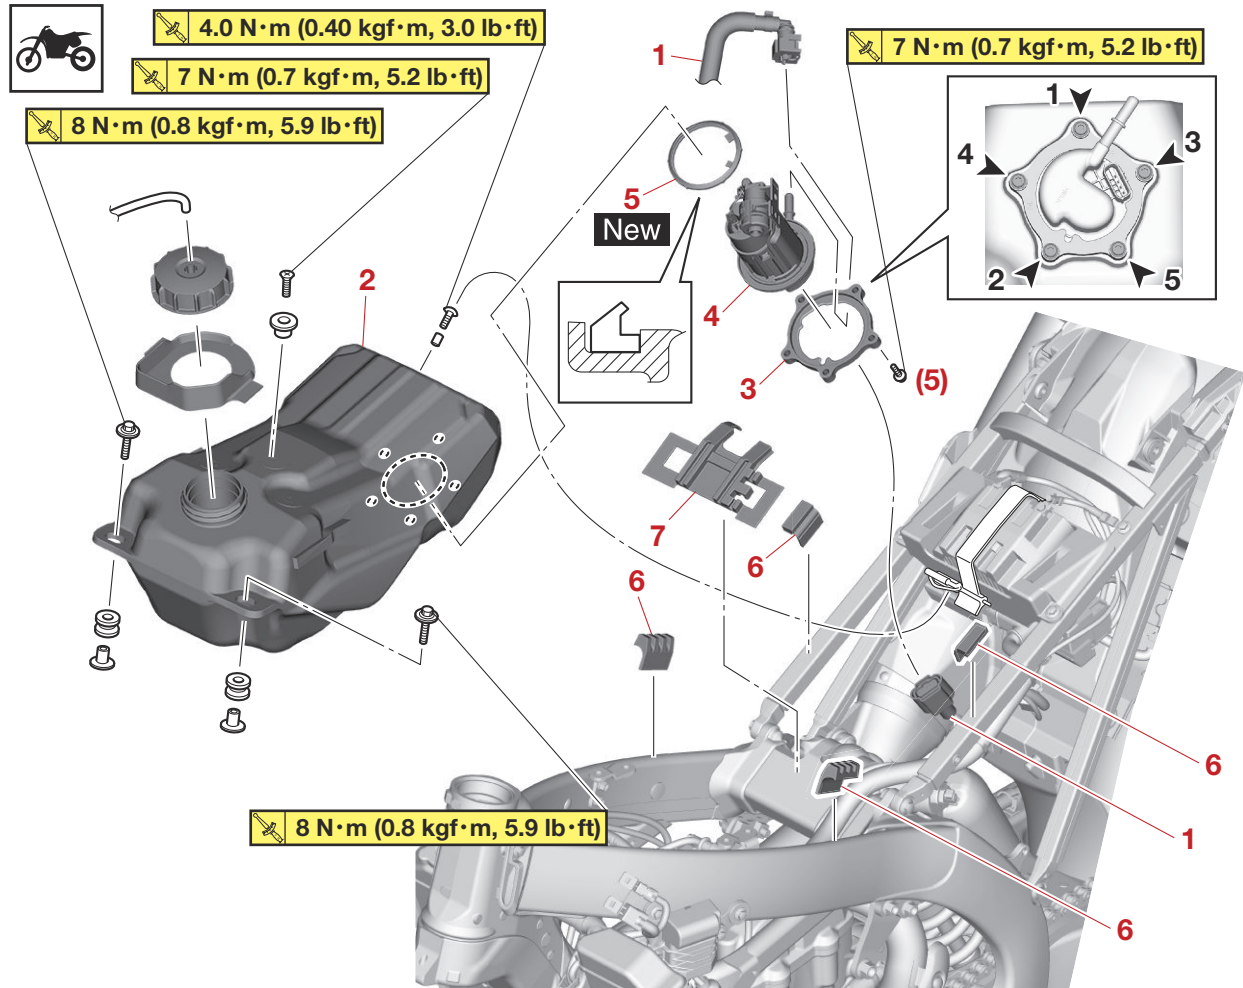

Order	Job/Parts to remove	Q'ty	Remarks
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
1	Fuel pump coupler/Fuel hose	1/1	Disconnect.
2	Fuel tank	1	
3	Fuel pump bracket	1	
4	Fuel pump	1	
5	Fuel pump gasket	1	
6	Rubber damper	4	
7	Damper	1	

EAM30263

REMOVING THE FUEL TANK

1. Extract the fuel in the fuel tank through the fuel tank cap with a pump.
2. Remove:
 - Seat
 - Side cover (left/right)
 - Shroud (left/right)
 Refer to “GENERAL CHASSIS” on page 4-1.
3. Disconnect:
 - Fuel pump coupler
 - Fuel hose

EWA19370

WARNING

Cover the fuel hose connection with a cloth when disconnecting it. This is because residual pressure in the fuel hose could cause fuel to spurt out when the hose is removed.



ECA24710

NOTICE

Make sure that the fuel hose is disconnected by hand. Do not forcefully disconnect the hose with tools.

TIP

- To remove the fuel hose, slide the fuel hose connector cover “1” on the end of the hose in the direction of the arrow shown, press the two buttons “2” on the sides of the connector, and then remove the hose.
- Before removing the hose, place a few cloths in the area under where it will be removed.
- To prevent sand, dust, and other foreign materials from entering the fuel pump, install the included fuel hose joint cover 1 “3” and the fuel hose joint cover 2 “4” onto the disconnected fuel hose and the fuel pump.

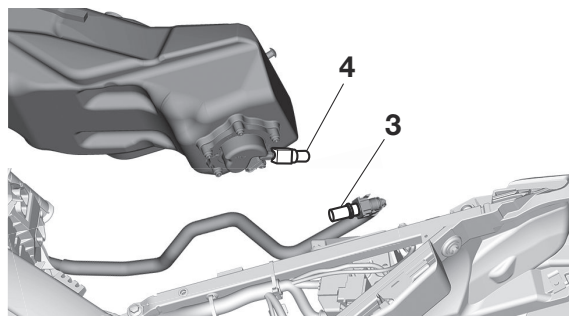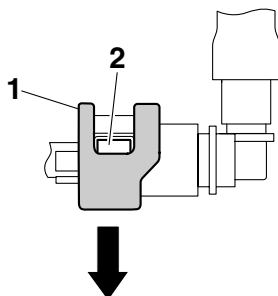

4. Remove:
 - Fuel tank

TIP

Do not set the fuel tank down on the installation surface of the fuel pump. Be sure to lean the fuel tank against a wall or the like.

EAM30264

REMOVING THE FUEL PUMP

1. Remove:
 - Fuel pump

ECA24720

NOTICE

Do not drop the fuel pump or give it a strong shock.

EAM30265

CHECKING THE FUEL PUMP BODY

1. Check:
 - Fuel pump body
 - Obstructions → Clean.
 - Cracks/damage → Replace the fuel pump assembly.

EAM30508

CHECKING THE FUEL PUMP OPERATION

1. Check:
 - Fuel pump operation
 - Refer to “CHECKING THE FUEL PRESSURE” on page 7-7.

EAM30266

INSTALLING THE FUEL PUMP

1. Install:
 - Fuel pump gasket **New**
 - Fuel pump
 - Fuel pump bracket






Fuel pump bolt
7 N·m (0.7 kgf·m, 5.2 lb·ft)

TIP

- Take care not to damage the installation surfaces of the fuel tank.
- Always use a new fuel pump gasket.
- Install the lip on the fuel pump gasket upward.

- Install the fuel pump as shown in the figure.
- Align the projection “a” on the fuel pump with the slot “b” in the fuel pump bracket.
- Tighten the fuel pump bolts in the proper tightening sequence as shown.

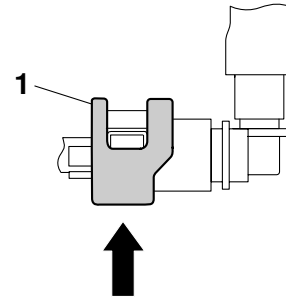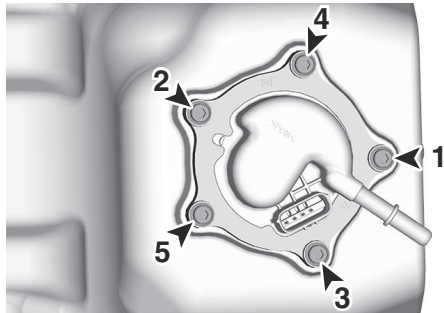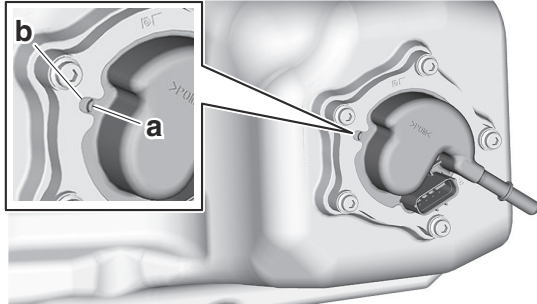

3. Connect:
 - Fuel pump coupler
4. Install:
 - Shroud (left/right)
 - Side cover (left/right)
 - Seat

Refer to “GENERAL CHASSIS” on page 4-1.

EAM30267

INSTALLING THE FUEL TANK

1. Install:
 - Fuel tank
2. Connect:
 - Fuel hose

ECA24740

NOTICE

- Connect the fuel hose securely, and check that the orientation of the installed fuel hose holder is correct.
- Take care not to kink or pinch the fuel hose.


TIP

- Insert the fuel hose into the fuel pipe securely until you hear a “click”.
- Slide the fuel hose connector cover “1” at the hose end in the direction of the arrow.

EAM20141

THROTTLE BODY


Removing the throttle body

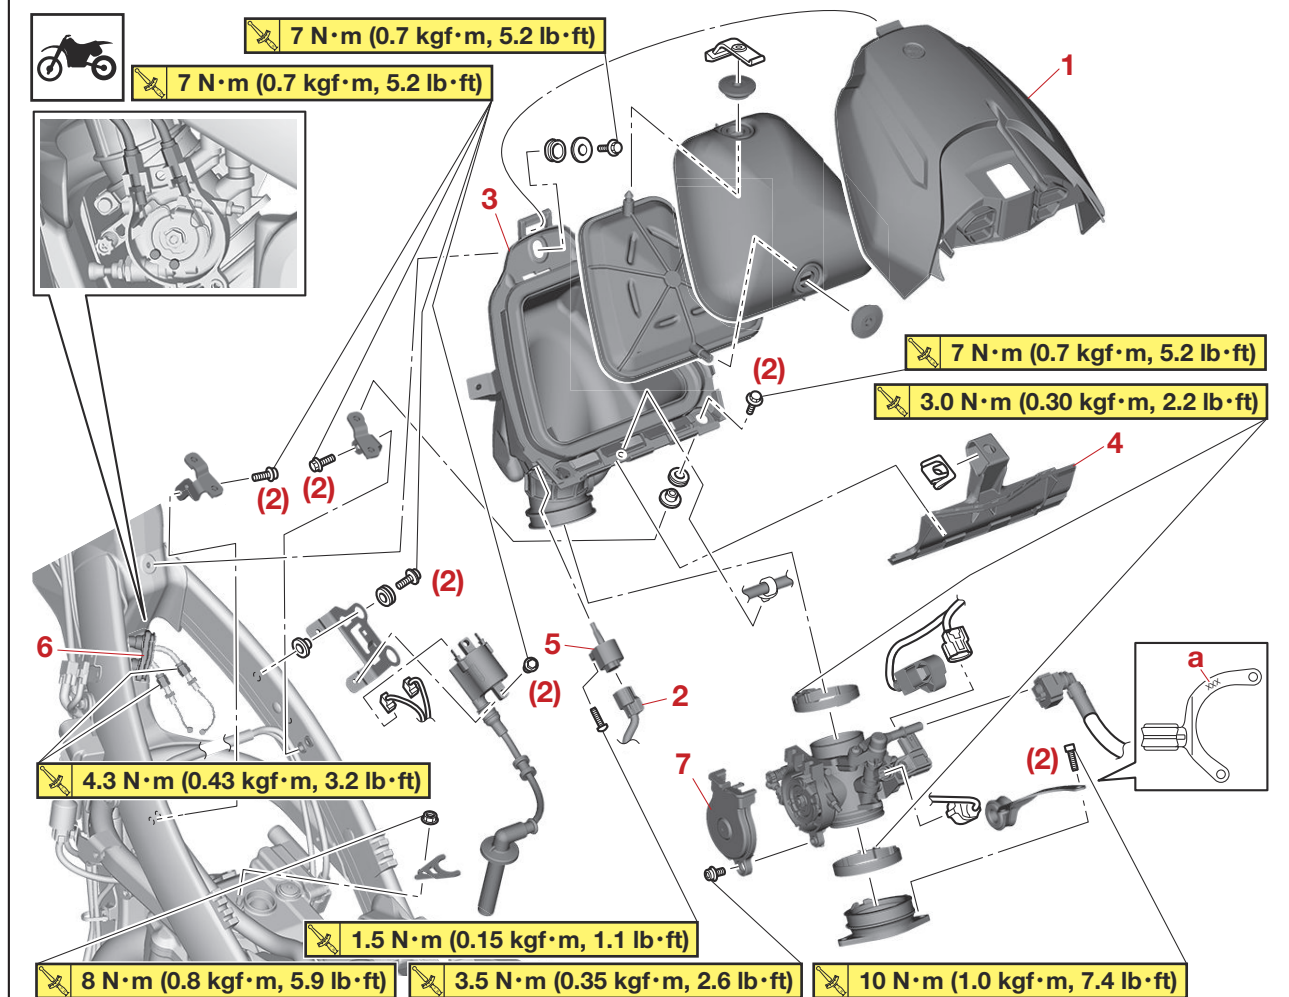

Order	Job/Parts to remove	Q'ty	Remarks
	Seat		Refer to "GENERAL CHASSIS" on page 4-1.
	Side cover (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Shroud (left/right)		Refer to "GENERAL CHASSIS" on page 4-1.
	Fuel tank		Refer to "FUEL TANK" on page 7-1.
1	Air filter case cover	1	
2	Intake air temperature sensor coupler	1	Disconnect.
3	Air filter case	1	
4	Air filter case assembly bracket	1	
5	Intake air temperature sensor	1	
6	Cover	1	
7	Throttle cable cover	1	


THROTTLE BODY

Removing the throttle body

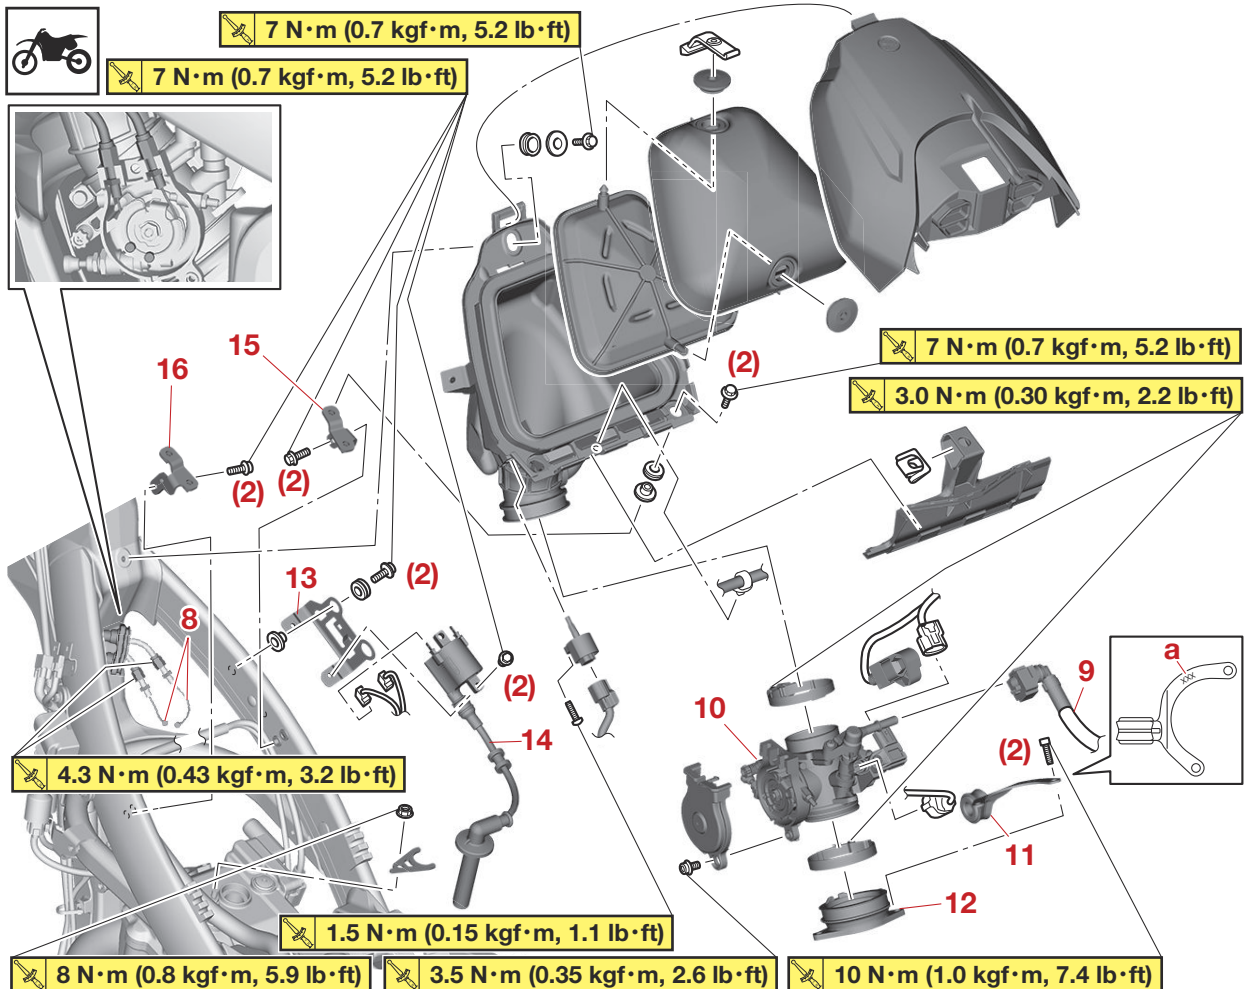

Order	Job/Parts to remove	Q'ty	Remarks
8	Throttle cable	2	
9	Fuel hose	1	
10	Throttle body	1	
11	Exhaust pipe bracket	1	Install so that the stamped "a" is on the right side of the vehicle.
12	Throttle body joint	1	
13	Ignition coil bracket	1	
14	Ignition coil	1	
15	Air filter case bracket (right)	1	
16	Air filter case bracket (left)	1	

Removing the injector

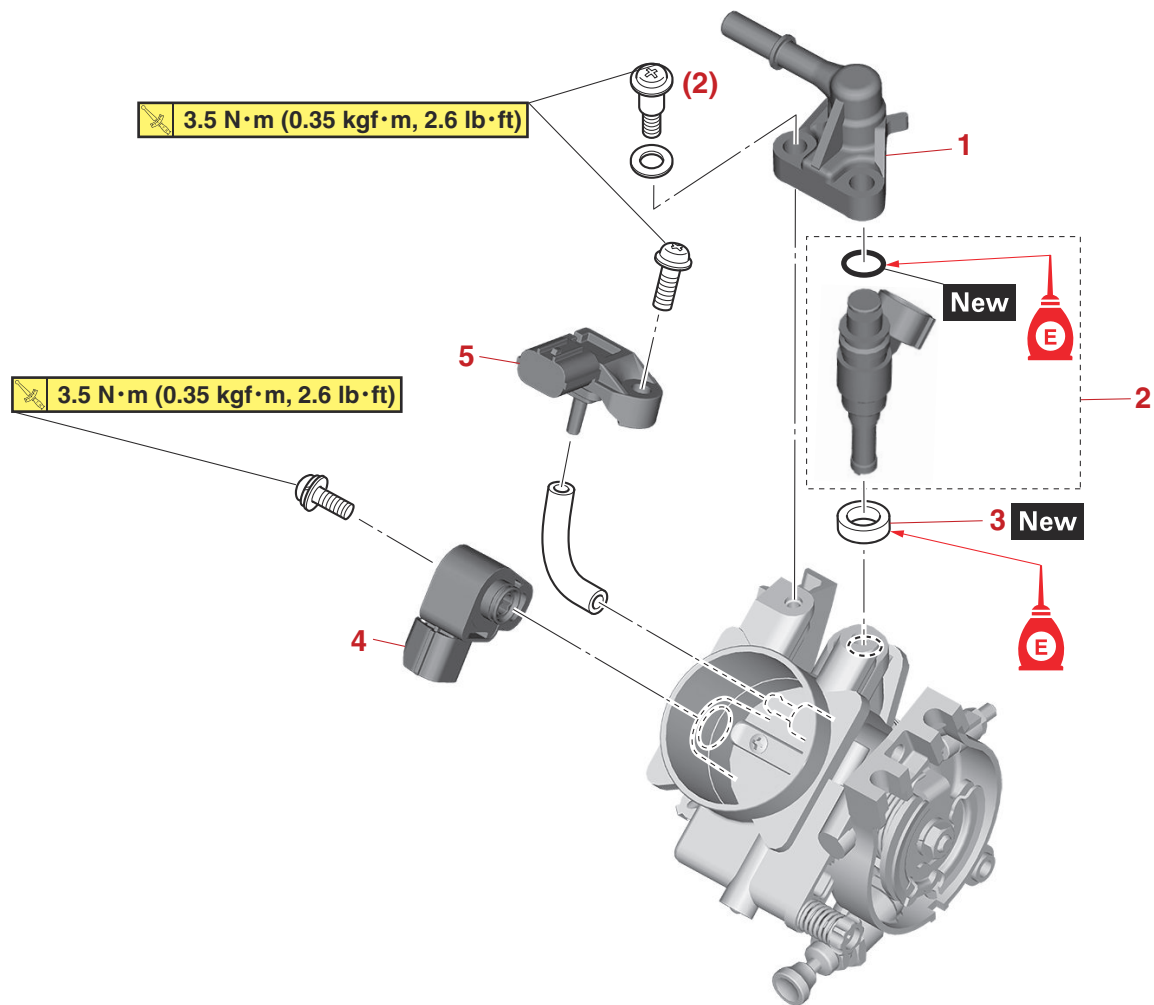

Order	Job/Parts to remove	Q'ty	Remarks
1	Fuel inlet pipe	1	
2	Injector	1	
3	Gasket	1	
4	Throttle position sensor	1	
5	Intake air pressure sensor	1	

EAM30271

CHECKING THE INJECTOR

1. Check:
 - Injector
 - Obstruction → Replace, and check the fuel pump and the fuel injection system.
 - Refer to “FUEL INJECTION SYSTEM” on page 8-15.
 - Deposits → Replace.
 - Damage → Replace.
2. Check:
 - Injector resistance
 - Refer to “CHECKING THE INJECTOR” on page 8-59.

EAM30272




CHECKING THE THROTTLE BODY

1. Check:
 - Throttle body
 - Cracks/damage → Replace.
2. Check:
 - Fuel passages
 - Obstructions → Clean.


ECA26070

NOTICE

- Before removing the throttle body, clean the area around the throttle body to prevent dirt and other foreign material from falling into the engine.
- If the throttle body is subject to strong shocks or dropped during cleaning, replace it.
- Do not use any caustic carburetor cleaning solution.
- Do not directly push the throttle valves to open them.
- Do not loosen the throttle valve stopper screw “1”, throttle valve pulley nut “2”, throttle valve screw “3” or starter knob nut “4”. A loss of performance may occur.
- Do not use compressed air to clean the throttle body. Foreign materials may adhere to the intake air pressure sensor passage “a” and fuel injector “b” in the throttle body.

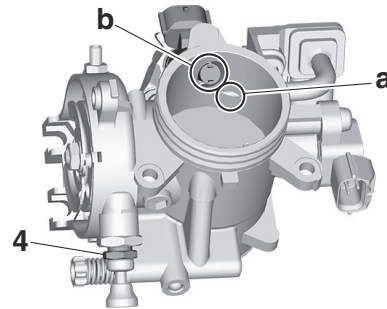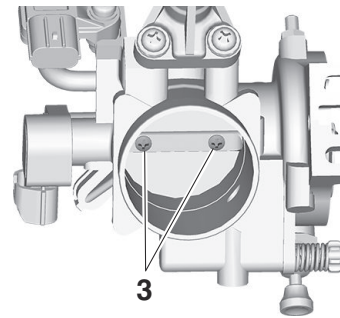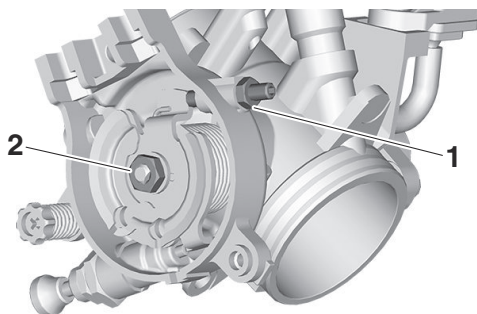

3. Check:
 - Idle screw “1” passage “a”
 - Obstruction → Blow out with compressed air.

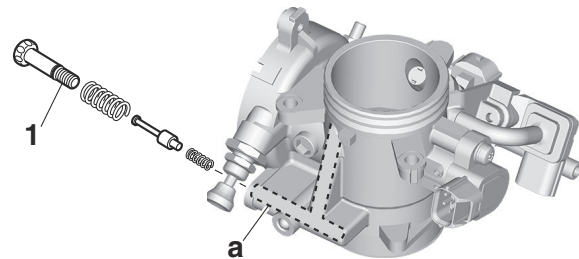

EAM30268

CHECKING THE FUEL PRESSURE

1. Check:
 - Fuel pressure
 - a. Remove the side cover (left/right), the seat and the shroud (left/right). Refer to “GENERAL CHASSIS” on page 4-1.
 - b. Remove the fuel tank bolt and lift the fuel tank.
 - c. Disconnect the fuel hose from the fuel pump. Refer to “REMOVING THE FUEL TANK” on page 7-2.

EWA19380

WARNING

Cover the fuel hose connection with a cloth when disconnecting it. This is because residual pressure in the fuel hose could cause fuel



to spurt out when the hose is removed.

ECA24750


NOTICE

Make sure that the fuel hose is disconnected by hand. Do not forcibly disconnect the hose with tools.

- d. Connect the pressure gauge “1” and the fuel pressure adapter “2” to the fuel hose.

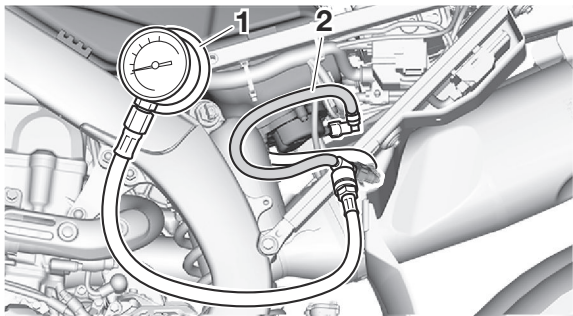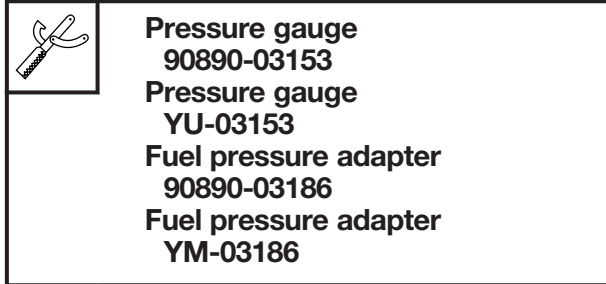

- e. Start the engine.
- f. Measure the fuel line pressure.
Out of specification → Replace the fuel pump.

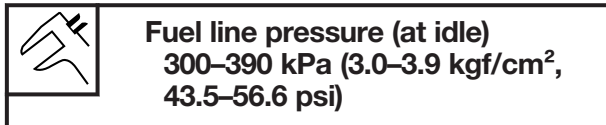

EAM30273

ADJUSTING THE THROTTLE POSITION SENSOR

EWA15950

WARNING

- Handle the throttle position sensor with special care.
- Never subject the throttle position sensor to strong shocks. If the throttle position sensor is dropped, replace it.

1. Check:
 - Throttle position sensor
Refer to “CHECKING THE THROTTLE POSITION SENSOR INPUT VOLTAGE” on page 8-58.
2. Adjust:
 - Throttle position sensor angle

- a. Connect the Yamaha diagnostic tool.
Refer to “YAMAHA DIAGNOSTIC TOOL” on page 8-21.




Yamaha diagnostic tool USB (US)
90890-03275
Yamaha diagnostic tool (A/I)
90890-03273

- b. Temporary tighten the throttle position sensor.
- c. Check that the throttle grip is fully closed.
- d. Connect the throttle position sensor to the wire harness.
- e. Set the Yamaha diagnostic tool to “diagnostic mode”.
- f. Choose the diagnostic code No. “01”.
- g. Adjust the throttle position sensor mounted angle until “11”–“14” appears on the Yamaha diagnostic tool.
- h. After adjusting the throttle position sensor mounted angle, tighten the throttle position sensor screw “1”.



Throttle position sensor screw
3.5 N·m (0.35 kgf·m, 2.6 lb·ft)

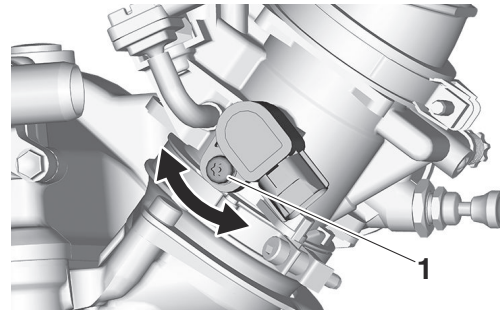


EAM30631

INSTALLING THE AIR FILTER CASE ASSEMBLY BRACKET

1. Install:
 - Air filter case assembly bracket “1”

TIP

Align the projections “a” on the air filter case assembly bracket with the grooves “b” in the air filter case “2”, and then push down the portion “c”.

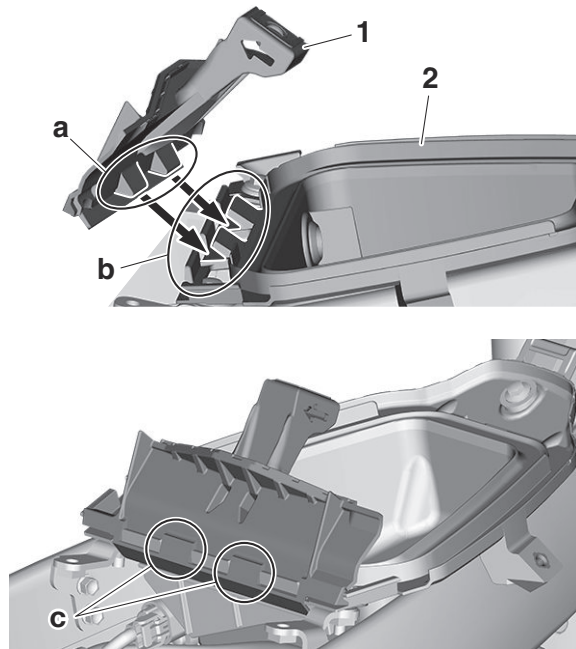


ELECTRICAL SYSTEM

IGNITION SYSTEM	8-1
CIRCUIT DIAGRAM.....	8-1
TROUBLESHOOTING.....	8-3
 ELECTRIC STARTING SYSTEM	8-7
CIRCUIT DIAGRAM.....	8-7
TROUBLESHOOTING.....	8-9
 CHARGING SYSTEM	8-11
CIRCUIT DIAGRAM.....	8-11
TROUBLESHOOTING.....	8-13
 FUEL INJECTION SYSTEM	8-15
ECU CIRCUIT DIAGRAM.....	8-15
ECU COUPLER LAYOUT.....	8-17
CIRCUIT DIAGRAM.....	8-19
CHECKING THE INDICATOR LIGHT.....	8-21
YAMAHA DIAGNOSTIC TOOL.....	8-21
TROUBLESHOOTING DETAILS (FAULT CODE).....	8-23
 FUEL PUMP SYSTEM	8-43
CIRCUIT DIAGRAM.....	8-43
TROUBLESHOOTING.....	8-45
 ELECTRICAL COMPONENTS	8-47
RELAY LOCATION CHART.....	8-49
CHECKING THE SWITCHES.....	8-50
CHECKING THE FUSES.....	8-52
CHECKING AND CHARGING THE BATTERY.....	8-52
REPLACING THE ECU (Engine Control Unit).....	8-54
CHECKING THE RELAYS.....	8-54
CHECKING THE IGNITION SPARK GAP.....	8-54
CHECKING THE SPARK PLUG CAP.....	8-55
CHECKING THE IGNITION COIL.....	8-55
CHECKING THE CRANKSHAFT POSITION SENSOR.....	8-56
CHECKING THE LEAN ANGLE SENSOR.....	8-56
CHECKING THE STARTER MOTOR OPERATION.....	8-56
CHECKING THE STATOR COIL.....	8-56
CHECKING THE RECTIFIER/REGULATOR.....	8-57
CHECKING THE COOLANT TEMPERATURE SENSOR.....	8-57
CHECKING THE THROTTLE POSITION SENSOR INPUT VOLTAGE.....	8-58
CHECKING THE INTAKE AIR TEMPERATURE SENSOR.....	8-58
CHECKING THE GEAR POSITION SWITCH.....	8-59
CHECKING THE INJECTOR.....	8-59

IGNITION SYSTEM

CIRCUIT DIAGRAM

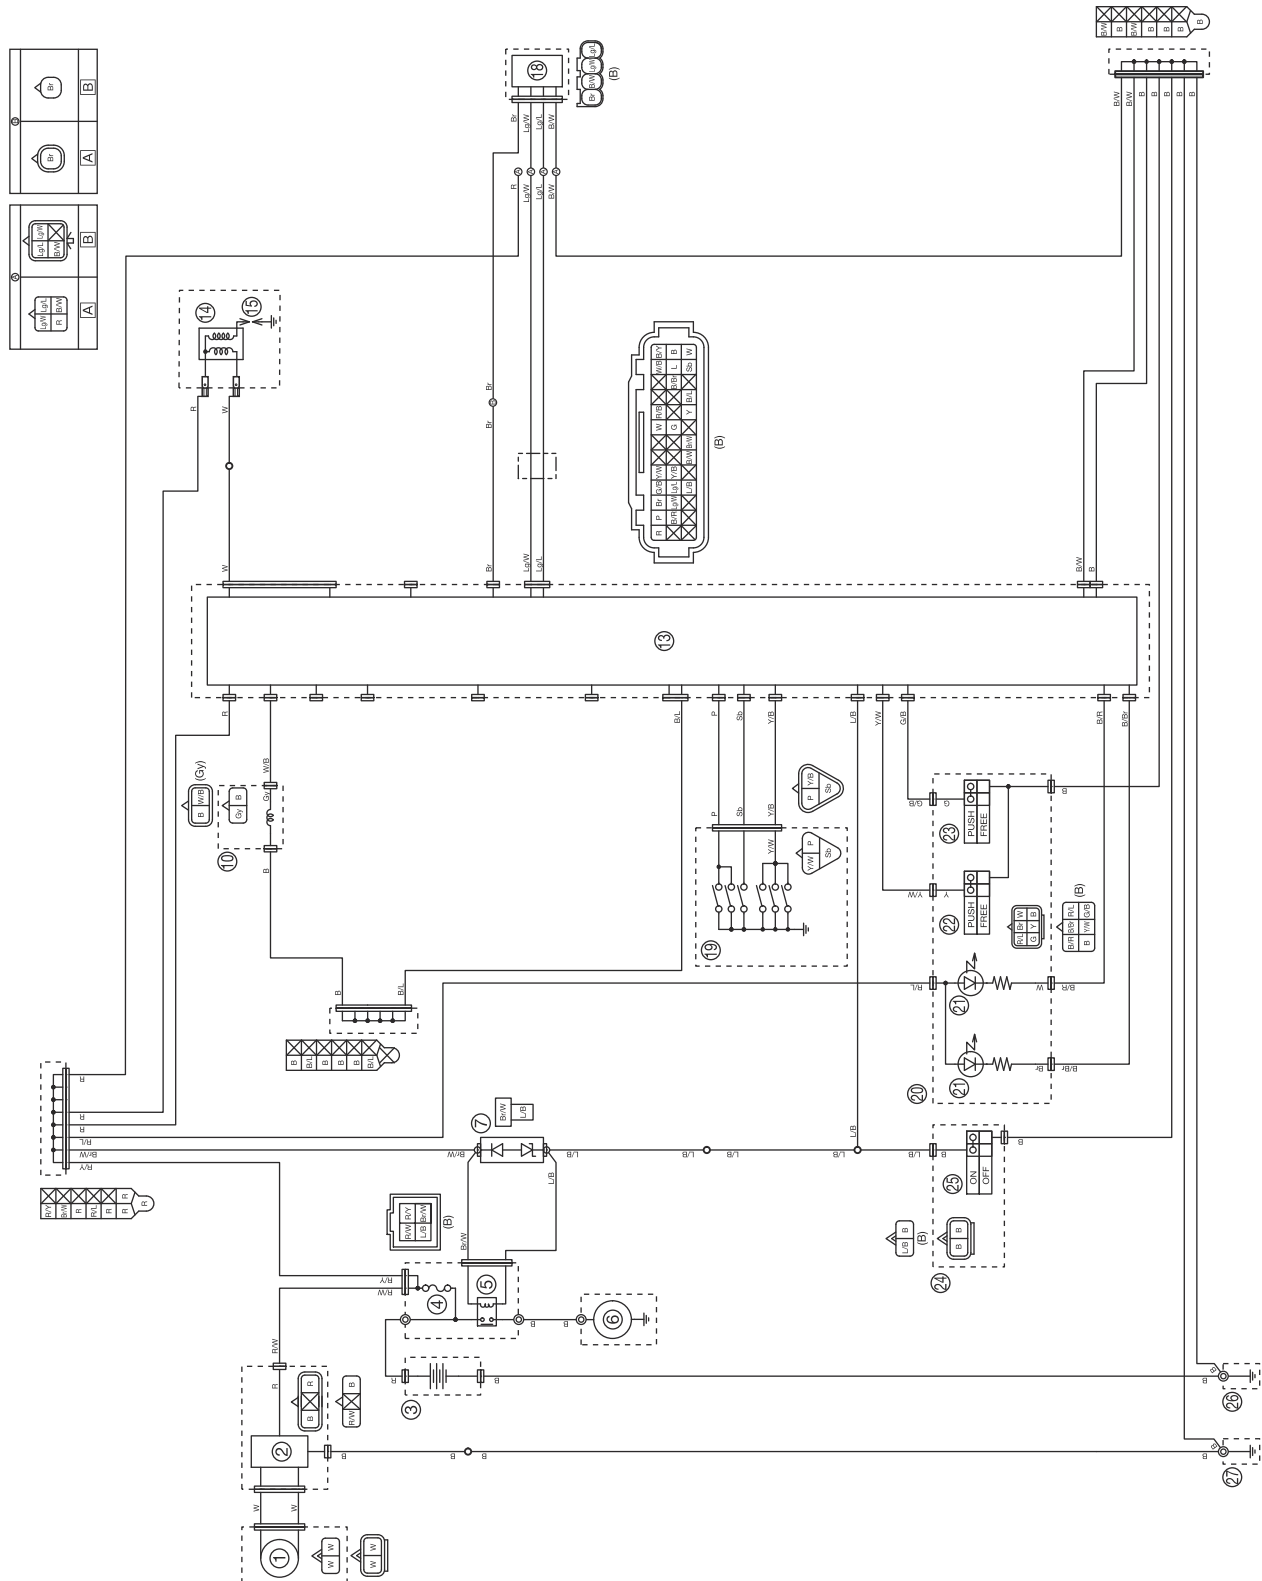

1. AC magneto
 2. Rectifier/regulator
 3. Battery
 4. Fuse
 5. Starter relay
 6. Starter motor
 7. Diode 1
 10. Crankshaft position sensor
 13. ECU (Engine Control Unit)
 14. Ignition coil
 15. Spark plug
 18. CCU (Communication Control Unit)
 19. Gear position switch
 20. Handlebar switch (left)
 21. Indicator light
 22. Multi-function button
 23. Engine stop switch
 24. Handlebar switch (right)
 25. Starter switch
 26. Frame ground
 27. Engine ground
- A. Wire harness
B. CCU sub-lead

EAM30278

TROUBLESHOOTING

The ignition system fails to operate (no spark or intermittent spark).

TIP

Before troubleshooting, remove the following part(s):

1. Seat
2. Side cover (left/right)
3. Shroud (left/right)
4. Fuel tank
5. Air filter case cover

1. Check the ignition system wire harness connections.	NG→	Reconnect.
OK↓		
2. Check the fuse(s). Refer to "CHECKING THE FUSES" on page 8-52.	NG→	Replace the fuse(s).
OK↓		
3. Check the battery. Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-52.	NG→	• Clean the battery terminals. • Recharge or replace the battery.
OK↓		
4. Check the spark plug. Refer to "CHECKING THE SPARK PLUG" on page 3-13.	NG→	Correct or replace the spark plug.
OK↓		
5. Check the ignition spark gap. Refer to "CHECKING THE IGNITION SPARK GAP" on page 8-54.	OK→	The ignition system circuit is OK.
NG↓		
6. Check the ignition coil. Refer to "CHECKING THE IGNITION COIL" on page 8-55.	NG→	Replace the ignition coil.
OK↓		
7. Check the engine stop switch. Refer to "CHECKING THE SWITCHES" on page 8-50.	NG→	Replace the handlebar switch (left).
OK↓		
8. Check the crankshaft position sensor. Refer to "CHECKING THE CRANKSHAFT POSITION SENSOR" on page 8-56.	NG→	Replace the crankshaft position sensor.
OK↓		

9. Check the stator coil assembly. Refer to "CHECKING THE STATOR COIL" on page 8-56.	NG→	Replace the stator coil assembly.
OK↓		
10. Check the ignition system wire harness. Refer to "CIRCUIT DIAGRAM" on page 8-1.	NG→	Repair or replace the wire harness.
OK↓		
Replace the ECU.		

The launch control system does not operate.

TIP

Before troubleshooting, remove the following part(s):

1. Seat
2. Side cover (left)
3. Shroud (left)

1. Check the handlebar switch coupler (left) connections.	NG→	Reconnect.
OK↓		
2. Check the gear position switch coupler connections.	NG→	Reconnect.
OK↓		
3. Check the multi-function button. Refer to "CHECKING THE SWITCHES" on page 8-50.	NG→	Replace the handlebar switch (left).
OK↓		
4. Check the gear position switch. Refer to "CHECKING THE GEAR POSITION SWITCH" on page 8-59.	NG→	Replace the gear position switch.
OK↓		
5. Check the ignition system wire harness. Refer to "CIRCUIT DIAGRAM" on page 8-1.	NG→	Repair or replace the wire harness.
OK↓		
Replace the ECU.		

The map change does not operate.

TIP

Before troubleshooting, remove the following part(s):

1. Seat
2. Side cover (left)
3. Shroud (left)

IGNITION SYSTEM


1. Check the handlebar switch coupler (left) connections.	NG→	Reconnect.
OK↓		
2. Check the handlebar switch (left). Refer to “CHECKING THE SWITCHES” on page 8-50.	NG→	Replace the handlebar switch (left).
OK↓		
3. Check the ignition system wire harness. Refer to “CIRCUIT DIAGRAM” on page 8-1.	NG→	Repair or replace the wire harness.
OK↓		
Replace the ECU.		

EAM20143

ELECTRIC STARTING SYSTEM

EAM30279

CIRCUIT DIAGRAM

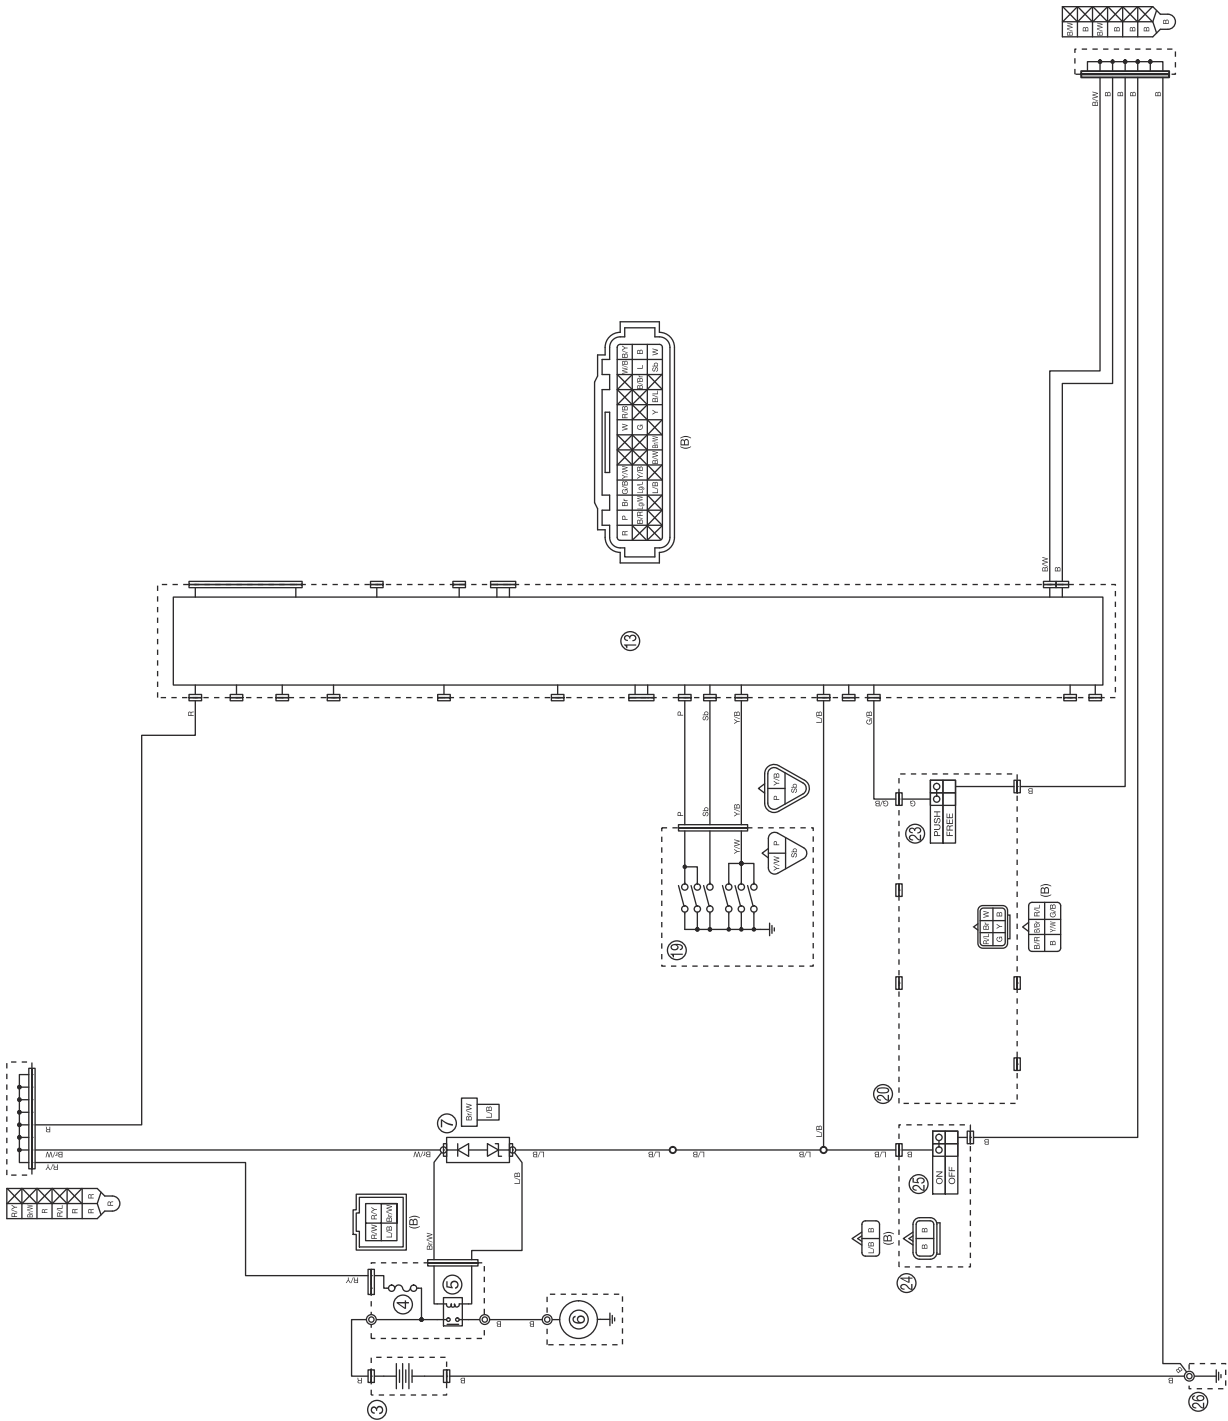

- 3. Battery
- 4. Fuse
- 5. Starter relay
- 6. Starter motor
- 7. Diode 1
- 13. ECU (Engine Control Unit)
- 19. Gear position switch
- 20. Handlebar switch (left)
- 23. Engine stop switch
- 24. Handlebar switch (right)
- 25. Starter switch
- 26. Frame ground

EAM30281

TROUBLESHOOTING

The starter motor fails to turn.

TIP

Before troubleshooting, remove the following part(s):

1. Seat
2. Side cover (left/right)
3. Shroud (left/right)
4. Fuel tank
5. Air filter case cover


1. Check the fuse. Refer to "CHECKING THE FUSES" on page 8-52.	NG→	Replace the fuse(s).
OK↓		
2. Check the battery. Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-52.	NG→	• Clean the battery terminals. • Recharge or replace the battery.
OK↓		
3. Check the starter motor operation. Refer to "CHECKING THE STARTER MOTOR OPERATION" on page 8-56.	OK→	Starter motor is OK. Perform the electric starting system troubleshooting, starting with step (5).
NG↓		
4. Check the starter motor. Refer to "CHECKING THE STARTER MOTOR" on page 5-44.	NG→	Repair or replace the starter motor.
OK↓		
5. Check the starter relay. Refer to "CHECKING THE RELAYS" on page 8-54.	NG→	Replace the starter relay.
OK↓		
6. Check the engine stop switch. Refer to "CHECKING THE SWITCHES" on page 8-50.	NG→	Replace the handlebar switch (left).
OK↓		
7. Check the starter switch. Refer to "CHECKING THE SWITCHES" on page 8-50.	NG→	Replace the starter switch.
OK↓		
8. Check the entire starting system's wiring. Refer to "CIRCUIT DIAGRAM" on page 8-7.	NG→	Properly connect or repair the starting system's wiring.
OK↓		
Replace the ECU.		

EAM20144

CHARGING SYSTEM

EAM30282

CIRCUIT DIAGRAM

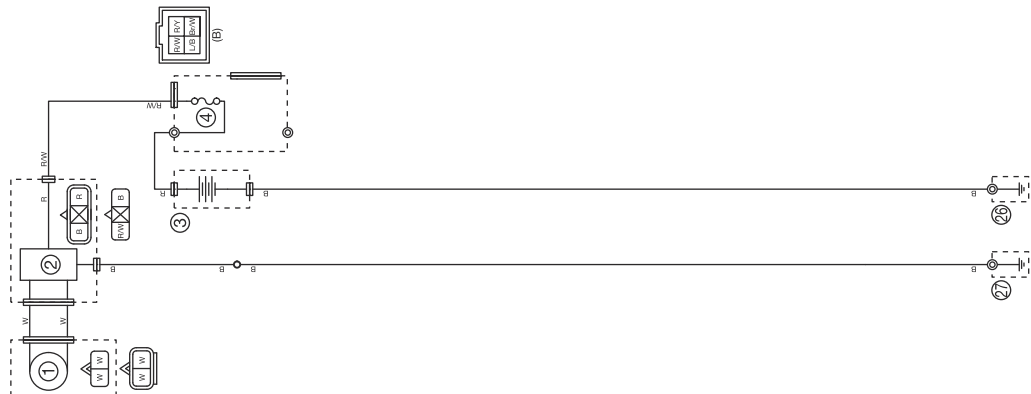

1. AC magneto
2. Rectifier/regulator
3. Battery
4. Fuse
26. Frame ground
27. Engine ground

EAM30283

TROUBLESHOOTING

The battery is not being charged.

TIP

Before troubleshooting, remove the following part(s):

1. Seat
2. Side cover (left)
3. Shroud (left)


1. Check the entire charging system's wiring.	NG →	Reconnect.
OK ↓		
2. Check the fuse. Refer to "CHECKING THE FUSES" on page 8-52.	NG →	Replace the fuse(s).
OK ↓		
3. Check the battery. Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-52.	NG →	• Clean the battery terminals. • Recharge or replace the battery.
OK ↓		
4. Check the rectifier/regulator. Refer to "CHECKING THE RECTIFIER/REGULATOR" on page 8-57.	NG →	Replace the rectifier/regulator.
OK ↓		
5. Check the stator coil assembly. Refer to "CHECKING THE STATOR COIL" on page 8-56.	NG →	Replace the stator coil assembly.
OK ↓		
6. Check the charging system wire harness. Refer to "CIRCUIT DIAGRAM" on page 8-11.	NG →	Repair or replace the wire harness.
OK ↓		
This circuit is OK.		

EAM20145

FUEL INJECTION SYSTEM

EAM30646


ECU CIRCUIT DIAGRAM

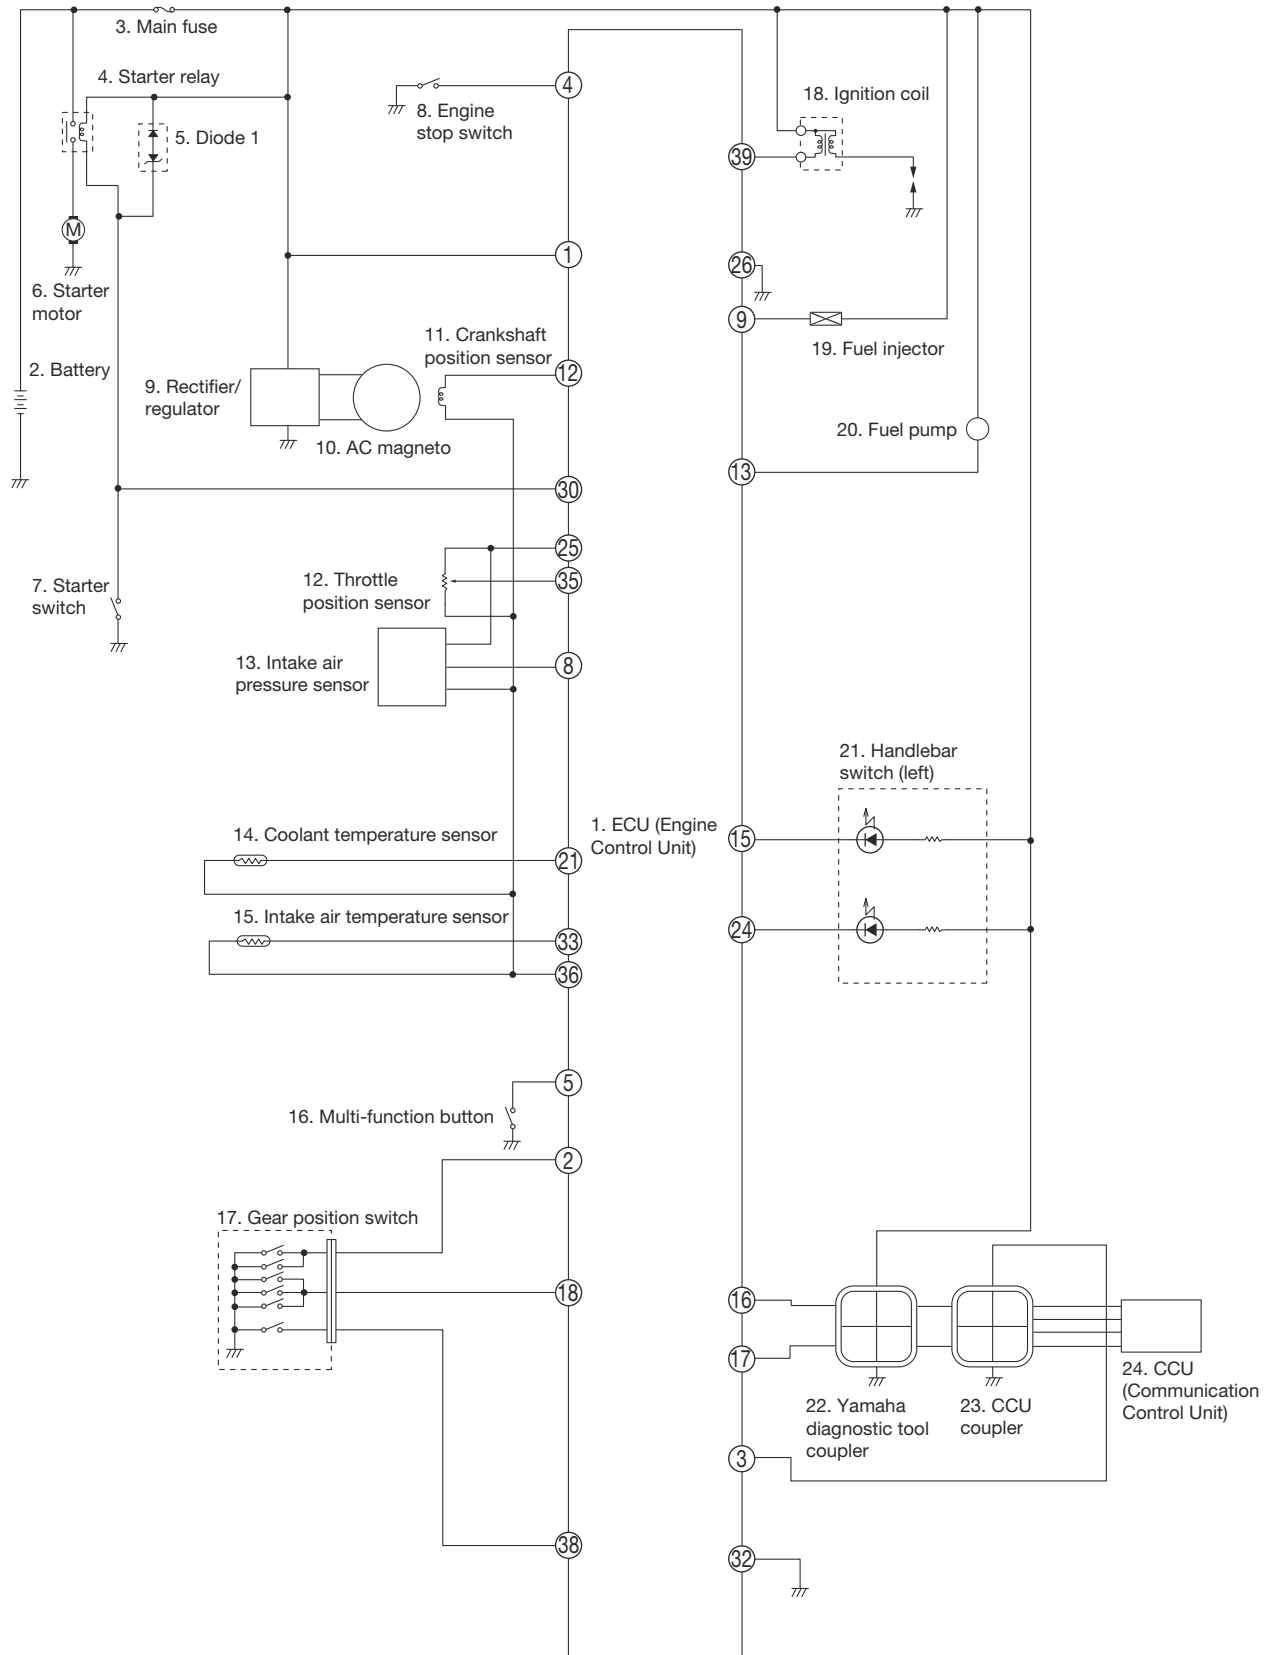

1. ECU (Engine Control Unit)
2. Battery
3. Main fuse
4. Starter relay
5. Diode 1
6. Starter motor
7. Starter switch
8. Engine stop switch
9. Rectifier/regulator
10. AC magneto
11. Crankshaft position sensor
12. Throttle position sensor
13. Intake air pressure sensor
14. Coolant temperature sensor
15. Intake air temperature sensor
16. Multi-function button
17. Gear position switch
18. Ignition coil
19. Fuel injector
20. Fuel pump
21. Handlebar switch (left)
22. Yamaha diagnostic tool coupler
23. CCU coupler
24. CCU (Communication Control Unit)

EAM30647

ECU COUPLER LAYOUT

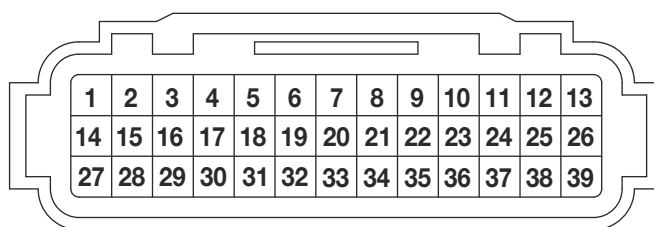


No.	Connected parts	Wire harness color
1	Starter relay, Main fuse	R
2	Gear position switch	P
3	CCU (Communication Control Unit)	Br
4	Engine stop switch	G/B
5	Multi-function button	Y/W
6	—	—
7	—	—
8	Intake air pressure sensor	W
9	Fuel injector	R/B
10	—	—
11	—	—
12	Crankshaft position sensor	W/B
13	Fuel pump	B/Y
14	—	—
15	Handlebar switch (left)	B/R
16	CCU (Communication Control Unit)	Lg/W
17	CCU (Communication Control Unit)	Lg/L
18	Gear position switch	Y/B
19	—	—
20	—	—
21	Coolant temperature sensor	G
22	—	—
23	—	—
24	Handlebar switch (left)	B/Br

No.	Connected parts	Wire harness color
25	Intake air pressure sensor, Throttle position sensor	L
26	Ground	B
27	—	—
28	—	—
29	—	—
30	Starter relay	L/B
31	—	—
32	Ground	B/W
33	Intake air temperature sensor	Br/W
34	—	—
35	Throttle position sensor	Y
36	Coolant temperature sensor, Crankshaft position sensor, Intake air pressure sensor, Intake air temperature sensor, Throttle position sensor	B/L
37	—	—
38	Gear position switch	Sb
39	Ignition coil	W

EAM30284

CIRCUIT DIAGRAM

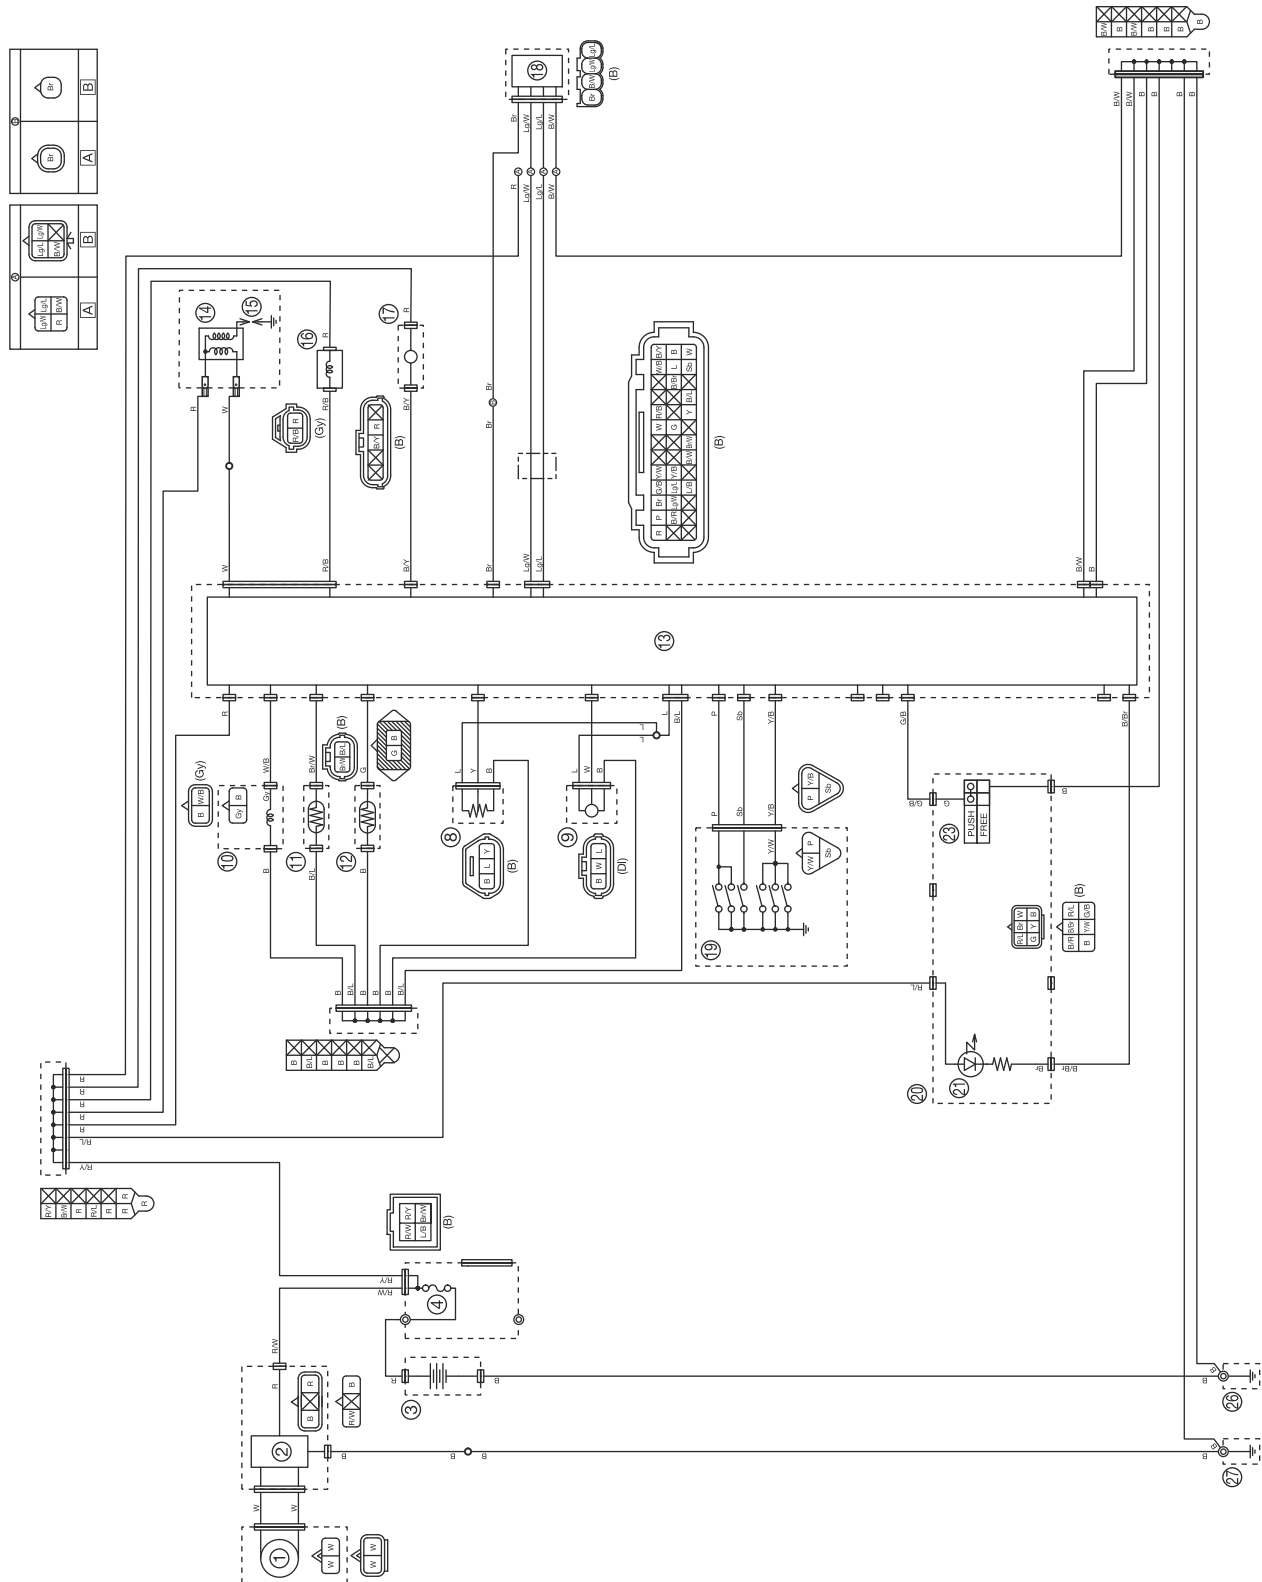

1. AC magneto
 2. Rectifier/regulator
 3. Battery
 4. Fuse
 8. Throttle position sensor
 9. Intake air pressure sensor
 10. Crankshaft position sensor
 11. Intake air temperature sensor
 12. Coolant temperature sensor
 13. ECU (Engine Control Unit)
 14. Ignition coil
 15. Spark plug
 16. Fuel injector
 17. Fuel pump
 18. CCU (Communication Control Unit)
 19. Gear position switch
 20. Handlebar switch (left)
 21. Indicator light
 23. Engine stop switch
 26. Frame ground
 27. Engine ground
- A. Wire harness
B. CCU sub-lead




EAM30645

CHECKING THE INDICATOR LIGHT

If the indicator light “1” blinks in orange, determine the fault code by using the Yamaha diagnostic tool. Check and repair the detected fault by referring to “TROUBLESHOOTING DETAILS (FAULT CODE)” on page 8-23.

TIP

- For connecting to the Yamaha diagnostic tool, refer to “Connecting the Yamaha diagnostic tool” on page 8-22.
- If the indicator light “1” on the handlebar switch (left) does not come on in orange when keeping the starter switch pressed after the ECU has shut down, the warning function to detect abnormalities of the handlebar switch (left) may be defective.
Refer to “BASIC SERVICE INFORMATION” on page 1-14 about how to shut down the ECU.
- The action of the fail-safe system varies depending on the orange blinking pattern of the indicator light.

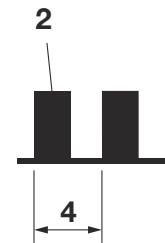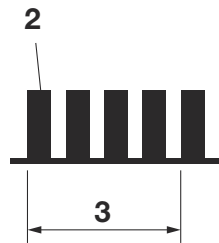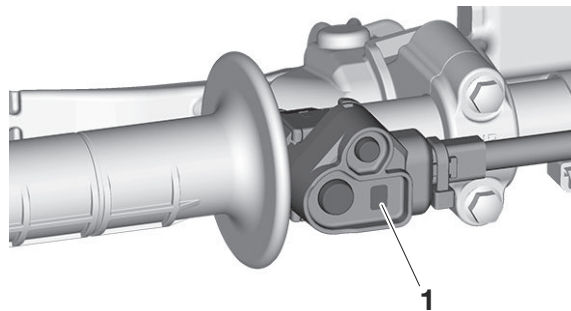

2. Orange
3. Approx. 1 second
4. 1 second

Blinking condition of the indicator light	Fail-safe system
Indicator light flashes orange fast	Unable to start engine Unable to cranking engine
Indicator light flashes orange slow	Able to drive vehicle

EAM30285

YAMAHA DIAGNOSTIC TOOL

This model uses the Yamaha diagnostic tool to identify malfunctions.


For information about using the Yamaha diagnostic tool, refer to the operation manual that is included with the tool.



Yamaha diagnostic tool USB (US)
90890-03275
Yamaha diagnostic tool (A/I)
90890-03273

Connecting the Yamaha diagnostic tool


1. Disconnect the CCU sub-lead coupler "1".

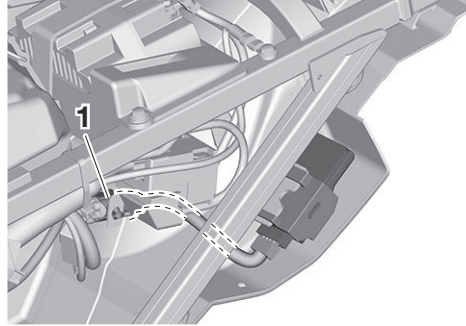

2. Connect the Yamaha diagnostic tool.

TIP

- Prepare the fully charged 12 V lead battery for yourself.
- Replace the vehicle battery with a lead battery (12 V).
- For information on how to connect and use the Yamaha diagnostic tool, refer to "YAMAHA DIAGNOSTIC TOOL OPERATION MANUAL".

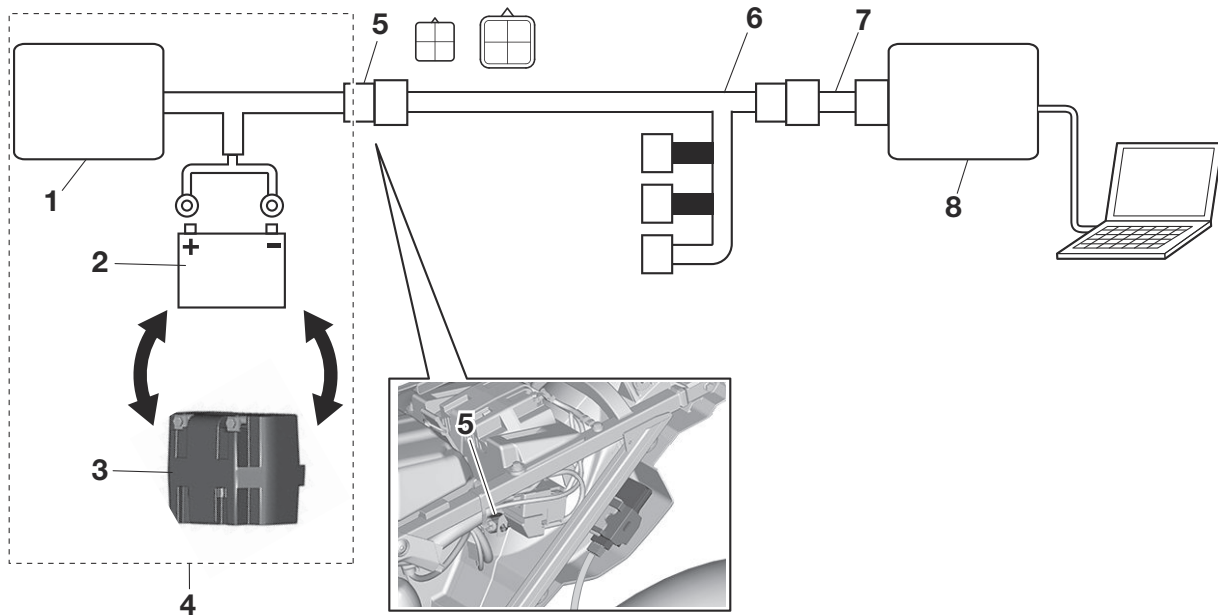

1. ECU (Engine Control Unit)
2. Lead battery (12 V)
3. Vehicle battery
4. Vehicle
5. Yamaha diagnostic tool coupler
6. Sub-harness (included with the Yamaha diagnostic tool)
7. Vehicle communication cable (included with the Yamaha diagnostic tool)
8. Yamaha diagnostic tool

EAM30286

TROUBLESHOOTING DETAILS (FAULT CODE)

This section describes the measures per fault code number displayed on the Yamaha diagnostic tool. Check and service the items or components that are the probable cause of the malfunction following the order given.

After the check and service of the malfunctioning part have been completed, delete the fault codes displayed on the Yamaha diagnostic tool according to the reinstatement method.

Fault code No.:

Fault code number displayed on the Yamaha diagnostic tool when the engine failed to work normally.

Diagnostic code No.:

Diagnostic code number to be used when the diagnostic mode is operated. Refer to “DIAGNOSTIC CODE: SENSOR OPERATION TABLE” on page 9-13.

Parts connected to the ECU

The following parts are connected to the ECU.

When checking for a power short circuit, the couplers must be disconnected from all of the following parts beforehand.

- Crankshaft position sensor
- Fuel injector
- Ignition coil
- Throttle position sensor
- Intake air pressure sensor
- Coolant temperature sensor
- Intake air temperature sensor

Fault code No. 8

Fault code No.		8	
Item		Gear position switch: open or short circuit detected.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		25	
Diagnostic tool display		Displays the gear position. • N (gear in neutral) • 1 (gear in 1st or 2nd) • 3 (gear in other than 1st or 2nd)	
Procedure		—	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of gear position switch coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), change the gear position from neutral position to 1st → 2nd → ... → 5th position. (When doing so, be sure to hold each position for 10 seconds or more.) And then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 2.

FUEL INJECTION SYSTEM

Fault code No.		8	
Item		Gear position switch: open or short circuit detected.	
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), change the gear position from neutral position to 1st → 2nd → ... → 5th position. (When doing so, be sure to hold each position for 10 seconds or more.) And then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 3.
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between gear position switch coupler and ECU coupler. pink-pink sky blue-sky blue yellow/black-yellow/black	Starter switch to ON (no need to start the engine), change the gear position from neutral position to 1st → 2nd → ... → 5th position. (When doing so, be sure to hold each position for 10 seconds or more.) And then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 4.
4	Mounted condition of gear position switch. Check for looseness or pinching.	Improperly mounted switch → Remount or replace the switch. Refer to "ENGINE REMOVAL" on page 5-3.	Starter switch to ON (no need to start the engine), change the gear position from neutral position to 1st → 2nd → ... → 5th position. (When doing so, be sure to hold each position for 10 seconds or more.) And then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 5.
5	Defective gear position switch.	Execute the diagnostic mode. (Code No. 25) The values are indicated according to the gear position. Gear in neutral: N Gear in 1st or 2nd: 1 Gear in other than 1st or 2nd: 3 Abnormal display → Gear position switch is defective → Replace the gear position switch.	Starter switch to ON (no need to start the engine), change the gear position from neutral position to 1st → 2nd → ... → 5th position. (When doing so, be sure to hold each position for 10 seconds or more.) And then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 6.
6	Faulty ECU.	Replace the ECU.	Service is finished.

FUEL INJECTION SYSTEM

Fault code No.		8	
Item		Gear position switch: open or short circuit detected.	
7	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 12

Fault code No.		12	
Item		Crankshaft position sensor: no normal signals are received from the crankshaft position sensor.	
Fail-safe system		Unable to start engine	
		Unable to drive vehicle	
Diagnostic code No.		—	
Diagnostic tool display		—	
Procedure		—	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of crankshaft position sensor coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Crank the engine 2 seconds or more, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 2.
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Crank the engine 2 seconds or more, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 3.
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between crankshaft position sensor coupler and ECU coupler. white/black–white/black Between crankshaft position sensor coupler and ECU coupler. black–black/blue	Crank the engine 2 seconds or more, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 4.
4	Mounted condition of crankshaft position sensor. Check for looseness or pinching. Check the gap (0.85 mm (0.0335 in)) between the crankshaft position sensor and the pickup rotor.	Improperly mounted sensor → Remount or replace the sensor. Refer to "GENERATOR" on page 5-37.	Crank the engine 2 seconds or more, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 5.

FUEL INJECTION SYSTEM

Fault code No.		12	
Item		Crankshaft position sensor: no normal signals are received from the crankshaft position sensor.	
5	Defective crankshaft position sensor.	Check the crankshaft position sensor. Refer to "CHECKING THE CRANKSHAFT POSITION SENSOR" on page 8-56.	Crank the engine 2 seconds or more, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 6.
6	Faulty ECU.	Replace the ECU.	Service is finished.
7	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 13

TIP

- If fault code numbers 13 and 14 are both displayed, perform checkup and repair jobs for fault code number 13 first.
- Before troubleshooting, disconnect the starter motor lead from the starter relay.

Fault code No.		13	
Item		Intake air pressure sensor: open or short circuit detected.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		03	
Diagnostic tool display		Displays the intake air pressure.	
Procedure		The atmospheric pressure is displayed on the Yamaha diagnostic tool.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of intake air pressure sensor coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 2.
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 3.

FUEL INJECTION SYSTEM

Fault code No.		13	
Item		Intake air pressure sensor: open or short circuit detected.	
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between intake air pressure sensor coupler and ECU coupler. white–white blue–blue Between intake air pressure sensor coupler and ECU coupler. black–black/blue	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 4.
4	Mounted condition of intake air pressure sensor. Check for looseness or pinching. Check the mounted position for correctness.	Improperly mounted sensor → Remount or replace the sensor.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 5.
5	Defective intake air pressure sensor.	Execute the diagnostic mode. (Code No. 03) Proper display: Atmospheric pressure at the current altitude and weather conditions is indicated while engine stopping. 0 m above sea level: About 101 kPa (about 3.63 V) 1000 m above sea level: About 90 kPa (about 3.30 V) 2000 m above sea level: About 80 kPa (about 3.00 V) 3000 m above sea level: About 70 kPa (about 2.70 V) Abnormal display → Intake air pressure sensor is defective → Replace the intake air pressure sensor.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 6.
6	Faulty ECU.	Replace the ECU.	Service is finished.
7	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 14

TIP

If fault code numbers 13 and 14 are both displayed, perform checkup and repair jobs for fault code number 13 first.

Fault code No.		14	
Item		Intake air pressure sensor: hose system malfunction (clogged or detached hose).	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		03	

FUEL INJECTION SYSTEM

Fault code No.		14	
Item		Intake air pressure sensor: hose system malfunction (clogged or detached hose).	
Diagnostic tool display		Displays the intake air pressure.	
Procedure		The atmospheric pressure is displayed on the Yamaha diagnostic tool.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	The intake air pressure sensor hose is damaged, disconnected, clogged, twisted or bent.	Repair or replace the sensor hose.	Start the engine and let it idle for approximately 5 seconds (fully close the throttle valve). Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 3 and finish the service. Condition is "Detected" → Go to item 2.
2	Defective intake air pressure sensor.	Execute the diagnostic mode. (Code No. 03) Proper display: Atmospheric pressure at the current altitude and weather conditions is indicated while engine stopping. 0 m above sea level: About 101 kPa (about 3.63 V) 1000 m above sea level: About 90 kPa (about 3.30 V) 2000 m above sea level: About 80 kPa (about 3.00 V) 3000 m above sea level: About 70 kPa (about 2.70 V) Value does not change during cranking → Intake air pressure sensor replacement.	Start the engine and let it idle for approximately 5 seconds (fully close the throttle valve). Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 3 and finish the service.
3	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 15

TIP

Before troubleshooting, disconnect the starter motor lead from the starter relay.

Fault code No.		15	
Item		Throttle position sensor: open or short circuit detected.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		01	
Diagnostic tool display		Displays the throttle angle. • 11–14 (throttle in fully closed position) • 86–92 (throttle in fully opened position)	
Procedure		• Check with throttle fully closed. • Check with throttle fully opened.	

FUEL INJECTION SYSTEM

Fault code No.		15	
Item		Throttle position sensor: open or short circuit detected.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of throttle position sensor coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 8 and finish the service. Condition is "Detected" → Go to item 2.
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 8 and finish the service. Condition is "Detected" → Go to item 3.
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between throttle position sensor coupler and ECU coupler. yellow–yellow blue–blue Between throttle position sensor coupler and ECU coupler. black–black/blue	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 8 and finish the service. Condition is "Detected" → Go to item 4.
4	Mounted condition of throttle position sensor. Check for looseness or pinching. Check the mounted position for correctness.	Improperly mounted sensor → Remount or replace the sensor. Refer to "ADJUSTING THE THROTTLE POSITION SENSOR" on page 7-8.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 8 and finish the service. Condition is "Detected" → Go to item 5.
5	Applied voltage of throttle position sensor lead.	Check the applied voltage. (black–blue)	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 8 and finish the service. Condition is "Detected" → Go to item 6.
		Location of disconnected lead	
		Disconnected ground lead	
		Disconnected output lead	
		Disconnected power supply lead	

FUEL INJECTION SYSTEM

Fault code No.		15	
Item		Throttle position sensor: open or short circuit detected.	
6	Defective throttle position sensor.	Execute the diagnostic mode. (Code No. 01) Correct display range: When the throttle is fully closed, 11–14 displays. When the throttle is fully opened, 86–92 displays. Incorrect display range → Replace the throttle position sensor.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 8 and finish the service. Condition is “Detected” → Go to item 7.
7	Faulty ECU.	Replace the ECU.	Service is finished.
8	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 16

TIP

- If fault code numbers 15 and 16 are both displayed, perform checkup and repair jobs for fault code number 15 first.
- Before troubleshooting, disconnect the starter motor lead from the starter relay.

Fault code No.		16	
Item		Throttle position sensor: stuck throttle position sensor is detected.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		01	
Diagnostic tool display		Displays the throttle angle. • 11–14 (throttle in fully closed position) • 86–92 (throttle in fully opened position)	
Procedure		• Check with throttle fully closed. • Check with throttle fully opened.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Mounted condition of throttle position sensor. Check for looseness or pinching. Check the mounted condition for correctness.	Improperly mounted sensor → Remount or replace the sensor. Refer to “ADJUSTING THE THROTTLE POSITION SENSOR” on page 7-8.	Starter switch to ON (no need to start the engine), and open and close the throttle several times. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 4 and finish the service. Condition is “Detected” → Go to item 2.

FUEL INJECTION SYSTEM

Fault code No.		16	
Item		Throttle position sensor: stuck throttle position sensor is detected.	
2	Defective throttle position sensor.	Execute the diagnostic mode. (Code No. 01) Correct display range: When the throttle is fully closed, 11–14 displays. When the throttle is fully opened, 86–92 displays. Incorrect display range → Replace the throttle position sensor.	Starter switch to ON (no need to start the engine), and open and close the throttle several times. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 4 and finish the service. Condition is “Detected” → Go to item 3.
3	Faulty ECU.	Replace the ECU.	Service is finished.
4	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 21

TIP

- Make sure that the machine is completely cold before checking the coolant temperature sensor.
- Before troubleshooting, disconnect the starter motor lead from the starter relay.

Fault code No.		21	
Item		Coolant temperature sensor: open or short circuit detected.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		06	
Diagnostic tool display		Displays the coolant temperature.	
Procedure		Compare the actually measured coolant temperature with the Yamaha diagnostic tool display value.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of coolant temperature sensor coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 2.
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 3.

FUEL INJECTION SYSTEM

Fault code No.		21	
Item		Coolant temperature sensor: open or short circuit detected.	
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between coolant temperature sensor coupler and ECU coupler. green–green Between coolant temperature sensor coupler and ECU coupler. black–black/blue	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 4.
4	Mounted condition of coolant temperature sensor. Check for looseness or pinching. Check the mounted position for correctness.	Improperly mounted sensor → Remount or replace the sensor.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 5.
5	Defective coolant temperature sensor.	Execute the diagnostic mode. (Code No. 06) Proper display: When the machine is cold, displayed temperature is close to the ambient temperature. Improper display → Replace the coolant temperature sensor. Refer to “RADIATOR” on page 6-3.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 6.
6	Faulty ECU.	Replace the ECU.	Service is finished.
7	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 22

TIP

- Make sure that the machine is completely cold before checking the intake air temperature sensor.
- Before troubleshooting, disconnect the starter motor lead from the starter relay.

Fault code No.		22	
Item		Intake air temperature sensor: open or short circuit detected.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		05	
Diagnostic tool display		Displays the intake air temperature.	
Procedure		Compare the actually measured intake air temperature with the Yamaha diagnostic tool display value.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion

FUEL INJECTION SYSTEM

Fault code No.		22	
Item		Intake air temperature sensor: open or short circuit detected.	
1	Connection of intake air temperature sensor coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 2.
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 3.
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between intake air temperature sensor coupler and ECU coupler. brown/white–brown/white Between intake air temperature sensor coupler and ECU coupler. black/blue–black/blue	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 4.
4	Mounted condition of intake air temperature sensor. Check for looseness or pinching. Check the mounted position for correctness.	Improperly mounted sensor → Remount or replace the sensor.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 5.
5	Defective intake air temperature sensor.	Execute the diagnostic mode. (Code No. 05) Proper display: When the machine is cold, displayed temperature is close to the ambient temperature. Improper display → Replace the intake air temperature sensor.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 6.
6	Faulty ECU.	Replace the ECU.	Service is finished.
7	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 30

TIP

- If fault code numbers 8, 15, 16, and 30 are displayed, perform checkup and repair jobs for fault code number 8, 15, or 16 first.
- Before troubleshooting, disconnect the starter motor lead from the starter relay.

FUEL INJECTION SYSTEM

Fault code No.	30		
Item	The vehicle has overturned.		
Fail-safe system	Unable to start engine		
	Unable to drive vehicle		
Diagnostic code No.	08		
Diagnostic tool display	Displays the lean angle sensor output voltage. • 0.4–1.4 (V) (upright) • 3.7–4.4 (V) (overturned)		
Procedure	Remove the ECU, and incline it 45° or more.		
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	The vehicle has overturned.	Raise the vehicle upright.	Stand the vehicle upright, starter switch to ON (no need to start the engine), wait 10 seconds, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 4 and finish the service. Condition is “Detected” → Go to item 2.
2	Mounted condition of ECU. Check for mounted position and angle. Check the mounted condition for correctness.	Improperly mounted ECU → Re-mount the ECU.	Stand the vehicle upright, starter switch to ON (no need to start the engine), wait 10 seconds, and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 4 and finish the service. Condition is “Detected” → Go to item 3.
3	Faulty ECU.	Execute the diagnostic mode. (Code No. 08) Proper display: When the vehicle is upright: 0.4–1.4 (V) When the vehicle is overturned: 3.7–4.4 (V) Improper display → Replace the ECU.	Service is finished.
4	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 33

Fault code No.	33
Item	Ignition coil: open or short circuit detected in the primary lead of the ignition coil.
Fail-safe system	Unable to start engine
	Unable to drive vehicle

FUEL INJECTION SYSTEM

Fault code No.		33	
Item		Ignition coil: open or short circuit detected in the primary lead of the ignition coil.	
Diagnostic code No.		30	
Actuation		Actuates the ignition coil five times at one-second intervals. “WARNING” on the Yamaha diagnostic tool blinks five times when the ignition coil is actuated.	
Procedure		Check that a spark is generated five times. • Connect an ignition checker.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of ignition coil coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 2.
2	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 3.
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between ignition coil coupler and ECU coupler. white–white Between ignition coil coupler and ECU coupler. red–red Between ignition coil coupler and starter relay coupler. red–red/yellow Between starter relay and battery terminal. red–red	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 4.
4	Mounted condition of ignition coil. Check for looseness or pinching. Check the mounted condition for correctness.	Improperly mounted sensor → Remount or replace the ignition coil.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 7 and finish the service. Condition is “Detected” → Go to item 5.

FUEL INJECTION SYSTEM

Fault code No.		33	
Item		Ignition coil: open or short circuit detected in the primary lead of the ignition coil.	
5	Defective ignition coil. (test the primary coils for continuity)	Check the primary resistance of the ignition coil. Refer to "CHECKING THE IGNITION COIL" on page 8-55.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 7 and finish the service. Condition is "Detected" → Go to item 6.
6	Faulty ECU.	Execute the diagnostic mode. (Code No. 30) No spark → Replace the ECU.	Service is finished.
7	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 39

Fault code No.		39	
Item		Injector: open or short circuit detected.	
Fail-safe system		Unable to start engine	
		Unable to drive vehicle	
Diagnostic code No.		36	
Actuation		Actuates injector five times at one-second intervals. "WARNING" on the Yamaha diagnostic tool blinks five times when the injector is actuated.	
Procedure		Before performing this operation, be sure to disconnect the fuel pump coupler. Check that injector is actuated five times by listening for the operating sound.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of injector coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 2.

FUEL INJECTION SYSTEM

Fault code No.		39	
Item		Injector: open or short circuit detected.	
2	Defective injector.	Check the injector. Refer to "CHECKING THE INJECTOR" on page 8-59.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 3.
3	Connection of wire harness ECU coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (for bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 4.
4	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between injector coupler and ECU coupler. red/black-red/black Between injector coupler and starter relay coupler. red-red/yellow Between starter relay and battery terminal. red-red	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 5.
5	Faulty ECU.	Replace the ECU.	Service is finished.
6	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 41

Fault code No.		41	
Item		ECU: built-in lean angle sensor malfunction.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		08	
Diagnostic tool display		Displays the lean angle sensor output voltage. • 0.4–1.4 (V) (upright) • 3.7–4.4 (V) (overturned)	
Procedure		Remove the ECU, and incline it 45° or more.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Faulty ECU.	Replace the ECU.	Service is finished.

Fault code No. 43

Fault code No.		43	
Item		Fuel system voltage: incorrect voltage supplied to the CCU, and incorrect recognition voltage of the motorcycle.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		09	
Diagnostic tool display		Fuel system voltage Approximately 12.0 (V)	
Procedure		Disconnect the starter relay, and push the starter switch.	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Wire harness and CCU sub-lead continuity.	Open or short circuit → Replace the wire harness or CCU sub-lead. Between battery terminal and starter relay. red–red Between starter relay coupler and ECU coupler. red/yellow–red Between ECU coupler and CCU sub-lead coupler (wire harness). brown–brown Between CCU sub-lead coupler (sub-lead side) and CCU coupler. brown–brown	Press the engine stop switch for 1 second or more, and then press the starter switch (no need to start the engine). Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 4 and finish the service. Condition is “Detected” → Go to item 2.
2	Malfunction in CCU.	Replace the CCU.	Press the engine stop switch for 1 second or more, and then press the starter switch (no need to start the engine). Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 4 and finish the service. Condition is “Detected” → Go to item 3.
3	Malfunction in ECU.	Replace the ECU.	Service is finished.
4	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 44

TIP

Before troubleshooting, disconnect the starter motor lead from the starter relay.

FUEL INJECTION SYSTEM

Fault code No.		44	
Item		EEPROM read error: an error is detected while reading or writing on EEPROM.	
Fail-safe system		Able to start engine	
		Able to drive vehicle	
Diagnostic code No.		60	
Diagnostic tool display		Displays the location of the abnormal portion of the EEPROM data. • 00: No fault • 01: CO adjustment value • 07: Power Tuner injection correction setting 0–8, or Power Tuner ignition timing correction setting 0–8 • 12: Throttle position when fully closed	
Procedure		—	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Identification of malfunctioning point.	Execute the diagnostic mode. (Code No. 60) 00: Go to item 5. 01: Go to item 2. 07: Go to item 3. 12: Go to item 4.	
2	“01” is indicated in diagnostic mode. (Code No. 60) EEPROM read error for adjustment of CO concentration.	Change the CO concentration, and rewrite in EEPROM. After this adjustment, push the engine stop switch, and then push the starter switch.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 6 and finish the service. Condition is “Detected” → Repeat item 1. If the same number is indicated, go to item 5.
3	“07” is indicated in diagnostic mode. (Code No. 60) EEPROM read error for setting tool adjustment values for fuel injection amount or ignition timing.	Erase the setting map in the diagnostic mode. (Code No. 65)	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 6 and finish the service. Condition is “Detected” → Repeat item 1. If the same number is indicated, go to item 5.
4	“12” is indicated in diagnostic mode. (Code No. 60) EEPROM read error for throttle position when fully closed.	Press the engine stop switch for 1 second or more, and then press the starter switch (no need to start the engine).	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is “Recovered” → Go to item 6 and finish the service. Condition is “Detected” → Repeat item 1. If the same number is indicated, go to item 5.
5	Faulty ECU.	Replace the ECU.	Service is finished.

FUEL INJECTION SYSTEM

Fault code No.		44	
Item		EEPROM read error: an error is detected while reading or writing on EEPROM.	
6	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 46

Fault code No.		46	
Item		Vehicle system power supply: normal voltage is not supplied to the ECU.	
Fail-safe system		Able/Unable to start engine	
		Able/Unable to drive vehicle	
Diagnostic code No.		—	
Diagnostic tool display		—	
Procedure		—	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Connection of rectifier/regulator coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 2.
2	Connection of AC magneto coupler. Check the locking condition of the coupler. Disconnect the coupler, and check the pins (bent or broken terminals and locking condition of the pins).	Improperly connected → Connect the coupler securely, or repair/replace the wire harness.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 3.
3	Wire harness continuity.	Open or short circuit → Replace the wire harness. Between rectifier/regulator coupler and starter relay coupler. red/white–red/white Between starter relay coupler and battery terminal. red–red Between rectifier/regulator coupler and engine ground. black–black Between rectifier/regulator coupler and AC magneto coupler. white–white	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 4.

FUEL INJECTION SYSTEM

Fault code No.		46	
Item		Vehicle system power supply: normal voltage is not supplied to the ECU.	
4	Defective AC magneto.	Check the AC magneto. Refer to "CHECKING THE STARTOR COIL" on page 8-56.	Start the engine and let it idle for approximately 5 seconds. Check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Condition is "Recovered" → Go to item 6 and finish the service. Condition is "Detected" → Go to item 5.
5	Faulty ECU.	Replace the ECU.	Service is finished.
6	Delete the fault code.	Confirm that the fault code has a condition of "Recovered" using the Yamaha diagnostic tool, and then delete the fault code.	

Fault code No. 50

TIP

Before troubleshooting, disconnect the starter motor lead from the starter relay.

Fault code No.		50	
Item		ECU: faulty ECU memory.	
Fail-safe system		Unable to start engine	
		Unable to drive vehicle	
Diagnostic code No.		—	
Diagnostic tool display		—	
Procedure		—	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Faulty ECU.	Replace the ECU.	Starter switch to ON (no need to start the engine), and then check the condition of the fault code using the malfunction mode of the Yamaha diagnostic tool. Check that the fault code number is not displayed.

Fault code No. 70

TIP

It is not a malfunction.

If the engine is forcibly stopped by leaving idle, the recovered state is recorded by malfunction mode.

Fault code No.		70	
Item		Engine forcibly stops when the vehicle is left idling for a long period of time.	
Fail-safe system		—	
		Unable to drive vehicle	

FUEL INJECTION SYSTEM


Fault code No.		70	
Item		Engine forcibly stops when the vehicle is left idling for a long period of time.	
Diagnostic code No.		—	
Diagnostic tool display		—	
Procedure		—	
Item	Probable cause of malfunction and check	Maintenance job	Confirmation of service completion
1	Delete the fault code.	Confirm that the fault code has a condition of “Recovered” using the Yamaha diagnostic tool, and then delete the fault code.	

EAM20146

FUEL PUMP SYSTEM

EAM30287

CIRCUIT DIAGRAM

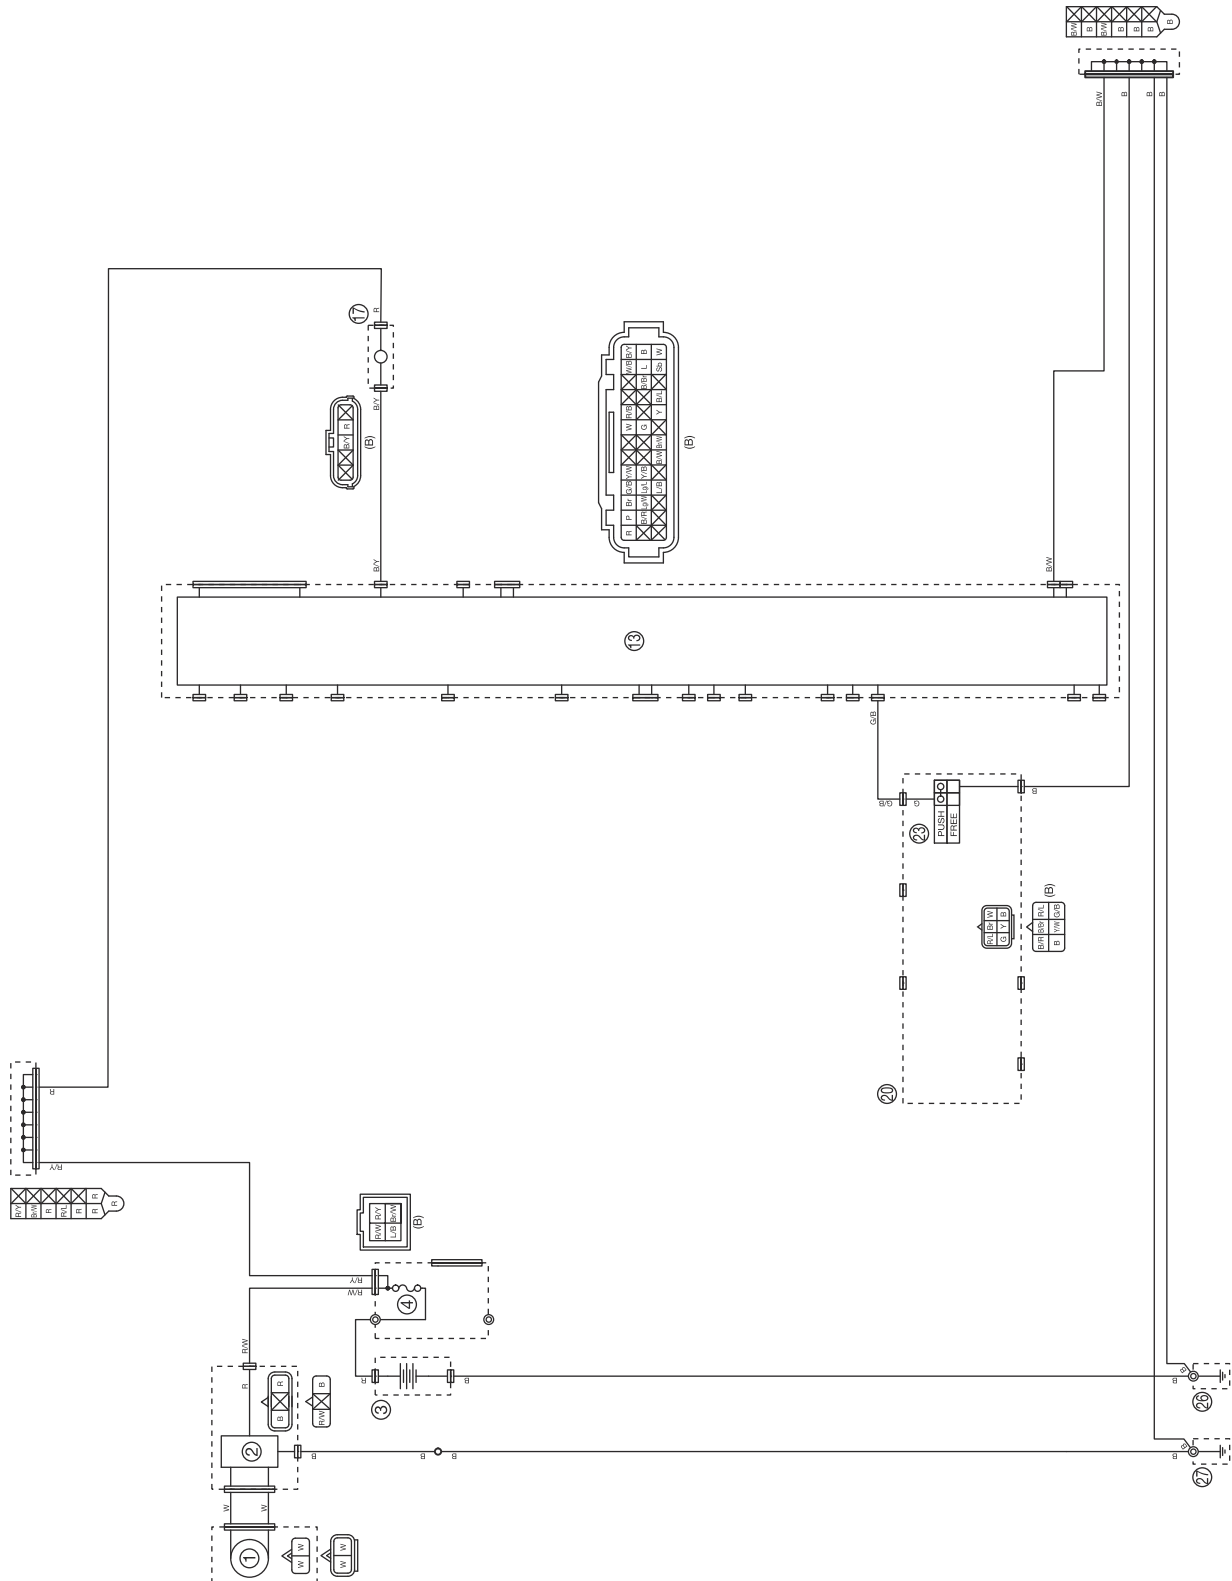

1. AC magneto
2. Rectifier/regulator
3. Battery
4. Fuse
13. ECU (Engine Control Unit)
17. Fuel pump
20. Handlebar switch (left)
23. Engine stop switch
26. Frame ground
27. Engine ground

EAM30288

TROUBLESHOOTING

The fuel pump fails to operate.

TIP


Before troubleshooting, remove the following part(s):

1. Seat
2. Side cover (left/right)
3. Shroud (left/right)
4. Fuel tank
5. Air filter case cover

1. Check the fuel pump system wire harness connections.	NG→	Reconnect.
OK↓		
2. Check the fuse. Refer to "CHECKING THE FUSES" on page 8-52.	NG→	Replace the fuse(s).
OK↓		
3. Check the battery. Refer to "CHECKING AND CHARGING THE BATTERY" on page 8-52.	NG→	• Clean the battery terminals. • Recharge or replace the battery.
OK↓		
4. Check the engine stop switch. Refer to "CHECKING THE SWITCHES" on page 8-50.	NG→	Replace the handlebar switch (left).
OK↓		
5. Check fuel pressure. Refer to "CHECKING THE FUEL PRESSURE" on page 7-7.	NG→	Replace the fuel pump.
OK↓		
6. Check the fuel pump system wire harness connections. Refer to "CIRCUIT DIAGRAM" on page 8-43.	NG→	Repair or replace the wire harness.
OK↓		
Replace the ECU.		

EAM20147


ELECTRICAL COMPONENTS

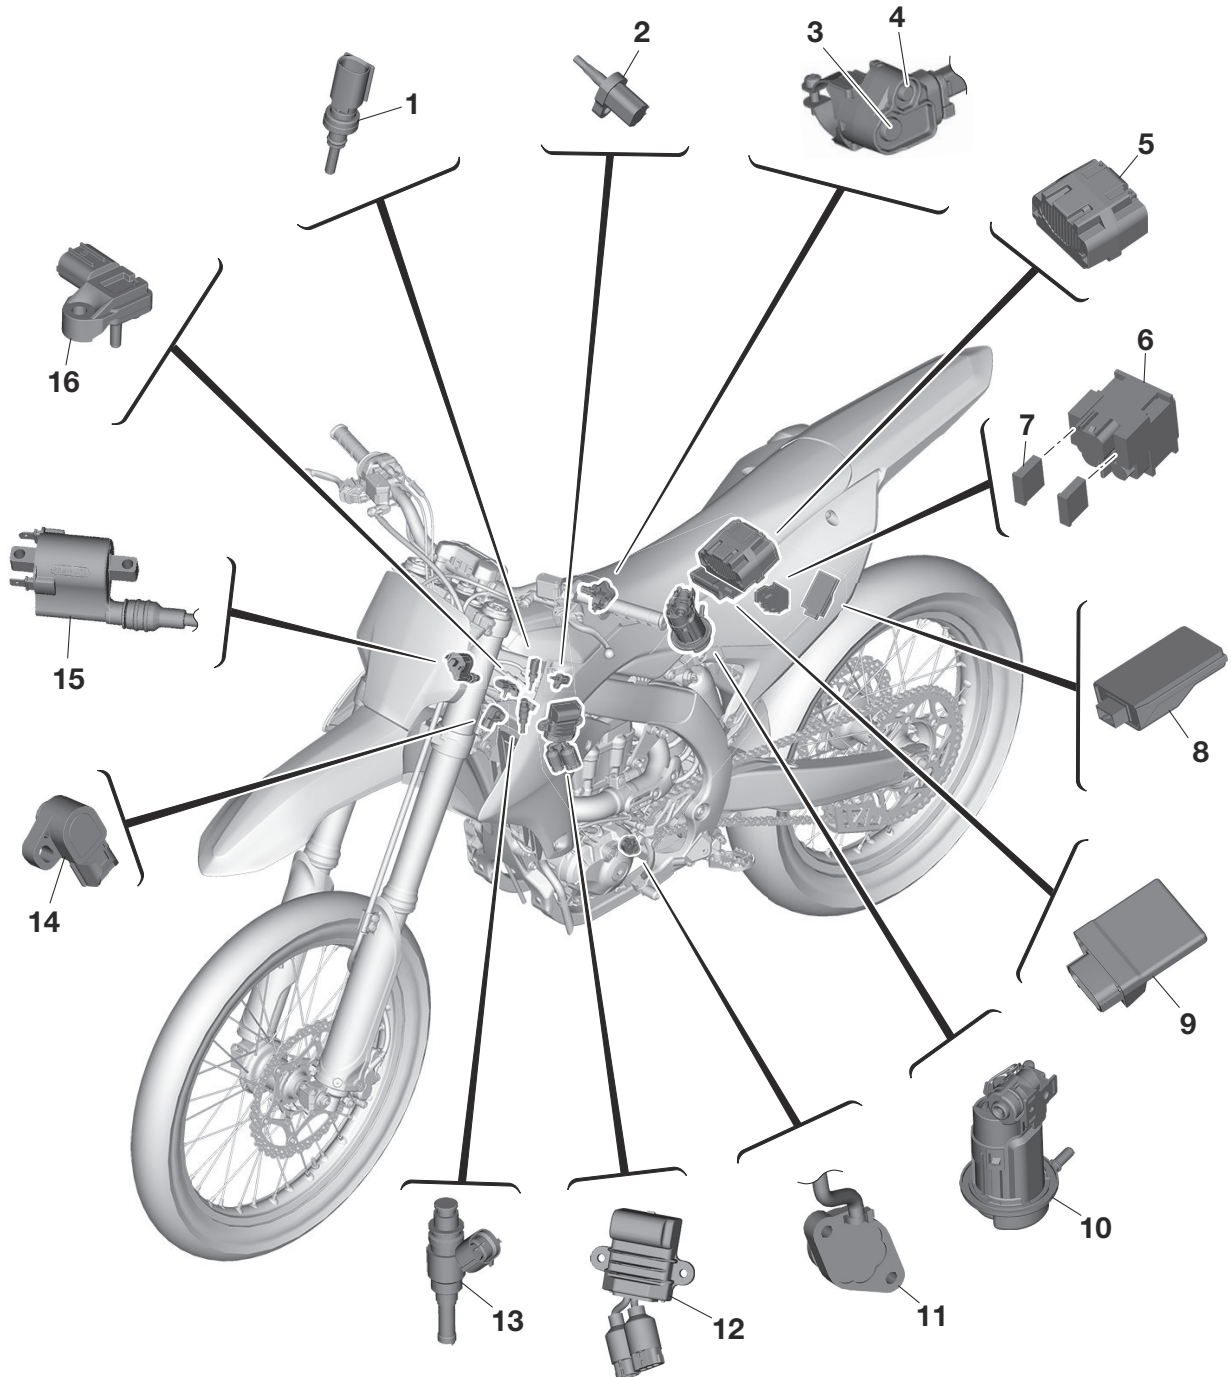

1. Coolant temperature sensor
2. Intake air temperature sensor
3. Multi-function button
4. Engine stop switch
5. Battery
6. Starter relay
7. Fuse
8. CCU (Communication Control Unit)
9. ECU (Engine Control Unit)
10. Fuel pump
11. Gear position switch
12. Rectifier/regulator
13. Injector
14. Throttle position sensor
15. Ignition coil
16. Intake air pressure sensor

EAM30648


RELAY LOCATION CHART

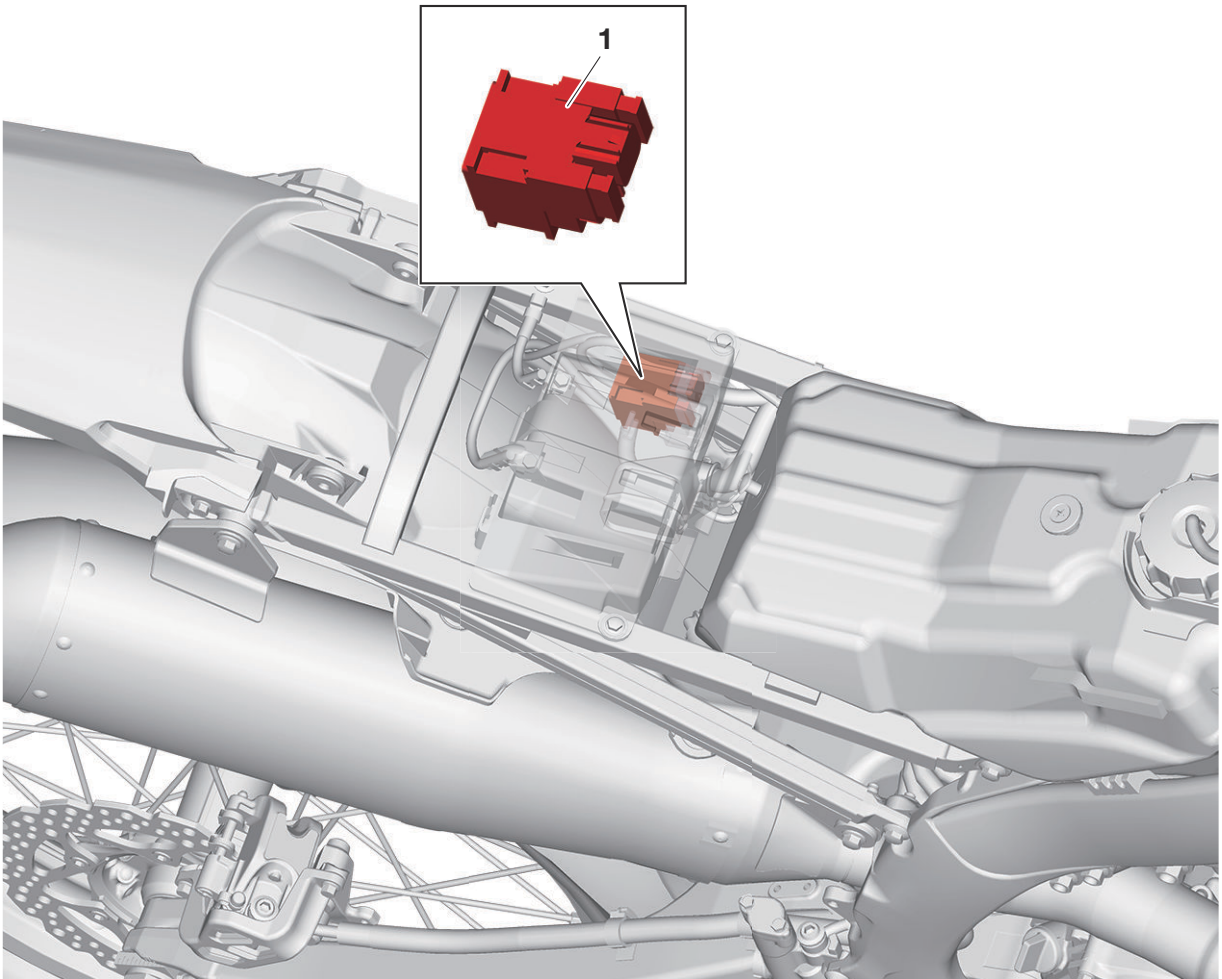

1. Starter relay

EAM30289

CHECKING THE SWITCHES

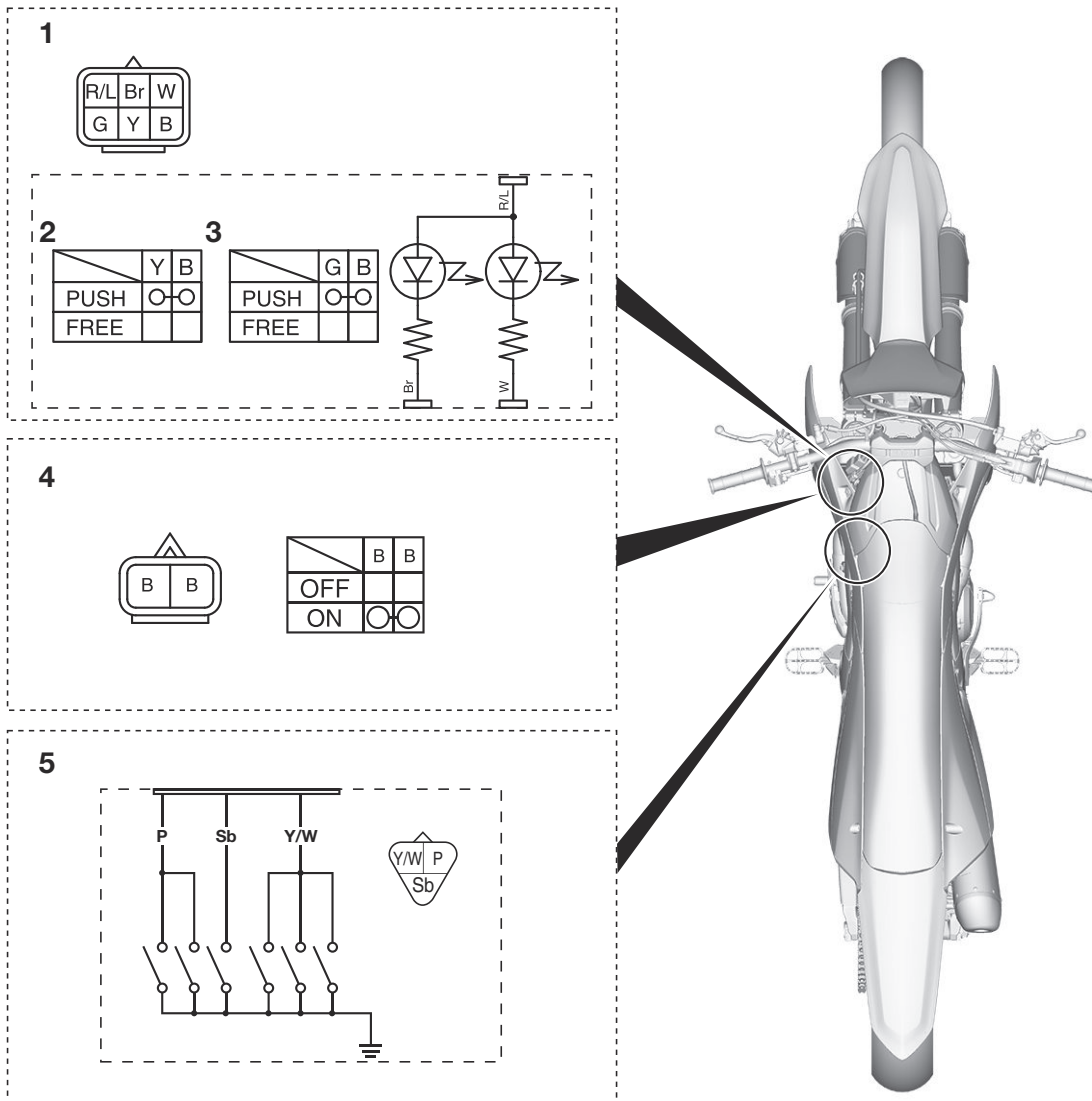

1. Handlebar switch (left)
2. Multi-function button
3. Engine stop switch
4. Starter switch
5. Gear position switch

Check each switch for continuity with the digital circuit tester. If the continuity reading is incorrect, check the wiring connections and if necessary, replace the switch.

ECA14371

NOTICE


Never insert the tester probes into the coupler terminal slots. Always insert the probes from the opposite end "a" of the coupler, taking care not to loosen or damage the leads.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tach-
ometer
YU-A1927

TIP

When checking for continuity, switch back and forth between the switch positions a few times.

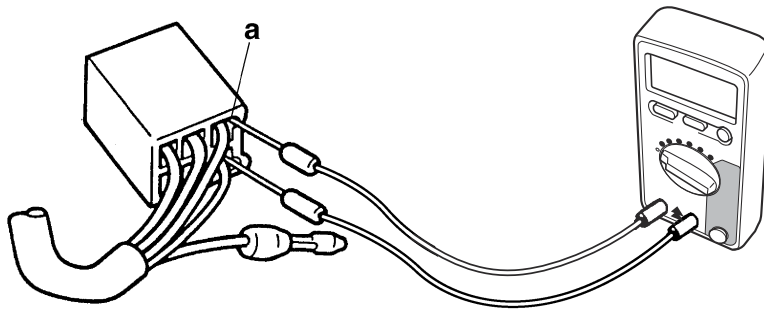


Terminal connections of the switch are shown in the terminal connection diagram below. The switch positions “a” are shown in the far left column and the switch lead colors are shown in the top row in the switch illustration.

TIP

“○—○” indicates continuity between switch terminals (i.e., a closed circuit at each switch position).

The example illustration below shows that:

There is continuity between red and brown when the switch is “ON”.

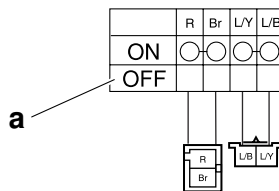


EAM30290

CHECKING THE FUSES

The following procedure applies to all of the fuses.

1. Remove:
 - Seat
 - Side cover (left)
 Refer to “GENERAL CHASSIS” on page 4-1.
2. Check:
 - Fuse “1”

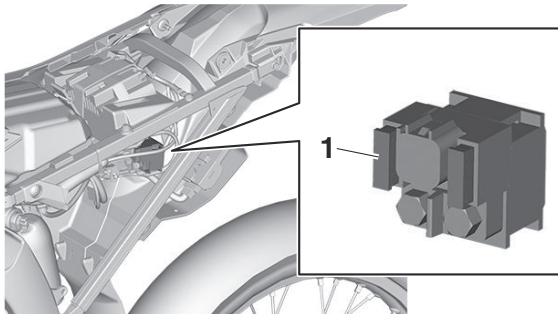

- a. Connect the digital circuit tester to the fuse and check the continuity.

TIP

Set the digital circuit tester selector to “Ω”.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tachometer
YU-A1927

- b. If the digital circuit tester indicates “O.L”, replace the fuse.
3. Replace:
 - Fuse
 - a. Install a new fuse of the correct amperage rating.
 - b. Push the starter switch to verify if the electrical circuit is operational.
 - c. If the fuse immediately blows again, check the electrical circuit.

Fuses	Amperage rating	Q'ty
Main	15 A	1
Spare	15 A	1

EWA13310

WARNING

Never use a fuse with an amperage rating other than that specified. Improvising or using a fuse with the wrong amperage rating may cause extensive damage to the electrical system, cause the lighting and ignition

systems to malfunction and could possibly cause a fire.

4. Install:
 - Side cover (left)
 - Seat
 Refer to “GENERAL CHASSIS” on page 4-1.

EAM30291

CHECKING AND CHARGING THE BATTERY

EWA20430

WARNING

To avoid sparking, burns, fire, and explosion:

- Charge battery only with specified charger.
- Use battery only for specified product – no other use.
- Do not place near fire or immerse in water.
- Do not use battery if it has been dropped, subject to impact, or visibly damaged.
- Do not disassemble or modify the battery, or short across its terminals.

ECA26041

NOTICE

To prevent damage to the battery and battery malfunction:

- Be sure to charge the battery using only the specified battery charger. Do not use a charger designed for lead-acid batteries. Otherwise, the battery could be damaged, such as from a long period of excessive current or voltage exceeding 16 V.
- Avoid excessive current discharge, such as pressing the starter switch for a long time. Wait for more than 10 seconds before attempting to start again. Charge the battery again as soon as possible. A long state of discharge below 10 V will damage the battery.
- Do not use the specified battery charger to charge a battery other than the lithium-ion battery. Otherwise, the battery or charger could be damaged.
- Be careful not to drop the battery or subject it to strong impacts.
- Avoid charging the battery at high temperatures of 65 °C (149 °F) or more or low temperatures under 0 °C (32 °F). A control feature preventing battery charging and discharging will temporarily intervene. The battery will discharge at 65 °C (149 °F) or more or low temperatures under -10 °C (14 °F).
- If the battery is charged between 0 °C (32 °F) and 10 °C (50 °F), battery charging may

stop halfway without the battery becoming fully charged even when the specified battery charger is used. If this occurs, disconnect the battery charger, and then resume charging again.

TIP

This model uses a lithium-ion battery. When new, the battery is supplied in sleep mode to minimize current discharging until first-time use. In the sleep mode, a voltage as low as approximately 0.1 V can be measured if voltage measurement is performed. As such the battery cannot be used, but this is not a malfunction. By activating the battery as follows, the sleep mode will be canceled and the battery can be used normally.

Charging (activation) steps

1. Remove:
 - Seat
 Refer to “GENERAL CHASSIS” on page 4-1.
2. Disconnect:
 - Battery lead
 (from the battery terminals)

ECA13700

NOTICE

First, disconnect the negative battery lead, and then the positive battery lead.

3. Remove:
 - Battery
4. Connect the battery charger (special tool) to the battery.



**Lithium battery charger
90890-05376
Lithium battery charger
DBY-ACC51-70-02**

TIP

- For instructions on charging and handling the battery charger, refer to the battery charger’s instruction manual.
- Once battery charging starts, the sleep mode is canceled.

5. Charge the battery until it is fully charged.

6. Install:

- Battery

7. Connect:

- Battery lead

(to the battery terminals)

ECA26980

NOTICE

First, connect the positive battery lead, and

then the negative battery lead.

8. Check:

- Battery terminal
- Dirt → Clean with a wire brush.
Loose connection → Connect properly.

9. Lubricate:

- Battery terminal



**Recommended lubricant
Dielectric grease**

10. Install:

- Seat

Refer to “GENERAL CHASSIS” on page 4-1.

Checking the battery

ECA26080

NOTICE

The battery has a limited service life. If the battery cannot be charged or it is determined that the battery cannot be used after checking the battery, it should be replaced. When replacing the battery, be sure to use a Yamaha genuine lithium-ion battery.

TIP

Do not check the battery at high temperature of 65 °C (149 °F) or more or low temperatures below 10 °C (50 °F). Otherwise, the control feature preventing battery charging and discharging will temporarily intervene.

1. Check:

- Battery

a. If the battery is hot, wait until the battery has cooled down to the ambient temperature.

b. Measure the voltage between the battery terminals.

13.25 V or more → The battery is normal.
Checking is finished.

Less than 13.25 V → Go to step (c).

c. Connect the battery charger (special tool) to the battery and charge it.



**Lithium battery charger
90890-05376
Lithium battery charger
DBY-ACC51-70-02**

TIP

For instructions on charging and handling the battery charger, refer to the battery charger’s instruction manual.

d. If the battery is hot, wait until the battery has cooled down to the ambient

temperature.

- e. Measure the voltage between the battery terminals.
13.25 V or more → The battery is normal.
Checking is finished.
10 V or more and less than 13.25 V → Perform from step (c) again.
Less than 10 V → Replace the battery.

TIP

Before replacing the battery, make sure that the battery temperature is proper (temperature not more than 65 °C (149 °F) or less than 0 °C (32 °F)). Otherwise, wait until the battery temperature is proper and perform the procedure from step (c) again.

EAM30636

REPLACING THE ECU (Engine Control Unit)

1. Turn off the main switch.
2. Replace the ECU (Engine Control Unit).
Refer to "GENERAL CHASSIS" on page 4-1.
3. Check:
 - Engine idling speed
Start the engine, warm it up, and then measure the engine idling speed.

	Engine idling speed 1900–2100 r/min
---	---

EAM30292


CHECKING THE RELAYS

Check each switch for continuity with the digital circuit tester. If the continuity reading is incorrect, replace the relay.

	Digital circuit tester (CD732) 90890-03243 Model 88 Multimeter with tachometer YU-A1927
---	--

1. Disconnect the relay from the wire harness.
2. Connect the digital circuit tester (Ω) and battery (12 V) to the relay terminal as shown.
Check the relay operation.
Out of specification → Replace.

Starter relay

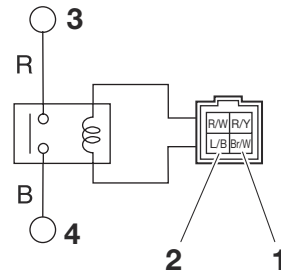

1. Positive battery terminal
2. Negative battery terminal
3. Positive tester probe
4. Negative tester probe



Result
Continuity
(between "3" to "4")

EAM30294

CHECKING THE IGNITION SPARK GAP

1. Check:
 - Ignition spark gap
Out of specification → Perform the ignition system troubleshooting, starting with step (5).
Refer to "TROUBLESHOOTING" on page 8-3.



Minimum ignition spark gap
6.0 mm (0.24 in)

TIP


If the ignition spark gap is within specification, the ignition system circuit is operating normally.

- a. Remove the spark plug cap from the spark plug.
- b. Connect the ignition checker "1" as shown.



Ignition checker
90890-06754
Oppama pet-4000 spark checker
YM-34487

- c. Crank the engine, and measure the ignition spark gap "a".

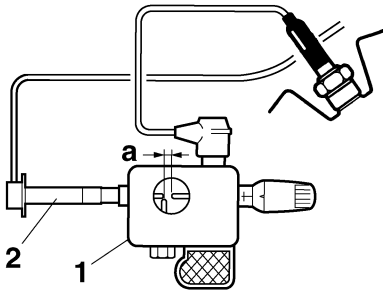

2. Spark plug cap

d. Crank the engine, and gradually increase the spark gap until a misfire occurs.

EAM30295

CHECKING THE SPARK PLUG CAP

1. Remove:

- Spark plug cap
(from the spark plug lead)

2. Check:

- Spark plug cap resistance
Out of specification → Replace.




Resistance
10.00 kΩ

a. Connect the digital circuit tester (Ω) to the spark plug cap.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tach-
ometer
YU-A1927

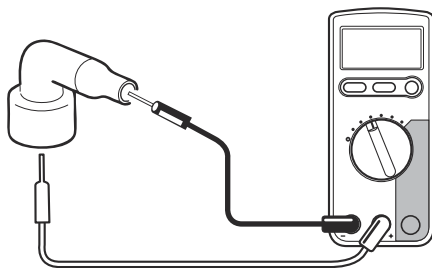

b. Measure the spark plug cap resistance.

EAM30296

CHECKING THE IGNITION COIL

1. Disconnect:

- Ignition coil terminal
(from the wire harness)
- Spark plug cap
(from the ignition coil)

2. Check:

- Primary coil resistance

Out of specification → Replace.




Primary coil resistance
1.98–2.42 Ω

a. Connect the digital circuit tester (Ω) to the ignition coil.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tach-
ometer
YU-A1927

- Positive tester probe →
Ignition coil terminal 1 “1”
- Negative tester probe →
Ignition coil terminal 2 “2”

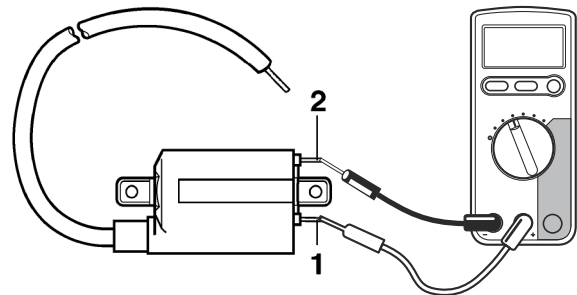

b. Measure the primary coil resistance.

3. Check:

- Secondary coil resistance
Out of specification → Replace.




Secondary coil resistance
14.64–21.96 kΩ

a. Connect the digital circuit tester (Ω) to the ignition coil.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tach-
ometer
YU-A1927

- Positive tester probe →
Ignition coil terminal 1 “1”
- Negative tester probe →
Spark plug lead “2”

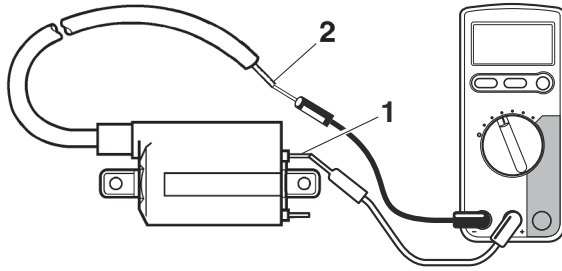

b. Measure the secondary coil resistance.

EAM30297

CHECKING THE CRANKSHAFT POSITION SENSOR

1. Disconnect:
 - Crankshaft position sensor coupler (from the wire harness)
2. Check:
 - Crankshaft position sensor resistance
 Out of specification → Replace.




Crankshaft position sensor resistance
228–342 Ω

- a. Connect the digital circuit tester (Ω) to the crankshaft position sensor coupler.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tachometer
YU-A1927

- Positive tester probe → Gray “1”
- Negative tester probe → Black “2”

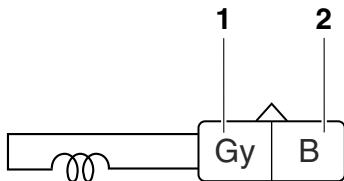

b. Measure the crankshaft position sensor resistance.

EAM30298

CHECKING THE LEAN ANGLE SENSOR

1. Check:
 - Mounted condition of ECU

Improperly mounted → Remount.

TIP

- The lean angle sensor is built into the ECU.
- The lean angle sensor stops the engine in case of a turnover.
- To ensure that the lean angle sensor operates correctly, do not change the installed condition of the ECU.

EAM30299


CHECKING THE STARTER MOTOR OPERATION

1. Check:
 - Starter motor operation
 Does not operate → Perform the electric starting system troubleshooting, starting with step (3).
Refer to “TROUBLESHOOTING” on page 8-9.
 - a. Connect the positive battery terminal “1” and starter motor lead “2” with a jumper lead “3”.

EWA13810

WARNING

- A wire that is used as a jumper lead must have at least the same capacity of the battery lead, otherwise the jumper lead may burn.
- This check is likely to produce sparks, therefore, make sure no flammable gas or fluid is in the vicinity.

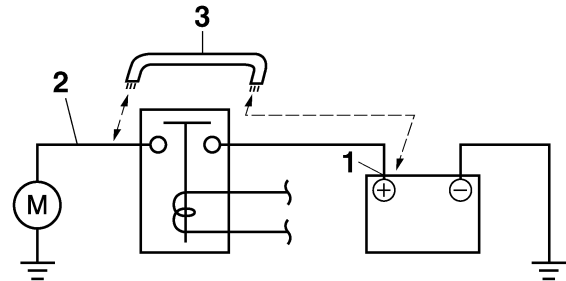

b. Check the starter motor operation.

EAM30300


CHECKING THE STATOR COIL

1. Disconnect:
 - Stator coil assembly coupler (from the wire harness)
2. Check:
 - Stator coil assembly
 - a. Connect the digital circuit tester (Ω) to the stator coil assembly coupler.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tachometer
YU-A1927

- Positive tester probe → White “1”
- Negative tester probe → White “2”

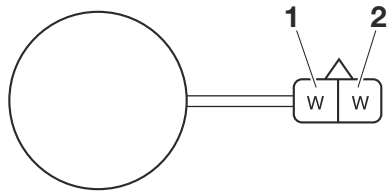

- Check the stator coil for continuity.
- If there is no continuity, replace the stator coil assembly.

EAM30301

CHECKING THE RECTIFIER/REGULATOR

- Check:
 - Rectifier/regulator output voltage
 Out of specification → Replace.



Regulated voltage (DC)
14.0–14.8 V

- Set the digital tachometer to the ignition coil.




Digital tachometer
90890-06760
Digital tachometer
YU-39951-B

- Connect the digital circuit tester (DCV) to the rectifier/regulator coupler.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tachometer
YU-A1927

- Positive tester probe → Red/White “1”
- Negative tester probe → Black “2”

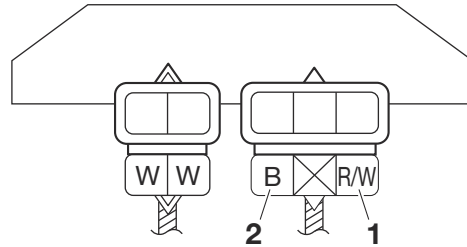

- Start the engine and let it run at about 5000 r/min.
- Measure the output voltage.

EAM30303

CHECKING THE COOLANT TEMPERATURE SENSOR

- Remove:
 - Coolant temperature sensor

EWA14130

WARNING

- Handle the coolant temperature sensor with special care.
- Never subject the coolant temperature sensor to strong shocks. If the coolant temperature sensor is dropped, replace it.

- Check:
 - Coolant temperature sensor resistance
 Out of specification → Replace.




Coolant temperature sensor resistance
2310–2590 Ω at 20 °C (2310–2590 Ω at 68 °F)
Coolant temperature sensor resistance
310–326 Ω at 80 °C (310–326 Ω at 176 °F)

- Connect the digital circuit tester (Ω) to the coolant temperature sensor.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tachometer
YU-A1927

- Positive tester probe → Green “1”
- Negative tester probe → Black “2”

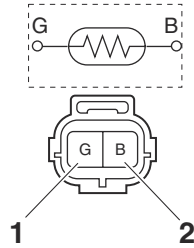


- b. Immerse the coolant temperature sensor in a container filled with coolant.

TIP

Make sure the coolant temperature sensor terminals do not get wet.

- c. Place a thermometer in the coolant.
- d. Slowly heat the coolant, and then let it cool to the specified temperature indicated in the table.
- e. Check the coolant temperature sensor for continuity at the temperatures indicated in the table.

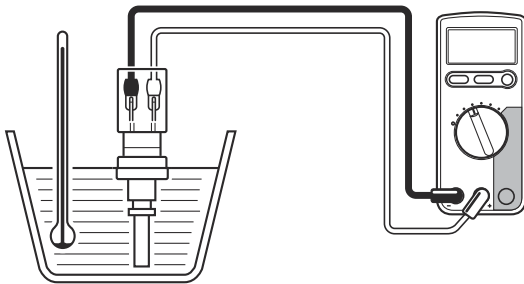

EAM30305

CHECKING THE THROTTLE POSITION SENSOR INPUT VOLTAGE

1. Check:
 - Throttle position sensor input voltage
Out of specification → Replace the throttle position sensor.



Throttle position sensor input voltage
4–6 V

- a. Connect the test harness to the throttle position sensor coupler and the wire harness.
- b. Connect the digital circuit tester (DCV) to the test harness.



Digital circuit tester (CD732)

90890-03243


Model 88 Multimeter with tachometer

YU-A1927

Test harness (3P) – sub throttle position sensor

90890-03214

- Positive tester probe → Blue “1”
- Negative tester probe → Black “2”

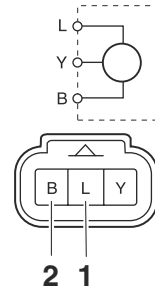

- c. Start the engine.

- d. Measure the throttle position sensor input voltage.

EAM30307

CHECKING THE INTAKE AIR TEMPERATURE SENSOR

1. Remove:
 - Intake air temperature sensor
(from the air filter case)

EWA14110

WARNING

- Handle the intake air temperature sensor with special care.
- Never subject the intake air temperature sensor to strong shocks. If the intake air temperature sensor is dropped, replace it.

2. Check:

- Intake air temperature sensor resistance
Out of specification → Replace.



Intake air temperature sensor resistance

5400–6600 Ω at 0 °C (5400–6600 Ω at 32 °F)

Intake air temperature sensor resistance


290–390 Ω at 80 °C (290–390 Ω at 176 °F)

- a. Connect the digital circuit tester (Ω) to the intake air temperature sensor terminal.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tach-
ometer
YU-A1927

- Positive tester probe → Brown/White “1”
- Negative tester probe → Black/Blue “2”

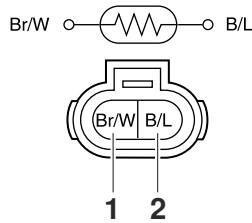

EAM30467

CHECKING THE GEAR POSITION SWITCH


1. Remove:
 - Gear position switch
2. Check:
 - Gear position switch
 Out of specification → Replace.



Digital circuit tester (CD732)
90890-03243
Model 88 Multimeter with tach-
ometer
YU-A1927



- Continuity**
 Positive tester probe → Sky blue “1”
 Negative tester probe → Sensor terminal “a”
- Continuity**
 Positive tester probe → Pink “2”
 Negative tester probe → Sensor terminal “b”
- Continuity**
 Positive tester probe → Pink “2”
 Negative tester probe → Sensor terminal “c”
- Continuity**
 Positive tester probe → Yellow/White “3”
 Negative tester probe → Sensor terminal “d”
- Continuity**
 Positive tester probe → Yellow/White “3”
 Negative tester probe → Sensor terminal “e”
- Continuity**
 Positive tester probe → Yellow/White “3”
 Negative tester probe → Sensor terminal “f”

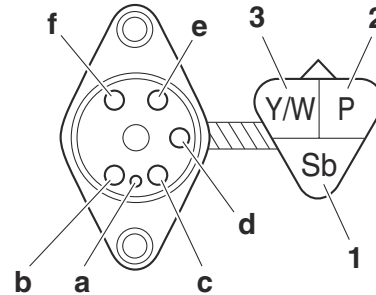

EAM30496

CHECKING THE INJECTOR

1. Remove:
 - Fuel injector
 Refer to “THROTTLE BODY” on page 7-4.
2. Check:
 - Fuel injector resistance
 Out of specification → Replace.




Resistance
12.0 Ω

- a. Disconnect the fuel injector coupler from the fuel injector.

- b. Connect the digital circuit tester (Ω) to the fuel injector coupler.

	Digital circuit tester (CD732) 90890-03243
	Model 88 Multimeter with tachometer YU-A1927

- Positive tester probe →
Injector terminal “1”
- Negative tester probe →
Injector terminal “2”

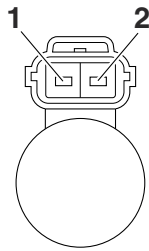

- c. Measure the fuel injector resistance.

TROUBLESHOOTING

TROUBLESHOOTING	9-1
GENERAL INFORMATION.....	9-1
TROUBLESHOOTING OF ENGINE (fault code not detected).....	9-1
TROUBLESHOOTING OF CLUTCH.....	9-5
TROUBLESHOOTING OF TRANSMISSION.....	9-7
TROUBLESHOOTING OF COOLING SYSTEM.....	9-8
TROUBLESHOOTING OF BRAKE.....	9-9
TROUBLESHOOTING OF SUSPENSION.....	9-9
TROUBLESHOOTING OF STEERING/HANDLING.....	9-11
TROUBLESHOOTING OF CHARGING SYSTEM.....	9-12
 SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE	9-13
SELF-DIAGNOSTIC FUNCTION TABLE (FOR FUEL INJECTION SYSTEM).....	9-13
DIAGNOSTIC CODE: SENSOR OPERATION TABLE.....	9-13
DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE.....	9-15

EAM20148

TROUBLESHOOTING

EAM30309

GENERAL INFORMATION**TIP**

Troubleshooting information provided here does not cover all the trouble symptoms, possible causes, and remedial actions. Some items may not apply depending on the model. Use this information as a guide and quick reference matrix when performing basic troubleshooting. Refer to the each chapter for detailed information on checking, adjustment, and replacement.

EAM30509

TROUBLESHOOTING OF ENGINE (fault code not detected)**TIP**

If a fault code is detected, refer to the “FUEL INJECTION SYSTEM” on page 8-15.

Engine does not crank.

Symptom	Possible cause	Actions
Starter motor does not operate	Refer to “TROUBLESHOOTING” under “ELECTRIC STARTING SYSTEM” on page 8-7.	
	Starter clutch malfunction	Replace the starter clutch.
	Improper oil grade (starter clutch slipping)	Change to recommended engine oil.
Starter motor operates, but the engine does not crank.	Stuck piston or seized crankshaft	Disassemble and check the engine. Replace defective parts.

Engine will not start or is difficult to start, but it cranks.

Symptom	Possible cause	Actions
Spark plug does not produce a spark	Refer to “TROUBLESHOOTING” under “IGNITION SYSTEM” on page 8-1.	
Fuel not supplied	—	Measure the fuel pressure.
	Empty fuel tank	Fill the fuel tank with fuel.
	Clogged fuel tank cap breather hole	Clean the fuel tank cap.
	Clogged or damaged fuel hose	Clean, repair, or replace the fuel hose.
	Fuel leakage	Check the fuel passage. Repair or replace as necessary.
	Clogged fuel pump	Clean or replace the fuel pump.
	Cracks or damage in fuel pump	Replace the fuel pump.
	Fuel pump malfunction	Refer to “TROUBLESHOOTING” under “FUEL PUMP SYSTEM” on page 8-43.
	Failed or clogged fuel injector	Replace the fuel injector.
	ECU failure	Replace the ECU.

Symptom	Possible cause	Actions
—	Water or foreign material in fuel, degraded fuel	Change fuel.
	Loose spark plug	Tighten the spark plug to the specified torque.
	Loose cylinder head or cylinder	Tighten bolts or nuts on cylinder head and cylinder to the specified torque.
	Damaged cylinder head gasket	Replace the cylinder head gasket.
	Incorrect valve timing	Adjust the valve timing.
	Incorrect valve clearance	Adjust the valve clearance.
	Worn valve guide	Replace the valve guide.
	Bent, damaged, or stuck valve	Replace the valve.
	Poor contact between valve and valve seat	Reface the valve-to-valve-seat contact.
	Fatigued or broken valve spring	Replace the valve spring.
	Worn, damaged, or stuck piston ring	Replace the piston and piston rings as a set.
	Seized or damaged piston	Replace the piston and piston rings as a set.
	Worn or damaged cylinder bore	Replace the cylinder, piston, and piston rings as a set.

Incorrect idling speed or mid-to-high speed

Symptom	Possible cause	Actions
Spark plug does not produce a spark	Incorrect spark plug gap	Adjust the spark plug gap.
	Worn or damaged spark plug	Replace the spark plug.
	Defective spark plug cap	Replace the spark plug cap.
	Defective ignition coil	Replace the ignition coil.
	ECU failure	Replace the ECU.
Low fuel pressure	—	Measure the fuel pressure.
	Fuel leakage	Check the fuel passage. Repair or replace as necessary.
	Clogged fuel pump	Clean or replace the fuel pump.
	Cracks or damage in fuel pump	Replace the fuel pump.
	Fuel pump malfunction	Refer to “TROUBLESHOOTING” under “FUEL PUMP SYSTEM” on page 8-43.
Fuel not supplied	Failed or clogged fuel injector	Replace the fuel injector.
	ECU failure	Replace the ECU.

Symptom	Possible cause	Actions
—	Worn camshaft lobe	Replace the camshaft.
	Water or foreign material in fuel, degraded fuel	Change fuel.
	Contaminated throttle body or clogged internal passage	Clean the throttle body.
	Incorrectly adjusted throttle cable	Adjust the throttle grip free play.
	Incorrectly adjusted idling speed (idle screw)	Adjust the idle screw.
	Incorrect throttle position sensor angle	Adjust the throttle position sensor angle.
	Incorrect acceleration position sensor angle	Adjust the acceleration position sensor angle.
	Faulty ECU	Replace the ECU.
	Clogged vacuum hose	Clean the vacuum hose.
	Cracks and damage in vacuum hose	Replace the vacuum hose.
	Damaged throttle body joint	Replace the throttle body joint.
	Loose throttle body joint	Tighten the throttle body joint bolts to the specified torque.
	Clogged air filter element	Clean or replace the air filter element.
	Incorrect oil level (high)	Adjust the oil level to the specified level.

Excessive noise from engine

Symptom	Possible cause	Actions
Noise heard from around cylinder head	Incorrect valve clearance (too wide)	Adjust the valve clearance.
	Fatigued or broken valve spring	Replace the valve spring.
	Worn or damaged camshaft lobe	Replace the camshaft.
	Worn or damaged valve lifter	Replace the valve lifter and cylinder head as a set.
	Worn or damaged camshaft journal	Replace the camshaft.
	Worn or damaged cylinder head (camshaft journal)	Replace the cylinder head.
Noise heard from around timing chain	Worn or damaged timing chain	Replace the timing chain and camshaft sprocket as a set.
	Worn or damaged camshaft sprocket	Replace the timing chain and camshaft sprocket as a set.
	Worn or damaged timing chain guide	Replace the timing chain guide.
	Cracked, damaged, or faulty timing chain tensioner	Replace the timing chain tensioner.

TROUBLESHOOTING

Symptom	Possible cause	Actions
Noise heard from around piston	Worn or damaged piston ring	Replace the piston and piston rings as a set.
	Worn or damaged piston	Replace the piston and piston rings as a set.
	Worn piston (piston pin hole)	Replace the piston and piston pin as a set.
	Worn or damaged piston pin	Replace the piston pin.
	Worn or damaged cylinder bore	Replace the cylinder, piston, and piston rings as a set.
	Carbon buildup in piston head and combustion chamber	Clean the piston head and combustion chamber.
Noise heard from around crankshaft	Worn or damaged crankshaft journal or crank pin	Replace the crankshaft.
	Cracked, worn, or damaged balancer shaft	Replace the balancer drive gear and balancer shaft as a set.
	Worn or damaged balancer drive gear	Replace the balancer drive gear and balancer shaft as a set.
	Worn or damaged big end bearing	Replace the big end bearing.
	Worn or damaged crankshaft journal bearing	Replace the crankshaft journal bearing.
	Worn or damaged balancer shaft journal bearing	Replace the balancer shaft journal bearing.

EAM30510

TROUBLESHOOTING OF CLUTCH

Manual clutch

Symptom	Possible cause	Actions
Clutch slippage	Improperly assembled clutch	Reassemble the clutch.
	Improperly assembled clutch master cylinder	Reassemble the clutch master cylinder.
	Improperly assembled clutch release cylinder	Reassemble the clutch release cylinder.
	Incorrect clutch fluid level	Adjust the clutch fluid level to the specified level.
	Damaged clutch hose	Replace the clutch hose.
	Loose union bolt	Tighten the union bolt to the specified torque.
	Loose clutch spring	Tighten the pressure plate bolts to the specified torque.
	Fatigued clutch spring	Replace the clutch spring.
	Warped pressure plate	Replace the pressure plate.
	Worn friction plate	Replace the friction plates as a set.
	Warped or worn clutch plate	Replace the clutch plates as a set.
	Damaged clutch release cylinder	Replace the clutch release cylinder.
	Incorrect oil level	Adjust the engine oil level to the specified level.
	Incorrect oil viscosity (low)	Change to recommended engine oil.
	Deteriorated oil	Change to recommended engine oil.

Symptom	Possible cause	Actions
Clutch drags	Air in hydraulic clutch system	Bleed the hydraulic clutch system.
	Fluid leakage from hydraulic clutch system	Check the hydraulic clutch system and repair or replace faulty parts as necessary.
	Faulty clutch spring	Replace the clutch spring.
	Warped pressure plate	Replace the pressure plate.
	Swollen friction plate	Replace the friction plates as a set.
	Warped clutch plate	Replace the clutch plates as a set.
	Bent pull rod (outer pull type)	Replace the pull rod.
	Worn pull rod tooth (outer pull type)	Replace the pull rod and pull lever shaft as a set.
	Bent push rod (inner push type)	Replace the push rod.
	Damaged or worn collars	Replace the collars.
	Seized primary driven gear bushing	Replace the primary driven gear.
	Damaged clutch release cylinder	Replace the clutch release cylinder.
	Incorrect oil level	Adjust the engine oil level to the specified level.
	Incorrect oil viscosity (high)	Change to recommended engine oil.
	Deteriorated oil	Change to recommended engine oil.
Clutch noise	Damaged or worn primary driven gear	Replace the primary drive gear or crankshaft, and the primary driven gear as a set.
	Loose clutch boss nut	Tighten the clutch boss nut to the specified torque.
	Fatigued absorber	Replace the absorber.
	Worn clutch housing bearing	Replace the clutch housing bearing.
	Worn pressure plate bearing	Replace the pressure plate bearing.

EAM30511

TROUBLESHOOTING OF TRANSMISSION

Symptom	Possible cause	Actions
Difficult or impossible to shift transmission gear	Clutch drags	Refer to “Clutch drags”.
	Improperly adjusted shift rod	Adjust the shift rod installation length.
	Bent shift shaft	Replace the shift shaft.
	Foreign object in a shift drum groove	Remove foreign object from shift drum groove.
	Damaged shift drum	Replace the shift drum.
	Seized shift fork	Replace the shift fork and shift fork guide bar as a set.
	Bent shift fork guide bar	Replace the shift fork guide bar.
	Foreign object between transmission gears	Remove foreign object from transmission gears.
	Seized transmission gear	Replace the seized gear and the axle as a set.
	Improperly assembled transmission	Reassemble the transmission axle assembly.
Jumps out of gear	Incorrect shift pedal position	Adjust the shift pedal position.
	Improperly returned stopper lever	Replace the stopper lever spring.
	Bent or worn shift fork	Replace the shift fork.
	Shift drum incorrect axial play	Replace the shift drum.
	Worn shift drum groove	Replace the shift drum.
	Worn transmission gear dog	Replace the transmission gear.
Transmission noise	Damaged or worn transmission gear	Replace the transmission gear.
	Worn main axle spline	Replace the main axle.
	Worn drive axle spline	Replace the drive axle.
	Worn bearing	Replace the bearing.

EAM30512

TROUBLESHOOTING OF COOLING SYSTEM

Symptom	Possible cause	Actions
Overheating	Carbon buildup in piston head and combustion chamber	Clean the piston head and combustion chamber.
	Clogged engine cooling water passages	Check and clean the engine cooling water passages.
	Incorrect oil level	Adjust the oil level to the specified level.
	Incorrect oil viscosity	Change to recommended engine oil.
	Inferior oil quality	Change to recommended engine oil.
	Low coolant level	Add recommended coolant to the specified level.
	Damaged or leaking radiator	Replace the radiator.
	Faulty radiator cap	Replace the radiator cap.
	Clogged radiator fin	Clean the radiator fin.
	Bent or damaged radiator fin	Repair the radiator fin or replace the radiator.
	Damaged or faulty water pump	Replace the water pump.
	Damaged hoses or pipes	Replace the hose or pipe.
	Improperly connected hoses or pipes	Connect the hoses and pipes properly.
	Damaged throttle body joint	Replace the throttle body joint.
	Loose throttle body joint	Tighten the throttle body joint bolts to the specified torque.
	Clogged air filter element	Clean or replace the air filter element.
	Brake drags	Check the brake system and repair or replace faulty parts as necessary.
	Incorrect spark plug gap	Adjust to the specified spark plug gap.
	Incorrect spark plug heat range	Replace the spark plug with the one of the specified type.
	Faulty ECU	Replace the ECU.
Noise from water pump	Contact between the water pump housing cover and impeller	Disassemble the water pump and replace faulty parts.
	Worn water pump housing bearing	Replace the water pump housing bearing.

EAM30513

TROUBLESHOOTING OF BRAKE

Symptom	Possible cause	Actions
Poor performance of disc brake	Worn brake pad	Replace the brake pads as a set.
	Worn or deflected brake disc	Replace the brake disc.
	Air in hydraulic brake system	Bleed the hydraulic brake system.
	Brake fluid leakage	Check the hydraulic brake system and repair or replace faulty parts as necessary.
	Incorrect brake fluid level (low)	Add brake fluid to the specified level.
	Stuck brake caliper piston	Replace the caliper piston seal.
	Stuck brake caliper and slide pin	Lubricate the caliper slide pin.
	Loose union bolt	Tighten the union bolt to the specified torque.
	Damaged brake hose and brake pipe	Replace the brake hose and brake pipe.
	Oil or grease on the brake disc or brake pad	Clean the brake disc or brake pad.
	Insufficient lubrication of brake lever or brake pedal pivot	Lubricate the brake lever or brake pedal pivot.

EAM30514

TROUBLESHOOTING OF SUSPENSION

Symptom	Possible cause	Actions
Front fork is hard	Bent or damaged inner tube	Replace the inner tube.
	Bent or damaged outer tube	Replace the outer tube.
	Damaged or worn slide metal	Replace the slide metal.
	Bent or damaged damper rod	Replace the damper rod.
	Bent wheel axle	Replace the wheel axle.
	Incorrect oil viscosity (high)	Change to recommended fork oil.
	Incorrect oil level (high)	Adjust to the specified oil level.
	Improperly adjusted spring preload (hard)	Adjust the spring preload.
	Improperly adjusted rebound damping (hard)	Adjust the rebound damping.
	Improperly adjusted compression damping (hard)	Adjust the compression damping.

TROUBLESHOOTING

Symptom	Possible cause	Actions
Front fork is soft	Fatigued or broken fork spring	Replace the fork spring.
	Incorrect oil viscosity (low)	Change to recommended fork oil.
	Incorrect oil level (low)	Adjust to the specified oil level.
	Improperly adjusted spring preload (soft)	Adjust the spring preload.
	Improperly adjusted rebound damping (soft)	Adjust the rebound damping.
	Improperly adjusted compression damping (soft)	Adjust the compression damping.
Leaking oil from front fork	Bent, damaged, or corroded inner tube	Replace the inner tube.
	Cracked or damaged outer tube	Replace the outer tube.
	Improperly installed oil seal	Replace the oil seal.
	Damaged oil seal lip	Replace the oil seal.
	Incorrect oil level (high)	Adjust to the specified oil level.
	Loose damper rod assembly bolt	Tighten the damper rod assembly bolt to the specified torque.
	Damaged damper rod assembly bolt copper washer	Replace the damper rod assembly bolt copper washer.
	Cracked or damaged cap bolt O-ring	Replace the cap bolt O-ring.
Rear suspension is hard	Bent or damaged rear shock absorber rod	Replace the rear shock absorber.
	Bent swingarm pivot shaft	Replace the swingarm pivot shaft.
	Damaged or worn swingarm bearing or bushing	Replace the swingarm bearing or bushing.
	Damaged or worn relay arm bearing	Replace the relay arm bearing.
	Damaged or worn connecting arm bearing	Replace the connecting arm bearing.
	Improperly adjusted rear shock absorber spring preload (hard)	Adjust the spring preload.
	Improperly adjusted rear shock absorber rebound damping (hard)	Adjust the rebound damping.
	Improperly adjusted rear shock absorber compression damping (hard)	Adjust the compression damping.

TROUBLESHOOTING

Symptom	Possible cause	Actions
Rear suspension is soft	Oil leaking from rear shock absorber	Replace the rear shock absorber.
	Gas leaking from rear shock absorber	Replace the rear shock absorber.
	Fatigued or damaged rear shock absorber spring	Replace the rear shock absorber.
	Improperly adjusted rear shock absorber spring preload (soft)	Adjust the spring preload.
	Improperly adjusted rear shock absorber rebound damping (soft)	Adjust the rebound damping.
	Improperly adjusted rear shock absorber compression damping (soft)	Adjust the compression damping.
Oil leaking from rear shock absorber	Bent, damaged, or corroded rear shock absorber rod	Replace the rear shock absorber.
	Damaged oil seal lip	Replace the rear shock absorber.

EAM30515

TROUBLESHOOTING OF STEERING/HANDLING

Symptom	Possible cause	Actions
Handlebar wobble	Loose lower ring nut	Tighten the lower ring nut to the specified torque.
	Worn bearing or bearing race	Replace the bearing and bearing race as a set.
	Warped front fork	Repair or replace the front fork.
	Bent front wheel axle	Replace the front wheel axle.
	Incorrect tire pressure	Adjust to the specified tire pressure.
	Worn, deformed, or incorrect tire	Replace the tire.
Heavy steering	Lower ring nut is tightened too tight	Tighten the lower ring nut to the specified torque.
	Bent lower bracket	Replace the lower bracket.
	Broken bearing or bearing race	Replace the bearing and bearing race as a set.
	Incorrect tire pressure	Adjust to the specified tire pressure.
Front wheel vibration	Loose spoke	Tighten the spoke and adjust the runout.
	Damaged or worn wheel bearing	Replace the wheel bearing.
	Worn, deformed, or incorrect tire	Replace the tire.
	Loose wheel axle or wheel axle nut	Tighten the wheel axle or wheel axle nut to the specified torque.
	Loose wheel axle pinch bolt	Tighten the wheel axle pinch bolt to the specified torque.
	Incorrect front fork oil level	Adjust to the specified front fork oil level.

TROUBLESHOOTING

Symptom	Possible cause	Actions
Rear wheel vibration	Loose spoke	Tighten the spoke and adjust the runout.
	Damaged or worn wheel bearing	Replace the wheel bearing.
	Worn, deformed, or incorrect tire	Replace the tire.
	Loose wheel axle nut	Tighten the wheel axle nut to the specified torque.
	Loose swingarm pivot shaft	Tighten the swingarm pivot shaft to the specified torque.
	Bent or damaged swingarm	Replace the swingarm bearing.
	Damaged or worn swingarm bearing or bushing	Replace the swingarm bearing or bushing.

EAM30516

TROUBLESHOOTING OF CHARGING SYSTEM

Symptom	Possible cause	Actions
Battery is not charged	Refer to “TROUBLESHOOTING” under “CHARGING SYSTEM” on page 8-11.	

SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE

EAM20174

SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE

EAM30497

SELF-DIAGNOSTIC FUNCTION TABLE (FOR FUEL INJECTION SYSTEM)

Fault code	Item	Page
8	Gear position switch: open or short circuit detected.	8-23
12	Crankshaft position sensor: no normal signals are received from the crankshaft position sensor.	8-25
13	Intake air pressure sensor: open or short circuit detected.	8-26
14	Intake air pressure sensor: hose system malfunction (clogged or detached hose).	8-27
15	Throttle position sensor: open or short circuit detected.	8-28
16	Throttle position sensor: stuck throttle position sensor is detected.	8-30
21	Coolant temperature sensor: open or short circuit detected.	8-31
22	Intake air temperature sensor: open or short circuit detected.	8-32
30	The vehicle has overturned.	8-33
33	Ignition coil: open or short circuit detected in the primary lead of the ignition coil.	8-34
39	Injector: open or short circuit detected.	8-36
41	ECU: built-in lean angle sensor malfunction.	8-37
43	Fuel system voltage: incorrect voltage supplied to the CCU, and incorrect recognition voltage of the motorcycle.	8-38
44	EEPROM read error: an error is detected while reading or writing on EEPROM.	8-38
46	Vehicle system power supply: normal voltage is not supplied to the ECU.	8-40
50	ECU: faulty ECU memory.	8-41
70	Engine forcibly stops when the vehicle is left idling for a long period of time.	8-41

EAM30425

DIAGNOSTIC CODE: SENSOR OPERATION TABLE

Diagnostic code No.	Item	Display	Procedure
01	Throttle angle - Fully closed position - Fully opened position	Displays the throttle angle. 11–14 86–92	- Check with throttle fully closed. - Check with throttle fully opened.
03	Pressure of suction pipe	Displays the intake air pressure. Check the change of the intake pressure valve when the starter switch is pushed.	The atmospheric pressure is displayed on the Yamaha diagnostic tool.
05	Intake air temperature	Displays the intake air temperature.	Compare the actually measured intake air temperature with the Yamaha diagnostic tool display value.

SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE

Diagnostic code No.	Item	Display	Procedure
06	Coolant temperature	Displays the coolant temperature.	Compare the actually measured coolant temperature with the Yamaha diagnostic tool display value.
08	Lean angle sensor • Upright • Overturn	Displays the output voltage. • 0.4–1.4 (V) • 3.7–4.4 (V)	Remove the ECU, and incline it 45° or more.
09	Monitor voltage	Displays the voltage of the external battery connected to the Yamaha diagnostic tool. • Approximately 12.0 (V)	—
25	Gear position switch • Gear in neutral • Gear in 1st or 2nd • Gear in other than 1st or 2nd	• N • 1 • 3	Operate the shift pedal.
60	EEPROM fault code display • No fault • CO adjustment value • Power Tuner injection correction setting 0–8, or Power Tuner ignition timing correction setting 0–8 • Fully-closed throttle angle	• 00 • 01 • 07 • 12	—
64	Setting history display • There is no history. • There is some history. • History is unknown (History data is damaged).	Displays the presence or absence of the setting history by Power Tuner. • 00 • 01 • 02	—
65	Setting map erasure • There is no setting. • There is some setting.	Displays the presence or absence of the setting history by Power Tuner. • 00 • 01	Erase all setting maps by the operation start processing.
70	Program version number	Displays a program version No.	—

SELF-DIAGNOSTIC FUNCTION AND DIAGNOSTIC CODE TABLE

EAM30426

DIAGNOSTIC CODE: ACTUATOR OPERATION TABLE

Diagnostic code No.	Item	Actuation	Procedure
30	Ignition coil	Actuates the ignition coil five times at one-second intervals. "WARNING" on the Yamaha diagnostic tool blinks five times when the ignition coil is actuated.	Check that a spark is generated five times. • Connect an ignition checker.
36	Injector	Actuates the injector five times at one-second intervals. "WARNING" on the Yamaha diagnostic tool blinks five times when the injector is actuated.	TIP: Before performing this operation, be sure to disconnect the fuel pump coupler. Check that injector is actuated five times by listening for the operating sound.

TUNING

CHASSIS	10-1
SELECTION OF THE SECONDARY REDUCTION RATIO (SPROCKET).....	10-1
DRIVE AND REAR WHEEL SPROCKETS SETTING PARTS.....	10-1
TIRE PRESSURE.....	10-1
FRONT FORK SETTING.....	10-2
CHANGE IN AMOUNT AND CHARACTERISTICS OF FORK OIL.....	10-2
SETTING OF SPRING AFTER REPLACEMENT.....	10-2
FRONT FORK SETTING PARTS.....	10-3
REAR SUSPENSION SETTING.....	10-3
CHOOSING SET LENGTH.....	10-3
SETTING OF SPRING AFTER REPLACEMENT.....	10-4
REAR SHOCK ABSORBER SETTING PARTS.....	10-4
SUSPENSION SETTING (FRONT FORK).....	10-5
SUSPENSION SETTING (REAR SHOCK ABSORBER).....	10-6

EAM20119

CHASSIS

EAM30168

SELECTION OF THE SECONDARY REDUCTION RATIO (SPROCKET)

Secondary reduction ratio = Number of rear wheel sprocket teeth/Number of drive sprocket teeth



**Secondary reduction ratio
3.923 (51/13)**

<Requirement for selection of secondary gear reduction ratio>

- It is generally said that the secondary gear ratio should be reduced for a longer straight portion of a speed course and should be increased for a course with many corners. Actually, however, as the speed depends on the ground condition of the day of the race, be sure to run through the circuit to set the machine suitable for the entire course.
- In actuality, it is very difficult to achieve settings suitable for the entire course and some settings may be sacrificed. Thus, the settings should be matched to the portion of the course that has the greatest effect on the race result. In such a case, run through the entire course while making notes of lap times to find the best balance; then, determine the secondary reduction ratio.
- If a course has a long straight portion where a machine can run at maximum speed, the machine is generally set such that it can develop its maximum revolutions toward the end of the straight line, with care taken to avoid the engine over-revving.

TIP


Riding technique varies from rider to rider and the performance of a machine also vary from machine to machine. Therefore, do not imitate other rider's settings from the beginning but choose your own setting according to the level of your riding technique.

EAM30169

DRIVE AND REAR WHEEL SPROCKETS SETTING PARTS

Part name	Type	Part number
Drive sprocket "1" (STD)	13T	9383E-13233

Part name	Type	Part number
Rear wheel sprocket "2"	47T	17D-25447-50
	48T	17D-25448-50
	49T	B2W-25449-00
	50T	B2W-25450-00
	(STD) 51T	B2W-25451-00
	52T	17D-25452-50

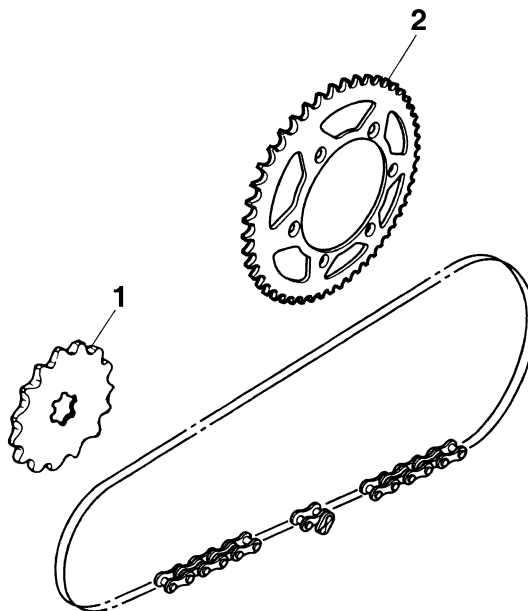

EAM30170

TIRE PRESSURE

Tire pressure should be adjusted to suit the road surface condition of the circuit.



**Standard tire pressure
100 kPa (1.00 kgf/cm², 15 psi)**

- Under a rainy, a muddy, a sandy, or a slippery condition, the tire pressure should be lower for a larger area of contact with the road surface.



**Extent of adjustment
60–80 kPa (0.60–0.80 kgf/cm², 9–12 psi)**

- Under a stony or a hard road condition, the tire pressure should be higher to prevent a flat tire.



**Extent of adjustment
100–120 kPa (1.00–1.20 kgf/cm², 15–18 psi)**

EAM30171

FRONT FORK SETTING

The front fork setting should be made depending on the rider's feeling of an actual run and the circuit conditions.

The front fork setting includes the following three factors:

1. Setting of air spring characteristics
 - Change the fork oil amount.
2. Setting of spring preload
 - Change the spring.
3. Setting of damping force
 - Change the compression damping force.
 - Change the rebound damping force.

The spring acts on the load and the damping force acts on the cushion travel speed.

EAM30172

CHANGE IN AMOUNT AND CHARACTERISTICS OF FORK OIL

Damping characteristic near the final stroke can be changed by changing the fork oil amount.


EWA19190

**WARNING**

Adjust the oil amount in 5 cm³ (0.2 US oz, 0.2 Imp.oz) increments or decrements. Too small oil amount causes the front fork to produce a noise at full rebound or the rider to feel some pressure on his hands or body. Alternatively, too large oil amount will cause the air spring characteristics to have a tendency to be stiffer with the consequent deteriorated performance and characteristics. Therefore, adjust the front fork within the specified range.



Recommended oil
Yamaha Suspension Oil S1
Standard oil amount
 280.0 cm³ (9.47 US oz, 9.88 Imp.oz)
Extent of adjustment
 260–365 cm³ (8.79–12.34 US oz, 9.17–12.87 Imp.oz)

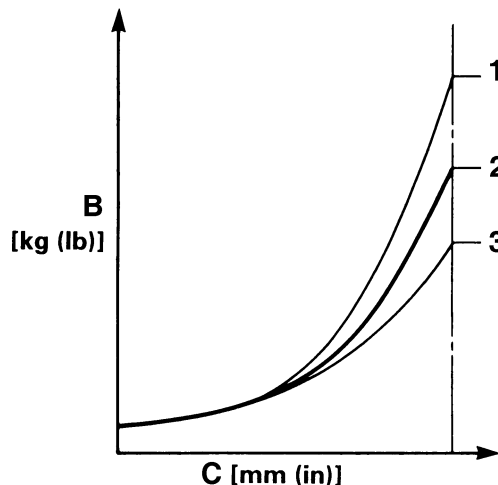A

- A. Air spring characteristics in relation to oil amount change
 B. Load
 C. Stroke
1. Max. oil amount
 2. Standard oil amount
 3. Min. oil amount

EAM30173

SETTING OF SPRING AFTER REPLACEMENT

As the front fork setting can be easily affected by the rear suspension, take care so that the front and the rear are balanced (in position etc.) when setting the front fork.

1. Use of soft spring
 - Change the rebound damping force.
Turn out one or two clicks.
 - Change the compression damping force.
Turn in one or two clicks.

TIP

Generally a soft spring gives a soft riding feeling. Rebound damping tends to become stronger and the front fork may sink deeply over a series of gaps.

2. Use of stiff spring
 - Change the rebound damping force.
Turn in one or two clicks.
 - Change the compression damping force.
Turn out one or two clicks.

TIP

Generally a stiff spring gives a stiff riding feeling.

Rebound damping tends to become weaker, resulting in lack of a sense of contact with the road surface or in a vibrating handlebar.

EAM30174

FRONT FORK SETTING PARTS

- Front fork spring

STD Spring rate N/mm	5.0
---------------------------------	------------

Type	Spring rate N/mm	Part number	I.D. mark (slits)
↑ SOFT	4.5	BR9-23141-20	I-II
	4.6	BR9-23141-30	I-III
	4.7	BR9-23141-40	I-III
	4.8	BR9-23141-50	I-III
	4.9	BR9-23141-60	II-II
↓ STIFF	5.0	BR9-23141-70	II-III
	5.1	BR9-23141-80	II-III

TIP

The I.D. mark (slits) is proved on the end of the spring.

EAM30175

REAR SUSPENSION SETTING

The rear shock absorber setting should be made depending on the rider's feeling of an actual run and the circuit conditions.


The rear suspension setting includes the following two factors:

- Setting of spring preload
 - Change the set length of the spring.
 - Change the spring.
- Setting of damping force
 - Change the rebound damping force.
 - Change the compression damping force.


EAM30176

CHOOSING SET LENGTH

- Place a stand or a block under the engine to put the rear wheel above the floor, and measure the length "a" between the rear wheel axle center and "△" mark of rear fender.

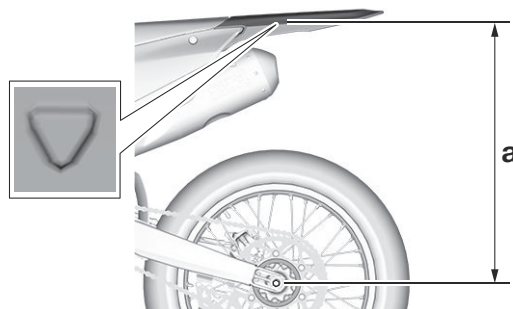

- Remove the stand or block from the engine and, with a rider astride the seat, measure the sunken length "b" between the rear wheel axle center and "△" mark of rear fender.

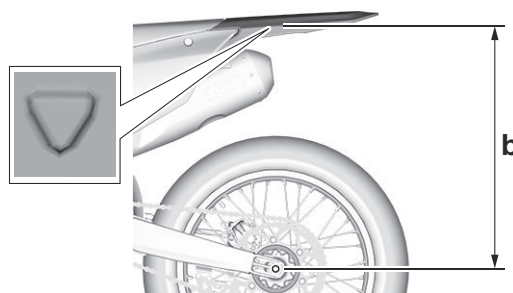


- Loosen the locknut "1" and make adjustment by turning the adjuster "2" to achieve the standard figure from the subtraction of the length "b" from the length "a".



Standard figure
90–100 mm (3.5–3.9 in)

TIP

- If the machine is new and after it is broken in, the same set length of the spring may change because of the initial fatigue, etc. of the spring. Therefore, be sure to make reevaluation.
- If the standard figure cannot be achieved by adjusting the adjuster and changing the set length, replace the spring with an optional one and make readjustment.

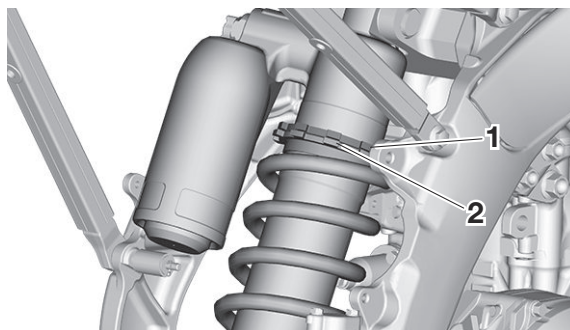

EAM30177

SETTING OF SPRING AFTER REPLACEMENT

After replacement, be sure to adjust the spring to the set length [sunken length 90–100 mm (3.5–3.9 in)] and set it.

1. Use of soft spring

- Adjust to decrease rebound damping force to compensate for less spring load. Run with the rebound damping force adjuster one or two clicks turned out, and readjust it to suit your preference.

2. Use of stiff spring

- Adjust to increase rebound damping force to compensate for greater spring load. Run with the rebound damping force adjuster one or two clicks turned in, and readjust it to suit your preference.

TIP


Adjusting the rebound damping force will be followed more or less by a change in the compression damping force. For correction, adjust to decrease compression damping force.

EWA19200

WARNING

When using a rear shock absorber other than currently installed, use the one whose overall length “a” does not exceed the standard as it may result in faulty performance. Never use one whose overall length is greater than standard.

	Length “a” of standard shock 460.5 mm (18.1 in)
---	---

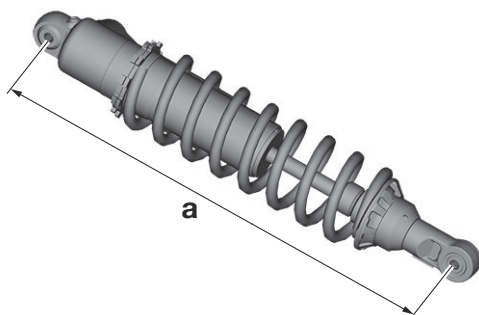

EAM30178

REAR SHOCK ABSORBER SETTING PARTS


- Rear shock spring “1”

STD Spring rate N/mm	56
--------------------------------	-----------

Type	Spring rate N/mm	Part number	I.D. mark
SOFT ↑	52	BR9-22212-00 (Blue)	Yellow
	54	BR9-22212-10 (Blue)	Pink
	56	BR9-22212-A0 (Silver)	White
↓ STIFF	58	BR9-22212-B0 (Silver)	Gold
	60	BR9-22212-40 (Blue)	Brown

TIP

- The I.D. mark “a” is marked at the end of the spring.
- Spring specification varies according to the color of I.D. marks.

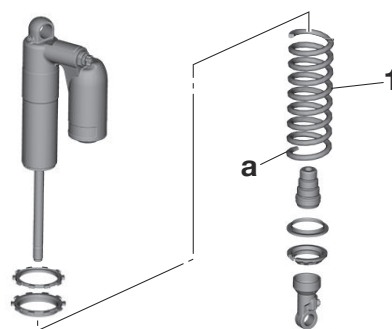

- Spring preload adjusting positions

	Spring preload adjusting positions
	Minimum Position in which the spring is turned in 1.5 mm (0.06 in) from its free length.
	Standard Position in which the spring is turned in 7.0 mm (0.28 in) from its free length.
	Maximum Position in which the spring is turned in 18.0 mm (0.71 in) from its free length.

TIP

For the spring preload adjustment, refer to “ADJUSTING THE REAR SHOCK ABSORBER ASSEMBLY” on page 3-31.

EAM30179

SUSPENSION SETTING (FRONT FORK)**TIP**

- If any of the following symptoms is experienced with the standard position as the base, make resetting by reference to the adjustment procedure given in the same chart.
- Before any change, set the rear shock absorber sunken length to the standard figure 90–100 mm (3.5–3.9 in).

Symptom	Section				Check	Adjust
	Jump	Large gap	Medium gap	Small gap		
Stiff over entire range	√	√	√		Compression damping force	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.
					Oil amount	Decrease oil amount by about 5–10 cm ³ (0.2–0.3 US oz, 0.2–0.4 Imp.oz).
					Spring	Replace with soft spring.
Unsmooth movement over entire range	√	√	√	√	Outer tube Inner tube	Check for any bends, dents, other noticeable scars, etc. If any, replace affected parts.
					Slide metal	Replace with a new one for extended use.
					Piston metal	Replace with a new one for extended use.
					Lower bracket tightening torque	Retighten to specified torque.
Poor initial movement				√	Rebound damping force	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.
					Oil seals	Apply grease in oil seal wall.
Soft over entire range, bottoming out	√	√			Compression damping force	Turn adjuster clockwise (about 2 clicks) to increase damping.
					Oil amount	Increase oil amount by about 5–10 cm ³ (0.2–0.3 US oz, 0.2–0.4 Imp.oz).
					Spring	Replace with stiff spring.
Stiff toward stroke end	√				Oil amount	Decrease oil amount by about 5 cm ³ (0.2 US oz, 0.2 Imp.oz).
Soft toward stroke end, bottoming out	√				Oil amount	Increase oil amount by about 5 cm ³ (0.2 US oz, 0.2 Imp.oz).
Stiff initial movement	√	√	√	√	Compression damping force	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.

Symptom	Section				Check	Adjust
	Jump	Large gap	Medium gap	Small gap		
Low front, tending to lower front posture			√	√	Compression damping force	Turn adjuster clockwise (about 2 clicks) to increase damping.
					Rebound damping force	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.
					Balance with rear end	Set sunken length for 95–100 mm (3.7–3.9 in) when one passenger is astride seat (lower rear posture).
					Oil amount	Increase oil amount by about 5 cm ³ (0.2 US oz, 0.2 Imp.oz).
“Obtrusive” front, tending to upper front posture			√	√	Compression damping force	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.
					Balance with rear end	Set sunken length for 90–95 mm (3.5–3.7 in) when one passenger is astride seat (upper rear posture).
					Spring	Replace with soft spring.
					Oil amount	Decrease oil amount by about 5–10 cm ³ (0.2–0.3 US oz, 0.2–0.4 Imp.oz).

EAM30180

SUSPENSION SETTING (REAR SHOCK ABSORBER)**TIP**

- If any of the following symptoms is experienced with the standard position as the base, make resetting by reference to the adjustment procedure given in the same chart.
- Adjust the rebound damping in 2-click increments or decrements.
- Adjust the low compression damping in 1-click increments or decrements.
- Adjust the high compression damping in 1/6 turn increments or decrements.

Symptom	Section				Check	Adjust
	Jump	Large gap	Medium gap	Small gap		
Stiff, tending to sink			√	√	Rebound damping force	Turn adjuster counterclockwise (about 2 clicks) to decrease damping.
					Spring set length	Set sunken length for 90–100 mm (3.5–3.9 in) when one passenger is astride seat.
Spongy and unstable			√	√	Rebound damping force	Turn adjuster clockwise (about 2 clicks) to increase damping.
					Low compression damping	Turn adjuster clockwise (about 1 click) to increase damping.
					Spring	Replace with stiff spring.

Symptom	Section				Check	Adjust
	Jump	Large gap	Medium gap	Small gap		
Heavy and dragging			√	√	Rebound damping force Spring	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Replace with soft spring.
Poor road gripping				√	Rebound damping force Low compression damping High compression damping Spring set length Spring	Turn adjuster counterclockwise (about 2 clicks) to decrease damping. Turn adjuster clockwise (about 1 click) to increase damping. Turn adjuster clockwise (about 1/6 turn) to increase damping. Set sunken length for 90–100 mm (3.5–3.9 in) when one passenger is astride seat. Replace with soft spring.
Bottoming out	√	√			High compression damping Spring set length Spring	Turn adjuster clockwise (about 1/6 turn) to increase damping. Set sunken length for 90–100 mm (3.5–3.9 in) when one passenger is astride seat. Replace with stiff spring.
Bouncing	√	√			Rebound damping force Spring	Turn adjuster clockwise (about 2 clicks) to increase damping. Replace with soft spring.
Stiff travel	√	√			High compression damping Spring set length Spring	Turn adjuster counterclockwise (about 1/6 turn) to decrease damping. Set sunken length for 90–100 mm (3.5–3.9 in) when one passenger is astride seat. Replace with soft spring.

WIRING DIAGRAM

YZ450FT 2026

1. AC magneto
2. Rectifier/regulator
3. Battery
4. Fuse
5. Starter relay
6. Starter motor
7. Diode 1
8. Throttle position sensor
9. Intake air pressure sensor
10. Crankshaft position sensor
11. Intake air temperature sensor
12. Coolant temperature sensor
13. ECU (Engine Control Unit)
14. Ignition coil
15. Spark plug
16. Fuel injector
17. Fuel pump
18. CCU (Communication Control Unit)
19. Gear position switch
20. Handlebar switch (left)
21. Indicator light
22. Multi-function button
23. Engine stop switch
24. Handlebar switch (right)
25. Starter switch
26. Frame ground
27. Engine ground

- A. Wire harness
B. CCU sub-lead

COLOR CODE

B	Black
Br	Brown
DI	Dark blue
G	Green
Gy	Gray
L	Blue
P	Pink
R	Red
Sb	Sky blue
W	White
Y	Yellow
B/Br	Black/Brown
B/L	Black/Blue
B/R	Black/Red
B/W	Black/White
B/Y	Black/Yellow
Br/W	Brown/White
G/B	Green/Black
L/B	Blue/Black
Lg/L	Light green/Blue
Lg/W	Light green/White
R/B	Red/Black
R/L	Red/Blue
R/W	Red/White
R/Y	Red/Yellow
W/B	White/Black
Y/B	Yellow/Black
Y/W	Yellow/White

For your best ownership experience, think **Genuine Yamaha!**

Genuine Yamaha Parts – Genuine Yamaha replacement parts are the exact same parts as the ones originally equipped on your vehicle, providing you with the performance and durability you have come to expect. Why settle for aftermarket parts that may not provide full confidence and satisfaction?

Genuine Yamaha Accessories – Yamaha only offers accessories that meet our high standards for quality and performance. Buy with confidence, knowing your Genuine Yamaha Accessories will fit right and perform right – right out of the box.

Yamalube – Take care of your Yamaha with legendary Yamalube oils, lubricants, and care products. They're formulated and approved by the toughest judges we know: the Yamaha engineering teams that know your Yamaha from the inside out.


Genuine Yamaha Service Manuals – Get the same factory manual for your vehicle that the technicians at your authorized Yamaha dealer use. Service manuals are available through your Yamaha dealer or you can order them directly through yamahapubs.com.

Genuine Yamaha products are available only from your Yamaha dealer.

Find out more at yamaha-motor.com



YZ450FT 2026 WIRING DIAGRAM

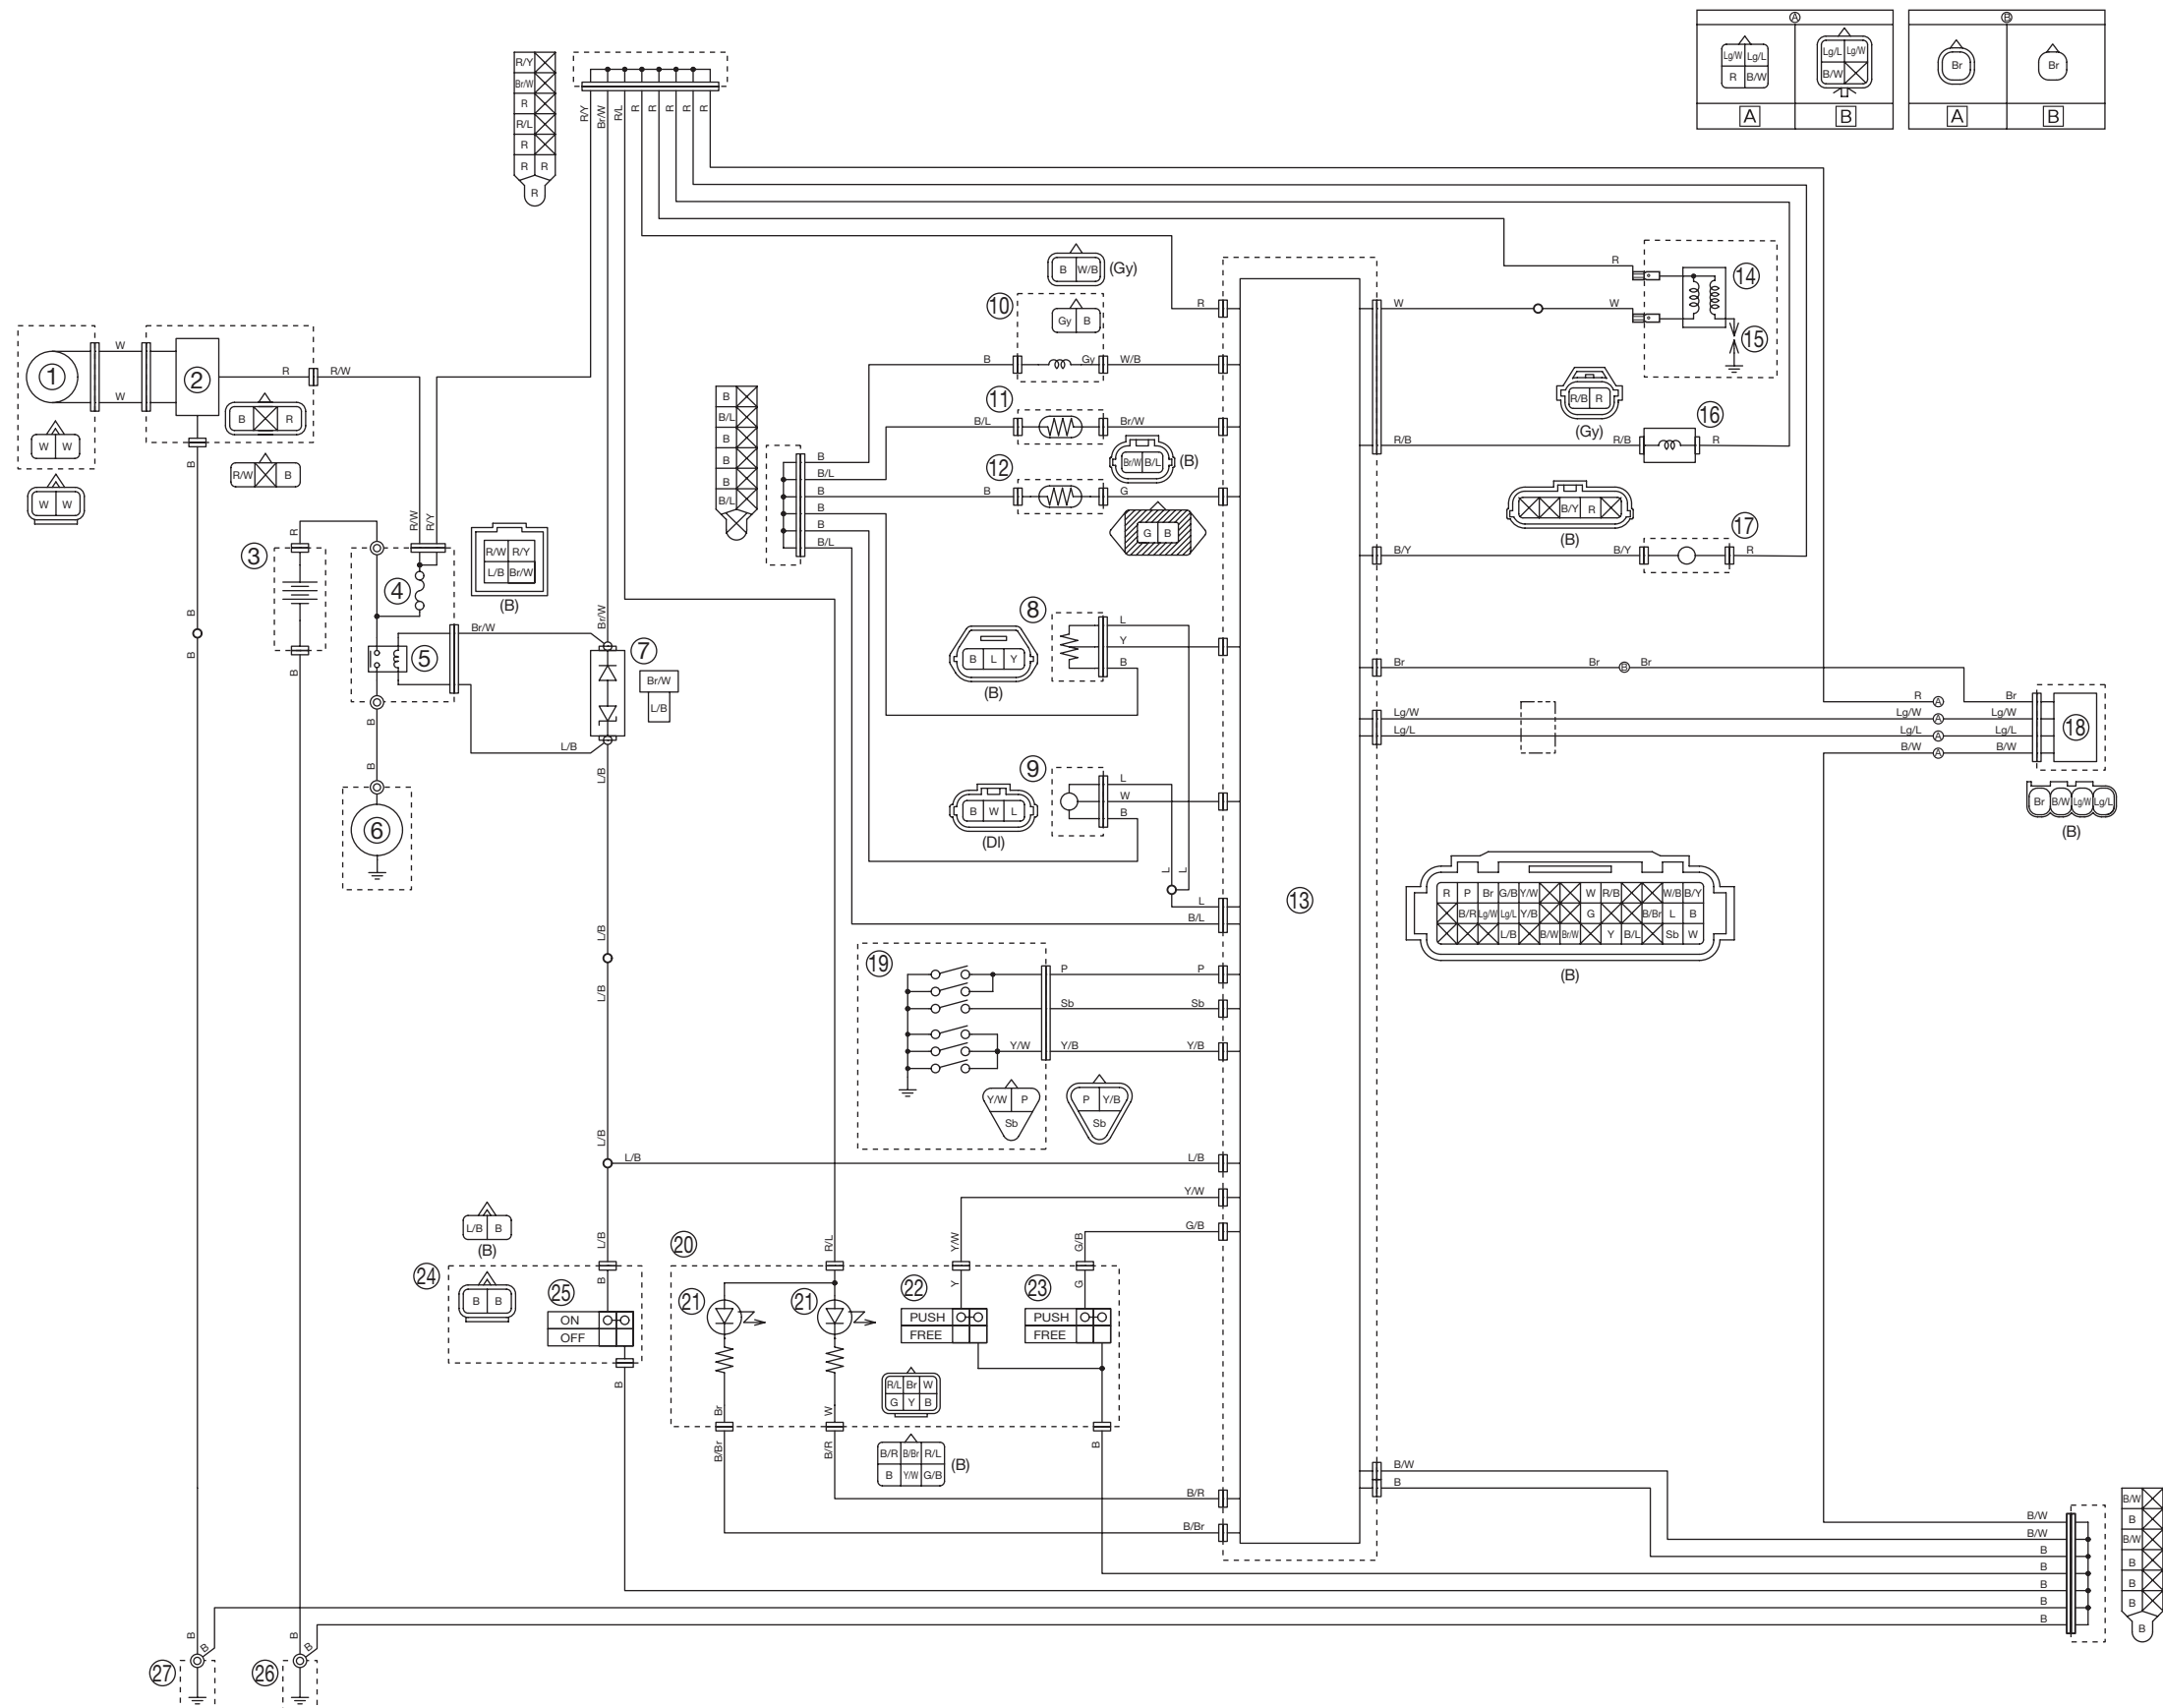

YZ450FT 2026
WIRING DIAGRAM

