YAMAHA

Read this manual carefully before operating this vehicle.

OWNER'S MANUAL



YZF155-A

B9E-F8199-E1

EAU46094

⚠ Read this manual carefully before operating this vehicle. This manual should stay with this vehicle if it is sold.

EAU10103

Welcome to the Yamaha world of motorcycling!
As the owner of the YZF155-A, you are benefiting from Yamaha's vast experience and newest technology regarding the design and manufacture of high-quality products, which have earned Yamaha a reputation for dependability.
Please take the time to read this manual thoroughly, so as to enjoy all advantages of your YZF155-A. The Owner's Manual does not only instruct you in how to operate, inspect and maintain your motorcycle, but also in how to safeguard yourself and others from trouble and injury.
In addition, the many tips given in this manual will help keep your motorcycle in the best possible condition. If you have any further questions, do not hesitate to contact your Yamaha dealer.
The Yamaha team wishes you many safe and pleasant rides. So, remember to put safety first!
Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.

EWA10032

⚠ WARNING

Please read this manual carefully and completely before operating this motorcycle.

Important manual information

EAU10134

Particularly important information is distinguished in this manual by the following notations:

⚠	**This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.**
⚠ WARNING	**A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.**
NOTICE	**A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.**
TIP	A TIP provides key information to make procedures easier or clearer.

*Product and specifications are subject to change without notice.

EAUE0011

YZF155-A
OWNER'S MANUAL
©2019 by India Yamaha Motor Pvt. Ltd.
1st edition, December 2018
All rights reserved.
Any reprinting or unauthorized use without the written permission of India Yamaha Motor Pvt. Ltd. is expressly prohibited.
Printed in India.

Table of contents

Location of important labels 1-1

Safety information 2-1
- Further safe-riding points 2-5

Description 3-1
- Left view 3-1
- Right view 3-2
- Controls and instruments 3-3

Instrument and control functions 4-1
- Main switch/steering lock 4-1
- Indicator lights and warning lights 4-2
- Multi-function meter unit 4-3
- Handlebar switches 4-11
- Clutch lever 4-12
- Shift pedal 4-12
- Brake lever 4-12
- Brake pedal 4-13
- ABS 4-13
- Fuel tank cap 4-14
- Fuel 4-15
- Catalytic converter 4-16
- Seats 4-16
- Helmet holder 4-17
- Sidestand 4-18
- Starting circuit cut-off system 4-18

For your safety – pre-operation checks 5-1

Operation and important riding points 6-1
- Starting the engine 6-1
- Shifting 6-2
- Tips for reducing fuel consumption 6-3
- Engine break-in 6-3
- Parking 6-4

Periodic maintenance and adjustment 7-1
- Tool kit 7-1
- Periodic maintenance chart for the emission control system 7-2
- General maintenance and lubrication chart 7-3
- Removing and installing the cowling and panels 7-7
- Checking the spark plug 7-9
- Canister 7-10
- Engine oil and oil filter element 7-11
- Why Yamalube 7-13
- Coolant 7-14
- Cleaning the air filter element 7-15
- Adjusting the engine idling speed 7-16
- Adjusting the throttle grip free play 7-17
- Valve clearance 7-18
- Tires 7-18
- Cast wheels 7-20
- Adjusting the clutch lever free play 7-20
- Checking the brake lever free play 7-21
- Brake light switches 7-22
- Checking the front and rear brake pads 7-22
- Checking the brake fluid level 7-23
- Changing the brake fluid 7-24
- Drive chain slack 7-25
- Cleaning and lubricating the drive chain 7-26
- Checking and lubricating the cables 7-27
- Checking and lubricating the throttle grip and cable end 7-27
- Checking and lubricating the brake and shift pedals 7-27
- Checking and lubricating the brake and clutch levers 7-28
- Checking and lubricating the sidestand 7-29
- Lubricating the swingarm pivots 7-29
- Checking the front fork 7-29
- Checking the steering 7-30
- Checking the wheel bearings 7-30
- Battery 7-31

Replacing the fuses.....7-32
Vehicle lights 7-33
Replacing a turn signal light bulb.....7-33
Front wheel.....7-34
Rear wheel.....7-34
Troubleshooting 7-34
Troubleshooting charts 7-36

Motorcycle care and storage 8-1
Matte color caution 8-1
Care.....8-1
Storage.....8-3

Specifications.....9-1

Consumer information 10-1
Identification numbers.....10-1

Index 11-1

Location of important labels

EAU10385

Read and understand all of the labels on your vehicle. They contain important information for safe and proper operation of your vehicle. Never remove any labels from your vehicle. If a label becomes difficult to read or comes off, a replacement label is available from your Yamaha dealer.

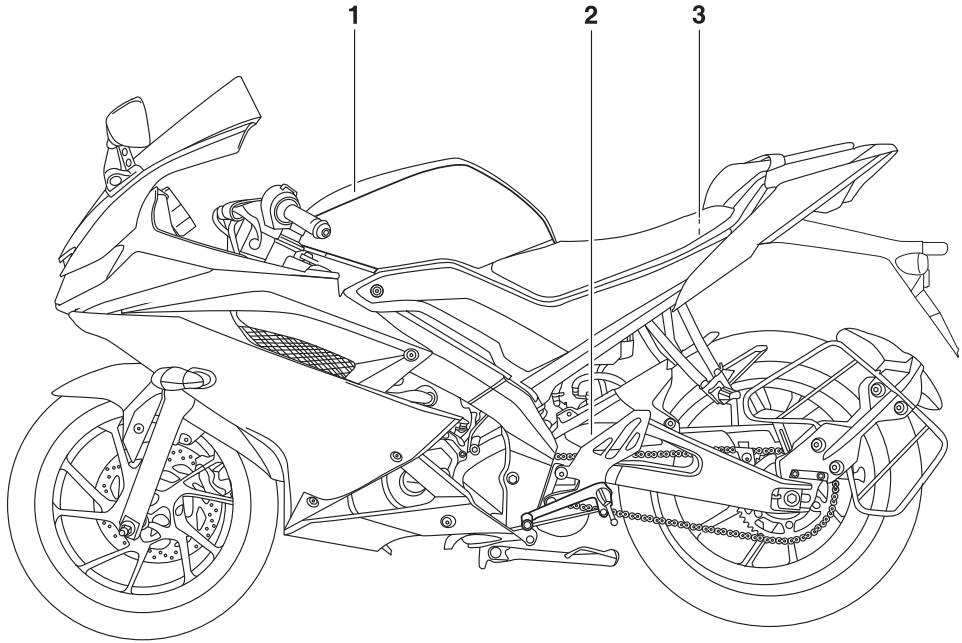

ZAUE3336

1

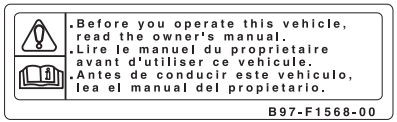

2

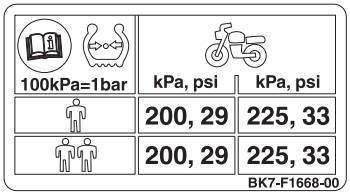

3



ZAUE3337

EAU1028C

2

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.
- Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. See page 5-1 for a list of pre-operation checks.

- This motorcycle is designed to carry the operator and a passenger.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.

- Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.
  - Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
  - Know your skills and limits. Staying within your limits may help you to avoid an accident.
  - We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
- Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed).
  - Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
  - Always signal before turning or changing lanes. Make sure that other motorists can see you.
- The posture of the operator and passenger is important for proper control.
  - The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
  - The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
- Never ride under the influence of alcohol or other drugs.
- This motorcycle is designed for on-road use only. It is not suitable for off-road use.

Protective Apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

- Always wear an approved helmet.
- Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
- The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
- Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.
- A passenger should also observe the above precautions.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.
- Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Loading

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use extra care when riding a motorcycle that has added cargo or accessories. Here, along with the information about accessories below, are some general guidelines to follow if loading cargo to your motorcycle:

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit. **Operation of an overloaded vehicle could cause an accident.**

Maximum load:
166 kg (366 lb)

When loading within this weight limit, keep the following in mind:

- Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Securely pack your heaviest items as close to the center of the vehicle as possible and make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.
- Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.
  - Properly adjust the suspension for your load (suspension-adjustable models only), and check the condition and pressure of your tires.
  - Never attach any large or heavy items to the handlebar, front fork, or front fender. These items, including such cargo as sleeping bags, duffel bags, or

tents, can create unstable handling or a slow steering response.

- **This vehicle is not designed to pull a trailer or to be attached to a sidecar.**

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under "Loading" when mounting accessories.

- Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
  - Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.
  - Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when passing or being passed by large vehicles.
  - Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the

operator and may limit control ability, therefore, such accessories are not recommended.

- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. See page 7-18 for tire specifications and for information on servicing and replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.

- Remove all loose items from the motorcycle.
- Check that the fuel cock (if equipped) is in the off position and that there are no fuel leaks.
- Shift the transmission into gear (for models with a manual transmission).
- Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or upper front fork triple clamp (and not, for example, to rubber-mounted handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.
- The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

EAU57610

Further safe-riding points

- Be sure to signal clearly when making turns.
- Braking can be extremely difficult on a wet road. Avoid hard braking, because the motorcycle could slide. Apply the brakes slowly when stopping on a wet surface.
- Slow down as you approach a corner or turn. Once you have completed a turn, accelerate slowly.
- Be careful when passing parked cars. A driver might not see you and open a door in your path.
- Railroad crossings, streetcar rails, iron plates on road construction sites, and manhole covers become extremely slippery when wet. Slow down and cross them with caution. Keep the motorcycle upright, otherwise it could slide out from under you.
- The brake pads or linings could get wet when you wash the motorcycle. After washing the motorcycle, check the brakes before riding.

- Always wear a helmet, gloves, trousers (tapered around the cuff and ankle so they do not flap), and a brightly colored jacket.
- Do not carry too much luggage on the motorcycle. An overloaded motorcycle is unstable. Use a strong cord to secure any luggage to the carrier (if equipped). A loose load will affect the stability of the motorcycle and could divert your attention from the road. (See page 2-3.)

Description

EAU10411

Left view

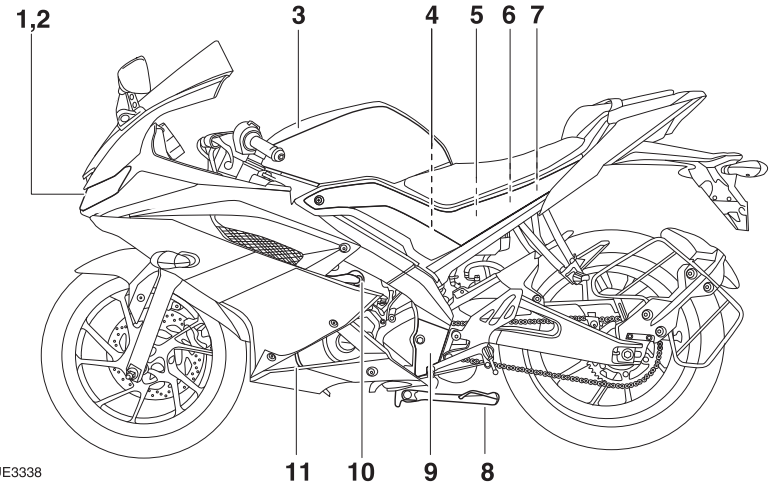

ZAUE3338

1. Headlight (page 7-33)
2. Auxiliary light
3. Fuel tank cap (page 4-14)
4. Air filter (page 7-15)
5. Battery (page 7-31)
6. Fuse (page 7-32)
7. Tool kit (page 7-1)
8. Sidestand (page 4-18)
9. Shift pedal (page 4-12)
10. Idle adjusting screw (page 7-16)
11. Coolant reservoir (page 7-14)

EAU10421

Right view

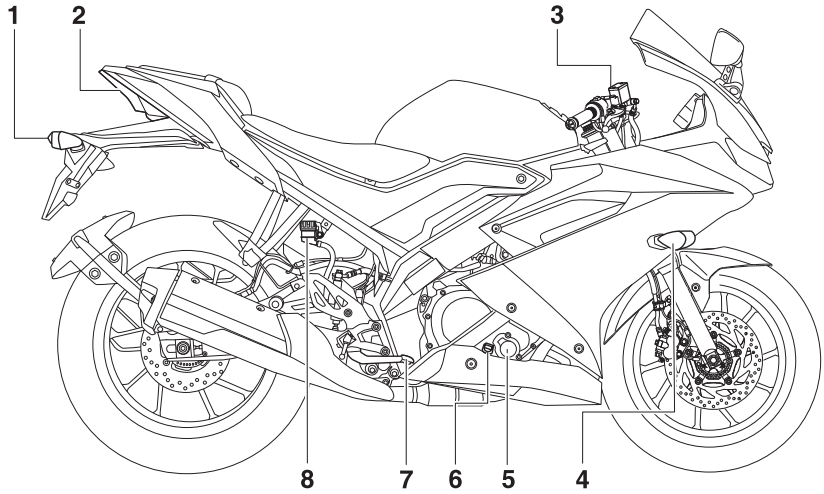

ZAUE3701

1. Rear turn signal light (page 7-33)
2. Tail/brake light
3. Front brake fluid reservoir (page 7-23)
4. Front turn signal light (page 7-33)
5. Engine oil filter element (page 7-11)
6. Dipstick (page 7-11)
7. Brake pedal (page 4-13)
8. Rear brake fluid reservoir (page 7-23)

EAU10431

Controls and instruments

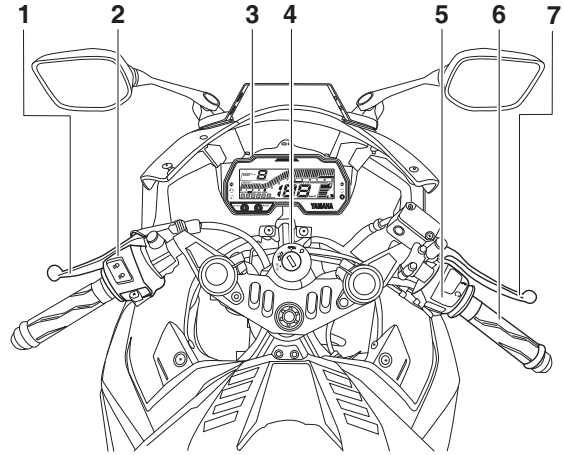

ZAUE3702

1. Clutch lever (page 4-12)
2. Left handlebar switches (page 4-11)
3. Multi-function meter unit (page 4-3)
4. Main switch/steering lock (page 4-1)
5. Right handlebar switches (page 4-11)
6. Throttle grip (page 7-17)
7. Brake lever (page 4-12)

EAU10462

Main switch/steering lock

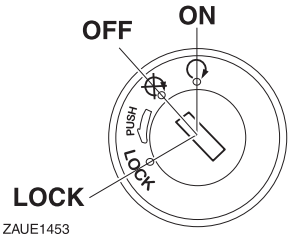

ZAUE1453

The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various positions are described below.

EAUE3340

∩ (on)
All electrical circuits are supplied with power. The meter lighting, taillight, license plate light and auxiliary lights come on, and the engine can be started. The key cannot be removed.

TIP
The headlight comes on automatically when the engine is started and stays on even if engine stop switch turn to "⊠". The headlight will turn off when the key is turned to "⊠".

EAU54301

⊠ (off)
All electrical systems are off. The key can be removed.

EWA16371

⚠ WARNING

Never turn the key to "⊠" or "LOCK" while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.

EAU10696

LOCK
The steering is locked and all electrical systems are off. The key can be removed.

To lock the steering

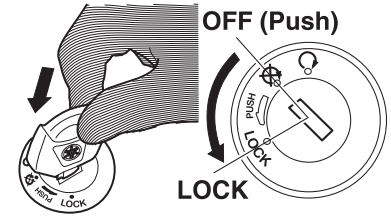

ZAUE2730

1. Turn the handlebars all the way to the left or right.
2. With the key in the "OFF" position, push the key in and turn it to "LOCK".
3. Remove the key.

TIP
If the steering will not lock, try turning the handlebars back to the right or left slightly.

4

To unlock the steering

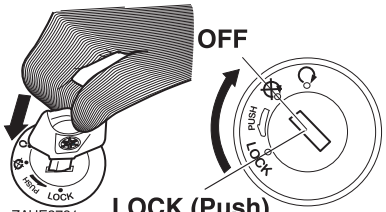

From the “LOCK” position, push the key and turn it to “OFF”.

EAU4939G

Indicator lights and warning lights

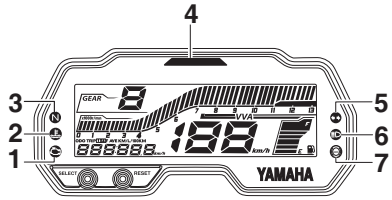

1. Engine trouble warning light “”
2. Coolant temperature warning light “”
3. Neutral indicator light “N”
4. Shift timing indicator light
5. Turn signal indicator light “”
6. High beam indicator light “”
7. Anti-lock Brake System (ABS) warning light

EAU11022

Turn signal indicator light “”
This indicator light flashes when a turn signal light is flashing.

EAU11061

Neutral indicator light “N”
This indicator light comes on when the transmission is in the neutral position.

EAU11081

High beam indicator light “”
This indicator light comes on when the high beam of the headlight is switched on.

EAU11449

Coolant temperature warning light “”
This warning light comes on when the engine is overheating. If this occurs, stop the engine immediately and allow the engine to cool. (See page 7-37.)
For vehicles with a radiator fan, the radiator fan(s) automatically switch on or off according to the coolant temperature.

TIP
When the vehicle is turned on, the light will come on for a few seconds, and then go off. If the light does not come on, or if the light remains on, have a Yamaha dealer check the vehicle.

ECA10022

NOTICE

Do not continue to operate the engine if it is overheating.

EAU85130

Engine trouble warning light "🔧"

This warning light comes on or flashes if a problem is detected in the engine. If this occurs, have a Yamaha dealer check the vehicle as soon as possible.

TIP

When the vehicle is turned on, this light should come on for a few seconds and then go off. Otherwise, have a Yamaha dealer check the electrical circuit.

EAU69895

ABS warning light "(ABS)"

This warning light comes on when the vehicle is first turned on, and goes off after starting riding. If the warning light comes on while riding, the anti-lock brake system may not work correctly.

EWA16043

⚠ WARNING

If the ABS warning light does not turn off after reaching 10 km/h (6 mi/h), or if the warning light comes on while riding:

- **Use extra caution to avoid possible wheel lock during emergency braking.**
- **Have a Yamaha dealer check the vehicle as soon as possible.**

EAU67433

Shift indicator light "○"

This indicator light comes on when it is time to shift to the next higher gear. The engine speeds at which it comes on or goes off can be adjusted.

TIP

When the vehicle is turned on, this light should come on for a few seconds and then go off. If the light does not come on, or if the light remains on, have a Yamaha dealer check the vehicle.

EAU80724

Multi-function meter unit

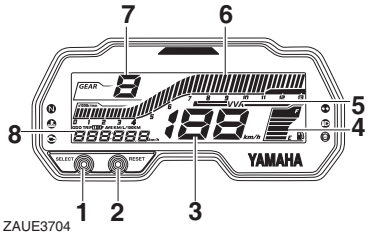

ZAUE3704

1. "SELECT" button
2. "RESET" button
3. Speedometer
4. Fuel meter
5. VVA (variable valve actuation) indicator
6. Tachometer
7. Transmission gear display
8. Multi-function display

EWA12423

⚠ WARNING

Be sure to stop the vehicle before making any setting changes to the multi-function meter unit. Changing settings while riding can distract the operator and increase the risk of an accident.

The multi-function meter unit is equipped with the following:

- a speedometer
- a fuel meter
- a VVA indicator
- a tachometer
- a transmission gear display
- a multi-function display
- a shift light

TIP

- In addition, the screen brightness, the shift light, and the welcome screen can be adjusted.
- This model also has a self-diagnosis device, and error codes may be displayed.

Speedometer

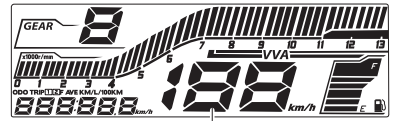

ZAUE3705

1. Speedometer

The speedometer shows the vehicle's traveling speed.

Fuel meter

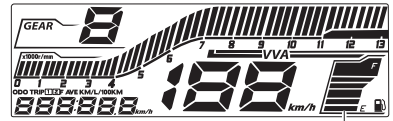

ZAUE3706

1. Fuel meter

The fuel meter indicates the amount of fuel in the fuel tank. The display segments of the fuel meter disappear from "F" (full) towards "E" (empty) as the fuel level decreases. When the last segment start flashing, refuel as soon as possible.

VVA indicator

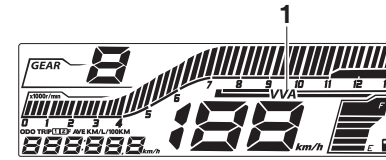

ZAUE3707

1. VVA (variable valve actuation) indicator

This model is equipped with variable valve actuation (VVA) for good fuel economy and acceleration in both the low-speed and high-speed ranges. The VVA indicator comes on when the variable valve actuation system has switched to the high-speed range.

Tachometer

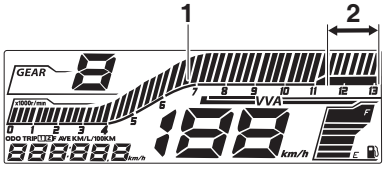

ZAUE3708

1. Tachometer
2. High-rpm zone

The tachometer shows the engine speed.

ECA23050

NOTICE

Do not operate the engine in the tachometer high-r/min zone.
High-r/min zone: 11500 r/min and above

Transmission gear display

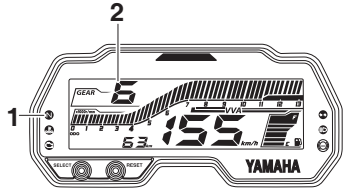

ZAUE3709

1. Neutral indicator light "**N**"
2. Transmission gear display

This display shows the currently selected gear. The neutral position is indicated by "**–**".

Multi-function display

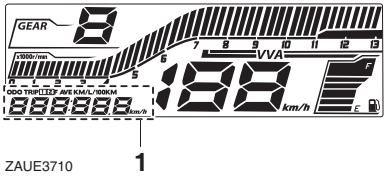

ZAUE3710

1. Multi-function display

The multi-function display is equipped with the following:

- an odometer
- two tripmeters
- a fuel reserve tripmeter
- a clock
- an instantaneous fuel consumption display
- an average fuel consumption display
- an average speed display
- a welcome screen display

Navigating the multi-function display

Push the "SELECT" button to switch the multi-function display between the odometer mode "ODO", tripmeters mode "TRIP 1" and "TRIP 2", clock mode " _ _:_ _ ", instantaneous fuel consumption mode "km/L" or "L/100 km", average fuel consumption mode "AVE_ _._ km/L" or "AVE_ _._ L/100 km", and average speed mode "AVE_ _._ km/h" in the following order:

ODO → TRIP 1 → TRIP 2 → TRIP F (when low on fuel) → CLOCK → km/L or L/100 km → AVE_ _._ km/L or AVE_ _._ L/100 km → AVE_ _._ km/h → ODO

TIP

- Push the “RESET” button to switch the display in the reverse order.
- If the last segment of the fuel meter starts flashing, the display automatically changes to the fuel reserve tripmeter mode “TRIP F” and starts counting the distance traveled from that point.
- The fuel reserve tripmeter will reset automatically and disappear after refueling and traveling 5 km.
- To manually reset a standard tripmeter or the fuel tripmeter, select it and then push the “RESET” button for one second.

Odometer mode

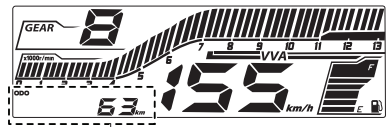

ZAUE3711 **1**

1. Odometer

The odometer shows the total distance traveled by the vehicle.

TIP

The odometer will lock at 999999 and cannot be reset.

Tripmeters mode

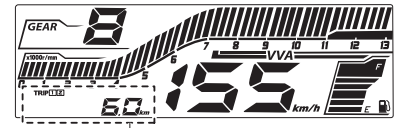

ZAUE3712 **1**

1. Tripmeter

The tripmeters shows the total distance traveled since they were last reset.

TIP

The tripmeters will automatically reset and begin counting again after 9999.9 is reached.

Clock mode



ZAUE3713 **1**

1. Clock

The clock uses a 12-hour time system.

To set the clock

1. Switch the display to the clock mode.
2. With the display in the clock mode, push and hold the "SELECT" and "RESET" button together.
3. When the hour digits start flashing, use the "RESET" button to set the hours.
4. Push the "SELECT" button and the minutes will start flashing.
5. Use the "RESET" button to set the minutes.
6. Push the "SELECT" button to start the clock.

Instantaneous fuel consumption mode

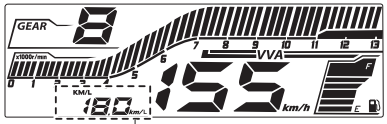

ZAUE3714 **1**

1. Instantaneous fuel consumption display

This shows the current fuel consumption when the vehicle is traveling at least 10 km/h. There are two display modes: "km/L" and "L/100 km". To switch the instantaneous fuel consumption display between "km/L" and "L/100 km", push the "SELECT" button for one second.

- "km/L": the distance that can be traveled on 1.0 L of fuel under current riding conditions.
- "L/100 km": The amount of fuel necessary to travel 100 km under current riding conditions.

TIP

- When traveling at speeds under 10 km/h, "_ _._" is displayed.
- The instantaneous fuel consumption function should be used for general reference only. Do not use this figure to estimate the distance that can be traveled on the current tank of fuel.

Average fuel consumption mode

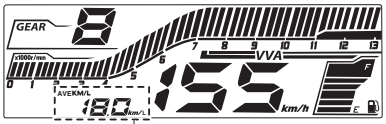

ZAUE3715 **1**

1. Average fuel consumption display

This shows the average fuel consumption since it was last reset. There are two display modes: "AVE_ _._ km/L"

and “AVE_ _._ L/100 km”. To switch the average fuel consumption units, push the “SELECT” button for one second. To reset the average fuel consumption display, push and hold the “RESET” button.

- “AVE_ _._ km/L”: the average distance traveled on 1.0 L of fuel.
- “AVE_ _._ L/100 km”: the average amount of fuel used to travel 100 km.

TIP

- After resetting the average fuel consumption, “_ _._” will be shown until the vehicle has traveled 1 km.
  The average fuel consumption function is for general reference only. Do not use this figure to estimate the distance that can be traveled on the current tank of fuel.

Average speed mode

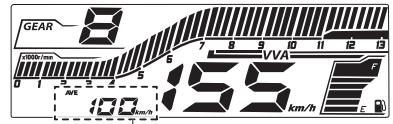

ZAUE3716

1. Average speed display

This shows the vehicle’s average traveling speed since it was last reset. To reset the average speed display, push and hold the “RESET” button until the average speed flashes, and then push the button again.

Shift light control mode

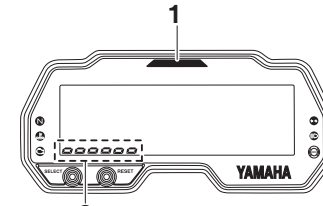

ZAUE3717

1. Shift indicator light “ ○ ”
2. Brightness level display

The shift light has four settings which can be adjusted.

- Flashing pattern: choose whether or not the shift light will come on, and whether it will flash or light continuously.
- Activation point: select the engine speed at which the shift light is activated.
- Deactivation point: select the engine speed at which the shift light is deactivated.
- Brightness adjustment: adjust the brightness of the shift light.

To adjust the shift light

1. Turn the main switch off.
2. Push and hold the "SELECT" button.
3. Turn the main switch on, and then release the "SELECT" button after five seconds. After that, push the "SELECT" button again. The multi-function meter unit will enter the shift light control mode.

To set the flashing pattern

1. Push the "RESET" button to select one of the following flashing pattern settings:
   - On: the shift light will light continuously when activated. (This setting is selected when the shift light stays on.)
   - Flash: the shift light will flash when activated. (This setting is selected when the indicator light flashes four times per second.)
   - Off: the shift light is deactivated; in other words, it does not come on or flash. (This setting is selected when the shift light flashes once every two seconds.)
2. Push the "SELECT" button to confirm the selected flashing pattern. Next the shift light activation point can be set.

To set the shift activation point

TIP

- The tachometer will show the current activation point.
- The shift light activation point can be set between 9000 r/min and 13000 r/min in increments of 250 r/min.

1. Push the "RESET" button to select the desired engine speed.
2. Push the "SELECT" button to confirm the selected engine speed.
3. Next the shift light deactivation point can be set.

To set the deactivation point

TIP

- The tachometer will show the current deactivation point.
- The shift light deactivation point can be set between 9000 r/min and 13000 r/min in increments of 250 r/min.
- Be sure to set the deactivation point to a higher engine speed than for the activation point, otherwise the shift light will not come on.

1. Push the "RESET" button to select the desired engine speed.
2. Push the "SELECT" button to confirm the selected engine speed.
3. Next the shift light brightness can be adjusted.

To adjust the brightness

1. Push the "RESET" button to select the desired shift light brightness level.
2. Push the "SELECT" button to confirm the selected brightness level.
3. The display exits the shift light control mode and returns to the standard multi-function display mode.

Welcome screen control mode

The welcome screen greets you when the main switch is turned on “Hi Buddy”, and when the main switch is turned off “see you”. The user name “Buddy” is set as the factory default, but it can be set to your name.

To set the user name

1. Turn the main switch off.
2. Push and hold the “RESET” button.
3. Turn the main switch on, and then release the “RESET” button after four seconds.
4. When the first character starts flashing, push the “SELECT” button to change the character in the following order.

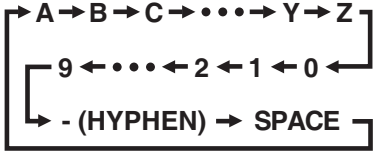

5. Push and hold the “SELECT” button to confirm the selected character.
6. When the second character is flashing, push the “SELECT” button to change the character.
7. Repeat this process for all six characters.
8. After the sixth character is set, all characters will flash twice and the setting mode will automatically end.

Screen brightness control mode

To adjust the screen brightness

1. Turn the main switch off.
2. Push and hold the “SELECT” button.
3. Turn the main switch on and then release the “SELECT” button after five seconds.
4. Push the “RESET” button to select the desired brightness level.

Self-diagnosis device

This model is equipped with a self-diagnosis device for various electrical circuits. If a problem is detected in any of those circuits, the engine trouble warning light will come on and the display will indicate an error code.

ECA11591

NOTICE

If the display indicates an error code, the vehicle should be checked as soon as possible in order to avoid engine damage.

EAU1234M

Handlebar switches

Left

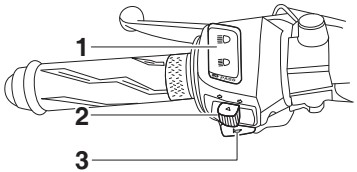

ZAUE3356

1. Dimmer/Pass switch "≣D/≣D/PASS"
2. Turn signal switch "⇦/⇨"
3. Horn switch "🔊"

Right

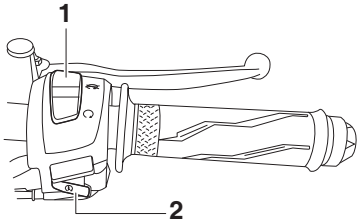

ZAUE3357

1. Engine stop switch "◯/⊠"
2. Start switch "ⓢ"

EAU54202

Dimmer/Pass switch "≣D/≣D/PASS"
Set this switch to "≣D" for the high beam and to "≣D" for the low beam.
To flash the high beam, push the switch down towards "PASS" while the headlights are on low beam.

EAU12461

Turn signal switch "⇦/⇨"
To signal a right-hand turn, push this switch to "⇨". To signal a left-hand turn, push this switch to "⇦". When released, the switch returns to the center position. To cancel the turn signal lights, push the switch in after it has returned to the center position.

EAU12501

Horn switch "🔊"
Press this switch to sound the horn.

EAU12663

Engine stop switch "◯/⊠"
Set this switch to "◯" (run) before starting the engine. Set this switch to "⊠" (stop) to stop the engine in case of an emergency, such as in the event of an overturn or if the throttle is stuck.

EAU12713

Start switch "ⓢ"
Push this switch to crank the engine with the starter. See page 6-1 for starting instructions prior to starting the engine.

4

EAU31642

Clutch lever

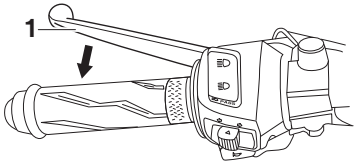

ZAUE3358

1. Clutch lever

The clutch lever is located on the left side of the handlebar. To disengage the clutch, pull the lever toward the handlebar grip. To engage the clutch, release the lever. The lever should be pulled rapidly and released slowly for smooth clutch operation.

The clutch lever is equipped with a clutch switch, which is part of the starting circuit cut-off system. (See page 4-18.)

EAU12876

Shift pedal

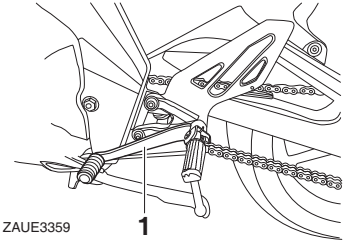

ZAUE3359

1. Shift pedal

The shift pedal is located on the left side of the motorcycle. To shift the transmission to a higher gear, move the shift pedal up. To shift the transmission to a lower gear, move the shift pedal down. (See page 6-2.)

EAU12892

Brake lever

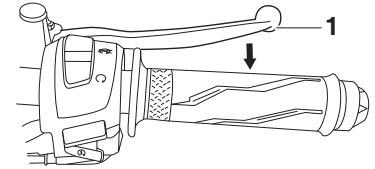

ZAUE3360

1. Brake lever

The brake lever is located on the right side of the handlebar. To apply the front brake, pull the lever toward the throttle grip.

EAU12944

Brake pedal

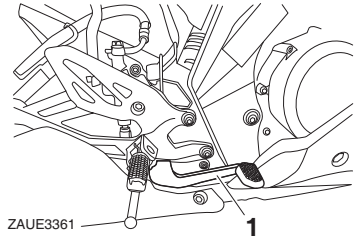

1. Brake pedal

The brake pedal is located on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

EAU63040

ABS

The Yamaha ABS (Anti-lock Brake System) features a dual electronic control system, which acts on the front and rear brakes independently.

Operate the brakes with ABS as you would conventional brakes. If the ABS is activated, a pulsating sensation may be felt at the brake lever or brake pedal. In this situation, continue to apply the brakes and let the ABS work; do not "pump" the brakes as this will reduce braking effectiveness.

EWA16051

⚠ WARNING

Always keep a sufficient distance from the vehicle ahead to match the riding speed even with ABS.

- **The ABS performs best with long braking distances.**
- **On certain surfaces, such as rough or gravel roads, the braking distance may be longer with the ABS than without.**

The ABS is monitored by an ECU, which will revert the system to conventional braking if a malfunction occurs.

TIP

- The ABS performs a self-diagnosis test each time the vehicle first starts off after the key is turned to "ON" and the vehicle has traveled at a speed of 10 km/h (6 mi/h) or higher. During this test, a "clicking" noise can be heard from the hydraulic control unit, and if the brake lever or brake pedal is even slightly applied, a vibration can be felt at the lever and pedal, but these do not indicate a malfunction.
- This ABS has a test mode which allows the owner to experience the pulsation at the brake lever or brake pedal when the ABS is operating. However, special tools are required, so please consult your Yamaha dealer.

ECA20100

NOTICE

Be careful not to damage the wheel sensor or wheel sensor rotor; otherwise, improper performance of the ABS will result.

4

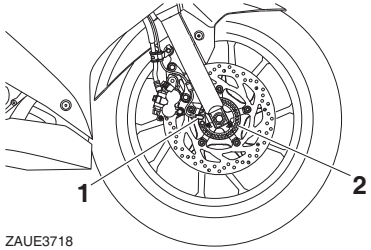

ZAUE3718

1. Front wheel sensor
2. Front wheel sensor rotor

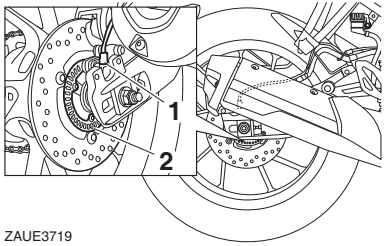

ZAUE3719

1. Rear wheel sensor
2. Rear wheel sensor rotor

EAUE1481

Fuel tank cap

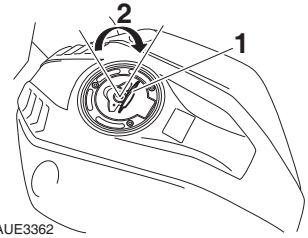

ZAUE3362

1. Fuel tank cap lock cover
2. Unlock.

To remove the fuel tank cap

1. Open the fuel tank cap lock cover.
2. Insert the key into the lock and turn it 1/4 turn clockwise. The lock will be released and the fuel tank cap can be removed.

To install the fuel tank cap

1. Push the fuel tank cap into position with the key inserted in the lock.
2. Turn the key counterclockwise to the original position, and then remove it.
3. Close the lock cover.

TIP

The fuel tank cap cannot be installed unless the key is in the lock. In addition, the key cannot be removed if the cap is not properly installed and locked.

EWA11142

⚠ WARNING

Make sure that the fuel tank cap is properly installed before riding. Leaking fuel is a fire hazard.

EAU13213

Fuel

Make sure there is sufficient gasoline in the tank.

EWA10882

⚠ WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.
2. Do not overfill the fuel tank. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.

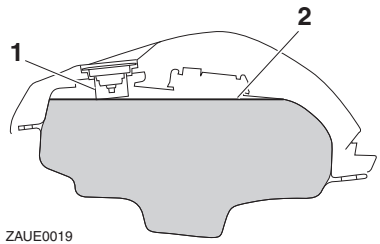

ZAUE0019

1. Fuel tank filler tube
2. Maximum fuel level

3. Wipe up any spilled fuel immediately. ***NOTICE:*** **Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.** [ECA10072]
4. Be sure to securely close the fuel tank cap.

EWA15152

⚠ WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immediately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.

EAU13245

Recommended fuel:
Regular unleaded gasoline only
Fuel tank capacity:
11 L (2.9 US gal, 2.4 Imp.gal)
Fuel reserve amount:
1.9 L (0.50 US gal, 0.42 Imp.gal)

ECA11401

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.

4

EAU13435

Catalytic converter

The exhaust system contains catalytic converter(s) to reduce harmful exhaust emissions.

EWA10863

⚠ WARNING

The exhaust system is hot after operation. To prevent a fire hazard or burns:

- **Do not park the vehicle near possible fire hazards such as grass or other materials that easily burn.**
- **Park the vehicle in a place where pedestrians or children are not likely to touch the hot exhaust system.**
- **Make sure that the exhaust system has cooled down before doing any maintenance work.**
- **Do not allow the engine to idle more than a few minutes. Long idling can cause a build-up of heat.**

EAUE3431

Seats

Passenger seat

To remove the passenger seat

1. Remove the plastic cover.

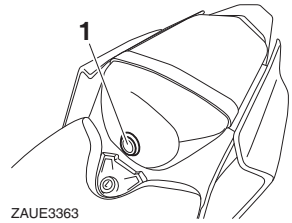

ZAUE3363

1. Plastic cover

2. Remove the nut and then slide in forward direction to remove the passenger seat as shown.

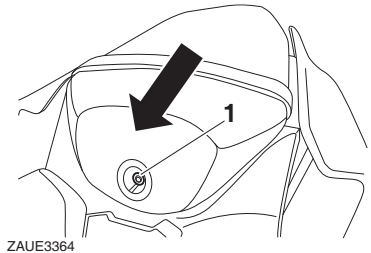

ZAUE3364

1. Nut

To install the passenger seat

1. Insert the projections on the front of the passenger seat into the seat holders as shown, and then place the seat in the original position.

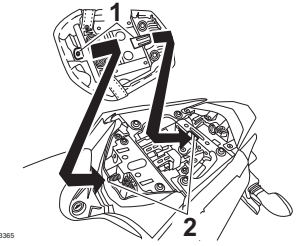

ZAUE3365

1. Projection
2. Seat holder

2. Install the passenger seat by installing and tightening the nut to the specified torque.

Tightening torque:
Passenger seat nut:
13 N·m (1.3 kgf·m, 9.6 lb·ft)

3. Install the plastic cover.

Rider seat

To remove the rider seat

1. Insert the key into the seat lock, and then turn it clockwise.

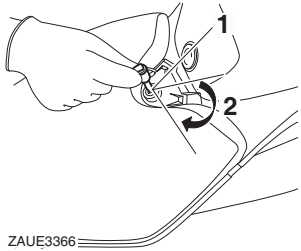

1. Rider seat lock
2. Unlock.

2. While holding the key in the position "2", lift from rear of the rider seat and pull it backward.

To install the rider seat

1. Insert the projection on the front of the rider seat into the seat holder as shown, place the seat in the original position.

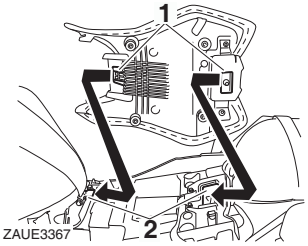

1. Projection
2. Seat holder

2. Remove the key.

TIP

Make sure that the seats are properly secured before riding.

EAU14326

Helmet holder

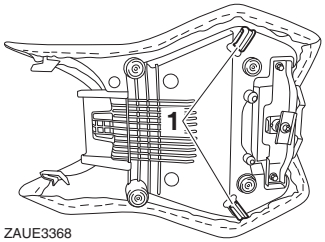

1. Helmet holder

The helmet holder is located under the rider seat.

To secure a helmet to the helmet holder

1. Remove the rider seat. (See page 4-16.)
2. Hook the helmet onto the helmet holder, and then securely install the seat. **WARNING! Never ride with a helmet attached to the helmet holder, since the helmet may hit objects, causing loss of control and possibly an accident.** [EWA10162]

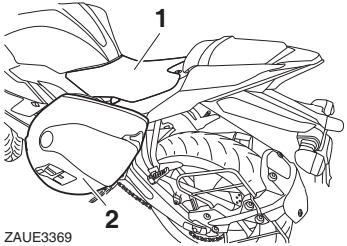

ZAUE3369

1. Rider seat
2. Helmet

To release the helmet from the helmet holder

Remove the rider seat, remove the helmet from the helmet holder, and then install the seat.

EAU37491

Sidestand

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the vehicle upright.

EWA14191

⚠ WARNING

The vehicle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

EAU15397

Starting circuit cut-off system

This system prevents in-gear engine starts unless the clutch lever is pulled. Periodically check the system via the following procedure.

TIP

- This check is most reliable if performed with a warmed-up engine.
- See pages 4-1 and 4-11 for switch operation information.

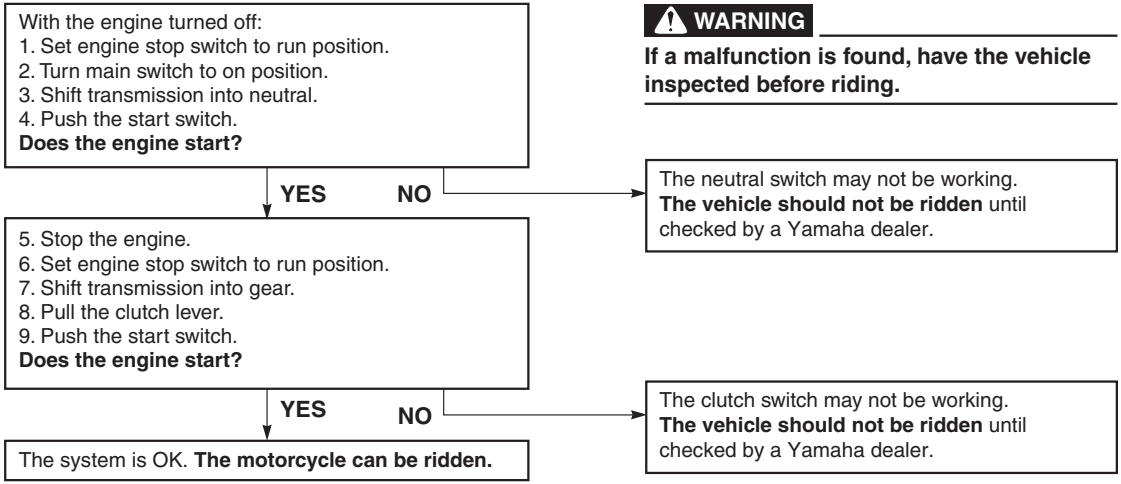

⚠ WARNING

If a malfunction is found, have the vehicle inspected before riding.

For your safety – pre-operation checks

EAU15599

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11152

⚠ WARNING

Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

ITEM	CHECKS	PAGE
Fuel	• Check fuel level in fuel tank. • Refuel if necessary. • Check fuel line for leakage.	4-15
Engine oil	• Check oil level in engine. • If necessary, add recommended oil to specified level. • Check vehicle for oil leakage.	7-11
Coolant	• Check coolant level in reservoir. • If necessary, add recommended coolant to specified level. • Check cooling system for leakage.	7-14
Front brake	• Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage.	7-22, 7-23

ITEM	CHECKS	PAGE
Rear brake	• Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage.	7-22, 7-23
Clutch	• Check operation. • Lubricate cable if necessary. • Check lever free play. • Adjust if necessary.	7-20
Throttle grip	• Make sure that operation is smooth. • Check throttle grip free play. • If necessary, have Yamaha dealer adjust throttle grip free play and lubricate cable end and grip housing.	7-17, 7-27
Control cables	• Make sure that operation is smooth. • Lubricate cable ends if necessary.	7-27
Drive chain	• Check chain slack. • Adjust if necessary. • Check chain condition. • Lubricate if necessary.	7-25, 7-26
Wheels and tires	• Check for damage. • Check tire condition and tread depth. • Check air pressure. • Correct if necessary.	7-18, 7-20
Brake and shift pedals	• Make sure that operation is smooth. • Lubricate pedal pivoting points if necessary.	7-27
Brake and clutch levers	• Make sure that operation is smooth. • Lubricate lever pivoting points if necessary.	7-28
Sidestand	• Make sure that operation is smooth. • Lubricate pivot if necessary.	7-29

For your safety – pre-operation checks

ITEM	CHECKS	PAGE
Chassis fasteners	• Make sure that all nuts, bolts and screws are properly tightened. • Tighten if necessary.	—
Instruments, lights, signals and switches	• Check operation. • Correct if necessary.	—

EAU15952

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

EWA10272

⚠ WARNING

Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

EAUN0073

ECAN0072

NOTICE

Do not ride through deep water, otherwise the engine may be damaged. Avoid puddles because they may be deeper than expected.

EAU54462

Starting the engine

The starting circuit cut-off system will enable starting when:

- the transmission is in the neutral position or
- the transmission is in gear with the clutch lever pulled.

To start the engine

1. Turn the main switch on and set the engine stop switch to the run position.
2. Confirm the indicator and warning light(s) come on for a few seconds, and the go off. (See page 4-2.)

TIP

Do not start the engine if the engine trouble warning light remains on.

ECA26710

NOTICE

Do not continue to operate the vehicle if a warning light remains on. Have a Yamaha dealer check the vehicle.

3. Shift the transmission into the neutral position.

6

4. Start the engine by pushing the start switch.
5. Release the start switch when the engine starts, or after 5 seconds. Wait 10 seconds before pressing the switch again to allow battery voltage to restore.

ECA11043

NOTICE

For maximum engine life, never accelerate hard when the engine is cold!

EAU16674

Shifting

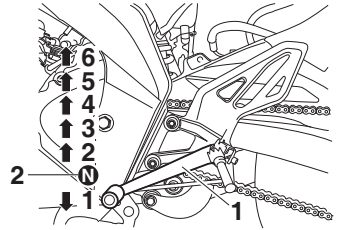

ZAUE3370

1. Shift pedal
2. Neutral position

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc.
The gear positions are shown in the illustration.

TIP

To shift the transmission into the neutral position (**N**), press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it.

ECA10261

NOTICE

- **Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, and do not tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.**
- **Always use the clutch while changing gears to avoid damaging the engine, transmission, and drive train, which are not designed to withstand the shock of forced shifting.**

EAU16811

Tips for reducing fuel consumption

Fuel consumption depends largely on your riding style. Consider the following tips to reduce fuel consumption:

- Shift up swiftly, and avoid high engine speeds during acceleration.
- Do not rev the engine while shifting down, and avoid high engine speeds with no load on the engine.
- Turn the engine off instead of letting it idle for an extended length of time (e.g., in traffic jams, at traffic lights or at railroad crossings).

EAU16831

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1000 km (600 mi). For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1000 km (600 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAU16983

0–500 km (0–300 mi)

Avoid prolonged operation above 5000 r/min.

After every hour of operation, stop the engine, and then let it cool for five to ten minutes.

Vary the engine speed from time to time. Do not operate the engine at one set throttle position.

500–1000 km (300–600 mi)

Avoid prolonged operation above 7500 r/min.

Rev the engine freely through the gears, but do not use full throttle at any time. ***NOTICE:*** **After 1000 km (600 mi) of operation, the engine oil must be changed, the oil filter cartridge or element replaced, and the oil strainer cleaned.** [ECA10322]

1000 km (600 mi) and beyond

The vehicle can now be operated normally.

ECA10311

NOTICE

- **Keep the engine speed out of the tachometer red zone.**
- **If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.**

6

EAU17214

Parking

When parking, stop the engine, and then remove the key from the main switch.

EWA10312

⚠ WARNING

- **Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them and be burned.**
- **Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the risk of a fuel leak and fire.**
- **Do not park near grass or other flammable materials which might catch fire.**

EAU17246

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance charts should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10322

⚠ WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

EWA15123

⚠ WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- **A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.**
- **Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to death. See page 2-3 for more information about carbon monoxide.**

EWA15461

⚠ WARNING

Brake discs, calipers, drums, and linings can become very hot during use. To avoid possible burns, let brake components cool before touching them.

EAU85230

Tool kit

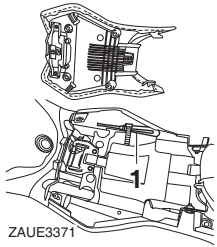

1. Tool kit

The tool kit is in the location shown.

The information included in this manual and the tools provided in the tool kit are intended to assist you in the performance of preventive maintenance and minor repairs. However, a torque wrench and other tools are necessary to perform certain maintenance work correctly.

TIP

If you do not have the tools or experience required for a particular job, have your Yamaha dealer perform it for you.

Periodic maintenance and adjustment

EAUE3700

TIP

- From 19000 km (11800 mi), repeat the maintenance intervals starting from 4000 km (2400 mi).
- Items marked with an asterisk (*) should be performed by a Yamaha dealer as they require special tools, data and technical skills.
- Maintenance intervals marked with a double asterisk (**) would be paid service.

EAUE3710

Periodic maintenance chart for the emission control system

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km (7800 mi)	16000 km** (9600 mi)
1	*	**Fuel line**	• Check fuel hoses for cracks or damage.	√	√	√	√	√	√
2	*	**Fuel filter**	• Check condition. • Replace if necessary.	Every 7000 km (4200 mi)					
3		**Spark plug**	• Check condition. • Clean and regap.	√	√	√	√		√
			• Replace.					√	
4	*	**Valves**	• Check valve clearance. Adjust if necessary.	√	√	√	√	√	√
5	*	**Fuel injection**	• Adjust engine idling speed.	√	√	√	√	√	√
6	*	**Evaporative emission control system**	• Check control system for damage. • Replace if necessary.				√		√

EAUE3720

General maintenance and lubrication chart

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km (7800 mi)	16000 km** (9600 mi)
1	*	**Diagnostic system check**	• Perform dynamic inspection using Yamaha diagnostic tool. • Check the error codes.	√	√	√	√	√	√
2		**Air filter element**	• Clean.	√	√	√	√	√	√
			• Replace.	Every 10000 km (6200 mi)					
3	*	**Battery**	• Check voltage. • Charge if necessary.	√	√	√	√	√	√
4		**Clutch**	• Check operation. • Adjust.	√	√	√	√	√	√
5	*	**Front brake**	• Check operation, fluid level and vehicle for fluid leakage.	√	√	√	√	√	√
			• Replace brake pads.	Whenever worn to the limit					
6	*	**Rear brake**	• Check operation, fluid level and vehicle for fluid leakage.	√	√	√	√	√	√
			• Replace brake pads.	Whenever worn to the limit					
7	*	**Brake hose**	• Check for cracks or damage. • Check for correct routing and clamping.	√	√	√	√	√	√
			• Replace.	Every 4 years					
8	*	**Brake fluid**	• Change.	Every 2 years					
9	*	**Wheels**	• Check runout and for damage.	√	√	√	√	√	√

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km (7800 mi)	16000 km** (9600 mi)
10	*	**Tires**	• Check tread depth and for damage. • Replace if necessary. • Check air pressure. • Correct if necessary.	√	√	√	√	√	√
11	*	**Wheel bearings**	• Check bearing for looseness or damage. Replace if necessary.	√	√	√	√	√	√
			• Lubricate with lithium-soap-based grease.	Every 10000 km (6000 mi)					
12	*	**Swingarm**	• Check operation and for excessive play.	√	√	√	√	√	√
			• Lubricate with lithium-soap-based grease.	Every 13000 km (7800 mi)					
13		**Drive chain**	• Check chain slack, alignment and condition. • Adjust and lubricate chain with a special O-ring chain lubricant thoroughly.	Every 500 km (300 mi) and after washing the motorcycle, riding in the rain or riding in wet areas					
14	*	**Steering bearings**	• Check bearing play and steering for roughness.	√	√	√	√	√	√
			• Lubricate with lithium-soap-based grease.	Every 13000 km (7800 mi)					
15	*	**Chassis fasteners**	• Make sure that all nuts, bolts and screws are properly tightened.	√	√	√	√	√	√
16		**Brake lever pivot shaft**	• Lubricate with silicone grease.	√	√	√	√	√	√
17		**Brake pedal pivot shaft**	• Lubricate with lithium-soap-based grease.	√	√	√	√	√	√

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km (7800 mi)	16000 km** (9600 mi)
18		**Clutch lever pivot shaft**	• Lubricate with lithium-soap-based grease.	√	√	√	√	√	√
19		**Shift pedal pivot shaft**	• Lubricate with lithium-soap-based grease.	√	√	√	√	√	√
20		**Sidestand**	• Check operation. • Lubricate with lithium-soap-based grease.	√	√	√	√	√	√
21	*	**Front fork**	• Check operation and for oil leakage. Repair if necessary.	√	√	√	√	√	√
			• Replace oil.	Every 10000 km (6000 mi)					
22	*	**Shock absorber assembly**	• Check operation and shock absorber for oil leakage.	√	√	√	√	√	√
23		**Engine oil**	• Change. (See page 7-11.) • Check oil level and vehicle for oil leakage.	√	Every 3000 km (1800 mi)				
24		**Engine oil filter element**	• Replace.	√	√	√	√	√	√
25	*	**Cooling system**	• Check coolant level and vehicle for coolant leakage.	√	√	√	√	√	√
			• Change coolant.	Every 2 years					
26	*	**Front and rear brake switches**	• Check operation.	√	√	√	√	√	√
27		**Moving parts and cable ends**	• Lubricate.	√	√	√	√	√	√

7

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km (7800 mi)	16000 km** (9600 mi)
28	*	**Throttle grip**	• Check operation. • Check throttle grip free play, and adjust if necessary. • Lubricate cable and grip housing.	√	√	√	√	√	√
29	*	**Lights, signals and switches**	• Check operation. • Adjust headlight beam.	√	√	√	√	√	√

EAU18662

TIP

- The air filter needs more frequent service if you are riding in unusually wet or dusty areas.
- Hydraulic brake service
  - Regularly check and, if necessary, correct the brake fluid level.
  - Every two years replace the internal components of the brake master cylinder and caliper, and change the brake fluid.
  - Replace the brake hoses every four years and if cracked or damaged.

EAU18724

Removing and installing the cowling and panels

The cowling and panels shown need to be removed to perform some of the maintenance jobs described in this chapter. Refer to this section each time the cowling or a panel needs to be removed and installed.

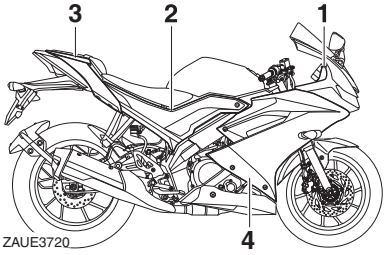

ZAUE3720

1. Panel A
2. Panel B
3. Panel C
4. Cowling A

EAUE3441

Cowling

To remove the cowling

1. Remove panels A and B. (See page 7-7.)
2. Remove the bolts, quick fasteners and screw, and then pull the cowling outward and take it off.

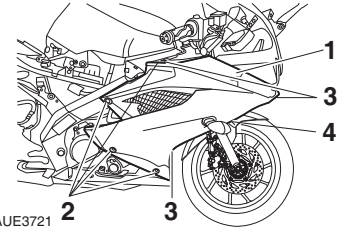

ZAUE3721

1. Cowling A
2. Bolt
3. Quick fastener
4. Screw

3. Disconnect the turn signal light lead and unhook from cowling.

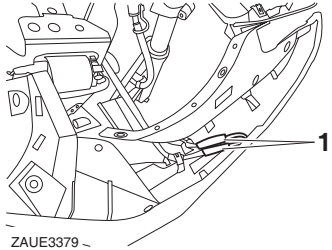

ZAUE3379

1. Turn signal light lead

To install the cowling

1. Connect and place the turn signal light leads on it's original position.
2. Fit the projection on the cowling into the hole, and then push the cowling inward.

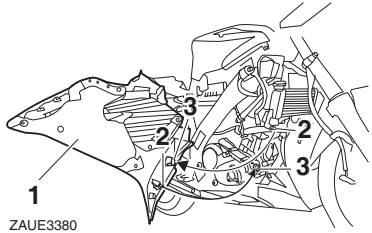

ZAUE3380

1. Cowling A
2. Projection
3. Hole

3. Install the screw, quick fasteners and bolts.
4. Install panels A and B. (See page 7-7.)

EAUE3520

Panel A

To remove the panel

Remove the four quick fasteners and one bolt for the panel, and then remove the panel.

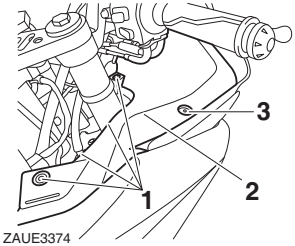

ZAUE3374

1. Quick fastener
2. Panel A
3. Bolt

To install the panel

Place the panel in the original position, and then install the bolt and quick fasteners.

Panel B

To remove the panel

1. Remove the rider seat. (See page 4-16.)

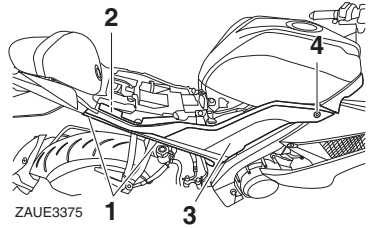

ZAUE3375

1. Quick fastener
2. Screw
3. Panel B
4. Bolt

2. Remove the quick fasteners, bolt, and screws, and then pull the panel outward and take it off.

To install the panel

1. Fit the projection on the panel into the hole, push the panel inward, and then install the screws, bolt, and quick fasteners.

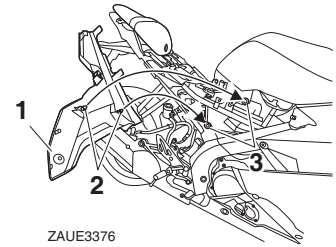

ZAUE3376

1. Panel B
2. Projection
3. Hole

2. Install the rider seat. (See page 4-16.)

Panel C

To remove the panel

1. Remove the passenger seat. (See page 4-16.)
2. Remove the bolts and screw, and then remove the panel.

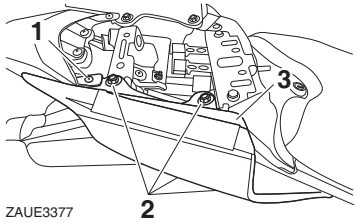

ZAUE3377

1. Screw
2. Bolt
3. Panel C

To install the panel

1. Install the panel by installing the screw and bolts.
2. Install the passenger seat. (See page 4-16.)

EAUE3150

Checking the spark plug

The spark plug is an important engine component, which is easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plug should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plug can reveal the condition of the engine.

To remove the spark plug

1. Remove cowling A. (See page 7-7.)
2. Remove the spark plug cap.

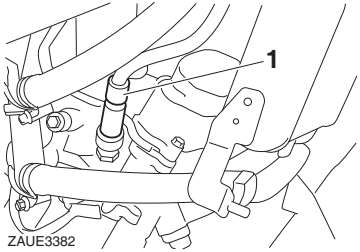

ZAUE3382

1. Spark plug cap

3. Remove the spark plug as shown, with a spark plug wrench available at a Yamaha dealer.

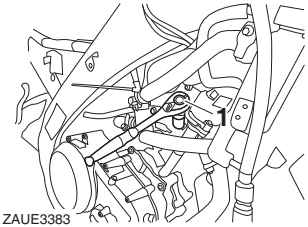

ZAUE3383

1. Spark plug wrench

To check the spark plug

1. Check that the porcelain insulator around the center electrode of the spark plug is a medium-to-light tan (the ideal color when the vehicle is ridden normally).

TIP

If the spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.

2. Check the spark plug for electrode erosion and excessive carbon or other deposits, and replace it if necessary.

Specified spark plug:
NGK/MR8E9

3. Measure the spark plug gap with a wire thickness gauge and, if necessary, adjust the gap to specification.

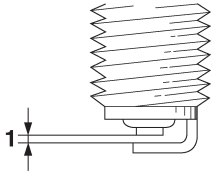

ZAUE0032
1. Spark plug gap

Spark plug gap:
0.8–0.9 mm (0.031–0.035 in)

To install the spark plug

1. Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.
2. Install the spark plug with the spark plug wrench, and then tighten it to the specified torque.

Tightening torque:
Spark plug:
13 N·m (1.3 kgf·m, 9.6 lb·ft)

TIP

If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

3. Install the spark plug cap.
4. Install the cowling.

EAU36112

Canister

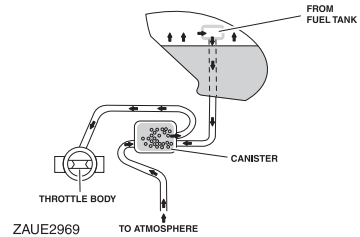

ZAUE2969

This model is equipped with a canister to prevent the discharging of fuel vapor into the atmosphere. Before operating this vehicle, make sure to check the following:

- Check each hose connection.
- Check each hose and canister for cracks or damage. Replace if damaged.
- Make sure that the canister breather is not blocked, and if necessary, clean it.

EAUE3451

Engine oil and oil filter element

The engine oil level should be checked before each ride. In addition, the oil must be changed and the oil filter element replaced at the intervals specified in the periodic maintenance and lubrication chart.

To check the engine oil level

1. Place the vehicle on a level surface and hold it in an upright position. A slight tilt to the side can result in a false reading.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Wait a few minutes until the oil settles, remove the oil filler cap, wipe the dipstick clean, insert it back into the oil filler hole (without screwing it in), and then remove it again to check the oil level. ***NOTICE:*** **Do not operate the vehicle until you know that the engine oil level is sufficient.** [ECA10012]

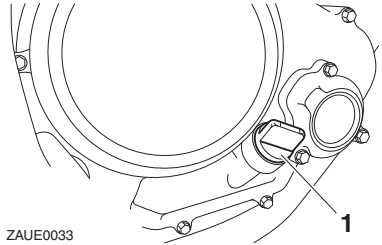

ZAUE0033

1. Engine oil filler cap

TIP

The engine oil should be between the minimum and maximum level marks.

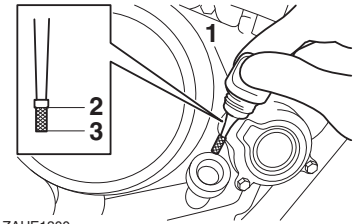

ZAUE1300

1. Dipstick
2. Maximum level mark
3. Tip of the engine oil dipstick

4. If the engine oil is below the minimum level mark, add sufficient oil of the recommended type to raise it to the correct level.
5. Install and tighten the oil filler cap.

To change the engine oil

1. Start the engine, warm it up for several minutes, and then turn it off.
2. Remove the under cover by removing the bolts, screw and quick fastener.

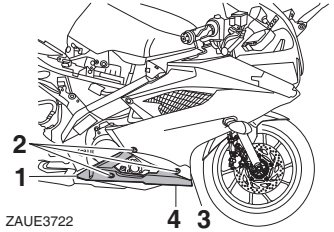

ZAUE3722

1. Cover
2. Bolt
3. Screw
4. Quick fastener

3. Place an oil pan under the engine to collect the used oil.

4. Remove the engine oil filler cap, then the drain bolt along with the O-ring, compression spring, and engine oil strainer, to drain the oil from the crankcase. ***NOTICE:*** **When removing the engine oil drain bolt, the O-ring, compression spring, and oil strainer will fall out. Take care not to lose these parts.** [ECA11002]

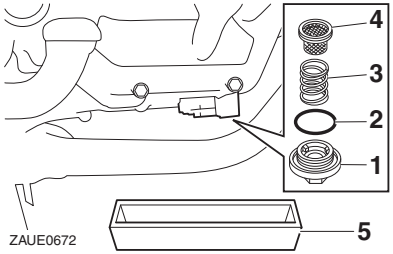

ZAUE0672

1. Engine oil drain bolt
2. O-ring
3. Compression spring
4. Strainer
5. Oil pan

5. Clean the engine oil strainer with solvent.
6. Remove the oil filter element cover by removing the bolts.

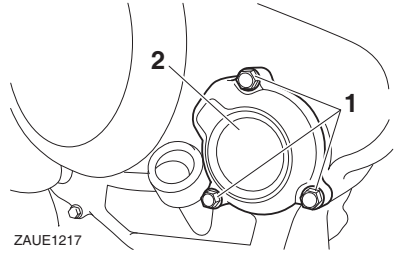

ZAUE1217

1. Bolt
2. Oil filter element cover

7. Remove and replace the oil filter element and O-ring.

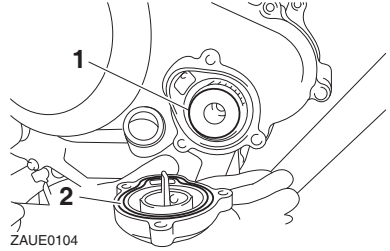

ZAUE0104

1. Oil filter element
2. O-ring

8. Install the oil filter element cover by installing the bolts, then tightening them to the specified torque.

Tightening torques:
Oil filter element cover bolt:
10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP

Make sure that the O-ring is properly seated.

9. Install the engine oil strainer, compression spring, O-ring and the engine oil drain bolt, and then tighten it to the specified torque. ***NOTICE:*** **Before installing the engine oil drain bolt, do not forget to install the O-ring, compression spring, and oil strainer in position.** [ECA10422]

Tightening torques:
Engine oil drain bolt:
32 N·m (3.2 kgf·m, 24 lb·ft)

10. Refill with the specified amount of the recommended engine oil, and then install and tighten the oil filler cap.

Recommended engine oil:
See page 9-1.
Oil quantity:
Oil change:
0.85 L (0.90 US qt, 0.75 Imp.qt)
With oil filter removal:
0.95 L (1.00 US qt, 0.84 Imp.qt)

ECA11621

NOTICE

- **In order to prevent clutch slippage (since the engine oil also lubricates the clutch), do not mix any chemical additives. Do not use oils with a diesel specification of "CD" or oils of a higher quality than specified. In addition, do not use oils labeled "ENERGY CONSERVING II" or higher.**
- **Make sure that no foreign material enters the crankcase.**

11. Start the engine, and then let it idle for several minutes while checking it for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause.
12. Turn the engine off, and then check the oil level and correct it if necessary.
13. Install the under cover by installing the bolts, screw and quick fastener.

EAU85450

Why Yamalube

YAMALUBE oil is a Genuine YAMAHA Part born of the engineers' passion and belief that engine oil is an important liquid engine component. We form teams of specialists in the fields of mechanical engineering, chemistry, electronics and track testing, and have them develop the engine together with the oil it will use. Yamalube oils take full advantage of the base oil's qualities and blend in the ideal balance of additives to make sure the final oil clears our performance standards. Thus, Yamalube mineral, semisynthetic and synthetic oils have their own distinct characters and value. Yamaha's experience gained over many years of research and development into oil since the 1960's helps make Yamalube the best choice for your Yamaha engine.

YAMALUBE®

EAU20071

Coolant

The coolant level should be checked before each ride. In addition, the coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart.

EAUE3460

To check the coolant level

1. Place the vehicle on a level surface.
2. Remove cowling A of left side. (See page 7-7.)
3. Hold the vehicle in an upright position.

TIP

- The coolant level must be checked on a cold engine since the level varies with engine temperature.
- Make sure that the vehicle is positioned straight up when checking the coolant level. A slight tilt to the side can result in a false reading.

4. Check the coolant level in the coolant reservoir.

TIP

The coolant should be between the minimum and maximum level marks.

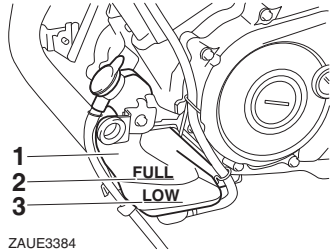

ZAUE3384

1. Coolant reservoir
2. Maximum level mark
3. Minimum level mark

5. If the coolant is at or below the minimum level mark, remove the coolant reservoir cap.

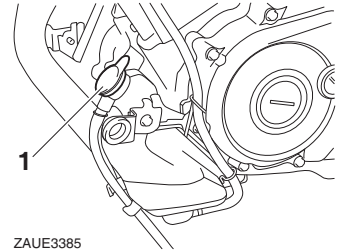

ZAUE3385

1. Coolant reservoir cap

6. Add coolant to the maximum level mark, and then install the coolant reservoir cap. **WARNING! Remove only the coolant reservoir cap. Never attempt to remove the radiator cap when the engine is hot.** [EWA15162] ***NOTICE:*** **If coolant is not available, use distilled water or soft tap water instead. Do not use hard water or salt water since it is harmful to the engine. If water has been used instead of coolant, replace it with coolant as soon as possible, otherwise the cooling system will not be protected against frost and corrosion. If water has been added to the**

coolant, have a Yamaha dealer check the antifreeze content of the coolant as soon as possible, otherwise the effectiveness of the coolant will be reduced. [ECA10473]

Coolant reservoir capacity (up to the maximum level mark):
0.15 L (0.16 US qt, 0.13 Imp.qt)

7. Install the cowling.

EAU33032

Changing the coolant

The coolant must be changed at the intervals specified in the periodic maintenance and lubrication chart. Have a Yamaha dealer change the coolant. **WARNING! Never attempt to remove the radiator cap when the engine is hot.** [EWA10382]

EAUE3471

Cleaning the air filter element

The air filter element should be cleaned at the intervals specified in the periodic maintenance and lubrication chart. Clean the air filter element more frequently if you are riding in unusually wet or dusty areas.

1. Remove the rider seat. (See page 4-16.)
2. Remove the panel B. (See page 7-7.)
3. Remove the fuel tank bolts from both side.

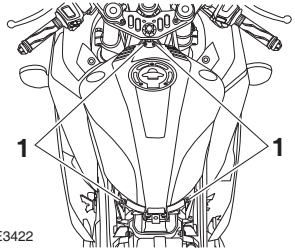

ZAUE3422

1. Bolt

4. Disconnect the fuel pump lead, fuel pump coupler, fuel hose, canister hoses and fuel drain hose, and then remove the fuel tank.
5. Remove the fuel hose holder from air filter case cover by pulling it outward.

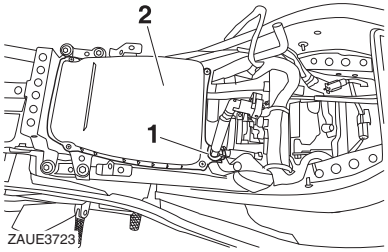

ZAUE3723

1. Fuel hose holder
2. Air filter case cover

6. Remove the air filter case cover by removing the screws.

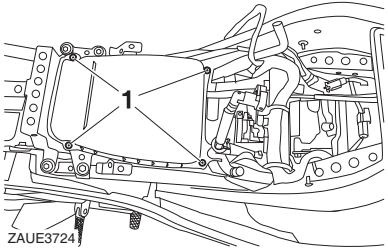

ZAUE3724

1. Screw

7. Pull the air filter element out.

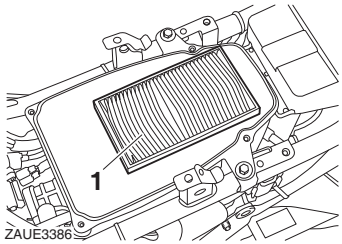

1. Air filter element

8. Lightly tap the air filter element to remove the most of the dust and dirt, and then blow the remaining dirt out with compressed air as shown. If the air filter element is damaged, replace it.

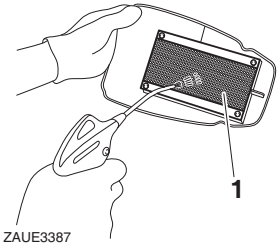

1. Air filter element

9. Insert the air filter element into the air filter case. ***NOTICE:*** **Make sure that the air filter element is properly seated in the air filter case. The engine should never be operated without the air filter element installed, otherwise the piston(s) and/or cylinder(s) may become excessively worn.**

[ECA10482]

10. Install the air filter case cover by installing the screws.
11. Install the fuel hose holder on it's original position.

TIP

If dust or water collects in the air filter check hose, remove the clamp, and then remove the plug to drain the hose.

12. Connect the fuel hose, fuel pump coupler, fuel pump lead, canister hoses and fuel drain hose.
13. Install the fuel tank and tighten the bolts.
14. Install the panel B.
15. Install the rider seat.

EAU34302

Adjusting the engine idling speed

The engine idling speed must be checked and, if necessary, adjusted as follows at the intervals specified in the periodic maintenance and lubrication chart.

The engine should be warm before making this adjustment.

Check the engine idling speed and, if necessary, adjust it to specification by turning the idle adjusting screw. To increase the engine idling speed, turn the screw in direction (a). To decrease the engine idling speed, turn the screw in direction (b).

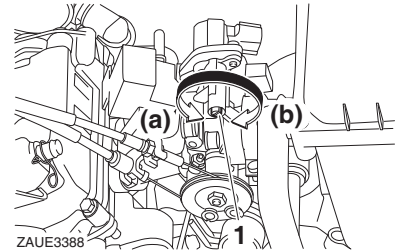

1. Idle adjusting screw

Engine idling speed:
1300–1500 r/min

TIP
If the specified idling speed cannot be obtained as described above, have a Yamaha dealer make the adjustment.

EAUE1572

Adjusting the throttle grip free play

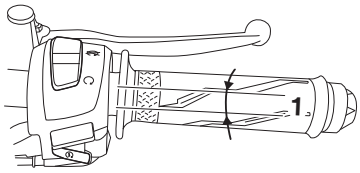

ZAUE3389

1. Throttle grip free play

The throttle grip free play should measure 3.0–5.0 mm (0.12–0.20 in) at the inner edge of the throttle grip. Periodically check the throttle grip free play and, if necessary, adjust it as follows.

TIP
The engine idling speed must be correctly adjusted before checking and adjusting the throttle grip free play.

1. Slide the rubber cover at the throttle cable.
2. Loosen the locknut.
3. To increase the throttle grip free play, turn the throttle grip free play adjusting nut in direction (a). To decrease the throttle grip free play, turn the adjusting nut in direction (b).

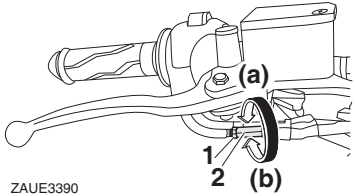

ZAUE3390

1. Locknut
2. Adjusting nut

4. Tighten the locknut.
5. Slide the rubber cover back to its original position.

EAU21403

Valve clearance

The valves are an important engine component, and since valve clearance changes with use, they must be checked and adjusted at the intervals specified in the periodic maintenance chart. Unadjusted valves can result in improper air-fuel mixture, engine noise, and eventually engine damage. To prevent this from occurring, have your Yamaha dealer check and adjust the valve clearance at regular intervals.

TIP

This service must be performed when the engine is cold.

EAU82721

Tires

Tires are the only contact between the vehicle and the road. Safety in all conditions of riding depends on a relatively small area of road contact. Therefore, it is essential to maintain the tires in good condition at all times and replace them at the appropriate time with the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EWA10504

⚠ WARNING

Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- **The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).**
- **The tire air pressure must be adjusted in accordance with the riding speed and with the total weight of rider, passenger, cargo, and accessories approved for this model.**

Cold tire air pressure:
1 person:
Front:
200 kPa (2.00 kgf/cm², 29 psi)
Rear:
225 kPa (2.25 kgf/cm², 33 psi)
2 persons:
Front:
200 kPa (2.00 kgf/cm², 29 psi)
Rear:
225 kPa (2.25 kgf/cm², 33 psi)
Maximum load:
Vehicle:
166 kg (366 lb)
The vehicle's maximum load is the combined weight of the rider, passenger, cargo, and any accessories.

EWA10512

⚠ WARNING

Never overload your vehicle. Operation of an overloaded vehicle could cause an accident.

Tire inspection

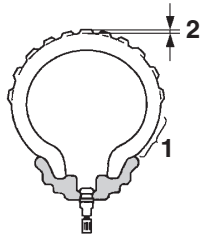

ZAUE0044

1. Tire sidewall
2. Tire wear indicator
3. Tire tread depth

The tires must be checked before each ride. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the sidewall is cracked, contact a Yamaha dealer immediately and have the tire replaced.

Minimum tire tread depth (front and rear):
1.0 mm (0.04 in)

EWA10583

⚠ WARNING

- **It is dangerous to ride with a worn-out tire. When a tire tread begins to show crosswise lines, have a Yamaha dealer replace the tire immediately.**
- **The replacement of all wheel and brake-related parts, including the tires, should be left to a Yamaha dealer, who has the necessary professional knowledge and experience to do so.**
- **Ride at moderate speeds after changing a tire since the tire surface must first be "broken in" for it to develop its optimal characteristics.**

Tire information

This model is equipped with tubeless tires and tire air valves.

Tires age, even if they have not been used or have only been used occasionally. Cracking of the tread and sidewall rubber, sometimes accompanied by carcass deformation, is an evidence of ageing. Old and aged tires shall be checked by tire specialists to ascertain their suitability for further use.

EWA10462

⚠ WARNING

The front and rear tires should be of the same make and design, otherwise the handling characteristics of the vehicle may be different, which could lead to an accident.

After extensive tests, only the tires listed below have been approved for this model by Yamaha.

Front tire:
Size:
100/80-17M/C 52P
Manufacturer/model:
MRF/NYLOGRIP ZAPPER-FX1
Rear tire:
Size:
140/70-17M/C 66H
Manufacturer/model:
MRF/NYLOGRIP ZAPPER-S

7

EAU21963

Cast wheels

To maximize the performance, durability, and safe operation of your vehicle, note the following points regarding the specified wheels.

- The wheel rims should be checked for cracks, bends, warpage or other damage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life.

EAU22047

Adjusting the clutch lever free play

Measure the clutch lever free play as shown.

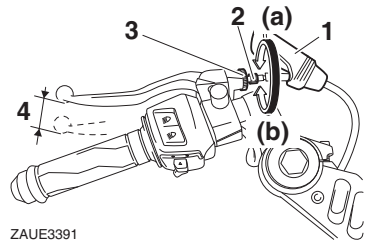

ZAUE3391

1. Rubber cover
2. Clutch lever free play adjusting bolt
3. Locknut
4. Clutch lever free play

Clutch lever free play:
10.0–15.0 mm (0.39–0.59 in)

Periodically check the clutch lever free play and, if necessary, adjust it as follows.

1. Slide the rubber cover back at the clutch lever.
2. Loosen the locknut.
3. To increase the clutch lever free play, turn the clutch lever free play adjusting bolt in direction (a). To decrease the clutch lever free play, turn the adjusting bolt in direction (b).

TIP

If the specified clutch lever free play could be obtained as described above, skip steps 4–7.

4. Fully turn the adjusting bolt at the clutch lever in direction (a) to loosen the clutch cable.
5. Loosen the locknut at the crankcase.

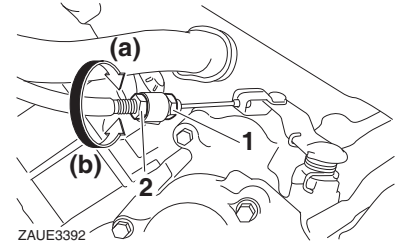

ZAUE3392

1. Locknut
2. Clutch lever free play adjusting nut

6. To increase the clutch lever free play, turn the clutch lever free play adjusting nut in direction (a). To decrease the clutch lever free play, turn the adjusting nut in direction (b).
7. Tighten the locknut at the crankcase.
8. Tighten the locknut at the clutch lever and then slide the rubber cover to its original position.

EAU37914

Checking the brake lever free play

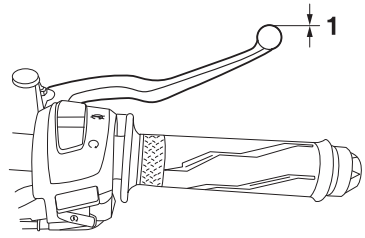

ZAUE3425

1. No brake lever free play

There should be no free play at the brake lever end. If there is free play, have a Yamaha dealer inspect the brake system.

EWA14212

⚠ WARNING

A soft or spongy feeling in the brake lever can indicate the presence of air in the hydraulic system. If there is air in the hydraulic system, have a Yamaha dealer bleed the system before operating the vehicle. Air in the hydraulic system will diminish the braking performance, which may result in loss of control and an accident.

EAU22275

Brake light switches

The brake light is activated by switches connected to the brake lever and brake pedal. Check that the brake light comes on just before braking takes effect. If necessary, adjust the rear brake light switch as follows.

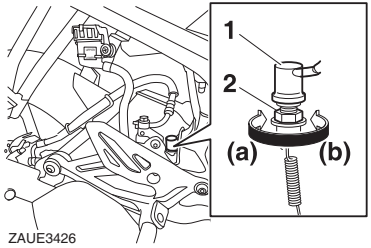

ZAUE3426

1. Brake light switch
2. Rear brake light switch adjusting nut

Turn the rear brake light switch adjusting nut while holding the rear brake light switch in place. To make the brake light come on earlier, turn the adjusting nut in direction (a). To make the brake light come on later, turn the adjusting nut in direction (b).

TIP

The front brake light switch should be serviced by a Yamaha dealer.

EAU22393

Checking the front and rear brake pads

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

EAU22433

Front brake pads

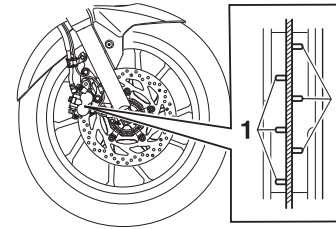

ZAUE3725

1. Brake pad wear indicator groove

Each front brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear

indicator grooves have almost disappeared, have a Yamaha dealer replace the brake pads as a set.

EAU36721

Rear brake pads

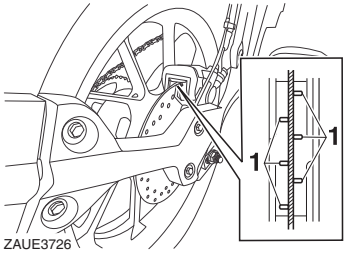

ZAUE3726

1. Brake pad wear indicator groove

Each rear brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear indicator grooves have almost disappeared, have a Yamaha dealer replace the brake pads as a set.

EAU60680

Checking the brake fluid level

Before riding, check that the brake fluid is above the minimum level mark. Check the brake fluid level with the top of the reservoir level. Replenish the brake fluid if necessary.

Front brake

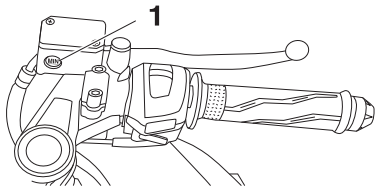

ZAUE3727

1. Minimum level mark

Rear brake

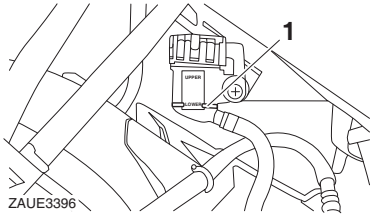

ZAUE3396

1. Minimum level mark

Specified brake fluid:
YAMAHA GENUINE BRAKE FLUID (DOT 4)

EWA15991

⚠ WARNING

Improper maintenance can result in loss of braking ability. Observe these precautions:

- **Insufficient brake fluid may allow air to enter the brake system, reducing braking performance.**
- **Clean the filler cap before removing. Use only DOT 4 brake fluid from a sealed container.**

7

- **Use only the specified brake fluid; otherwise, the rubber seals may deteriorate, causing leakage.**
- **Refill with the same type of brake fluid. Adding a brake fluid other than DOT 4 may result in a harmful chemical reaction.**
- **Be careful that water does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.**

ECA17641

NOTICE

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled fluid immediately.

As the brake pads wear, it is normal for the brake fluid level to gradually go down. A low brake fluid level may indicate worn brake pads and/or brake system leakage; therefore, be sure to check the brake pads for wear and the brake system for leakage. If the brake fluid level goes down suddenly, have a Yamaha dealer check the cause before further riding.

EAUM1362

Changing the brake fluid

Have a Yamaha dealer change the brake fluid at the intervals specified in the periodic maintenance and lubrication chart. In addition, have the brake hose replaced every four years and whenever it is damaged or leaking.

EAU22762

Drive chain slack

The drive chain slack should be checked before each ride and adjusted if necessary.

EAUE1414

To check the drive chain slack

1. Support the motorcycle according to the procedure on page 7-34.

TIP

When checking and adjusting the drive chain slack, there should be no weight on the motorcycle.

2. Shift the transmission into the neutral position.
3. Measure the drive chain slack as shown.

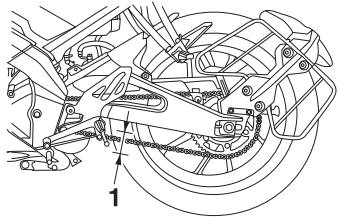

ZAUE3397

1. Drive chain slack

Drive chain slack:
30.0–40.0 mm (1.18–1.57 in)

4. If the drive chain slack is incorrect, adjust it as follows. ***NOTICE:*** **Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slippage or breakage. To prevent this from occurring, keep the drive chain slack within the specified limits.** [ECA10572]

EAU3431B

To adjust the drive chain slack

Consult a Yamaha dealer before adjusting the drive chain slack.

1. Loosen the axle nut and the locknut on each side of the swingarm.

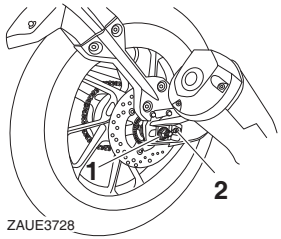

ZAUE3728

1. Axle nut
2. Locknut

2. To tighten the drive chain, turn the drive chain slack adjusting bolt on each side of the swingarm in direction (a). To loosen the drive chain, turn the adjusting bolt on each side of the swingarm in direction (b), and then push the rear wheel forward.

TIP

Using the alignment marks on each side of the swingarm, make sure that both drive chain pullers are in the same position for proper wheel alignment.

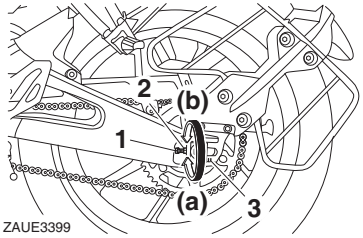

ZAUE3399

1. Locknut
2. Drive chain slack adjusting bolt
3. Alignment marks

3. Tighten the axle nut, then the locknuts to their specified torques.

Tightening torques:
Axle nut:
59 N·m (5.9 kgf·m, 44 lb·ft)
Locknut:
16 N·m (1.6 kgf·m, 12 lb·ft)

4. Make sure that the drive chain pullers are in the same position, the drive chain slack is correct, and the drive chain moves smoothly.

EAUE0141

Cleaning and lubricating the drive chain

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

ECA10584

NOTICE

The drive chain must be lubricated after washing the motorcycle, riding in the rain or riding in wet areas.

1. Clean the drive chain with soap water to remove the accumulated dust & mud and then dry off.
2. Apply the cleaning spray on all the links and plates of chain, then wipe the chain. ***NOTICE:*** **To prevent damaging the O-rings, do not clean the drive chain with steam cleaners, high-pressure washers or inappropriate solvents.** [ECA11122]
3. Thoroughly lubricate the drive chain with a special O-ring chain lubricant.

EAUE1151

Checking and lubricating the cables

The operation of all control cables and the condition of the cables should be checked before each ride, and the cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. **WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.** [EWA10712]

Recommended lubricant:
Lithium-soap-based grease

EAUE1191

Checking and lubricating the throttle grip and cable end

The operation of the throttle grip should be checked before each ride. In addition, the cable end should be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance chart.

The throttle cable is equipped with a rubber cover. Make sure that the cover is securely installed. Even though the cover is installed correctly, it does not completely protect the cable from water entry. Therefore, use care not to pour water directly onto the cover or cable when washing the vehicle. If the cable or cover becomes dirty, wipe clean with a moist cloth.

EAU44276

Checking and lubricating the brake and shift pedals

The operation of the brake and shift pedals should be checked before each ride, and the pedal pivots should be lubricated if necessary.

Brake pedal

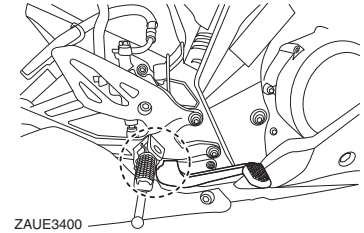

ZAUE3400

Shift pedal

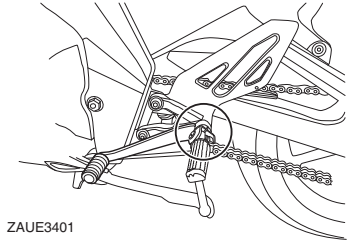

ZAUE3401

Recommended lubricant:
Lithium-soap-based grease

EAU23144
Checking and lubricating the brake and clutch levers

The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.

Recommended lubricants:
Brake lever:
Silicone grease
Clutch lever:
Lithium-soap-based grease

Brake lever

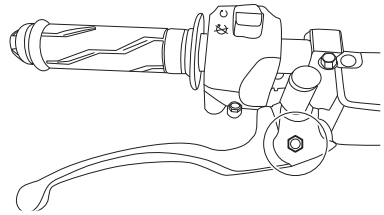

ZAUE3402

Clutch lever

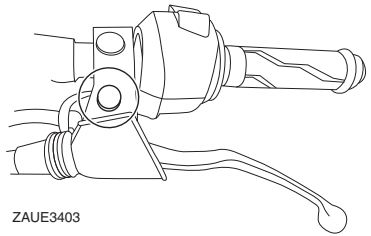

ZAUE3403

EAU23203

Checking and lubricating the sidestand

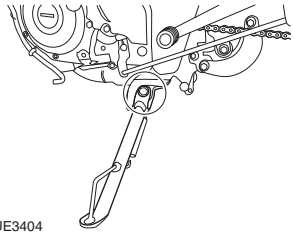

ZAUE3404

The operation of the sidestand should be checked before each ride, and the sidestand pivot and metal-to-metal contact surfaces should be lubricated if necessary.

EWA10732

⚠ WARNING

If the sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it. Otherwise, the sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

Recommended lubricant:
Lithium-soap-based grease

EAUM1653

Lubricating the swingarm pivots

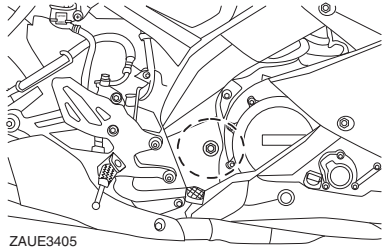

ZAUE3405

The swingarm pivots must be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Recommended lubricant:
Lithium-soap-based grease

EAU23273

Checking the front fork

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.

To check the operation

1. Place the vehicle on a level surface and hold it in an upright position. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.

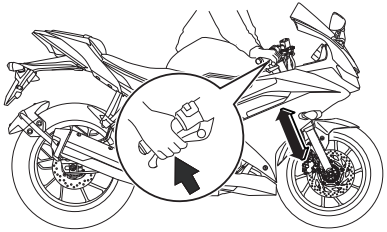
ZAUE3729

ECA10591

NOTICE

If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.

EAU23285

Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Raise the front wheel off the ground. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

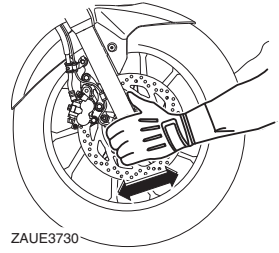
ZAUE3730

EAU23292

Checking the wheel bearings

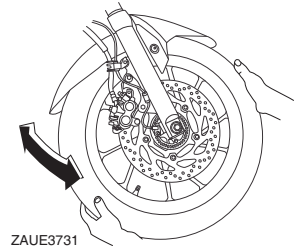
ZAUE3731

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

EAU23377

Battery

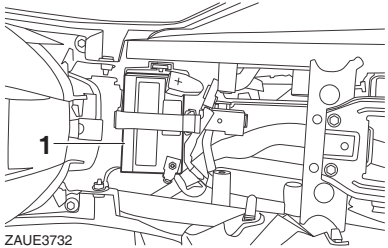

ZAUE3732
1. Battery

This model is equipped with a VRLA (Valve Regulated Lead Acid) battery. There is no need to check the electrolyte or to add distilled water. However, the battery lead connections need to be checked and, if necessary, tightened.

EWA10761

⚠ WARNING

- **Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe burns. Avoid any contact with skin, eyes or clothing and always shield your eyes when working near batteries. In case of contact, administer the following FIRST AID.**
  - **EXTERNAL: Flush with plenty of water.**
  - **INTERNAL: Drink large quantities of water or milk and immediately call a physician.**
  - **EYES: Flush with water for 15 minutes and seek prompt medical attention.**
- **Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.**
- **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**

ECA10621

NOTICE

Never attempt to remove the battery cell seals, as this would permanently damage the battery.

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to have discharged. Keep in mind that the battery tends to discharge more quickly if the vehicle is equipped with optional electrical accessories.

ECA16522

NOTICE

To charge a VRLA (Valve Regulated Lead Acid) battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery.

To store the battery

1. If the vehicle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place. ***NOTICE:*** **When removing the battery, be sure to turn the main switch off, then disconnect the negative lead before disconnecting the positive lead.** [ECA16304]
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary.

3. Fully charge the battery before installation. ***NOTICE:*** **When installing the battery, be sure to turn the main switch off, then connect the positive lead before connecting the negative lead.** [ECA16842]
4. After installation, make sure that the battery leads are properly connected to the battery terminals.

ECA16531

NOTICE

Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.

EAU53044

Replacing the fuses

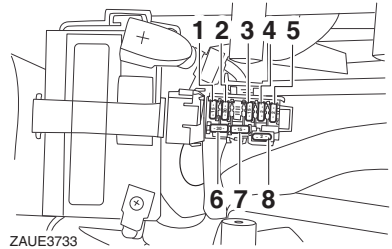

ZAUE3733

1. ABS solenoid fuse
2. ABS motor fuse
3. Main fuse
4. ABS control unit fuse
5. Accessory fuse
6. ABS motor spare fuse
7. Spare main fuse
8. Accessory spare fuse

The fuse box is located under the rider seat. (See page 4-16.)
If a fuse is blown, replace it as follows.

1. Turn the main switch off and turn off the electrical circuit in question.
2. Remove the blown fuse, and then install a new fuse of the specified amperage. **WARNING! Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.** [EWA15132]

Specified fuses:
ABS solenoid fuse:
15.0 A
ABS motor fuse:
30.0 A
Main fuse:
15.0 A
ABS control unit fuse:
2.0 A
Accessory fuse:
2.0 A

3. Turn the main switch on and turn on the electrical circuit in question to check if the device operates.
4. If the fuse immediately blows again, have a Yamaha dealer check the electrical system.

EAUN2261

Vehicle lights

This model is equipped with LED lights for headlights, auxiliary lights and brake/tail light. If a light does not come on, check the fuse and then have a Yamaha dealer check the vehicle.

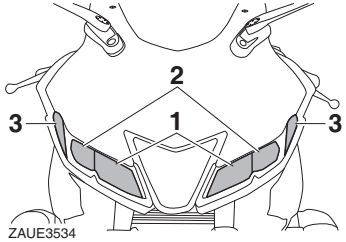

ZAUE3534

1. Headlight (low beam)
2. Headlight (high beam)
3. Auxiliary light

ECA16581

NOTICE

Do not affix any type of tinted film or stickers to the headlight lens.

EAU24205

Replacing a turn signal light bulb

1. Remove the turn signal light lens by removing the screw.

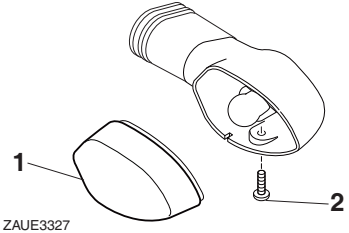

ZAUE3327

1. Turn signal light lens
2. Screw

2. Remove the burnt-out bulb by pushing it in and turning it counterclockwise.

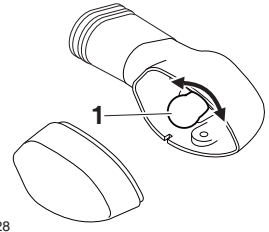

ZAUE3328

1. Bulb

3. Insert a new bulb into the socket, push it in, and then turn it clockwise until it stops.
4. Install the lens by installing the screw. ***NOTICE:*** **Do not overtighten the screw, otherwise the lens may break.** [ECA11192]

7

EAU24351

Supporting the motorcycle

Since this model is not equipped with a centerstand, follow these precautions when removing the front and rear wheel or performing other maintenance requiring the motorcycle to stand upright. Check that the motorcycle is in a stable and level position before starting any maintenance. A strong wooden box can be placed under the engine for added stability.

To service the front wheel

1. Stabilize the rear of the motorcycle by using a motorcycle stand or, if an additional motorcycle stand is not available, by placing a jack under the frame in front of the rear wheel.
2. Raise the front wheel off the ground by using a motorcycle stand.

To service the rear wheel

Raise the rear wheel off the ground by using a motorcycle stand or, if a motorcycle stand is not available, by placing a jack either under each side of the frame in front of the rear wheel or under each side of the swingarm.

EAUE3880

Front wheel

The front wheel contains components that are part of the anti-lock brake system. To prevent ABS malfunction due to wheel damage or improper installation, Yamaha recommends the wheel be professionally serviced.

EWAE0050

⚠ WARNING

Have a Yamaha dealer remove and install the wheel.

EAUE3900

Rear wheel

The rear wheel contains components that are part of the anti-lock brake system. To prevent ABS malfunction due to wheel damage or improper installation, Yamaha recommends the wheel be professionally serviced.

EWAE0050

⚠ WARNING

Have a Yamaha dealer remove and install the wheel.

EAU25872

Troubleshooting

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting charts represent quick and easy procedures for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15142

⚠ WARNING

When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.

EAU42136

Troubleshooting charts

Starting problems or poor engine performance

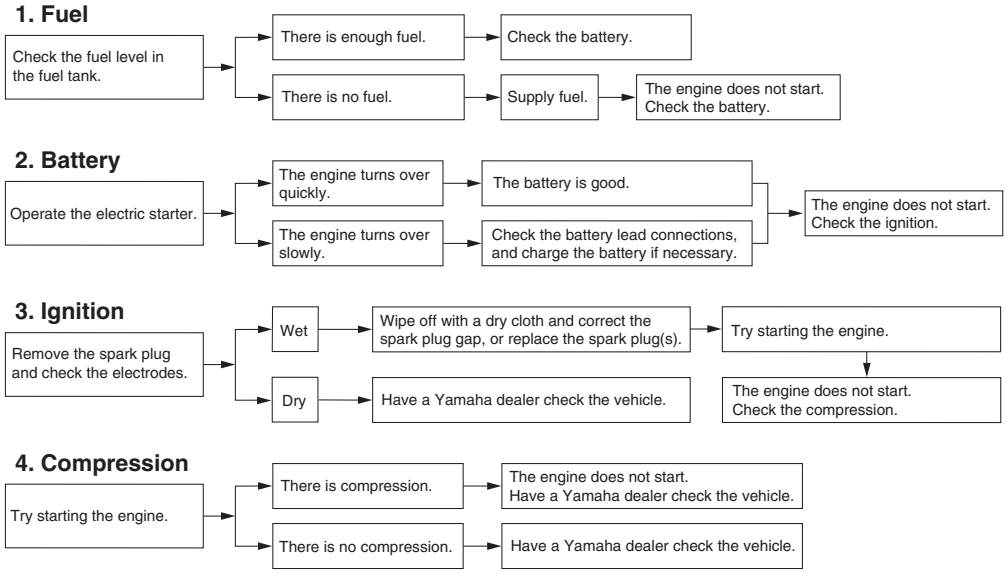

7

Engine overheating

EWA10401

⚠ WARNING

- **Do not remove the radiator cap when the engine and radiator are hot. Scalding hot fluid and steam may be blown out under pressure, which could cause serious injury. Be sure to wait until the engine has cooled.**
- **After removing the radiator cap retaining bolt, place a thick rag, like a towel, over the radiator cap, and then slowly rotate the cap counterclockwise to the detent to allow any residual pressure to escape. When the hissing sound has stopped, press down on the cap while turning it counterclockwise, and then remove the cap.**

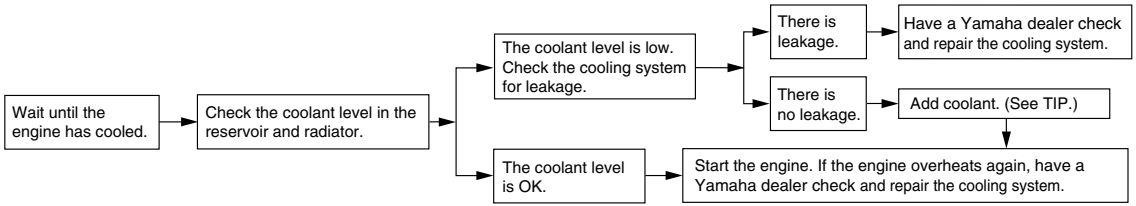

TIP

If coolant is not available, tap water can be temporarily used instead, provided that it is changed to the recommended coolant as soon as possible.

EAU37834

Matte color caution

ECA15193

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

EAUW0066

Care

While the open design of a motorcycle reveals the attractiveness of the technology, it also makes it more vulnerable. Rust and corrosion can develop even if high-quality components are used. A rusty exhaust pipe may go unnoticed on a car, however, it detracts from the overall appearance of a motorcycle. Frequent and proper care does not only comply with the terms of the warranty, but it will also keep your motorcycle looking good, extend its life and optimize its performance.

Before cleaning

1. Cover the muffler outlet with a plastic bag after the engine has cooled down.
2. Make sure that all caps and covers as well as all electrical couplers and connectors, including the spark plug cap, are tightly installed.
3. Remove extremely stubborn dirt, like oil burnt onto the crankcase, with a degreasing agent and a brush, but never apply such products onto seals, gaskets, sprockets, the drive chain and wheel axles. Always rinse the dirt and degreaser off with water.

Cleaning

ECA10773

NOTICE

- **Avoid using strong acidic wheel cleaners, especially on spoked wheels. If such products are used on hard-to-remove dirt, do not leave the cleaner on the affected area any longer than instructed. Also, thoroughly rinse the area off with water, immediately dry it, and then apply a corrosion protection spray.**
- **Improper cleaning can damage plastic parts (such as cowlings, panels, windshields, headlight lenses, meter lenses, etc.) and the mufflers. Use only a soft, clean cloth or sponge with water to clean plastic. However, if the plastic parts cannot be thoroughly cleaned with water, diluted mild detergent with water may be used. Be sure to rinse**

off any detergent residue using plenty of water, as it is harmful to plastic parts.

- **Do not use any harsh chemical products on plastic parts. Be sure to avoid using cloths or sponges which have been in contact with strong or abrasive cleaning products, solvent or thinner, fuel (gasoline), rust removers or inhibitors, brake fluid, antifreeze or electrolyte.**
- **Do not use high-pressure washers or steam-jet cleaners since they cause water seepage and deterioration in the following areas: seals (of wheel and swingarm bearings, fork and brakes), electric components (couplers, connectors, instruments, switches and lights), breather hoses and vents.**
- **For motorcycles equipped with a windshield: Do not use strong cleaners or hard sponges as they will cause dulling or scratching. Some cleaning compounds for plastic may leave scratches on the windshield. Test the product on a small hidden part of the windshield to make sure that it does not leave any marks. If the windshield is scratched, use a quality plastic polishing compound after washing.**

After normal use

Remove dirt with warm water, a mild detergent, and a soft, clean sponge, and then rinse thoroughly with clean water. Use a toothbrush or bottlebrush for hard-to-reach areas. Stubborn dirt and insects will come off more easily if the area is covered with a wet cloth for a few minutes before cleaning.

After riding in the rain or near the sea

Since sea salt is extremely corrosive, carry out the following steps after each ride in the rain or near the sea.

1. Clean the motorcycle with cold water and a mild detergent, after the engine has cooled down. ***NOTICE:*** **Do not use warm water since it increases the corrosive action of the salt.** [ECA10792]
2. Apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces to prevent corrosion.

After cleaning

1. Dry the motorcycle with a chamois or an absorbing cloth.
2. Immediately dry the drive chain and lubricate it to prevent it from rusting.
3. Use a chrome polish to shine chrome, aluminum and stainless-steel parts, including the exhaust system. (Even the thermally induced discoloring of stainless-steel exhaust systems can be removed through polishing.)
4. To prevent corrosion, it is recommended to apply a corrosion protection spray on all metal, including chrome- and nickel-plated, surfaces.
5. Use spray oil as a universal cleaner to remove any remaining dirt.
6. Touch up minor paint damage caused by stones, etc.
7. Wax all painted surfaces.

8. Let the motorcycle dry completely before storing or covering it.

EWA11132

⚠ WARNING

Contaminants on the brakes or tires can cause loss of control.

- **Make sure that there is no oil or wax on the brakes or tires.**
- **If necessary, clean the brake discs and brake linings with a regular brake disc cleaner or acetone, and wash the tires with warm water and a mild detergent. Before riding at higher speeds, test the motorcycle's braking performance and cornering behavior.**

ECA10801

NOTICE

- **Apply spray oil and wax sparingly and make sure to wipe off any excess.**
- **Never apply oil or wax to any rubber and plastic parts, but treat them with a suitable care product.**
- **Avoid using abrasive polishing compounds as they will wear away the paint.**

TIP

- Consult a Yamaha dealer for advice on what products to use.
- Washing, rainy weather or humid climates can cause the headlight lens to fog. Turning the headlight on for a short period of time will help remove the moisture from the lens.

EAU43204

Storage

Short-term

Always store your motorcycle in a cool, dry place and, if necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the motorcycle.

ECA10811

NOTICE

- **Storing the motorcycle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.**
- **To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.**

Long-term

Before storing your motorcycle for several months:

1. Follow all the instructions in the "Care" section of this chapter.

2. Fill up the fuel tank and add fuel stabilizer (if available) to prevent the fuel tank from rusting and the fuel from deteriorating.
3. Perform the following steps to protect the cylinder, piston rings, etc. from corrosion.
   a. Remove the spark plug cap and spark plug.
   b. Pour a teaspoonful of engine oil into the spark plug bore.
   c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
   d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.)
   WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.
   [EWA10952]
   e. Remove the spark plug cap from the spark plug, and then install the spark plug and the spark plug cap.
4. Lubricate all control cables and the pivoting points of all levers and pedals as well as of the sidestand/centerstand.
5. Check and, if necessary, correct the tire air pressure, and then lift the motorcycle so that both of its wheels are off the ground. Alternatively, turn the wheels a little every month in order to prevent the tires from becoming degraded in one spot.
6. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
7. Remove the battery and fully charge it. Store it in a cool, dry place and charge it once a month. Do not store the battery in an excessively cold or warm place [less than 0 °C (30 °F) or more than 30 °C (90 °F)]. For more information on storing the battery, see page 7-31.

TIP

Make any necessary repairs before storing the motorcycle.

Specifications

Dimensions:
Overall length:
1990 mm (78.3 in)
Overall width:
725 mm (28.5 in)
Overall height:
1135 mm (44.7 in)
Seat height:
815 mm (32.1 in)
Wheelbase:
1325 mm (52.2 in)
Ground clearance:
170 mm (6.69 in)
Minimum turning radius:
2.8 m (9.19 ft)

Weight:
Curb weight:
142 kg (313 lb)

Engine:
Combustion cycle:
4-stroke
Cooling system:
Liquid cooled
Valve train:
SOHC
Number of cylinders:
Single cylinder
Displacement:
155 cm^3
Bore × stroke:
58.0 × 58.7 mm (2.28 × 2.31 in)
Starting system:
Electric starter

Engine oil:
Recommended brand:
YAMALUBE®
SAE viscosity grades:
10W-40
Recommended engine oil grade:
API service SL type, JASO standard MA
Engine oil quantity:
Oil change:
0.85 L (0.90 US qt, 0.75 Imp.qt)
With oil filter removal:
0.95 L (1.00 US qt, 0.84 Imp.qt)

Coolant quantity:
Coolant reservoir (up to the maximum level mark):
0.15 L (0.16 US qt, 0.13 Imp.qt)
Radiator (including all routes):
0.49 L (0.52 US qt, 0.43 Imp.qt)

Fuel:
Recommended fuel:
Regular unleaded gasoline only
Fuel tank capacity:
11 L (2.9 US gal, 2.4 Imp.gal)
Fuel reserve amount:
1.9 L (0.50 US gal, 0.42 Imp.gal)

Fuel injection:
Throttle body:
ID mark:
BK71 00

Drivetrain:
Gear ratio:
1st:
2.833 (34/12)
2nd:
1.875 (30/16)
3rd:
1.364 (30/22)
4th:
1.143 (24/21)
5th:
0.957 (22/23)
6th:
0.840 (21/25)

Front tire:
Type:
Tubeless
Size:
100/80-17M/C 52P
Manufacturer/model:
MRF/NYLOGRIP ZAPPER-FX1

Rear tire:
Type:
Tubeless
Size:
140/70-17M/C 66H
Manufacturer/model:
MRF/NYLOGRIP ZAPPER-S

Loading:
Maximum load:
166 kg (366 lb)

(Total weight of rider, passenger, cargo and accessories)

Front brake:

Type:
Hydraulic single disc brake

Rear brake:

Type:
Hydraulic single disc brake

Front suspension:

Type:
Telescopic fork

Rear suspension:

Type:
Swingarm (link suspension)

Electrical system:

System voltage:
12 V

Battery:

Model:
ETZ-5
Voltage, capacity:
12 V, 4.0 Ah (10 HR)

Bulb wattage:

Headlight:
LED
Brake/tail light:
LED
Front turn signal light:
10.0 W
Rear turn signal light:
10.0 W
Auxiliary light:
LED
License plate light:
5.0 W

EAU26366

Identification numbers

Record the vehicle identification number and the engine serial number in the spaces provided below for assistance when ordering spare parts from a Yamaha dealer or for reference in case the vehicle is stolen.

VEHICLE IDENTIFICATION NUMBER:

ENGINE SERIAL NUMBER:

EAU26401

Vehicle identification number

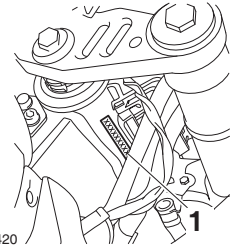

1. Vehicle identification number

The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.

TIP

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

EAU26442

Engine serial number

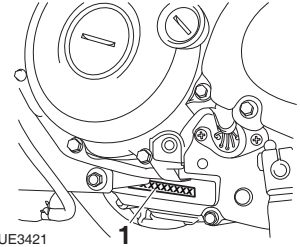

1. Engine serial number

The engine serial number is stamped into the crankcase.

10

A

ABS 4-13
ABS warning light 4-3
Air filter element, cleaning 7-15

B

Battery 7-31
Brake and clutch levers, checking and lubricating 7-28
Brake and shift pedals, checking and lubricating 7-27
Brake fluid, changing 7-24
Brake fluid level, checking 7-23
Brake lever 4-12
Brake lever free play, checking 7-21
Brake light switches 7-22
Brake pedal 4-13

C

Cables, checking and lubricating 7-27
Canister 7-10
Care 8-1
Catalytic converter 4-16
Clutch lever 4-12
Clutch lever free play, adjusting 7-20
Coolant 7-14
Coolant temperature warning light 4-2
Cowling and panels, removing and installing 7-7

D

Dimmer/Pass switch 4-11
Drive chain, cleaning and lubricating ... 7-26
Drive chain slack 7-25

E

Engine break-in 6-3
Engine idling speed 7-16
Engine oil and oil filter element 7-11
Engine serial number 10-1
Engine stop switch 4-11
Engine trouble warning light 4-3

F

Front and rear brake pads, checking 7-22
Front fork, checking 7-29
Fuel 4-15
Fuel consumption, tips for reducing 6-3
Fuel tank cap 4-14
Fuses, replacing 7-32

H

Handlebar switches 4-11
Helmet holder 4-17
High beam indicator light 4-2
Horn switch 4-11

I

Identification numbers 10-1
Indicator lights and warning lights 4-2

L

Labels, location 1-1

M

Main switch/steering lock 4-1
Maintenance and lubrication, periodic 7-3
Maintenance, emission control system 7-2
Matte color, caution 8-1
Multi-function meter unit 4-3

N

Neutral indicator light 4-2

P

Parking 6-4
Part locations 3-1

S

Safe-riding points 2-5
Safety information 2-1
Seats 4-16
Shift indicator light 4-3
Shifting 6-2
Shift pedal 4-12
Sidestand 4-18
Sidestand, checking and lubricating 7-29
Spark plug, checking 7-9
Specifications 9-1
Starting circuit cut-off system 4-18
Starting the engine 6-1
Start switch 4-11
Steering, checking 7-30
Storage 8-3
Swingarm pivots, lubricating 7-29

T

Throttle grip and cable, checking and lubricating 7-27
Throttle grip free play, adjusting 7-17
Tires 7-18
Tool kit 7-1
Troubleshooting 7-34
Troubleshooting charts 7-36
Turn signal indicator light 4-2
Turn signal light bulb, replacing 7-33
Turn signal switch 4-11

V

Valve clearance 7-18
Vehicle identification number 10-1
Vehicle lights 7-33

Index

W

Wheel bearings, checking.....7-30
Wheel (front).....7-34
Wheel, rear.....7-34
Wheels 7-20

Y

Yamalube.....7-13

SERVICE & WARRANTY HANDBOOK

INTRODUCTION

India Yamaha Motor Pvt. Ltd. wish to take this opportunity to thank you for purchasing a Yamaha product. The advanced engineering and construction methods employed during both design and production of the YAMAHA product with the commitment to provide a high quality product is supported by a comprehensive after sales and warranty service of which we are equally proud.

This Service and warranty handbook will introduce the operating and maintenance requirements for the vehicle including free & paid service and warranty terms and condition. It is recommended that it is carefully read to ensure that the maximum performance and durability along with safe and satisfactory operation are obtained. The recommended routine maintenance servicing along with any running repairs that may be required should be entrusted to YAMAHA authorized dealer to ensure that only the latest methods and YAMAHA genuine parts are used for the continuous reliability, safety and performance of the vehicle. Should any question or query exist regarding any aspect of your YAMAHA vehicle please contact the nearest YAMAHA dealer who will be only too pleased to assist wherever possible.

TABLE OF CONTENTS

SERVICE AND WARRANTY GUIDELINE..... 1-1
- Validity of warranty 1-1
- Warranty on proprietary items 1-1

DETACHMENTS..... 2-1
- Tenth paid service coupon..... 2-1
- Ninth paid service coupon..... 2-2
- Eighth paid service coupon..... 2-3
- Seventh paid service coupon..... 2-4
- Sixth paid service coupon 2-5
- Fifth free service coupon..... 2-6
- Fourth free service coupon..... 2-7
- Third free service coupon..... 2-8
- Second free service coupon..... 2-9
- First free service coupon..... 2-10

PRE-DELIVERY INSPECTION..... 3-1

INSTALLATION..... 4-1

SERVICE RECORD 5-1

BIKE & OWNER CARE KIT 6-1

GREEN BOOK..... 7-1
- Government regulations 7-2
- Action by India Yamaha Motor Pvt. Ltd..... 7-2
- Guidelines to be followed by the owners/users of motorcycles 7-2
- DO'S & DON'TS for the motorcycle 7-4
- Procedure for measurement of 'CO' emission level 7-6
- List of components impacting emission 7-7
- Log sheets 7-8

ADDRESSES OF AREA OFFICES

Validity of warranty

This warranty coverage on the Motorcycle shall be valid only if the customer avails all Free and Paid Services from Authorized YAMAHA dealer as per Recommended Service Schedule and only genuine Spare parts must be used. The customer shall ensure that each service is availed within 90 days from the date of previous service or as per recommended service schedule which ever is earlier.

India Yamaha Motor Pvt. Ltd. (hereinafter referred to as YAMAHA) thank you for having purchased this YAMAHA motorcycle. In the unlikely event of your YAMAHA motorcycle requiring warranty service. So, please contact the nearest authorized dealer. We advice that you read this handbook carefully before you get in touch with our Authorized Dealer to avoid any inconvenience.

YAMAHA will replace or repair at its Authorized Dealership free of charge, those parts which may be found on examination to have manufacturing defect, within 2 years from the date of sale of Motorcycle or first 30,000 kilometers of its operation, whichever occurs first, to the purchaser. YAMAHA warrants the products to be free from manufacturing defects for a period of two years from the date of sale of the Motorcycle or first 30,000 kilometres of its operation, whichever occurs first. If during this period of warranty the Motorcycle proves to be defective due to material or workmanship, YAMAHA through its Authorized Dealers will repair the Motorcycle without charging the labour or parts value as per the terms and conditions mentioned below:

The claim for replacement or repair of part (s) shall be considered only when:

1. The Customer ensures that immediately upon occurrence of the defect he approach the nearest YAMAHA Authorized Dealer with the affected Motorcycle. The expenses if any, to bring the Motorcycle to YAMAHA'S Authorized Dealer shall be borne by the customer.
2. The Customer produces the Service & warranty handbook in original to enable YAMAHA'S Authorized Dealer to verify the Motorcycle details and servicing details. YAMAHA reserves the right to refuse warranty, if the Service & warranty handbook is not presented or if the information contained in is incomplete or tempered.

Warranty on proprietary items

Warranty claims in respect of proprietary items like Tires, Tubes, Battery, Spark Plug and Helmet are warranted by their respective manufacturers and shall be claimed on directly by the customer as per their warranty terms. YAMAHA and its Authorised Dealers will give all assistance in taking up such claims with the manufacturer of said items.

This warranty shall not be applicable to

1. Normal maintenance operations such as Engine tune-up, Decarbonising, Fuel System Cleaning, Wheels, Brakes and Clutch adjustments as well as any other normal adjustment.

FREE SERVICE & WARRANTY

2. Consumable (wear and tear) items, i.e. Brake Shoes, Fasteners/ Shims/ Washers, Gaskets and Rubber or Plastic Components, (other than tires & tubes) oil seals, Cables, electrical wiring and Electrical Items like Bulbs, filters, spark plugs, Drive Chain, Sprocket, Clutch plate, Race Bearing & Element Air Cleaner and wheel rim misalignment or bend.
3. Part(s) of the Motorcycle that have been subjected to misuse, accident, negligent treatment or which have been used in conjunction with parts and equipment not manufactured or recommended for use by YAMAHA such use prematurely affects the performance and reliability of the motorcycle.
4. Use of non-genuine parts, non-genuine oil and lubricants.
5. Parts of the Motorcycle getting rusty due to atmospheric effects because of Industrial Pollution.
6. Parts of Motorcycle that have been altered and modified or replaced in unauthorised manner and which in the sole judgement of YAMAHA affects its performance and reliability.
7. Motorcycle that has not been got serviced by YAMAHA'S Authorised Dealers as per the service schedule described in this hand book contains 5 Free Services, 5 Paid Service Coupons (attached in this book) or which has not been operated or maintained in accordance with the instructions mentioned in this Manual (especially during Break-in Period).
8. Motorcycle used for any competition or race and/or for attempting to set up any kind of record. YAMAHA undertakes no liability in the matter of any consequential loss or damage caused due to failure of the part(s).
9. For motorcycles which have been used for any commercial purposes & Loading such as taxi etc.
10. For normal phenomenon like noise, vibration, oil seepage, which do not affect the performance of the Motorcycle?
11. For maintenance repairs required due to misuse while driving or due to adulteration of oil, petrol or due to bad road conditions.
12. If any part of the vehicle is tampered / repaired by unauthorized persons/workshops etc.
13. For consumables like oil, grease etc. used during free services or used during warranty repairs.
14. If there is any damage due to modification or fitting of accessories other than the ones recommended by YAMAHA.
15. For claims made for any consequential damage due to any previous malfunction.
16. If there is any damaged caused due to usage of improper oil/grease, non genuine parts.
17. This warranty does not cover the risks like accidents, lightening, water, fire other acts of God, improper handling or any external cause beyond the control of YAMAHA.
18. This warranty does not affect the customer's statutory rights under applicable Indian laws, nor the consumer's rights against the Dealer arising from their sales/purchase contract.

This Warranty is the entire written warranty given by YAMAHA for the Motorcycle and no other person, including the Authorized Dealer or his agent or employee is authorised to extend or enlarge terms or this Warranty.

GAUTAM BUDH NAGAR (NOIDA) COURTS SHALL HAVE EXCLUSIVE JURISDICTION TO ENTERTAIN ANY DISPUTES ARISING OUT OR IN ANY WAY TOUCHING OR CONCERNING THIS WARRANTY POLICY.

TENTH PAID SERVICE COUPON

VALIDITY : 28000 KMS OR 840 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

10

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

NINTH PAID SERVICE COUPON

VALIDITY : 25000 KMS OR 750 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

9

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

EIGHTH PAID SERVICE COUPON

VALIDITY : 22000 KMS OR 660 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

8

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

SEVENTH PAID SERVICE COUPON

VALIDITY : 19000 KMS OR 570 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

7

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

SIXTH PAID SERVICE COUPON

VALIDITY : 16000 KMS OR 480 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

6

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

FIFTH FREE SERVICE COUPON

VALIDITY : 13000 KMS OR 390 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

5

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

FOURTH FREE SERVICE COUPON

VALIDITY : 10000 KMS OR 300 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

4

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

THIRD FREE SERVICE COUPON

VALIDITY : 7000 KMS OR 210 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

3

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

SECOND FREE SERVICE COUPON

VALIDITY : 4000 KMS OR 120 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

2

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

FIRST FREE SERVICE COUPON

VALIDITY : 1000 KMS OR 30 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

1

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** : • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Clean / Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check coolant level and vehicle for coolant leakage and change as recommended (if applicable).
18. Check Front and Rear Brake Switch.
19. Check and lubricate the Clutch and Throttle Cable end.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

PRE-DELIVERY INSPECTION REPORT

(To be filled in by the Dealer on receipt of the Motorcycle from Yamaha)

No.	

Frame No.	Engine No.	Odometer Reading	Date of Inspection	Date of Sale

1. Check

a. Check for any missing item(s), scratches in painted/plated part(s), saddle or other external visual damages and take corrective action.
Check each of the following items individually and mention the corrective action (as per the recommended specifications) in the boxes provided.

☑ Found OK [S] Set right [R] Replaced [C] Cleaned [L] Lubricated

b. Check engine oil / coolant for leakage ☐
c. Check engine oil level and correct (if necessary) ☐
d. Wash the motorcycle and dry (use Yamalube shampoo only) ☐
e. Check brake fluid level and correct (if necessary) ☐

2. Check for looseness and movement of

a. Handle bar pinch bolt ☐
b. Fuel tank mounting bolt ☐
c. Saddle lock ☐
d. Cowling, panels, tail and side covers ☐
e. Rear wheel axle nut ☐
f. Front wheel axle nut ☐
g. Steering movement ☐
h. Check for front fork movement ☐
i. Rear shock absorber ☐

PRE-DELIVERY INSPECTION REPORT

3. Free play and adjustment

a. Clutch lever free play (10-15 mm) ☐
b. Throttle free play (3-5 mm) ☐
c. Drive chain slackness (30-40 mm) ☐

4. Lock Operation

a. Ignition ☐
b. Steering ☐
c. Fuel tank ☐
d. Saddle ☐

5. Wheel & Tire

Tire Pressure :

Front 200 kPa (2.00 kgf/cm², 29 psi) ☐
Rear 225 kPa (2.25 kgf/cm², 33 psi) ☐

Radial wheel runout limit - 1.0 mm ☐
Lateral wheel runout limit - 0.5 mm ☐

6. Engine

Adjust engine idling speed (if needed) 1300-1500 r/min ☐

7. Electrical

a. Ignition switch operation ☐
b. Clutch switch operation ☐
c. Brake switch operation ☐

d. Left handlebar switch operation
   - Dimmer / Pass switch ☐
   - Turn signal switch ☐
   - Horn switch ☐

e. Right handlebar switch operation.
   - Engine stop switch ☐
   - Start switch ☐

f. All bulbs functioning ☐

g. Meter Panel lights / LEDs ☐

h. Battery
   - Voltage ☐
   - Fuse ☐

8. Road Test

a. Starting ☐
b. Gear shifting operation ☐
c. Clutch operation ☐
d. Application of brakes (front and rear) ☐
e Speedometer / Odometer operation ☐
f. Fuel meter / Trip meter operation ☐
g. Check VVA function ☐
h. Engine abnormal noise/vibration ☐
i. Check ABS function ☐

9. Polish the vehicle ☐

(Use only Yamalube polish) Do not apply polish directly on painted surface.

EXPLAINED BY

SIGNATURE_____ **NAME**

MAIN SELLING DLR'S STAMP, SIGN & CODE

CUSTOMER'S SIGN.

INSTALLATION

Procedures to be explained to the customer on delivery of the Motorcycle by the Dealer's Representative

1. Operation of all the locks (Ignition, steering, fuel tank cap & saddle).
2. Fuel meter display operation in all the condition.
3. Operation of throttle.
4. Operation of handlebar switches, their functions and pass beam.
5. Operation of Start switch / engine stop switch & its functioning.
6. Disadvantages of riding on half clutch (Never ride with clutch pressed).
7. Gear shifting pattern.
8. Tire inflation pressure : **Front** - 200Kpa (29 Psi) **Rear** - 225Kpa (33 Psi)
9. Never give sudden acceleration, always accelerate gradually.
10. Simultaneous use of front and rear brakes.
11. Checking of brake fluid at regular intervals.
12. Never ride with your foot on rear brake pedal.
13. Always keep the side stand up before riding.
14. Use of helmet holder.
15. Function of all the multifunction display on meter panel.
16. Never keep the ignition switch on when vehicle is not in use.

17. Check the operation of odometer, trip meter and fuel meter.
18. Location of storage and tool kit compartments and their use.
19. Procedure of opening and closing of panel & cowling.
20. Correct drive chain slackness (30-40 mm).
21. Correct type of spark plug and spark plug gap.
22. Engine oil level checking and explaining the importance of **replacing the engine oil in every service. Always use SAE 10W-40 API service SL type, JASO standard MA.**
23. Break-In period / preventive maintenance schedule instructions.
24. Information of emission and safety norms.
25. Importance of first service at 1000 kms and schedule of free services.
26. Warranty terms and conditions.

IMPORTANT

EXPLAINED BY

SIGNATURE : _____ NAME :

MAIN SELLING DLR'S STAMP, SIGN & CODE

CUSTOMER'S SIGN.

SERVICE RECORD

Customer ID	

No.	

CUSTOMER'S NAME & ADDRESS: _____

_____

TELEPHONE / MOBILE / E-MAIL: _____

MOTORCYCLE IDENTIFICATION

FRAME NO. : | | | | | | | | | | | | | | | | |

ENGINE NO. : | | | | | | | | | | | | |

DATE OF SALE : | |

SELLING DLR'S
STAMP, SIGN & CODE

SERVICE RECORD

Service / warranty record

FREE SERVICE RECORD

S. NO.	VALIDITY*		SERVICED AT	JOB DETAILS/ CARD NO	SERVICING DEALER'S NAME & ADDRESS
	KMS OR DAY	DATE	KMS / ON DATE		
1	1000 OR 30				
2	4000 OR 120				
3	7000 OR 210				
4	10000 OR 300				
5	13000 OR 390				

*Kilometers or days from date of purchase whichever comes first.

PAID SERVICE RECORD

S. NO.	VALIDITY*		SERVICED AT	JOB DETAILS/ CARD NO	SERVICING DEALER'S NAME & ADDRESS
	KMS OR DAY	DATE	KMS / ON DATE		
6	16000 OR 480				
7	19000 OR 570				
8	22000 OR 660				
9	25000 OR 750				
10	28000 OR 840				

*Kilometers or days from date of purchase whichever comes first.

SERVICE RECORD

Important

(i) Cost of oil / coolant and consumables for the free services will be chargeable at actual and to be borne by the customer.

(ii) Please ensure that the servicing dealer column is duly stamped & signed by the servicing dealer.

(iii) For the validity of “Warranty” benefits, it is mandatory that all services are availed by the customer as per the recommended schedule, as given in the Service & warranty handbook.

(iv) Please ensure that each service is availed as per the recommended service schedule, kilometers or days from date of purchase whichever comes first.

BIKE & OWNER CARE KIT - BENEFIT TO CUSTOMER

	Attachments & Their Benefits
	**Tool Kit :** **Benefit -** Containing tools for minor adjustments
	**Rear View Mirror :** **Benefit -** Legal part enhancing your safety
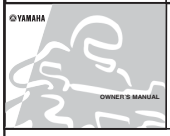	**Owner's manual &** **Service and warranty handbook :** **Benefit -** Introduction of product and operations

	Attachments & Their Benefits
	**First Aid Kit :** **Benefit -** Containing necessary first aid treatment

Note **:** Before every ride, ensure your bike is fully equipped with Bike & customer care kit.

BIKE AND OWNER CARE KIT - NEW VEHICLE

S. NO.	Items	Availability
1	Tool kit	√
2	Rear view mirror	√
3	Owner's manual & Service and warranty handbook	√
4	First aid kit	√

All the items mentioned above are received free of charge with my Motorcycle.

_____	_____	_____
Frame number of the vehicle	**Delivering person's signature**	**Customer's signature**

Note **: This items mentioned above are supplied by YAMAHA free of charge with each vehicle, YAMAHA can change / modify the items in the above kit without prior notice.**

GREEN BOOK

LET US KEEP OUR ENVIRONMENT CLEAN

(PLEASE READ THIS BOOK CAREFULLY)

IMPORTANT GUIDELINES

1. Government regulations

1.1 Exhaust emission has harmful effect on our environment / public health.

1.2 To safeguard environment from getting polluted, Govt. of India has enforced specific regulations to control Automobile exhaust emission.

1.3 The Center Motor Vehicle Rule (CMVR) states that for **Motorcycles, Carbon monoxide emission, during idling shall always be less than 3.5% (By Volume).**

1.4 **Non compliance with above standard is a punishable offence.**

2. Action by India Yamaha Motor Pvt. Ltd.

2.1 **YAMAHA** as a manufacturer ensures that all motorcycles leaving the factory meet the exhaust emission norms as specified by CMVR.

2.2 Special note has been included in the "Owner's Manual" for reference and attention by the Owner/User.

2.3 Vehicle has a factory tuned throttle body, which is optimally adjusted to meet the requirement of exhaust emission. This adjustment not be tampered as it may cause variation in pre-controlled "CO" emission levels. Subsequently, it becomes very important that it should always be within the recommended limit, when checked by a properly calibrated "CO" measuring equipment.

3. Guidelines to be followed by the owners/users of motorcycles.

3.1 Please ensure that the "CO" emission is got checked by authorised agencies registered with the appropriate authorities.

3.2 Please ensure that the "CO" is within specified limits of 3.5% (by volume). If it is not so, it should be got reset by **YAMAHA** Authorised dealer.

3.3 Do not tamper with the throttle body settings done by the Factory / **YAMAHA** Authorised dealer.

3.4 Please maintain the log sheet provided in the green book.

3.5 **Proper Installation :** The Owner/User must clearly understand, from the dealer, all the points related to proper installation of the motorcycle as described in the Service and warranty hand book.

If the owner of the Vehicle does not comply with above legal requirement, the Vehicle may be deregistered or penalty may be imposed by the authorities.

The following points may be checked and suitable corrective action should be taken if required, to ensure emission levels to remain within acceptable limits.

1. Clean air filter element periodically and replace it when required.
2. Clean, inspect and adjust spark plug gap periodically.
3. Use only recommended spark plug. Replace it as per recommendations.
4. Use only recommended grade (SL type) of genuine engine oil of superior quality.
5. Replace oil filter as per recommendations.
6. Get your Vehicle serviced and tuned periodically as per recommended schedule.
7. Use unadulterated petrol.

As per CMVR rules certain safety norms have been mandated for the two wheelers to prevent accidents. The following items have been provided in the vehicle for your safety.

1. Horn
2. Rear view mirror
3. Efficient front & rear brakes (To be applied simultaneously)
4. Grip for pillion rider
5. Head light / Tail light
6. Helmet holder
7. Indicators

It is recommended to use a protective head gear (Helmet) conforming to specification of B.I.S. (Bureau of Indian Standards).

It is recommended to use saree guard, when driving with female as a pillion rider.

In the interest of your own safety you are requested to always keep the above items (and the vehicle in general) in good working condition to avoid any accident.

DO'S AND DON'TS FOR THE MOTORCYCLE

DO'S (✓)

✓ 1 Always use genuine 'spare parts' purchased from **YAMAHA** Authorised dealers.

✓ 2 Always use only genuine oils

- YAMALUBE SAE10W-40, API service SL type, JASO standard MA

✓ 3 Always keep your engine well tuned. Save environment and also improve fuel efficiency.

✓ 4 • ALWAYS GET YOUR MOTORCYCLE REPAIRED AND MAINTAINED ONLY AT **YAMAHA** AUTHORISED DEALER.

- **YAMAHA** serves you through a wide network of Authorised dealers.

✓ 5. Check the following at every scheduled service:-

a)	Spark plug	:	Check / Reset Gap / Replace as per the recommendations in the Owner's Manual.
b)	Air filter	:	Clean as per the recommendations in the Owner's Manual.
c)	Piston / Rings / Cylinder	:	Check / Clean / Replace if necessary.
d)	Exhaust system	:	Check / Replace if necessary.
e)	Valve timing	:	Check / Adjust according to maintenance schedule.
f)	Compression pressure	:	Check / Diagnose.

- ✓ 6 If misfiring, get your Motorcycle diagnosed & attended immediately without running even for a KM.
- ✓ 7 Get Motorcycle maintained regularly as per details and schedule given in Service & warranty hand book.
- ✓ 8 Get emission of your Motorcycle inspected at least once every 3 months.
- ✓ 9 Please follow good driving habits in varying traffic conditions.
- ✓ 10 Switch "OFF" the ignition switch while long waiting at signal point.

DON'TS (×)

- × 1. Don't overload / overspeed your motorcycle.
- × 2. Don't alter or modify your motorcycle.
- × 3. Never drive with ignition "OFF" while moving down a slope.
- × 4. Don't turn off the engine or interrupt the ignition when the transmission is in gear & the motorcycle is in motion.
- × 5. Don't idle the engine for a prolonged period.
- × 6. Don't use Non-genuine parts.
- × 7. Don't buy adulterated petrol / oil.

‘CO’ EMISSION LEVEL MEASUREMENT

4. Procedure for measurement of “CO” emission level

4.1 **IMPORTANT :** “CO” measurement equipment must be duly calibrated.

4.2 Check for “NO LEAKAGE” from exhaust system.

4.3 All electricals should be in OFF position.

4.4 Set the idle speed of the engine in warmed up condition of motorcycle as specified.

IDLE RPM: 1300 - 1500 RPM

4.5 Insert the sampling probe of the exhaust gas analyser inside the exhaust muffler of the motorcycle.

4.6
- If the reading is within specified limits then it is acceptable.
- If the reading exceeds the norm of 3.5% (by volume) have it adjusted by **YAMAHA** Authorised dealer.

4.7 **YAMAHA** serve you through an extensive network of
- Yamaha authorised dealers.
- Yamaha bike corners.
- Yamaha points.

5. List of components impacting “emission”

a. Air filter
b. Throttle body
c. Cylinder
d. Piston ring & piston
e. Cylinder head
f. Rocker arm
g. Valves
h. Cam shaft
i. Valve seals
j. Timing chain
k. Ignition coil, ECU, Magneto
l. Spark plug
m. Exhaust system
n. Canister

LOG SHEET (To be Filled in by Owner/User)

Customer Name :

Address :

Selling Dealer :

Date of Purchase :

Vehicle Reg. No. :

SL. No.	Date	KM Reading	Job Card No.	Service (Free/Paid)	Parts Replaced	Oil Fill Qty.	CO Level Date/Value)	Serv. Dealer

YAMAHA AREA OFFICES

INDIA YAMAHA MOTOR PVT. LTD.
A-3, SURAJPUR INDUSTRIAL AREA
NOIDA DADRI ROAD, SURAJPUR-201306
PH. : 0120-2351193, 2351194, FAX : 0120-2350685
yes@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
208, V.V VINTAGE BUILDING, RAJ BHAVAN ROAD,
SOMAJIGUDA, HYDERABAD-500082
PH. : 040-66108039
ao-hyd@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
AKDR TOWER, 5TH FLOOR DOOR NO. 3/381, RAJIV
GANDHI SALAI (OMR), METTUKUPPAM, CHENNAI 600097
PH.: 044 24621304 / 05
achennai@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
BLOCK '3' DLF IT PARK, GF 08 MAJOR ARTERIAL ROAD,
NEW TOWN (RAJARHAT), KOLKATA-700156
PH.: 033 66149500 /23
acalcutta@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
N.H CENTRE POINT BUILDING,5TH FLOOR,
OPP. BORA SERVICE PETROL DEPOT,
G S ROAD, ULUBARI, GUWAHATI-781007, ASSAM.
ao-gwh@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
AASHIMA MALL 5TH FLOOR OFFICE NO-504-505,
HOSHANGABAD ROAD, NERA MISROD BHOPAL M.P.-
462026, PHONE NO. 0755-4053194, 95, 96
abhopal@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
511-512, 3RD FLOOR, ANCHOR MALL, SANTOSH NAGAR
AJMER ROAD, JAIPUR-302006, RAJASTHAN.
PHONE:- 0141-4036229, 4040512
Email:- ajaipur@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
CHINTHAMANI CLASSIQUE, UNIT NO. 101, 1ST FLOOR, PLOT
NO. 244-B, PAHADI, GOREGAON EAST, MUMBAI - 400063
PH.: 022 67084851, 52
amumbai@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
ANAND CORONATION TOWER, 3RD FLOOR, 116~117
VIJAIPUR, VIBHUTI KHAND GOMTI NAGAR, LUCKNOW
(U.P.) PIN - 226010, Ph No. 0522-2304990, 2304991,
alucknow@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
NO.306-307, 3RD FLOOR, MAGNETO OFFIZO
"MAGNETO THE MALL", G.E ROAD, LABHANDI,
TELEBANDA, RAIPUR-492001 PH.: 0771 4911106
raipurAO@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
404/2, SAMRIDDHI, OPPOSITE SAKAR-III, NEAR
INCOME TAX CIRCLE, ASHRAM ROAD,
AHMEDABAD -380014, PH.: 079- 40068321
aahmedabad@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
501 - A, B & C, 5TH FLOOR, CITY POINT,
BOAT CLUB ROAD, DHOLE PATIL ROAD, PUNE - 411001
PH: - 020-66208524, 66208525
apune@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
1056 C, UR HOUSE, 3RD FLOOR, AVINASHI ROAD,
OPP OLD NILGIRIS, COIMBATORE – 641018
Ph No: 0422-2243932, 2243933
acoimbatore@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
PLOT NO. 57, PHASE - 1, 5TH FLOOR,
INDUSTRIAL & BUSINESSPARK-1,CHANDIGARH-160002
PH.: 0172 4609860
achandigarh@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
D NO. 40-6/2-2, 3RD FLOOR, OPP: CHERRYS BAKERY,
SHRIYA COMPLEX, REVENUE COLONY,
MOGALRAJPURAM, VIJAYAWADA-520010
PH.: 0866 2472275, 76

INDIA YAMAHA MOTOR PVT. LTD.
VV1 SIPCOT INDUSTRIAL PARK, VALLAM VADAGAL,
SRIPERUMBUDUR, KANCHIPURAM - 602105
yes@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
RAJKUMAR BUILDING, 5TH FLOOR, PLOT NO.341,
ARINGAR ANNA NAGAR, L.I.G. COLONY,
MADURAI - 625020

INDIA YAMAHA MOTOR PVT. LTD.
K B CHAMBERS, HOUSE NO.28, 2ND FLOOR,
GOKULPETH, SOUTH CANAL ROAD,
NAGPUR - 440010
PH. : 0712 6600283, 84

INDIA YAMAHA MOTOR PVT. LTD.
NO. 201, 2ND FLOOR, "EIGHT-O-FOUR AVENUE", NO. 804
(OLD) NEW NO-45, 9TH MAIN, 4TH BLOCK JAYANAGAR,
BANGALORE – 560011, PH. : 080 26656352, 50
ABanglore@yamaha-motor-india.com

INDIA YAMAHA MOTOR PVT. LTD.
OFFICE NO.2001 , 3RD FLOOR,
"SUN ARCADE" , VIP ROAD , VESHU,
SURAT - 395007

INDIA YAMAHA MOTOR PVT. LTD.
NO. 32/2249/B-6, 4TH FLOOR, GREEN LAND HEIGHTS,
CIVIL LANE ROAD, PALARIVATTOM,
COCHIN - 682025
PH. : 0484 2341218

INDIA YAMAHA MOTOR PVT. LTD.
BMC BHAWANI MALL COMMERCIAL COMPLEX,
BLOCK 2, 5TH FLOOR, SAHEED NAGAR,
BHUBANESHWAR - 751007
PH. : 0674 2549920, 30

INDIA YAMAHA MOTOR PVT. LTD.
VAUSNDARA METRO MALL,
EAST BORING CANAL
ROAD, PATNA - 800001

INDIA YAMAHA MOTORS PVT. LTD.
G-1003,T1,BUSINESS PARK, HILITE CITY,
THONDAYAD BYPASS,G A COLLEGE P O,
CALICUT - 673014.

We promise to give you hassle free service all the time. Please give us your valuable feedback, suggestion or complaint on: Contact: 1800-420-1600 (Toll free) (8 am to 5 pm) Email us: yes@yamaha-motor-india.com Enjoy the ride with YAMAHA!

ALWAYS USE
YAMAHA GENUINE SPARE PARTS

YAMAHA

GENUINE

Parts & Accessories



For your Safety,
Always Use Yamaha
Genuine Helmet





B9E-F8199-E1

YAMAHA

PRINTED IN INDIA

1Y197(OM-01)1357-03-19-E