YAMAHA

⚠ Read this manual carefully before operating this vehicle.

OWNER'S MANUAL



MOTORCYCLE

FZN150D-AD

BST-F819V-E1

EAU46094

⚠ Read this manual carefully before operating this vehicle. This manual should stay with this vehicle if it is sold.

EAU10103

Welcome to the Yamaha world of motorcycling!
As the owner of the FZN150D-AD, you are benefiting from Yamaha's vast experience and newest technology regarding the design and manufacture of high-quality products, which have earned Yamaha a reputation for dependability.
Please take the time to read this manual thoroughly, so as to enjoy all advantages of your FZN150D-AD. The Owner's Manual does not only instruct you in how to operate, inspect and maintain your motorcycle, but also in how to safeguard yourself and others from trouble and injury.
In addition, the many tips given in this manual will help keep your motorcycle in the best possible condition. If you have any further questions, do not hesitate to contact your Yamaha dealer.
The Yamaha team wishes you many safe and pleasant rides. So, remember to put safety first!
Yamaha continually seeks advancements in product design and quality. Therefore, while this manual contains the most current product information available at the time of printing, there may be minor discrepancies between your motorcycle and this manual. If there is any question concerning this manual, please consult a Yamaha dealer.

EWA10032

⚠ WARNING

Please read this manual carefully and completely before operating this motorcycle.

Important manual information

EAU10134

Particularly important information is distinguished in this manual by the following notations:

⚠	**This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.**
⚠ WARNING	**A WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.**
NOTICE	**A NOTICE indicates special precautions that must be taken to avoid damage to the vehicle or other property.**
TIP	A TIP provides key information to make procedures easier or clearer.

*Product and specifications are subject to change without notice.

EAUE0011

FZN150D-AD
OWNER'S MANUAL
©2027 by India Yamaha Motor Pvt. Ltd.
1st edition, July 2026
All rights reserved.
Any reprinting or unauthorized use without the written permission of India Yamaha Motor Pvt. Ltd. is expressly prohibited.
Printed in India.

Table of contents

Location of important labels 1-1

Safety information 2-1

Description 3-1
- Left view 3-1
- Right view 3-2
- Controls and instruments 3-3

Special features 4-1
- SMG (Smart Motor Generator) 4-1
- Stop and Start System 4-1
- Stop and Start System operation ... 4-2

Smartphone Connectivity System 5-1
- CCU (Communication Control Unit) 5-1

Instrument and control functions ... 6-1
- Main switch/steering lock 6-1
- Indicator lights and warning light ... 6-2
- Display 6-4
- Main display screen 6-5
- Menu system 6-8
- Handlebar switches 6-17
- Clutch lever 6-19
- Shift pedal 6-19
- Brake lever 6-19
- Brake pedal 6-20
- ABS 6-20
- Traction control system 6-21
- Fuel tank cap 6-22
- Fuel 6-23
- Catalytic converter 6-25
- Exhaust emission control system 6-25
- Seat 6-25
- Helmet holder 6-26
- DC connectors 6-27
- Sidestand 6-27
- Ignition circuit cut-off system 6-28

For your safety – pre-operation checks 7-1

Operation and important riding points 8-1
- Engine break-in 8-1
- Starting the engine 8-2
- Shifting 8-3
- Tips for reducing fuel consumption 8-3
- Parking 8-4

Periodic maintenance and adjustment 9-1
- Tool kit 9-1
- Periodic maintenance chart for the emission control system 9-2
- General maintenance and lubrication chart 9-3
- Removing and installing panels 9-7
- Checking the spark plug 9-8
- Canister 9-9
- Engine oil and oil filter element 9-10
- Why Yamalube 9-12
- Air filter element and check hose 9-13
- Engine idling speed 9-13
- Adjusting the throttle grip free play 9-14
- Valve clearance 9-15
- Tires 9-15
- Cast wheels 9-17
- Adjusting the clutch lever free play 9-17
- Brake light switches 9-18
- Checking the front and rear brake pads 9-19
- Checking the brake fluid level 9-19
- Changing the brake fluid 9-21
- Drive chain slack 9-21
- Cleaning and lubricating the drive chain 9-22
- Checking and lubricating the cables 9-23
- Checking and lubricating the throttle grip and cable end 9-23
- Checking and lubricating the brake and shift pedals 9-24
- Checking and lubricating the brake and clutch levers 9-24

Checking and lubricating the centerstand and sidestand 9-25
Lubricating the swingarm pivots ...9-26
Checking the front fork.....9-26
Checking the steering 9-27
Checking the wheel bearings.....9-27
Battery.....9-27
Replacing the fuses.....9-29
Vehicle lights 9-30
Front wheel.....9-30
Rear wheel.....9-31
Troubleshooting 9-31
Troubleshooting chart 9-33

Motorcycle care and storage 10-1
Matte color caution 10-1
Care.....10-1
Storage.....10-4

Specifications.....11-1

Consumer information 12-1
Identification numbers.....12-1
Diagnostic connector 12-2
Use of your data.....12-3

Index 13-1

Location of important labels

EAU10387

Read and understand all of the labels on your vehicle. They contain important information for safe and proper operation of your vehicle. Never remove any labels from your vehicle. If a label becomes difficult to read or comes off, a replacement label is available from your Yamaha dealer.

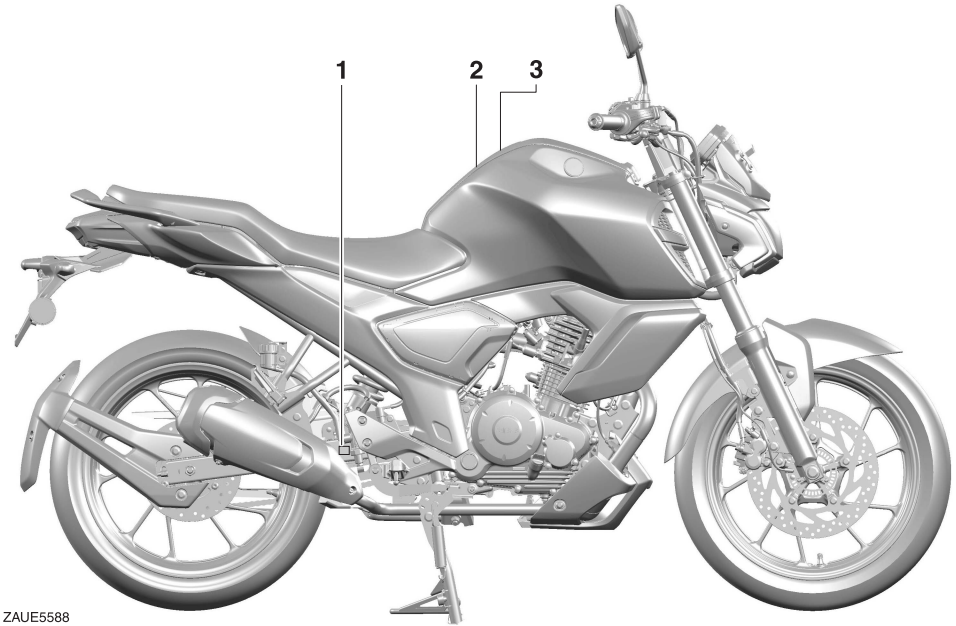

ZAUE5588

1

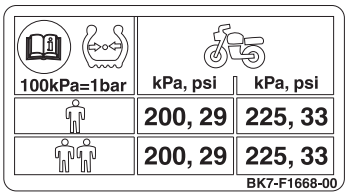

2



3

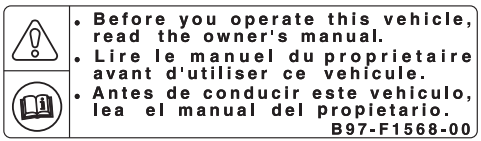

ZAUE5637

EAU1028D

2

Be a Responsible Owner

As the vehicle's owner, you are responsible for the safe and proper operation of your motorcycle.

Motorcycles are single-track vehicles. Their safe use and operation are dependent upon the use of proper riding techniques as well as the expertise of the operator. Every operator should know the following requirements before riding this motorcycle.

He or she should:

- Obtain thorough instructions from a competent source on all aspects of motorcycle operation.
- Observe the warnings and maintenance requirements in this Owner's Manual.
- Obtain qualified training in safe and proper riding techniques.
- Obtain professional technical service as indicated in this Owner's Manual and/or when made necessary by mechanical conditions.
- Never operate a motorcycle without proper training or instruction. Take a training course. Beginners should receive training from a certified instructor. Contact an authorized motorcycle dealer to find out about the training courses nearest you.

Safe Riding

Perform the pre-operation checks each time you use the vehicle to make sure it is in safe operating condition. Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. See page 7-1 for a list of pre-operation checks.

- This motorcycle is designed to carry the operator and a passenger.
- The failure of motorists to detect and recognize motorcycles in traffic is the predominating cause of automobile/motorcycle accidents. Many accidents have been caused by an automobile driver who did not see the motorcycle. Making yourself conspicuous appears to be very effective in reducing the chance of this type of accident.

Therefore:

- Wear a brightly colored jacket.
- Use extra caution when you are approaching and passing through intersections, since intersections are the most likely places for motorcycle accidents to occur.
- Ride where other motorists can see you. Avoid riding in another motorist's blind spot.
- Never maintain a motorcycle without proper knowledge. Contact an authorized motorcycle dealer to inform you on basic motorcycle maintenance. Certain maintenance can only be carried out by certified staff.

- Many accidents involve inexperienced operators. In fact, many operators who have been involved in accidents do not even have a current motorcycle license.
  - Make sure that you are qualified and that you only lend your motorcycle to other qualified operators.
  - Know your skills and limits. Staying within your limits may help you to avoid an accident.
  - We recommend that you practice riding your motorcycle where there is no traffic until you have become thoroughly familiar with the motorcycle and all of its controls.
- Many accidents have been caused by error of the motorcycle operator. A typical error made by the operator is veering wide on a turn due to excessive speed or undercornering (insufficient lean angle for the speed).
  - Always obey the speed limit and never travel faster than warranted by road and traffic conditions.
  - Always signal before turning or changing lanes. Make sure that other motorists can see you.
- The posture of the operator and passenger is important for proper control.
  - The operator should keep both hands on the handlebar and both feet on the operator footrests during operation to maintain control of the motorcycle.
  - The passenger should always hold onto the operator, the seat strap or grab bar, if equipped, with both hands and keep both feet on the passenger footrests. Never carry a passenger unless he or she can firmly place both feet on the passenger footrests.
- Never ride under the influence of alcohol or other drugs.
- This motorcycle is designed for on-road use only. It is not suitable for off-road use.

Protective Apparel

The majority of fatalities from motorcycle accidents are the result of head injuries. The use of a safety helmet is the single most critical factor in the prevention or reduction of head injuries.

- Always wear an approved helmet.
- Wear a face shield or goggles. Wind in your unprotected eyes could contribute to an impairment of vision that could delay seeing a hazard.
- The use of a jacket, heavy boots, trousers, gloves, etc., is effective in preventing or reducing abrasions or lacerations.
- Never wear loose-fitting clothes, otherwise they could catch on the control levers, footrests, or wheels and cause injury or an accident.
- Always wear protective clothing that covers your legs, ankles, and feet. The engine or exhaust system become very hot during or after operation and can cause burns.
- A passenger should also observe the above precautions.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, confusion, and eventually death.

Carbon Monoxide is a colorless, odorless, tasteless gas which may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can collect rapidly and you can quickly be overcome and unable to save yourself. Also, deadly levels of carbon monoxide can linger for hours or days in enclosed or poorly ventilated areas. If you experience any symptoms of carbon monoxide poisoning, leave the area immediately, get fresh air, and SEEK MEDICAL TREATMENT.

- Do not run engine indoors. Even if you try to ventilate engine exhaust with fans or open windows and doors, carbon monoxide can rapidly reach dangerous levels.
- Do not run engine in poorly ventilated or partially enclosed areas such as barns, garages, or carports.
- Do not run engine outdoors where engine exhaust can be drawn into a building through openings such as windows and doors.

Loading

Adding accessories or cargo to your motorcycle can adversely affect stability and handling if the weight distribution of the motorcycle is changed. To avoid the possibility of an accident, use extreme caution when adding cargo or accessories to your motorcycle. Use extra care when riding a motorcycle that has added cargo or accessories. Here, along with the information about accessories below, are some general guidelines to follow if loading cargo to your motorcycle:

The total weight of the operator, passenger, accessories and cargo must not exceed the maximum load limit. **Operation of an overloaded vehicle could cause an accident.**

Maximum load:
164 kg (362 lb)

When loading within this weight limit, keep the following in mind:

- Cargo and accessory weight should be kept as low and close to the motorcycle as possible. Securely pack your heaviest items as close to the center of the vehicle as possible and make sure to distribute the weight as evenly as possible on both sides of the motorcycle to minimize imbalance or instability.
- Shifting weights can create a sudden imbalance. Make sure that accessories and cargo are securely attached to the motorcycle before riding. Check accessory mounts and cargo restraints frequently.
  - Properly adjust the suspension for your load (suspension-adjustable models only), and check the condition and pressure of your tires.
  - Never attach any large or heavy items to the handlebar, front fork, or front fender. These items, including such cargo as sleeping bags, duffel bags, or

tents, can create unstable handling or a slow steering response.

- **This vehicle is not designed to pull a trailer or to be attached to a sidecar.**

Genuine Yamaha Accessories

Choosing accessories for your vehicle is an important decision. Genuine Yamaha accessories, which are available only from a Yamaha dealer, have been designed, tested, and approved by Yamaha for use on your vehicle.

Many companies with no connection to Yamaha manufacture parts and accessories or offer other modifications for Yamaha vehicles. Yamaha is not in a position to test the products that these aftermarket companies produce. Therefore, Yamaha can neither endorse nor recommend the use of accessories not sold by Yamaha or modifications not specifically recommended by Yamaha, even if sold and installed by a Yamaha dealer.

Aftermarket Parts, Accessories, and Modifications

While you may find aftermarket products similar in design and quality to genuine Yamaha accessories, recognize that some aftermarket accessories or modifications are not suitable because of potential safety hazards to you or others. Installing aftermarket products or having other modifications performed to your vehicle that change any of the vehicle's design or operation characteristics can put you and others at greater risk of serious injury or death. You are responsible for injuries related to changes in the vehicle.

Keep the following guidelines in mind, as well as those provided under "Loading" when mounting accessories.

- Never install accessories or carry cargo that would impair the performance of your motorcycle. Carefully inspect the accessory before using it to make sure that it does not in any way reduce ground clearance or cornering clearance, limit suspension travel, steering travel or control operation, or obscure lights or reflectors.
- Accessories fitted to the handlebar or the front fork area can create instability due to improper weight distribution or aerodynamic changes. If accessories are added to the handlebar or front fork area, they must be as lightweight as possible and should be kept to a minimum.
- Bulky or large accessories may seriously affect the stability of the motorcycle due to aerodynamic effects. Wind may attempt to lift the motorcycle, or the motorcycle may become unstable in cross winds. These accessories may also cause instability when passing or being passed by large vehicles.
- Certain accessories can displace the operator from his or her normal riding position. This improper position limits the freedom of movement of the

operator and may limit control ability, therefore, such accessories are not recommended.

- Use caution when adding electrical accessories. If electrical accessories exceed the capacity of the motorcycle's electrical system, an electric failure could result, which could cause a dangerous loss of lights or engine power.

Aftermarket Tires and Rims

The tires and rims that came with your motorcycle were designed to match the performance capabilities and to provide the best combination of handling, braking, and comfort. Other tires, rims, sizes, and combinations may not be appropriate. See page 9-15 for tire specifications and for information on servicing and replacing your tires.

Transporting the Motorcycle

Be sure to observe following instructions before transporting the motorcycle in another vehicle.

- Remove all loose items from the motorcycle.
- Check that the fuel cock (if equipped) is in the off position and that there are no fuel leaks.
- Shift the transmission into gear (for models with a manual transmission).
- Secure the motorcycle with tie-downs or suitable straps that are attached to solid parts of the motorcycle, such as the frame or upper front fork triple clamp (and not, for example, to rubber-mounted handlebars or turn signals, or parts that could break). Choose the location for the straps carefully so the straps will not rub against painted surfaces during transport.
- The suspension should be compressed somewhat by the tie-downs, if possible, so that the motorcycle will not bounce excessively during transport.

EAU10411

Left view

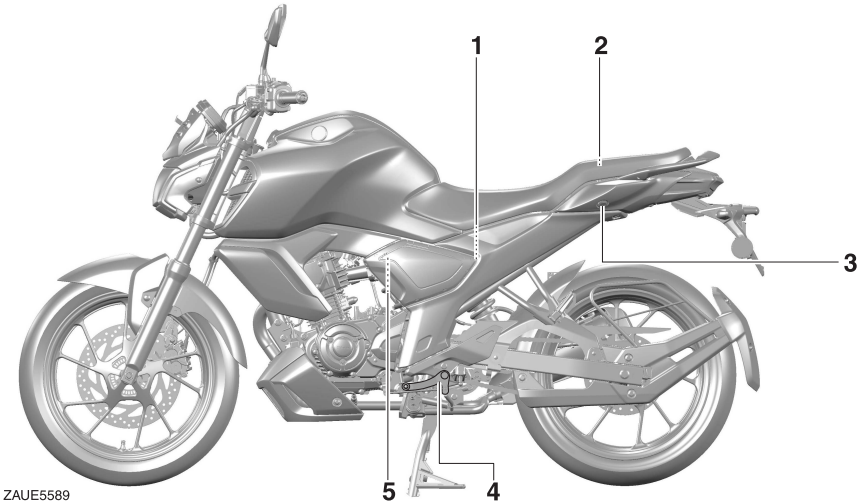

ZAUE5589

1. Air filter element (page 9-13)
2. Tool kit (page 9-1)
3. Seat lock (page 6-25)
4. Shift pedal (page 6-19)
5. Idle adjusting screw (page 9-13)

EAU10421

Right view

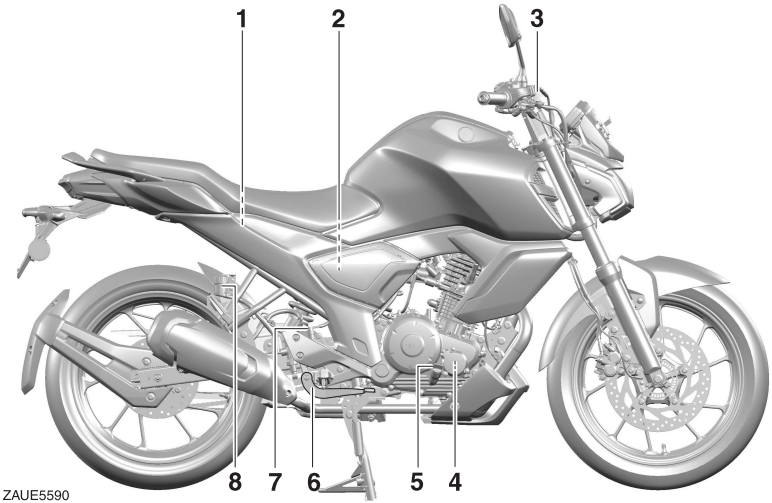

ZAUE5590

1. Fuse box (page 9-29)
2. Battery (page 9-27)
3. Front brake fluid reservoir (page 9-19)
4. Engine oil filter element (page 9-10)
5. Engine oil dipstick (page 9-10)
6. Brake pedal (page 6-20)
7. Rear brake light switch (page 9-18)
8. Rear brake fluid reservoir (page 9-19)

EAU10431

Controls and instruments

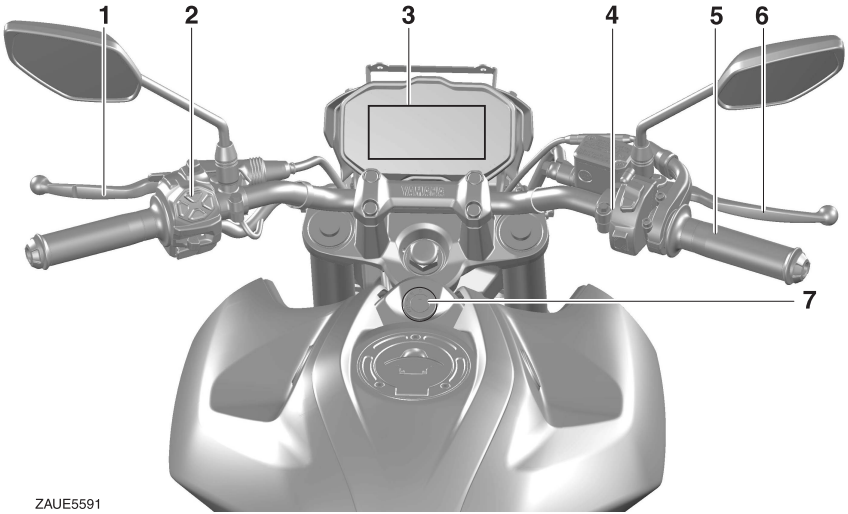

ZAUE5591

1. Clutch lever (page 6-19)
2. Left handlebar switches (page 6-17)
3. Display (page 6-5/6-4)
4. Right handlebar switches (page 6-17)
5. Throttle grip (page 9-14)
6. Brake lever (page 6-19)
7. Main switch/steering lock (page 6-1)

EAUE6001

SMG (Smart Motor Generator)

The SMG combines the functions of an engine starter motor and a generator. It operates as a generator during normal driving and as a motor during engine starts.

The SMG can also deliver additional torque to the crankshaft, assisting the engine with initial acceleration and helping to prevent the engine r/min from becoming too low when starting off.

When the SMG delivers extra torque to the crankshaft, the SMG "ASSIST" icon comes on and the area around under the tachometer (Theme 1) and around the tachometer visualizer (Theme 2) will light up. (See page 6-6.)



ZAUE5656

1. SMG "ASSIST" icon

The acceleration assist will activate when the throttle grip is turned with clear intention to accelerate from speeds below 10 km/h (6 mi/h).

The acceleration assist will continue until:

- throttle is decreased with intention to stop accelerating
- effective engine speed is reached
- 3 seconds has elapsed
- the clutch lever is pulled

TIP

When battery voltage is low, the SMG may not assist the engine.

EAUE5950

Stop and Start System

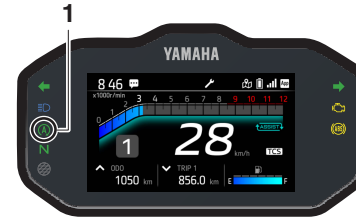

ZAUE5646

1. Stop and Start System indicator light "Ⓐ"

The Stop and Start System can stop and quickly restart the engine when the vehicle is stopped in order to reduce rider fatigue, prevent noise, control exhaust emissions, and reduce fuel consumption.

When the rider pulls the clutch lever fully, the engine restarts automatically.

ECA23961

NOTICE

When parking the vehicle or leaving the vehicle unattended, be sure to turn the main switch off. If the Stop and Start System is left turned on, the battery could become dis-

charged and it may not be possible to restart the engine due to insufficient battery voltage.

TIP

- If you think the battery voltage is low because the engine cannot be started using the starter switch or for some other reason, do not turn on the Stop and Start System.
- Have a Yamaha dealer check the battery at the intervals specified in the periodic maintenance chart.

EAUA2190

Stop and Start System operation

EAUE5961

Activating the Stop and Start System

1. Turn the main switch on.



ZAUE5647

2. Set the Stop and Start System switch to "Ⓐ".

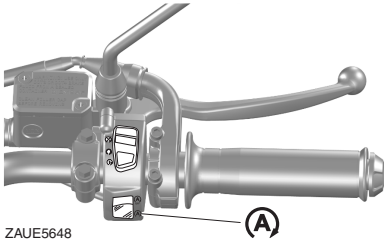

ZAUE5648

3. The Stop and Start System activates and the indicator light comes on when the following conditions are met:
   - The Stop and Start System switch is set to "Ⓐ".
   - The engine has been warmed up.
   - The vehicle has traveled at a speed of 10 km/h or higher.



ZAUE5649

1. Stop and Start System indicator light "Ⓐ"

4. To turn off the Stop and Start System, set the Stop and Start System switch to "Ⓐ".

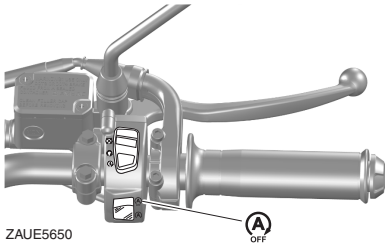

ZAUE5650

TIP

- To preserve battery power, the Stop and Start System may not activate.
- If the Stop and Start System does not activate, have a Yamaha dealer check the battery.

EAUE5970

Stopping the engine

The engine will stop automatically when the following conditions are met:

- The Stop and Start System switch is set to "Ⓐ".
- The "Ⓐ" indicator light on the multi-function meter is on.
- The vehicle is stopped with the throttle grip fully returned.
- The transmission is in neutral and the neutral indicator light "N" is on.
- The clutch lever is fully released.

At this time, the "Ⓐ" indicator light starts flashing to indicate that the engine is currently stopped by the Stop and Start System.



1. On
2. Flashing

EAUE5982

Restarting the engine

If the clutch lever is pulled while the Stop and Start System indicator light is flashing, the engine will automatically restart and the "Ⓐ" indicator light will go off.

TIP

- The engine start switch can also be used to restart the engine.
- If the lean angle sensor has stopped the engine due to the vehicle falling over, pulling the clutch lever will not automatically restart the engine. (See page 8-2.)
- If the engine has stalled, even if the Stop and Start System is not active, pulling the clutch lever will automatically restart the engine.

TIP

- When the sidestand is lowered, or the stop/run/start switch is pressed, the Stop and Start System is deactivated.
- If the Stop and Start System does not operate correctly, have a Yamaha dealer check the vehicle.

EAUE5990

Precautions when using the Stop and Start System

In order to prevent accidents due to improper operation, carefully read and observe the following precautions.

EWAE0100

⚠ WARNING

When walking while pushing the vehicle, be sure to turn the main switch off. If the clutch lever is pressed accidentally while the Stop and Start System is left turned on, the engine could start and the vehicle could start moving accidentally.

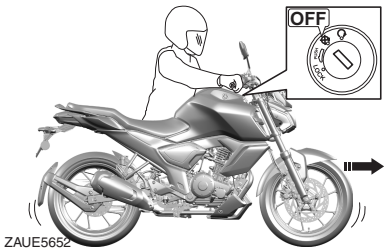

ZAUE5652

EWAE0110

⚠ WARNING

When placing the vehicle on the centerstand, be sure to turn the main switch off. If the vehicle is placed on the centerstand while the Stop and Start System is left turned on, the engine could start and the vehicle could start moving if the clutch lever is pressed accidentally.

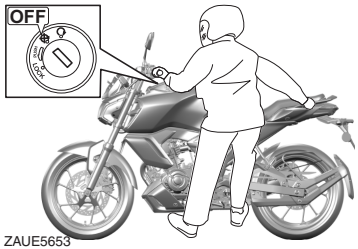

ZAUE5653

EWAE0120

⚠ WARNING

- **When leaving the vehicle unattended, be sure to turn the main switch off.**
- **Do not leave the Stop and Start System turned on when parking the vehicle. Otherwise, the engine could start and the vehicle could start moving if the clutch lever is pressed accidentally.**

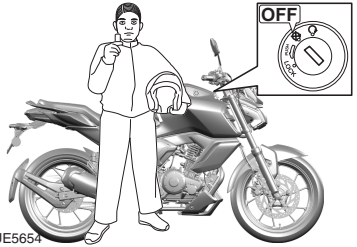

ZAUE5654

EWAE0130

⚠ WARNING

Before performing maintenance, be sure to turn the main switch off. If maintenance is performed while the Stop and Start System is turned on, the engine could start and the vehicle could start moving if the clutch lever is pressed accidentally.

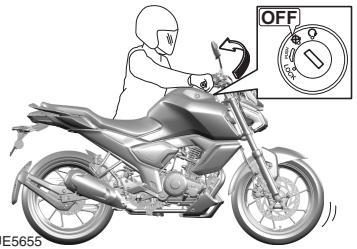

ZAUE5655

4

EAUA8355

CCU (Communication Control Unit)

This vehicle is equipped with a CCU (Communication Control Unit) that enables wireless Bluetooth connection between the vehicle and your smartphone via the Yamaha Motorcycle Connect app. Through this connection, the following connectivity functions can be accessed in the vehicle display:

- Turn by Turn GPS navigation (page 6-10)
- Telephone (page 6-9)
- Audio player (page 6-10)
- Smartphone notifications (page 6-11)
- Weather information (page 6-12)
- Clock automatic update (page 6-14)

Connectivity functions are accessed via the menu system (page 6-8).



ZAUE6334

EWA21415

⚠ WARNING

- **Failure to pay attention while riding could result in death or serious injury. Always concentrate on riding by keeping your eyes and mind on the road.**
- **Stop the vehicle before making any settings changes or operating your smartphone.**
- **Changing settings while riding can distract the operator and increase the risk of an accident.**
- **Never take your hands off the handlebars while riding.**

TIP

- The CCU takes some time to initiate and stabilize the Bluetooth connection after the vehicle power is turned on or the vehicle battery is reconnected.
- Some connectivity functions need to be activated on the connected smartphone before they become functional in the menu system.
- Some connectivity functions may not be available depending on your smartphone and/or OS (operating system) version.
- Some music, SNS, and other smartphone applications and headsets devices may not function and/or display properly.
- The following may interfere with connectivity functions:
  - Smartphone network connection is too busy.
  - The smartphone GPS signal is unstable.
  - Bluetooth connection is unstable.

- Too many other devices connected to the smartphone at once.

- The Bluetooth connection may not work in the following situations:
  - In locations exposed to strong radio waves or other electromagnetic noise.
  - Near facilities emitting strong radio waves, such as TV and radio towers, power plants, broadcasting stations, airports, etc.
- Only one smartphone can be connected to the CCU at one time.
- If more than one phone has been registered in the CCU, then the first phone within reach will be connected.

Initial setup: Yamaha Motorcycle Connect app

Yamaha Motorcycle Connect is a free app which is needed to complete the connection between the CCU and your smartphone.
After pairing the CCU and the Yamaha Motorcycle Connect app, the smartphone is registered in the CCU. When the app is connected to the CCU, the smartphone battery level indicator "▯" and the Yamaha Motorcycle Connect app indicator "App" will come on.
Scan the QR code below and download the Yamaha Motorcycle Connect app, or search for it by name in an app store.

Pairing the app to the vehicle requires either entering the VIN (vehicle identification number) or using the app to scan the QR code located on the CCU.

TIP

- The connected app and its contents are subject to change without notice and may differ from this manual.
- Once paired, the smartphone is registered in the CCU. The next time the vehicle is turned on and the Yamaha Motorcycle Connect app is active, the connection will be automatically established.

- Use of Yamaha Motorcycle Connect is subject to your agreement to the Yamaha Motorcycle Connect terms of use.
- The Yamaha Motorcycle Connect app may not function on all smartphones or OS (operating system) versions.
- Navigation and other features require GPS access permissions to be set as “Always allow” on your smartphone.
- Every smartphone operates differently; refer to your individual device instructions regarding connectivity, Bluetooth discovery, app permissions, and other settings.
- Some connectivity and/or display functions may change with later updates to the Yamaha Motorcycle Connect app and therefore differ from the contents of this manual.

Initial setup: Turn by Turn navigation

EWA21401

⚠ WARNING

- **Always stop the vehicle before operating the navigation system.**
- **Always concentrate on riding by keeping your eyes and mind on the road.**



ZAUE6335

This vehicle is equipped with a Turn by Turn navigation system that provides route guidance through visual and textual prompts. To use the Turn by Turn navigation system, follow the prompts within the Yamaha Motorcycle Connect app to set GPS permissions and agree to the Google terms of service.

TIP

- Navigation data in the Yamaha Motorcycle Connect app is obtained via Google Maps. Use of Google Maps is subject to your agreement to the Google Maps terms of use. Yamaha shall not be liable for any damages resulting from the use of Google.
- The Yamaha Motorcycle Connect app’s GPS access permissions must be set to “Always allow” in your smartphone’s settings.
- While route guidance is active, the weather information at the destination will be displayed.

Initial setup: Bluetooth headset

Some connectivity features require a headset to be connected to the smartphone to function properly. Follow your headset manufacturer instructions to pair/connect to your smartphone.

EWA23130

⚠ WARNING

Keep volume levels low enough to maintain awareness of your surroundings and ensure safety.

EAUA8371

VIN (vehicle identification number)
The VIN is located as shown:

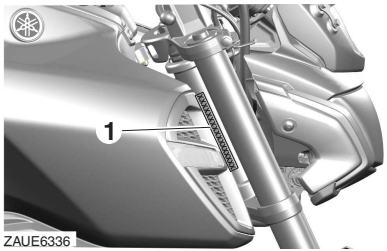

ZAUE6336
1. Vehicle identification number

Accessing the CCU QR code
Open the seat. (See page 6-25.)

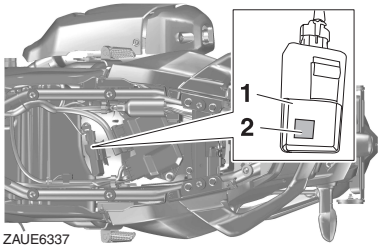

ZAUE6337
1. CCU (Communication Control Unit)
2. CCU QR Code

Main switch/steering lock

EAU10462

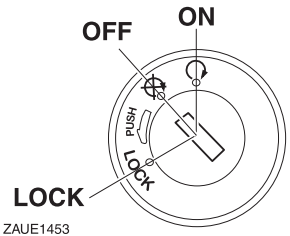

ZAUE1453

The main switch/steering lock controls the ignition and lighting systems, and is used to lock the steering. The various positions are described below.

EAUE4950

∩ (ON)

All electrical circuits are supplied with power. The meter lighting, taillight, license plate light and auxiliary lights come on, and the engine can be started. The key cannot be removed.

TIP

The headlight comes on automatically when the engine is started and stays on even if stop/run/start switch turn to "⊠". The headlight will turn off when the key is turned to "⊠".

EAU54302

⊠ (OFF)

All electrical systems are off. The key can be removed.

EWA16371

⚠ WARNING

Never turn the key to "⊠" or "LOCK" while the vehicle is moving. Otherwise the electrical systems will be switched off, which may result in loss of control or an accident.

EAUE5850

LOCK

The steering is locked and all electrical systems are off. The key can be removed.

To lock the steering

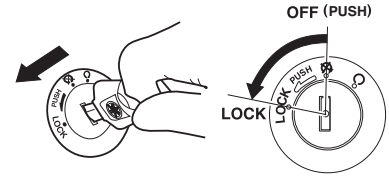

ZAUE2876

1. Turn the handlebars all the way to the left or right.
2. With the key in the "⊠" position, push the key in and turn it to "LOCK".
3. Remove the key.

TIP

If the steering will not lock, try turning the handlebars back to the right or left slightly.

To unlock the steering

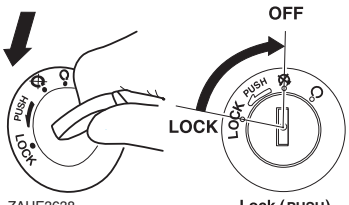

ZAUE3638

Lock (PUSH)

From the “LOCK” position, turn the key to “⊠”.

EAU1100F

Indicator lights and warning light



ZAUE5592

1. Neutral indicator light “N”
2. Stop and Start System indicator light “Ⓐ”
3. High beam indicator light “≣D”
4. Left turn signal indicator light “⇦”
5. Right turn signal indicator light “⇨”
6. Malfunction indicator light “”
7. Anti-lock Brake System (ABS) warning light

EAU11033

Turn signal indicator lights “⇦” and “⇨”

Each indicator light will flash when its corresponding turn signal lights flash.

EAU11061

Neutral indicator light “N”

This indicator light comes on when the transmission is in the neutral position.

EAU11081

High beam indicator light “≣D”

This indicator light comes on when the high beam of the headlight is switched on.

EAU94030

Malfunction indicator light (MIL) “”

This light comes on or flashes if a problem is detected in the engine or other vehicle control system. If this occurs, have a Yamaha dealer check the onboard diagnostic system. The electrical circuit of the warning light can be checked by turning the vehicle power on. The light should come on for a few seconds, and then go off. If the light does not come on initially when the vehicle power is turned on, or if the light remains on, have a Yamaha dealer check the vehicle.

ECA26820

NOTICE

If the MIL starts flashing, reduce engine speed to prevent exhaust system damage.

6

TIP

The engine is sensitively monitored by the on-board diagnostic system to detect deterioration or malfunction of the emission control system. Therefore the MIL may come on or flash due to vehicle modifications, lack of maintenance, or excessive/improper use of the motorcycle. To prevent this, observe these precautions.

- Do not attempt to modify the software of the engine control unit.
- Do not add any electrical accessories that interfere with engine control.
- Do not use aftermarket accessories or parts such as suspension, spark plugs, injectors, exhaust system, etc.
- Do not change the drivetrain specifications (chain, sprockets, wheels, tires, etc.).
- Do not remove or alter the O2 sensor, air induction system, or exhaust parts (catalysts or EXUP, etc.).
- Maintain the drive chain properly.
- Maintain correct tire pressure.
- Maintain proper brake pedal height to prevent rear brake from dragging.
- Do not operate the vehicle in an extreme manner. For example, repeated or excessive opening and closing of the throttle, racing, burnouts, wheelies, extended half-clutch use, etc.

EAUE6110

ABS warning light "(◎)"

This warning light comes on when the vehicle is first turned on, and goes off after starting riding. If the warning light comes on while riding, the anti-lock brake system may not work correctly.

EWAE0140

⚠ WARNING

If the ABS warning light does not turn off after reaching 5 km/h (3 mi/h), or if the warning light comes on while riding:

- **Use extra caution to avoid possible wheel lock during emergency braking.**
- **Have a Yamaha dealer check the vehicle as soon as possible.**

TIP

If the engine is revved while the brakes are applied or the vehicle is on its centerstand (if equipped), the ABS warning light may come on. If this happens, turn the vehicle power off and then back on again to reset the ABS warning light.

EAU76382

Stop and Start System indicator light "Ⓐ"

This indicator light comes on when the Stop and Start System activates. The indicator light will flash when the engine is automatically stopped by the Stop and Start System.

TIP

Even if the Stop and Start Switch is set to "Ⓐ", this indicator light may not come on.

EAUM5280

Display

Theme1

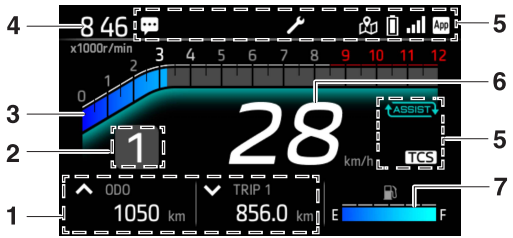

ZAUE5629

Theme2



1. Vehicle information display
2. Transmission gear display
3. Tachometer
4. Clock
5. Indicator icons
6. Speedometer
7. Fuel meter
8. Tachometer visualizer

Main display screen

EAUE5930

EWA18210

⚠ WARNING

Stop the vehicle before making any setting changes. Changing settings while riding can distract the operator and increase the risk of an accident.

TIP

- This model uses a thin-film-transistor liquid-crystal display (TFT LCD) for good contrast and readability in various lighting conditions. However, due to the nature of this technology, it is normal for a small number of pixels to be inactive.
- The display units can be switched between kilometers/miles and Celsius/Fahrenheit.

Display system controls

The display user interface is controlled with the "▲"/ "✔" / "▼" / "↩" switches. (See page 6-18.)

The main screen of the display has two visual themes: "Theme1" and "Theme2". Some functions are not available in all themes. Long press the "↩" switch to cycle between the display themes. The theme can also be selected in the menu system.

Speedometer

The speedometer shows the vehicle's traveling speed.

Tachometer (Theme1)

The tachometer shows the engine speed, as measured by the rotational velocity of the crankshaft, in revolutions per minute (r/min).

ECA23050

NOTICE

Do not operate the engine in the tachometer high-r/min zone.
High-r/min zone: 8500 r/min and above

Tachometer visualizer (Theme2)

The tachometer visualizer extends as the engine speed is increased.

TIP

The tachometer visualizer is for reference only. The resolution of the tachometer visualizer is not as detailed as a traditional tachometer.

Transmission gear display

This shows which gear the transmission is in. This model has 5 gears and a neutral position. The neutral position is indicated by "N".

TIP

- If a malfunction occurs, "-" will be shown.
- The square around the gear number can light up or flash to indicate gearshift timing according to the shift indicator settings in the menu system. (See page 6-13.)

Clock "🕒"

The clock uses a 12-hour time system.

TIP

The clock can be adjusted in the menu system.

SMG assist indicator
This icon comes on when the smart motor generator (SMG) is assisting the engine. (See page 4-1.)

Traction control system indicator "TCS"/"TCS"/"TCS"
This indicator will come on in white when the traction control system is ON, it will flash green for a few seconds when traction control has engaged while riding, and it will come on in amber when the traction control system is turned OFF.

Smartphone battery level indicator "▯"
This icon displays the connected smartphone's current battery level.

- Icon off: No smartphone connected.
- "▯": The center bar moves up and down to indicate the battery level.

When the battery level is low, the center bar will turn red.

TIP
The battery level indicated by the icon may not always be consistent with the battery level displayed on the smartphone.

Yamaha Motorcycle Connect app indicator "App"
This icon comes on when the Yamaha Motorcycle Connect app is successfully connected to the vehicle.

Phone indicator "✆"/"✆"
This icon comes on green when there is an active call and red when there is a missed call. The missed call icon will disappear when the vehicle power is turned OFF.

Notification indicator "💬"
This icon flashes for 10 seconds and then remains on when the connected smartphone receives an SNS, E-mail or other notification. It will remain on until the vehicle power is turned off or until the "Notification" list is opened in the menu system.

TIP

- This function works only when a smartphone is connected to the CCU via the Yamaha Motorcycle Connect app.
- Permission to access notifications must be granted to the Yamaha Motorcycle Connect app on your smartphone.

Network connectivity indicator "📶"
This icon indicates the connected smartphone's network connection status.
Icon off: No smartphone connected.
📶: A smartphone is connected but has no network connectivity.
📶: A smartphone is connected and has network connectivity. The icon segments indicate the signal strength.

TIP
This icon may not operate with some smartphone models, even if the connected smartphone has network connectivity.

6

Navigation indicator “”
This icon comes on when the turn by turn navigation is active.

Maintenance tripmeter indicator “”
This icon comes on when one of the maintenance trip meters has reached the interval.
Oil change intervals: 1000 km (600 mi), and then every 3000 km (1800 mi) thereafter.

Fuel meter
The fuel meter indicates the amount of fuel in the fuel tank. The display segments of the meter disappear from “F” (full) towards “E” (empty) as the fuel level decreases.
When the last segment starts flashing, refuel as soon as possible.

ECAE0121

NOTICE

Do not let the vehicle run completely out of fuel. This may cause damage to the catalytic converter.

TIP

If all the fuel meter display segments flash repeatedly, have a Yamaha dealer inspect the vehicle.

Vehicle Information display
The vehicle information display can be set to show the following items:

- “ODO”: odomoeter
- “TRIP 1”: tripmeter 1
- “TRIP 2”: tripmeter 2
- “TRIP F”: fuel reserve tripmeter
- “INST FUEL”: Instant fuel consumption
- “AVG FUEL”: average fuel consumption
- “AVG SPEED”: average speed
- “TRIP TIME”: trip timer

Theme1
Use the “” switch to cycle the left side information display items. Use the “” switch to cycle the right side information display items.
Long press the “” switch to reset the currently displayed left side information display item (if able). Long press the “” switch to reset the currently displayed right side information display item (if able).

Theme2
Use the “”/“” switches to scroll up/down the list of items.
Long press the “” switch or “” switch to reset the currently displayed information display item (if able).

TIP

The “TRIP 1”, “TRIP 2”, “TRIP F”, “AVG FUEL”, “AVG SPEED” and “TRIP TIME” items can be individually reset.
Short press the “” switch to open the menu system and navigate to “ Settings” → “Information / Reset” → “Vehicle Information” to reset individual items. (See page 6-15.)

Odometer “ODO”:
The odometer shows the total distance traveled by the vehicle.

TIP

The odometer will lock at 999999 and cannot be reset.

Tripmeters “TRIP 1” / “TRIP 2”:
“TRIP 1” and “TRIP 2” show the distance traveled since they were last reset.

TIP
“TRIP 1” and “TRIP 2” will reset to 0.0 and begin counting again after 9999.9 has been reached.

Fuel reserve tripmeter “TRIP F”:
When the fuel tank reserve level has been reached, “TRIP F” begins recording distance traveled from that point.
After refueling and traveling some distance, “TRIP F” will reset.

Instantaneous fuel consumption (INST FUEL)
When using kilometers, the instantaneous fuel consumption display can be set to “km/L” or “L/100km”. (See page 6-15.)
When using miles, the instantaneous fuel consumption is displayed in “MPG”.

Average fuel consumption “AVG FUEL”:
The average fuel consumption display can be set to “km/L”, “L/100km” or “MPG” in the menu system.

TIP
After resetting the average fuel consumption display, “--.-” will be shown until the vehicle has traveled 1 km.

Average speed “AVG SPEED”
Displays the average travelling speed since last reset.

Trip timer “TRIP TIME”
Displays engine running time.

EAUE5941

Menu system

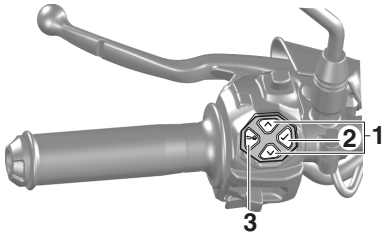

ZAUE5630
1. “ ”/“ ” switches
2. “ ” switch
3. “ ” button

The menu system for this vehicle is controlled with the “ ”/“ ”/“ ”/“ ” switches. (See page 6-18.)

Menu system basic operations:
- From the main display screen, short press the “ ” to open the side menu.
- With the menu system open, short press the “ ” switch to execute a selection.
- Short press the “ ”/“ ” switches to highlight and adjust menu items.

6

- Short press the "⮌⌂" switch to return to the previous screen.
- Long press the "⮌⌂" switch to exit the menu system and return to the home screen.



ZAUE5631 **1**

1. Side menu

Phone

EWA21420

⚠ WARNING

- **Do not use your smartphone while the vehicle is in motion.**
- **Never take your hands off the handlebars while riding.**
- **Always concentrate on riding by keeping your eyes and mind on the road.**
- **Keep volume levels low enough to maintain awareness of your surroundings and ensure safety.**

Incoming call



ZAUE5632

When a phone call is received to a connected smartphone, the ringtone will play through the connected headset and the phone side menu will pop up automatically.
Short press the "∧" switch to answer the call. The phone indicator "✆" (green) will remain on for the duration of the call.
Short press the "∨" switch to reject the call.
If a call is not answered or rejected, the phone indicator "✆" (red) will appear.

Active call



ZAUE5633

When a phone call is active, short press "∨" to end the call.
Short press the "⮌⌂" switch to exit the phone side menu without ending the call. When a call is active, the "✆ Phone" item will be visible in the menu. Select it to resume the active call side menu.

TIP

- It is recommended to use the side menu phone function instead of operating the smartphone directly. Otherwise, it may not display and/or function properly.
- For some smartphones, rejecting a call will not function correctly. The end call icon may be grayed

out or using the end call icon will accept the call instead. If an error occurs, select the back icon to exit the error screen.

- If too many contacts are registered in the smartphone, only the phone number may be displayed.

"♫ Music"



ZAUE5634

The music player utilizes your smartphone's audio player app.

Short press the "∧" switch to increase the volume.

Long press the "∧" switch to skip ahead.

Short press the "✓" switch to play/pause.

Short press the "∨" switch to decrease the volume.

Long press the "∨" switch to skip back.

TIP

- All audio track information is imported from the music player application on your smartphone.
- Depending on the smartphone and music player application, the audio player may start playing automatically, the track information may not display, or the next/previous track and volume adjustment may not function.

"🗺 Navigation"



ZAUE5635

The turn by turn navigation function provides real time route guidance by displaying essential navigation information in the side menu. Use the "∧"/"∨" switches to change the visible information in the bottom section of the display. The following information can be shown if it is available:

- Top section: navigation icon and distance for the next navigation point.



- Bottom section 1: instructions for next navigation point.



6

- Bottom section 2: navigation icon and distance for the navigation point following the next (2 points ahead).

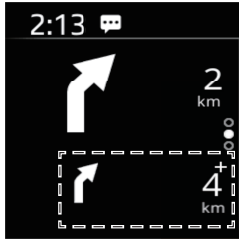

- Bottom section 3: distance/time to destination.



Navigation must be first be set using the Yamaha Motorcycle Connect app.

While the navigation side menu is active, short press the "✔" switch to open the navigation menu.



ZAUE5636

- "Back": goes back to the navigation side menu.
- "Stop navigation" cancels turn by turn navigation and returns to the main display
- "Skip next stop": skips ahead to the next set waypoint (if a waypoint is set) and returns to the navigation side menu.

TIP

Until the waypoint function is implemented in the Yamaha Motorcycle Connect app, this menu item will be grayed out.

EWA21420

⚠ WARNING

- **Do not use your smartphone while the vehicle is in motion.**
- **Never take your hands off the handlebars while riding.**
- **Always concentrate on riding by keeping your eyes and mind on the road.**
- **Keep volume levels low enough to maintain awareness of your surroundings and ensure safety.**

"💬 Notification"



ZAUE5638

When a notification is received to a connected smartphone, the notification indicator "💬" comes on and flashes for 10 seconds. Select "Notification" in the side menu to display messages. Up to six push notifications from the connected smartphone can be displayed. Each received notification shows the following information if it is available: time received, notification title, a preview of the notification contents and the sender name.

TIP

- If too many notifications are received at once, some of them may not show in the list.
- Depending on the smartphone and/or applications, notifications may be disabled or messages displayed on the side menu may differ from the contents on the connected smartphone.
- If the Bluetooth connection is unstable, notifications may be delayed in appearing or may not function properly.
- Time stamps for notifications may differ from the time stamps displayed on the smartphone.
- The message data is cleared every time the vehicle power is turned OFF.

"Weather"

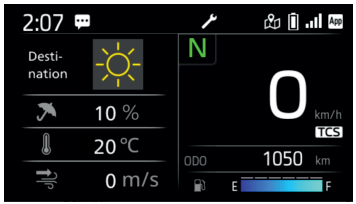

ZAUE5639

Activates local weather information in the side menu, showing the following information if it is available: precipitation chance, weather type, temperature, location, and windspeed.
Based on the selected units, temperature is displayed as either "°C" or "°F" and wind speed is displayed as either "m/s" or "mph". (See page 6-15.)

"Setting"



ZAUE5640

TIP

This section of the menu system cannot be accessed while the vehicle is in motion. If this occurs while it is already open, it will exit automatically to the home screen.

This menu contains the following:

"Traction Control"	Turn OFF/ON the traction control system. (See page 6-13.)
"Shift Indicator"	Adjust the shift indicator settings. (See page 6-13.)
"Theme select"	Select the main display theme.
"Display setting"	Change display brightness settings.
"Clock"	Adjust time/set automatic update. (See page 6-14.)
"Unit"	Change the display units.

“Information / Reset”	Reset vehicle information.

“Traction Control”

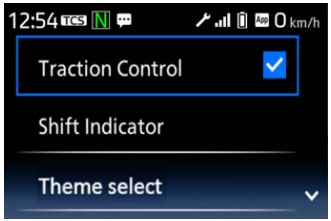

ZAUE5641

Short press the “✔” switch to turn the traction control system ON/OFF. The checkmark indicates ON. See page 6-21 for more information about the traction control system.

TIP

The traction control system will turn ON automatically and the checkmark beside this setting will reappear after each time the vehicle power is turned ON.

“Shift Indicator”

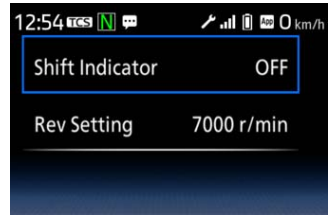

ZAUE5642

This menu contains settings for the shift indicator. (See page 6-5.)

“Shift Indicator”

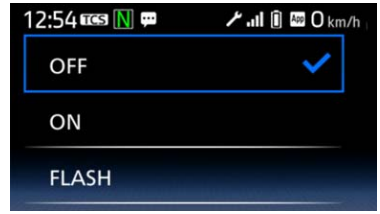

ZAUE5643

The shift indicator has three settings:
“OFF”: the shift indicator is disabled.
“ON”: the indicator comes on while the engine speed is above the threshold.
“FLASH”: the indicator flashes while the engine speed is above the threshold.

“Rev Setting”

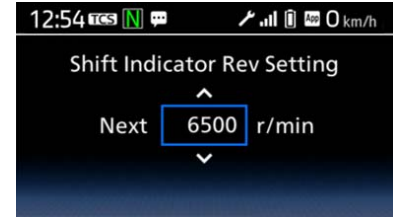

ZAUE5644

Short press the “∧”/“∨” switches to adjust the threshold engine speed of the shift indicator from 3000 to 10500 r/min in increments of 250 r/min. Hold the “∧”/“∨” switches to adjust the increments continuously.

“Theme”

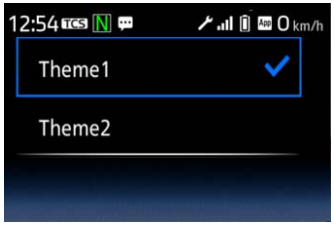

ZAUE5645

This menu allows you to select the visual theme of the main display from two options. (See page 6-4.)

“Clock”

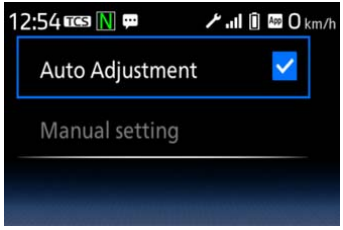

ZAUE5716

The clock can be set to auto-adjust in sync with a smartphone. “Auto Adjustment” ON is indicated by the checkmark and requires a connection with the Yamaha Motorcycle Connect app. “Manual Adjustment” allows the clock to be calibrated manually.

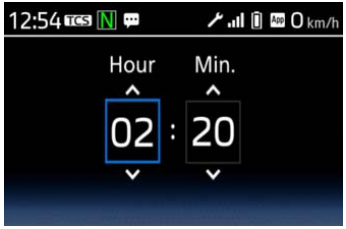

ZAUE5717

To manually adjust the clock, short press the “∧”/“∨” switches to adjust “Hour” up/down. Short press the “✓” switch to set “Hour” and continue to “Min.” in line. Select “OK” and the display will return to the previous menu.

“Display”

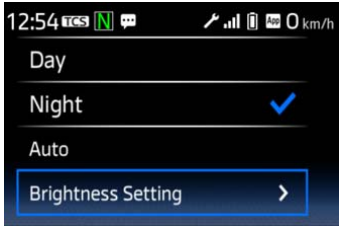

ZAUE5718

This module allows you to change the display between day/night .
This display is equipped with a sensor to detect ambient lighting conditions and adjust the display between day/night presets. Select “Day” (white) or “Night” (black) to keep the display in that preset. Select “Auto” to enable automatic switching between presets depending on the ambient light levels.
This module also allows you to adjust the screen brightness of the display.

TIP

- As the brightness settings are adjusted in the menu, the screen brightness will change in real time.

- If the temperature of the display becomes too high, the screen brightness will reduce automatically and cannot be adjusted. When the temperature lowers, the screen brightness will return to the previous setting.



ZAUE5719

The display brightness setting has 6 levels.
Short press the "∧"/"∨" switches to adjust the brightness setting up/down. Short press the "✔" switch to confirm the setting and return to the previous menu.

"Unit"

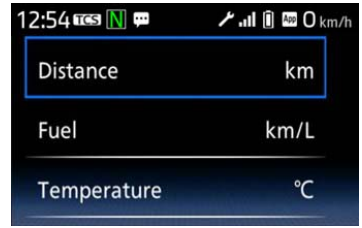

ZAUE5720

The selected display units are shown. The display units can be selected as follows:

- "Distance": "km" or "mile"
- "Fuel": "km/L", "L/100km" or "MPG"
- "Temperature": "°C" or "°F"

TIP

- When "mile" is selected for the "Mileage" unit, the "Fuel" unit is automatically changed to "MPG". At this time, the "Fuel" item is grayed out and cannot be selected.
- Always comply with local laws and regulations. In India, set the distance units to km.

"Information / Reset"

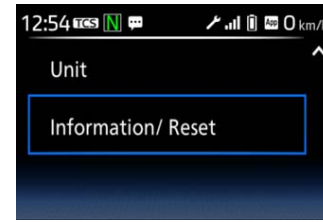

ZAUE5721

This module allows the viewing and reset of tripmeters, maintenance tripmeters, vehicle information items, and the mass reset of other settings to factory defaults.

"Trip mileage reset"

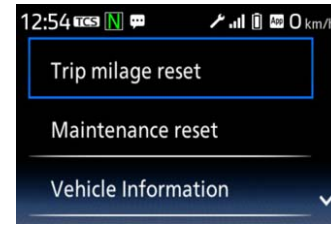

ZAUE5722

This module allows reset of the tripmeters on the main display. Short press the "∧"/"∨" switches to highlight an item. Short press the "✔" switch to reset the item. Confirm by selecting "OK".

TIP

"TRIP F" can only be selected when the fuel is low. Otherwise the item is grayed out.

"Maintenance reset"

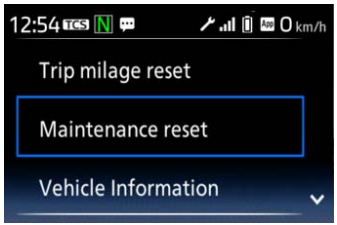

ZAUE5723

This module allows reset of the maintenance tripmeters and the maintenance tripmeter indicator. Short press the "∧"/"∨" switches to highlight an item. Short press the "✔" switch to reset the item. Confirm by selecting "Reset" and the next maintenance interval will be displayed. Short press the "✔" to select "OK" or "Custom" to set a custom interval. If "Custom" is selected, short press the "∧"/"∨" switches to adjust the interval mileage and then short press "✔" to confirm and the new interval will be set.

TIP

When all maintenance tripmeters which have passed their intervals have been reset, the maintenance tripmeter indicator " 🔧 " will go off.
"Periodic Maintenance" is unassigned to any specific maintenance item. You can set it to any interval of your choice for your own maintenance schedule.

"Vehicle Information"

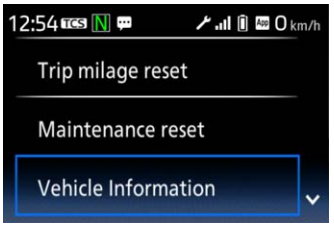

ZAUE5724

This module allows reset of the vehicle information display items. Short press the "∧"/"∨" switches to highlight an item. Short press the "✔" switch to reset the item. Confirm by selecting "OK".

"All reset"

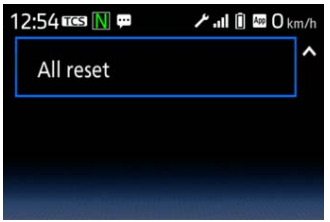

ZAUE5725

6

This module mass resets the following to the default settings:

- Tripmeters
- Average speed, Average fuel consumption and Trip timer
- order of visible items in vehicle display
- display theme selection
- notification list
- Display brightness settings
- Unit settings
- clock

Confirm by selecting “OK”.

Handlebar switches

EAU1234U

Left

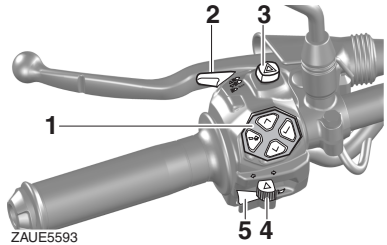

ZAUE5593

1. Menu switches “ ”/“ ”/“ ”/“ ”
2. Dimmer/Pass switch “ / / PASS”
3. Hazard lights switch “ ”
4. Turn signal switch “ / ”
5. Horn switch “ ”

Right

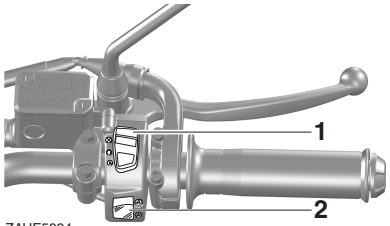

ZAUE5994

1. Stop/Run/Start switch “ / / ”
2. Stop and Start System switch “ / ”

EAUE5890

Dimmer/Pass switch “ / / PASS”

Set this switch to “ ” for the high beam and to “ ” for the low beam.

To flash the high beam, push the switch down towards “ PASS” while the headlights are on low beam.

EAU12461

Turn signal switch “ / ”

To signal a right-hand turn, push this switch to “ ”. To signal a left-hand turn, push this switch to “ ”. When released, the switch returns to the cen-

ter position. To cancel the turn signal lights, push the switch in after it has returned to the center position.

EAU12501

Horn switch "📯"

Press this switch to sound the horn.

EAU54213

Stop/Run/Start switch "⊗/○/🏍"

To crank the engine with the starter, set this switch to "○", and then push the switch down towards "🏍". See page 8-2 for starting instructions prior to starting the engine.

Set this switch to "⊗" to stop the engine in case of an emergency, such as when the vehicle overturns or when the throttle cable is stuck.

EAUE5910

Hazard lights switch "⚠"

The hazard lights (simultaneous flashing of all turn signal lights) are used in case of an emergency, such as to warn other drivers when your vehicle is stopped where it might be a traffic hazard.

Push this switch to turn on or off the hazard lights.

ECA10062

NOTICE

Do not use the hazard lights for an extended length of time with the engine not running, otherwise the battery may discharge.

EAUE5870

Menu switches

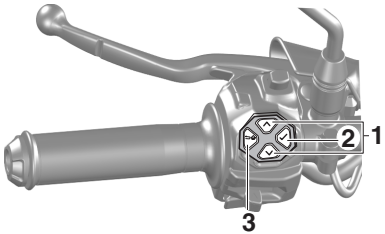

ZAUE5619

1. "∧"/"∨" switches
2. "✔" switch
3. "↩⌂" switch

These switches are used to control the various functions of the display and its menu system.

This manual uses the following terms to describe the usage of the menu controls:

Short press	Briefly press the switch
Long press	Press the switch for 1 second

Menu system basic operations:

- Operate the "∧"/"∨" switch to highlight and adjust menu items.
- Short press the "✔" switch to select an item.
- Short press the "↩⌂" switch to cancel/return to previous.
- Long press the "↩⌂" switch to close the menu system.

EAU76391

Stop and Start System switch "Ⓐ/Ⓐ"

To turn on the Stop and Start System, set the switch to "Ⓐ". To turn off the Stop and Start System, set this switch to "Ⓐ".

6

EAUE4770

Clutch lever

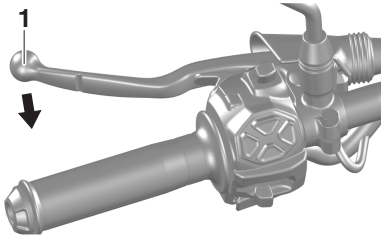

ZAUE5595

1. Clutch lever

The clutch lever is located on the left side of the handlebar. To disengage the clutch, pull the lever toward the handlebar grip. To engage the clutch, release the lever. The lever should be pulled rapidly and released slowly for smooth clutch operation.

The clutch lever is equipped with a clutch switch, which is part of the ignition circuit cut-off system. (See page 6-28.)

EAU12876

Shift pedal

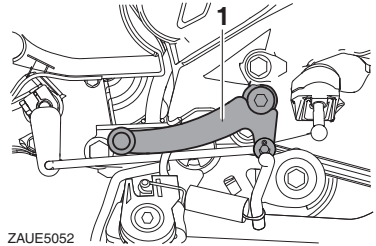

ZAUE5052

1. Shift pedal

The shift pedal is located on the left side of the motorcycle. To shift the transmission to a higher gear, move the shift pedal up. To shift the transmission to a lower gear, move the shift pedal down. (See page 8-3.)

EAU12892

Brake lever

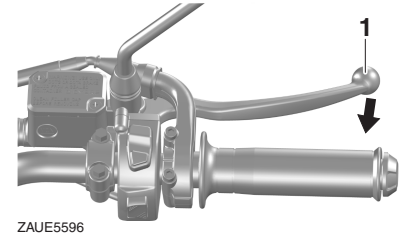

ZAUE5596

1. Brake lever

The brake lever is located on the right side of the handlebar. To apply the front brake, pull the lever toward the throttle grip.

EAU12944

Brake pedal

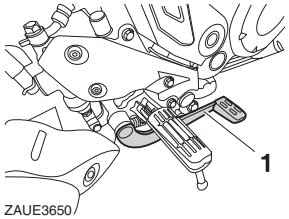

1. Brake pedal

The brake pedal is located on the right side of the motorcycle. To apply the rear brake, press down on the brake pedal.

EAUW4580

ABS

The anti-lock brake system (ABS) acts on the front brake.

EWA16051

⚠ WARNING

Always keep a sufficient distance from the vehicle ahead to match the riding speed even with ABS.

- **The ABS performs best with long braking distances.**
- **On certain surfaces, such as rough or gravel roads, the braking distance may be longer with the ABS than without.**

How to operate the brakes

Operate the brake lever and brake pedal the same as you would conventional brakes. If front wheel slip is detected while braking, ABS will activate and a pulsating sensation may be felt at the brake lever. Continue to apply the brakes and let the ABS work. Do not pump the brakes as this will reduce braking effectiveness.

- The ABS performs a self-check when you first start off. During this time a clicking noise from the hydraulic unit may be audible, and if the brake lever is applied a vibration can be felt, but this is not a malfunction.
- The brake system will revert to a conventional brake system in case of ABS malfunction.

ECA20100

NOTICE

Be careful not to damage the wheel sensor or wheel sensor rotor; otherwise, improper performance of the ABS will result.

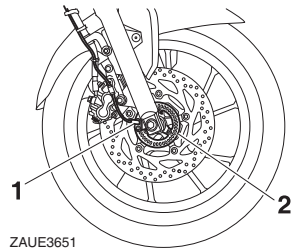

1. Front wheel sensor
2. Front wheel sensor rotor

6

EAUE6021

Traction control system

The traction control system helps maintain traction when accelerating on slippery surfaces, such as unpaved or wet roads. If sensors detect that the rear wheel is starting to slip (uncontrolled spinning), the traction control system assists by regulating engine power until traction is restored.

When traction control has engaged, the traction control system indicator icon "TCS" will flash green for a few seconds. You may notice changes in engine response or exhaust sound.

EWA18860

WARNING

The traction control system is not a substitute for riding appropriately for the conditions. Traction control cannot prevent loss of traction due to excessive speed when entering turns, when accelerating hard at a sharp lean angle, or while braking, and cannot prevent front wheel slipping. As with any vehicle, approach surfaces that may be slippery with caution and avoid especially slippery surfaces.

Setting the traction control system



ZAUE5620

1. Traction control system indicator icon

When the vehicle is turned on, traction control is automatically turned on.

To turn the traction control system off, see page 6-13.

TIP

Turn the traction control system off to help free the rear wheel if the vehicle gets stuck in mud, sand, or other soft surfaces.

ECA16801

NOTICE

Use only the specified tires. (See page 9-15.) Using different sized tires will prevent the traction control system from controlling tire rotation accurately.

Resetting the traction control system

The traction control system will automatically disable under certain conditions; such as when a sensor fault is detected, or when only one wheel is allowed to rotate for more than a few seconds. Should this happen, the traction control system indicator icon "TCS" will come on in amber, and possibly the malfunction indicator light will come on too.

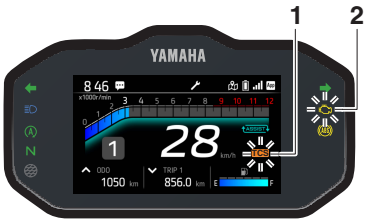

ZAUE5621

1. Traction control system indicator icon
2. Malfunction indicator light "🔧"

TIP

When the vehicle is on the centerstand, do not rev the engine for an extended period of time. Otherwise, the traction control system will automatically disable and need to be reset.

If the traction control system automatically disables, try resetting it as follows.

1. Stop the vehicle and turn it off completely.
2. Wait a few seconds and then turn the vehicle power on.
3. The traction control system indicator icon "TCS" should come on in white and the system be enabled.

TIP

If the traction control system indicator icon "TCS" still remains on in amber after resetting, the vehicle may still be ridden; however, have a Yamaha dealer check the vehicle as soon as possible.

4. Have a Yamaha dealer check the vehicle and turn off the malfunction indicator light.

EAUE1482

Fuel tank cap

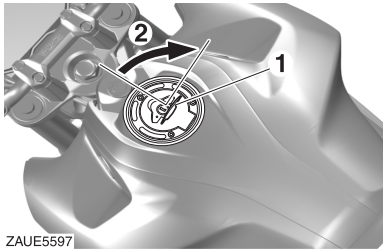

ZAUE5597

1. Fuel tank cap lock cover
2. Unlock.

To remove the fuel tank cap

1. Open the fuel tank cap lock cover.
2. Insert the key and turn it 1/4 turn clockwise. The lock will be released and the fuel tank cap can be removed.

To install the fuel tank cap

1. Push the fuel tank cap into position with the key inserted.
2. Turn the key counterclockwise to the original position, and then remove it.
3. Close the lock cover.

TIP

The fuel tank cap cannot be installed unless the key is in the lock. In addition, the key cannot be removed if the cap is not properly installed and locked.

EWA11142

⚠ WARNING

Make sure that the fuel tank cap is properly installed before riding. Leaking fuel is a fire hazard.

EAU13213

Fuel

Make sure there is sufficient gasoline in the tank.

EWA10882

⚠ WARNING

Gasoline and gasoline vapors are extremely flammable. To avoid fires and explosions and to reduce the risk of injury when refueling, follow these instructions.

1. Before refueling, turn off the engine and be sure that no one is sitting on the vehicle. Never refuel while smoking, or while in the vicinity of sparks, open flames, or other sources of ignition such as the pilot lights of water heaters and clothes dryers.
2. Do not overfill the fuel tank. Stop filling when the fuel reaches the bottom of the filler tube. Because fuel expands when it heats up, heat from the engine or the sun can cause fuel to spill out of the fuel tank.



ZAUE5657

1. Fuel tank filler tube
2. Maximum fuel level

3. Wipe up any spilled fuel immediately. ***NOTICE:*** **Immediately wipe off spilled fuel with a clean, dry, soft cloth, since fuel may deteriorate painted surfaces or plastic parts.** [ECA10072]
4. Be sure to securely close the fuel tank cap.

EWA15152

⚠ WARNING

Gasoline is poisonous and can cause injury or death. Handle gasoline with care. Never siphon gasoline by mouth. If you should swallow some gasoline or inhale a lot of gasoline vapor, or get some gasoline in your eyes, see your doctor immedi-

ately. If gasoline spills on your skin, wash with soap and water. If gasoline spills on your clothing, change your clothes.

EAUE5311

Your Yamaha engine was designed to use unleaded gasoline with a research octane number of 90 or higher. If engine knocking or pinging occurs, use a gasoline of a different brand or higher octane rating.

Recommended fuel:
Unleaded gasoline (E20 acceptable)
Octane number (RON):
90
Fuel tank capacity:
13 L (3.4 US gal, 2.9 Imp.gal)
Fuel tank reserve:
1.5 L (0.40 US gal, 0.33 Imp.gal)



ZAUE5049

TIP

- This mark identifies the recommended fuel for this vehicle as specified by Indian regulation.
- Fill the higher EBMG (Ethanol Blended Motor Gasoline) fuel from retail outlets which display exactly similar sign boards.

Gasohol (Gasoline)

There are two types of gasohol: gasohol containing ethanol and that containing methanol. Gasohol containing ethanol can be used if the ethanol content does not exceed 20% (E20). Gasohol containing methanol is not recommended by Yamaha because it can cause damage to the fuel system or vehicle performance problems.

ECA11401

NOTICE

Use only unleaded gasoline. The use of leaded gasoline will cause severe damage to internal engine parts, such as the valves and piston rings, as well as to the exhaust system.

6

EAU13435

Catalytic converter

The exhaust system contains catalytic converter(s) to reduce harmful exhaust emissions.

EWA10863

⚠ WARNING

The exhaust system is hot after operation. To prevent a fire hazard or burns:

- **Do not park the vehicle near possible fire hazards such as grass or other materials that easily burn.**
- **Park the vehicle in a place where pedestrians or children are not likely to touch the hot exhaust system.**
- **Make sure that the exhaust system has cooled down before doing any maintenance work.**
- **Do not allow the engine to idle more than a few minutes. Long idling can cause a build-up of heat.**

EAU93520

Exhaust emission control system

This model is equipped with an exhaust emission control system consisting of the following parts to ensure that exhaust emission standards are met:

- Electronic control unit
- Evaporative emission charcoal canister
- Muffler
- Catalytic converter
- Oxygen sensor
- Crankcase breather system

ECA17912

NOTICE

To ensure that exhaust emission standards are met while maintaining the general function of the vehicle please note the following:

- **Do not dissemble or perform maintenance on these parts.**
- **The condition and operation of the exhaust emission control system must be checked at the intervals specified in the maintenance notebook.**

EAU13791

Seat

To remove the seat

1. Insert the key into the seat lock, and then turn it clockwise.

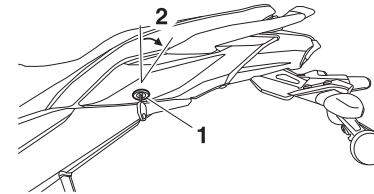

ZAUE5081

1. Seat lock
2. Unlock.

2. Pull the seat off.

To install the seat

1. Insert the projection on the front of the seat into the seat holder as shown.

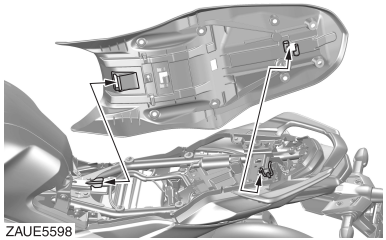
ZAUE5598

2. Push the rear of the seat down to lock it in place.
3. Turn the key counterclockwise, and then remove it.

TIP

Make sure that the seat is properly secured before riding.

EAU14314

Helmet holder

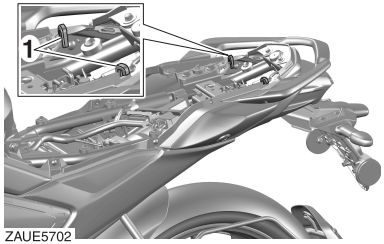

ZAUE5702

1. Helmet holder

The helmet holder is located under the seat.

To secure a helmet to the helmet holder

1. Remove the seat. (See page 6-25.)
2. Hook the helmet onto the helmet holder, and then securely install the seat. **WARNING! Never ride with a helmet attached to the helmet holder, since the helmet may hit objects, causing loss of control and possibly an accident.** [EWA10162]

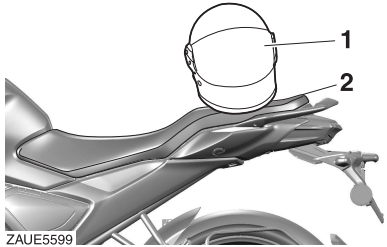

ZAUE5599

1. Helmet
2. Seat

To release the helmet from the helmet holder

Remove the seat, remove the helmet from the helmet holder, and then install the seat.

EAU70642

DC connectors

This vehicle is equipped with additional wiring and DC connector(s) for the installation of optional electric accessories.

Consult a Yamaha dealer for more information regarding the location and capacity of the DC connector(s) and about what accessories are capable of being installed.

EAU15306

Sidestand

The sidestand is located on the left side of the frame. Raise the sidestand or lower it with your foot while holding the vehicle upright.

TIP

The built-in sidestand switch is part of the ignition circuit cut-off system, which cuts the ignition in certain situations. (See the following section for an explanation of the ignition circuit cut-off system.)

EWA10242

⚠ WARNING

The vehicle must not be ridden with the sidestand down, or if the sidestand cannot be properly moved up (or does not stay up), otherwise the sidestand could contact the ground and distract the operator, resulting in a possible loss of control. Yamaha's ignition circuit cut-off system has been designed to assist the operator in fulfilling the responsibility of raising the sidestand before starting off. Therefore, check this system regularly and have a Yamaha dealer repair it if it does not function properly.

EAUE4810

Ignition circuit cut-off system

This system prevents in-gear engine starts unless the clutch lever is pulled and the sidestand is up. Also, it will stop the running engine should the sidestand be lowered while the transmission is in gear.

Periodically check the system via the following procedure.

TIP

- This check is most reliable if performed with a warmed-up engine.
- See pages 6-1 and 6-17 for switch operation information.

With the engine turned off:
1. Move the sidestand down.
2. Set stop/run/start switch to run position.
3. Turn main switch to on position.
4. Shift transmission into neutral.
5. Push the start "⏻" side of the stop/run/start switch.

Does the engine start?

YES **NO** → The neutral switch may not be working. **The motorcycle should not be ridden** until checked by a Yamaha dealer.

With the engine still running:
6. Move the sidestand up.
7. Pull the clutch lever.
8. Shift transmission into gear.
9. Move the sidestand down.

Does the engine stall?

YES **NO** → The sidestand switch may not be working. **The motorcycle should not be ridden** until checked by a Yamaha dealer.

After the engine has stalled:
10. Move the sidestand up.
11. Pull the clutch lever.
12. Push the start "⏻" side of the stop/run/start switch.

Does the engine start?

YES **NO** → The clutch switch may not be working. **The motorcycle should not be ridden** until checked by a Yamaha dealer.

The system is OK. **The motorcycle can be ridden.**

⚠ WARNING

If a malfunction is found, have the vehicle inspected before riding.

EAU1559B

Inspect your vehicle each time you use it to make sure the vehicle is in safe operating condition. Always follow the inspection and maintenance procedures and schedules described in the Owner's Manual.

EWA11152

⚠ WARNING

Failure to inspect or maintain the vehicle properly increases the possibility of an accident or equipment damage. Do not operate the vehicle if you find any problem. If a problem cannot be corrected by the procedures provided in this manual, have the vehicle inspected by a Yamaha dealer.

Before using this vehicle, check the following points:

ITEM	CHECKS	PAGE
Fuel	• Check fuel level in fuel tank. • Refuel if necessary. • Check fuel line for leakage.	6-23
Engine oil	• Check oil level in engine. • If necessary, add recommended oil to specified level. • Check vehicle for oil leakage.	9-10
Front brake	• Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage.	9-19, 9-19
Rear brake	• Check operation. • If soft or spongy, have Yamaha dealer bleed hydraulic system. • Check brake pads for wear. • Replace if necessary. • Check fluid level in reservoir. • If necessary, add specified brake fluid to specified level. • Check hydraulic system for leakage.	9-19, 9-19

For your safety – pre-operation checks

ITEM	CHECKS	PAGE
Clutch	• Check operation. • Lubricate cable end if necessary. • Check lever free play. • Adjust if necessary.	9-17
Throttle grip	• Make sure that operation is smooth. • Check throttle grip free play. • If necessary, have Yamaha dealer adjust throttle grip free play and lubricate cable end and grip housing.	9-14, 9-23
Control cables	• Make sure that operation is smooth. • Lubricate cable ends if necessary.	9-23
Drive chain	• Check chain slack. • Adjust if necessary. • Check chain condition. • Lubricate if necessary.	9-21, 9-22
Wheels and tires	• Check for damage. • Check tire condition and tread depth. • Check air pressure. • Correct if necessary.	9-15, 9-17
Brake and shift pedals	• Make sure that operation is smooth. • Lubricate pedal pivoting points if necessary.	9-24
Brake and clutch levers	• Make sure that operation is smooth. • Lubricate lever pivoting points if necessary.	9-24
Centerstand, sidestand	• Make sure that operation is smooth. • Lubricate pivots if necessary.	9-25
Chassis fasteners	• Make sure that all nuts, bolts and screws are properly tightened. • Tighten if necessary.	—
Instruments, lights, signals and switches	• Check operation. • Correct if necessary.	—
Sidestand switch	• Check operation of ignition circuit cut-off system. • If system is not working correctly, have Yamaha dealer check vehicle.	6-27

EAU15952

Read the Owner's Manual carefully to become familiar with all controls. If there is a control or function you do not understand, ask your Yamaha dealer.

EWA10272

⚠ WARNING

Failure to familiarize yourself with the controls can lead to loss of control, which could cause an accident or injury.

EAU16831

Engine break-in

There is never a more important period in the life of your engine than the period between 0 and 1000 km (600 mi). For this reason, you should read the following material carefully.

Since the engine is brand new, do not put an excessive load on it for the first 1000 km (600 mi). The various parts in the engine wear and polish themselves to the correct operating clearances. During this period, prolonged full-throttle operation or any condition that might result in engine overheating must be avoided.

EAUE4120

0–500 km (0–300 mi)

Avoid prolonged operation above 4500 r/min.

After every hour of operation, stop the engine, and then let it cool for five to ten minutes.

Vary the engine speed from time to time. Do not operate the engine at one set throttle position.

500–1000 km (300–600 mi)

Avoid prolonged operation above 6000 r/min.

Rev the engine freely through the gears, but do not use full throttle at any time. ***NOTICE:*** **After 1000 km (600 mi) of operation, the engine oil must be changed, the oil filter cartridge or element replaced, and the oil strainer cleaned.** [ECA10322]

1000 km (600 mi) and beyond

The vehicle can now be operated normally.

ECA20190

NOTICE

- **Keep the engine speed out of the tachometer high-rpm zone.**
- **If any engine trouble should occur during the engine break-in period, immediately have a Yamaha dealer check the vehicle.**

8

EAUE6031

Starting the engine

The ignition circuit cut-off system will enable starting when:

- the transmission is in the neutral position or
- the transmission is in gear, the sidestand is up, and the clutch lever is pulled.

To start the engine

1. Turn the main switch on and set the stop/run/start switch to the run position.
2. Confirm the indicator and warning light(s) come on for a few seconds, and then go off. (See page 6-2.)

TIP

- Do not start the engine if the malfunction indicator light remains on.
- The ABS warning light should come on and stay on until the vehicle reaches a speed of 5 km/h (3 mi/h).

ECA24110

NOTICE

If a warning or indicator light does not work as described above, have a Yamaha dealer check the vehicle.

3. Shift the transmission into the neutral position.
4. Start the engine by pushing the start "Ⓢ" side of the stop/run/start switch.
5. Release the start switch when the engine starts, or after 5 seconds. Wait 10 seconds before pressing the switch again to allow battery voltage to restore.

ECA11043

NOTICE

For maximum engine life, never accelerate hard when the engine is cold!

EAUE4970

TIP

This model is equipped with a lean angle sensor to stop the engine in case of a turnover. In this case, turn the main switch off and then on. Failing to do so will prevent the engine from starting even though the engine will crank when pushing the start "Ⓢ" side of the stop/run/start switch.

EAU16675

Shifting

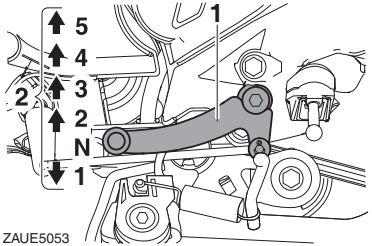

ZAUE5053

1. Shift pedal
2. Gear positions

Shifting gears lets you control the amount of engine power available for starting off, accelerating, climbing hills, etc.

The gear positions are shown in the illustration.

TIP

To shift the transmission into the neutral position (**N**), press the shift pedal down repeatedly until it reaches the end of its travel, and then slightly raise it.

ECA10262

NOTICE

- **When shifting, press the shift pedal firmly until you feel the gear shift is complete.**
- **Even with the transmission in the neutral position, do not coast for long periods of time with the engine off, nor tow the motorcycle for long distances. The transmission is properly lubricated only when the engine is running. Inadequate lubrication may damage the transmission.**
- **Always use the clutch while changing gears to avoid damaging the engine, transmission, and drive train, which are not designed to withstand the shock of forced shifting.**

EAU16811

Tips for reducing fuel consumption

Fuel consumption depends largely on your riding style. Consider the following tips to reduce fuel consumption:

- Shift up swiftly, and avoid high engine speeds during acceleration.
- Do not rev the engine while shifting down, and avoid high engine speeds with no load on the engine.
- Turn the engine off instead of letting it idle for an extended length of time (e.g., in traffic jams, at traffic lights or at railroad crossings).

8

EAU17214

Parking

When parking, stop the engine, and then remove the key from the main switch.

EWA10312

⚠ WARNING

- **Since the engine and exhaust system can become very hot, park in a place where pedestrians or children are not likely to touch them and be burned.**
- **Do not park on a slope or on soft ground, otherwise the vehicle may overturn, increasing the risk of a fuel leak and fire.**
- **Do not park near grass or other flammable materials which might catch fire.**

EAU17246

Periodic inspection, adjustment, and lubrication will keep your vehicle in the safest and most efficient condition possible. Safety is an obligation of the vehicle owner/operator. The most important points of vehicle inspection, adjustment, and lubrication are explained on the following pages.

The intervals given in the periodic maintenance charts should be simply considered as a general guide under normal riding conditions. However, depending on the weather, terrain, geographical location, and individual use, the maintenance intervals may need to be shortened.

EWA10322

⚠ WARNING

Failure to properly maintain the vehicle or performing maintenance activities incorrectly may increase your risk of injury or death during service or while using the vehicle. If you are not familiar with vehicle service, have a Yamaha dealer perform service.

EWA15123

⚠ WARNING

Turn off the engine when performing maintenance unless otherwise specified.

- **A running engine has moving parts that can catch on body parts or clothing and electrical parts that can cause shocks or fires.**
- **Running the engine while servicing can lead to eye injury, burns, fire, or carbon monoxide poisoning – possibly leading to death. See page 2-3 for more information about carbon monoxide.**

EWA15461

⚠ WARNING

Brake discs, calipers, drums, and linings can become very hot during use. To avoid possible burns, let brake components cool before touching them.

EAU85230

Tool kit

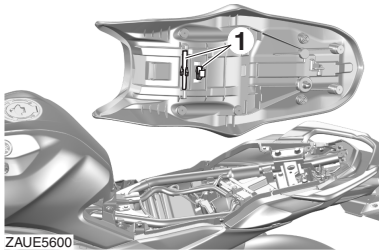

1. Tool kit

The tool kit is in the location shown.

The information included in this manual and the tools provided in the tool kit are intended to assist you in the performance of preventive maintenance and minor repairs. However, a torque wrench and other tools are necessary to perform certain maintenance work correctly.

TIP

If you do not have the tools or experience required for a particular job, have your Yamaha dealer perform it for you.

EAUE3700

TIP

- From 19000 km (11800 mi), repeat the maintenance intervals starting from 4000 km (2400 mi).
- Items marked with an asterisk (*) should be performed by a Yamaha dealer as they require special tools, data and technical skills.
- Maintenance intervals marked with a double asterisk (**) would be paid service.

EAUE4430

Periodic maintenance chart for the emission control system

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km** (7800 mi)	16000 km** (9600 mi)
1	*	**Fuel line**	• Check fuel hoses for cracks or damage.	√	√	√	√	√	√
2	*	**Fuel filter**	• Check condition. • Replace if necessary.	Every 10000 km (6000 mi)					
3		**Spark plug**	• Check condition. • Clean and regap.	√	√	√	√		√
			• Replace.					√	
4	*	**Valves**	• Check valve clearance. Adjust if necessary.	√	√	√	√	√	√
5	*	**Fuel injection**	• Adjust engine idling speed.	√	√	√	√	√	√
6	*	**Exhaust system**	• Check for leakage. • Tighten if necessary. • Replace gasket(s) if necessary.		√	√	√	√	√
7	*	**Evaporative emission control system**	• Check control system for damage. • Replace if necessary.				√		√

EAUE4440

General maintenance and lubrication chart

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km** (7800 mi)	16000 km** (9600 mi)
1	*	**Diagnostic system check**	• Perform dynamic inspection using Yamaha diagnostic tool. • Check the error codes.	√	√	√	√	√	√
2		**Air filter element**	• Check.			√		√	
			• Replace.	Every 16000 km (9600 mi)					
3	*	**Battery**	• Check voltage. • Charge if necessary.	√	√	√	√	√	√
4		**Clutch**	• Check operation. • Adjust.	√	√	√	√	√	√
5	*	**Front brake**	• Check operation, fluid level and vehicle for fluid leakage.	√	√	√	√	√	√
			• Replace brake pads.	Whenever worn to the limit					
6	*	**Rear brake**	• Check operation, fluid level and vehicle for fluid leakage.	√	√	√	√	√	√
			• Replace brake pads.	Whenever worn to the limit					
7	*	**Brake hose**	• Check for cracks or damage. • Check for correct routing and clamping.	√	√	√	√	√	√
			• Replace.	Every 4 years					
8	*	**Brake fluid**	• Change.	Every 2 years					
9	*	**Wheels**	• Check runout and for damage.	√	√	√	√	√	√

9

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km** (7800 mi)	16000 km** (9600 mi)
10	*	**Tires**	• Check tread depth and for damage. • Replace if necessary. • Check air pressure. • Correct if necessary.	√	√	√	√	√	√
11	*	**Wheel bearings**	• Check bearing for looseness or damage. Replace if necessary.	√	√	√	√	√	√
			• Lubricate with lithium-soap-based grease.	Every 10000 km (6000 mi)					
12	*	**Swingarm**	• Check operation and for excessive play.	√	√	√	√	√	√
			• Lubricate with lithium-soap-based grease.	Every 13000 km (7800 mi)					
13		**Drive chain**	• Check chain slack, alignment and condition. • Adjust and lubricate chain with a special O-ring chain lubricant thoroughly.	Every 500 km (300 mi) and after washing the motorcycle, riding in the rain or riding in wet areas					
14	*	**Steering bearings**	• Check bearing play and steering for roughness.	√	√	√	√	√	√
			• Lubricate with lithium-soap-based grease.	Every 13000 km (7800 mi)					
15	*	**Chassis fasteners**	• Make sure that all nuts, bolts and screws are properly tightened.	√	√	√	√	√	√
16		**Brake lever pivot shaft**	• Lubricate with silicone grease.	√	√	√	√	√	√
17		**Brake pedal pivot shaft**	• Lubricate with lithium-soap-based grease.	√	√	√	√	√	√

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km** (7800 mi)	16000 km** (9600 mi)
18		**Clutch lever pivot shaft**	• Lubricate with lithium-soap-based grease.	√	√	√	√	√	√
19		**Shift pedal pivot shaft**	• Lubricate with lithium-soap-based grease.	√	√	√	√	√	√
20		**Sidestand, center-stand**	• Check operation. • Lubricate with lithium-soap-based grease.	√	√	√	√	√	√
21	*	**Sidestand switch**	• Check operation and replace if necessary.	√	√	√	√	√	√
22	*	**Front fork**	• Check operation and for oil leakage. Repair if necessary.	√	√	√	√	√	√
			• Replace oil.	Every 10000 km (6000 mi)					
23	*	**Shock absorber assembly**	• Check operation and shock absorber for oil leakage.	√	√	√	√	√	√
24		**Engine oil**	• Change. (See page 9-10.)	√	√	√	√	√	√
			• Check vehicle for oil leakage.	Every 3000 km (1800 mi)					√
25		**Engine oil filter element**	• Replace.	√	√	√	√	√	√
26		**Engine oil strainer**	• Clean.	√	Every 13000 km (7800 mi)				
27	*	**Front and rear brake switches**	• Check operation.	√	√	√	√	√	√
28		**Moving parts and cable ends**	• Lubricate.	√	√	√	√	√	√

NO.		ITEM	CHECK OR MAINTENANCE JOB	ODOMETER READING					
				1000 km (600 mi)	4000 km (2400 mi)	7000 km (4200 mi)	10000 km (6000 mi)	13000 km** (7800 mi)	16000 km** (9600 mi)
29	*	**Throttle grip**	• Check operation. • Check throttle grip free play, and adjust if necessary. • Lubricate cable end and grip housing.	√	√	√	√	√	√
30	*	**Lights, signals and switches**	• Check operation. • Adjust headlight beam.	√	√	√	√	√	√

EAU59350

TIP

- Air filter
  - This model's air intake system is equipped with a disposable oil-coated paper element. The air filter element cannot be cleaned with compressed air, it must be replaced.
  - The air filter element needs to be replaced more frequently when riding in unusually wet or dusty areas.
- Hydraulic brake service
  - After disassembling the brake master cylinder and caliper, always change the fluid. Regularly check the brake fluid level and fill the reservoir as required.
  - Every two years replace the internal components of the brake master cylinder and caliper, and change the brake fluid.
  - Replace the brake hose every four years and if cracked or damaged.

EAU18773

Removing and installing panels

The panels shown need to be removed to perform some of the maintenance jobs described in this chapter. Refer to this section each time a panel needs to be removed and installed.

EAUE3750

Panel A

To remove panel A

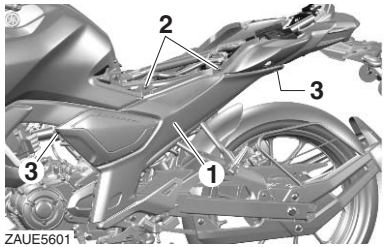

ZAUE5601

1. Panel A
2. Screw
3. Quick fastener

1. Remove the seat. (See page 6-25.)
2. Remove the screws and quick fasteners from the panel.
3. To remove the panel, pull the top side outward and lift up.

To install panel A

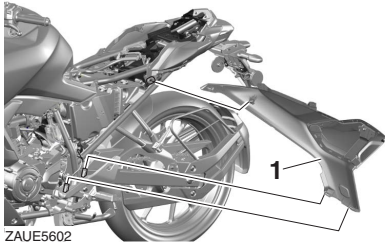

ZAUE5602

1. Panel A

1. Place the panel in the original position, and then install the screws and quick fasteners.
2. Install the seat.

Panel B

To remove panel B

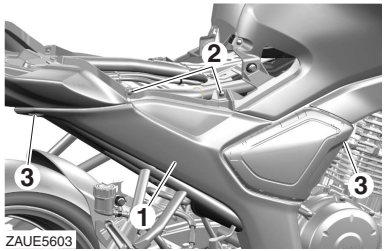

ZAUE5603

1. Panel B
2. Screw
3. Quick fastener

1. Remove the seat. (See page 6-25.)
2. Remove the screws and quick fasteners from the panel.
3. To remove the panel, pull the top side outward, lift up and tilt the panel outward to release the panel from rear lug and then slide the panel forward to release it from front lug.

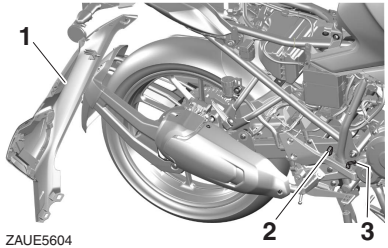

ZAUE5604
1. Panel B
2. Rear lug
3. Front lug

To install panel B

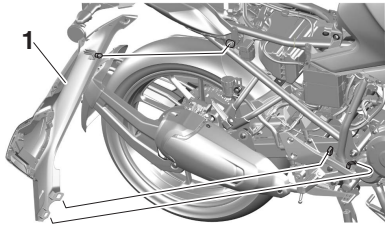

ZAUE5605
1. Panel B

1. Place the panel in the original position, and then install the screws and quick fasteners.
2. Install the seat.

EAU19608

Checking the spark plug

The spark plug is an important engine component, which is easy to check. Since heat and deposits will cause any spark plug to slowly erode, the spark plug should be removed and checked in accordance with the periodic maintenance and lubrication chart. In addition, the condition of the spark plug can reveal the condition of the engine.

To remove the spark plug

1. Remove the spark plug cap.

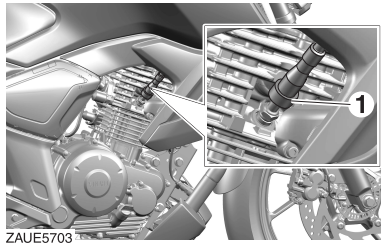

ZAUE5703
1. Spark plug cap

2. Remove the spark plug as shown, with the spark plug wrench included in the tool kit.

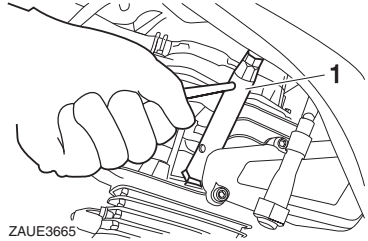

ZAUE3665
1. Spark plug wrench

To check the spark plug

1. Check that the porcelain insulator around the center electrode of the spark plug is a medium-to-light tan (the ideal color when the vehicle is ridden normally).

TIP

If the spark plug shows a distinctly different color, the engine could be operating improperly. Do not attempt to diagnose such problems yourself. Instead, have a Yamaha dealer check the vehicle.

2. Check the spark plug for electrode erosion and excessive carbon or other deposits, and replace it if necessary.

Specified spark plug:
NGK/CPR8EA9

3. Measure the spark plug gap with a wire thickness gauge and, if necessary, adjust the gap to specification.

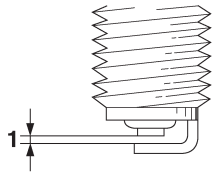

ZAUE0032
1. Spark plug gap

Spark plug gap:
0.8–0.9 mm (0.031–0.035 in)

To install the spark plug

1. Clean the surface of the spark plug gasket and its mating surface, and then wipe off any grime from the spark plug threads.
2. Install the spark plug with the spark plug wrench, and then tighten it to the specified torque.

Tightening torque:
Spark plug:
13 N·m (1.3 kgf·m, 9.6 lb·ft)

TIP

If a torque wrench is not available when installing a spark plug, a good estimate of the correct torque is 1/4–1/2 turn past finger tight. However, the spark plug should be tightened to the specified torque as soon as possible.

3. Install the spark plug cap.

EAU36114

Canister

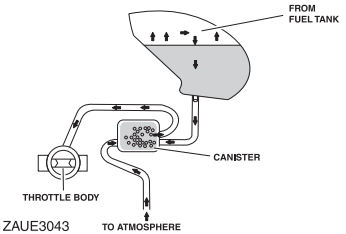

ZAUE3043

This model is equipped with a canister to prevent the discharging of fuel vapor into the atmosphere. Before operating this vehicle, make sure to check the following:

- Check each hose connection.
- Check each hose and canister for cracks or damage. Replace if damaged.
- Make sure that the canister breather is not blocked, and if necessary, clean it.

EAUE0118

Engine oil and oil filter element

The engine oil level should be checked before each ride. In addition, the oil must be changed and the oil filter element replaced at the intervals specified in the periodic maintenance and lubrication chart.

To check the engine oil level

1. Place the vehicle on the centerstand. A slight tilt to the side can result in a false reading.
2. Start the engine, warm it up for several minutes, and then turn it off.
3. Wait a few minutes until the oil settles, remove the engine oil filler cap, wipe the dipstick clean, insert it back into the oil filler hole (without screwing it in), and then remove it again to check the oil level.
   NOTICE: **Do not operate the vehicle until you know that the engine oil level is sufficient.** [ECA10012]

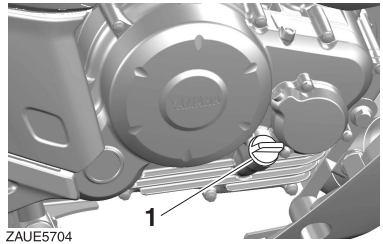

ZAUE5704

1. Engine oil filler cap

TIP

The engine oil should be between the minimum and maximum level marks.

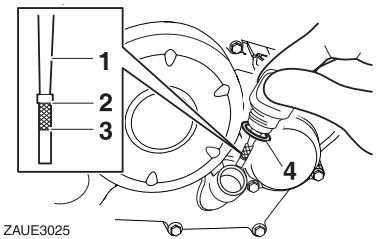

ZAUE3025

1. Dipstick
2. Maximum level mark
3. Minimum level mark
4. O-ring

4. If the engine oil is below the minimum level mark, add sufficient oil of the recommended type to raise it to the correct level.
5. Check the O-ring for damage, and replace it if necessary.
6. Install and tighten engine oil filler cap.

To change the engine oil (with or without oil filter element replacement)

1. Start the engine, warm it up for several minutes, and then turn it off.
2. Place an oil pan under the engine to collect the used oil.
3. Remove the engine oil filler cap with the O-ring, then the engine oil drain bolt and its gasket to drain the oil from the crankcase.

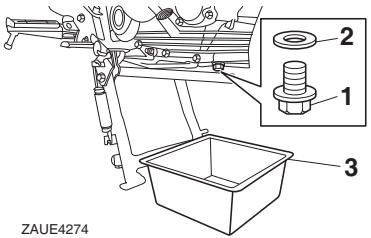

ZAUE4274

1. Engine oil drain bolt
2. Gasket
3. Oil pan

TIP

Skip steps 4–6 if the oil filter element is not being replaced.

4. Remove the oil filter element cover by removing the bolts.

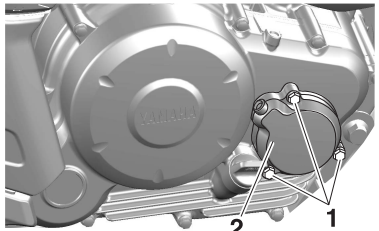

ZAUE5705

1. Bolt
2. Oil filter element cover

5. Remove and replace the oil filter element and O-ring.

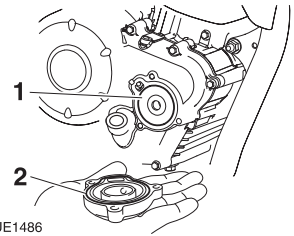

ZAUE1486

1. Oil filter element
2. O-ring

6. Install the oil filter element cover by installing the bolts, then tightening them to the specified torque.

Tightening torque:
Oil filter element cover bolt:
10 N·m (1.0 kgf·m, 7.4 lb·ft)

TIP

Make sure that the O-ring is properly seated.

7. Install the engine oil drain bolt, and its new gasket, and then tighten the bolt to the specified torque.

Tightening torque:
Engine oil drain bolt:
20 N·m (2.0 kgf·m, 15 lb·ft)

8. Refill with the specified amount of the recommended engine oil.

Recommended engine oil:
See page 11-1.
Oil quantity:
Oil change:
1.00 L (1.06 US qt, 0.88 Imp.qt)
With oil filter removal:
1.10 L (1.16 US qt, 0.97 Imp.qt)

ECA11621

NOTICE

- **In order to prevent clutch slippage (since the engine oil also lubricates the clutch), do not mix any chemical additives. Do not use oils with a diesel specification of "CD" or oils of a higher quality than specified. In addition, do not use oils labeled "ENERGY CONSERVING II" or higher.**
- **Make sure that no foreign material enters the crankcase.**

9. Check the O-ring for damage, and replace it if necessary.

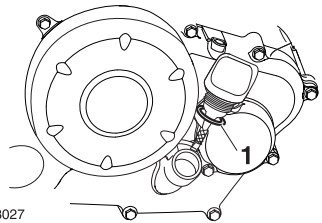

ZAUE3027

1. O-ring

10. Install and tighten the engine oil filler cap.
11. Start the engine, and then let it idle for several minutes while checking it for oil leakage. If oil is leaking, immediately turn the engine off and check for the cause.
12. Turn the engine off, wait for a few minutes until the oil settles, and then check the oil level and correct it if necessary.

EAU85450

Why Yamalube

YAMALUBE oil is a Genuine YAMAHA Part born of the engineers' passion and belief that engine oil is an important liquid engine component. We form teams of specialists in the fields of mechanical engineering, chemistry, electronics and track testing, and have them develop the engine together with the oil it will use. Yamalube oils take full advantage of the base oil's qualities and blend in the ideal balance of additives to make sure the final oil clears our performance standards. Thus, Yamalube mineral, semisynthetic and synthetic oils have their own distinct characters and value. Yamaha's experience gained over many years of research and development into oil since the 1960's helps make Yamalube the best choice for your Yamaha engine.

YAMALUBE®

EAUE4451

Air filter element and check hose

The air filter element should be replaced by a Yamaha dealer at the intervals specified in the periodic maintenance chart. Have the air filter element serviced more frequently if you often ride in wet or dusty areas. In addition, the air filter check hose should be regularly checked and cleaned if necessary.

To clean the air filter check hose

1. Remove panel A. (See page 9-7.)
2. Check the hose for accumulated dirt or water.

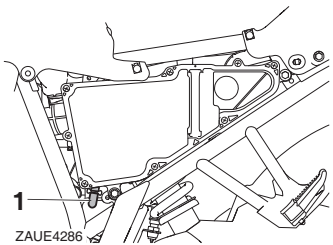

1. Air filter check hose

3. If dirt or water is visible, remove the hose, clean it and then install it.
4. Install the panel.

EAUE3780

Engine idling speed

The engine idling speed must be checked and, if necessary, adjusted as follows at the intervals specified in the periodic maintenance and lubrication chart.

Engine idling speed:
1200–1600 r/min

To adjust the idle speed

1. Remove panel A. (See page 9-7.)
2. Warm the engine.
3. To increase the engine idling speed, turn the screw in direction (a). To decrease the engine idling speed, turn the screw in direction (b).

9

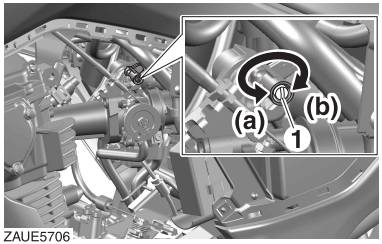

ZAUE5706
1. Idle adjusting screw

4. Install panel A.

TIP

If the specified idling speed cannot be obtained as described above, have a Yamaha dealer make the adjustment.

EAUE1572

Adjusting the throttle grip free play

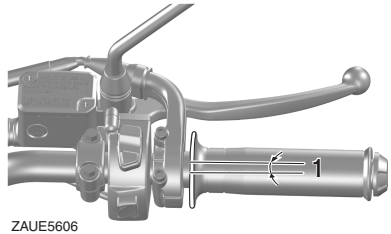

ZAUE5606
1. Throttle grip free play

The throttle grip free play should measure 3.0–5.0 mm (0.12–0.20 in) at the inner edge of the throttle grip. Periodically check the throttle grip free play and, if necessary, adjust it as follows.

TIP

The engine idling speed must be correctly adjusted before checking and adjusting the throttle grip free play.

1. Slide the rubber cover at the throttle cable.
2. Loosen the locknut.
3. To increase the throttle grip free play, turn the throttle grip free play adjusting nut in direction (a). To decrease the throttle grip free play, turn the adjusting nut in direction (b).

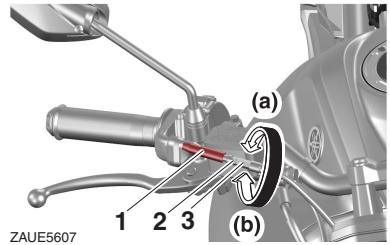

ZAUE5607
1. Rubber cover
2. Locknut
3. Adjusting nut

4. Tighten the locknut.
5. Slide the rubber cover back to its original position.

EAU21403

Valve clearance

The valves are an important engine component, and since valve clearance changes with use, they must be checked and adjusted at the intervals specified in the periodic maintenance chart. Unadjusted valves can result in improper air-fuel mixture, engine noise, and eventually engine damage. To prevent this from occurring, have your Yamaha dealer check and adjust the valve clearance at regular intervals.

TIP

This service must be performed when the engine is cold.

EAU82721

Tires

Tires are the only contact between the vehicle and the road. Safety in all conditions of riding depends on a relatively small area of road contact. Therefore, it is essential to maintain the tires in good condition at all times and replace them at the appropriate time with the specified tires.

Tire air pressure

The tire air pressure should be checked and, if necessary, adjusted before each ride.

EWA10504

⚠ WARNING

Operation of this vehicle with improper tire pressure may cause severe injury or death from loss of control.

- **The tire air pressure must be checked and adjusted on cold tires (i.e., when the temperature of the tires equals the ambient temperature).**
- **The tire air pressure must be adjusted in accordance with the riding speed and with the total weight of rider, passenger, cargo, and accessories approved for this model.**

Cold tire air pressure:
1 person:
Front:
200 kPa (2.00 kgf/cm², 29 psi)
Rear:
225 kPa (2.25 kgf/cm², 33 psi)
2 persons:
Front:
200 kPa (2.00 kgf/cm², 29 psi)
Rear:
225 kPa (2.25 kgf/cm², 33 psi)
Maximum load:
Vehicle:
164 kg (362 lb)
The vehicle's maximum load is the combined weight of the rider, passenger, cargo, and any accessories.

EWA10512

⚠ WARNING

Never overload your vehicle. Operation of an overloaded vehicle could cause an accident.

9

Tire inspection

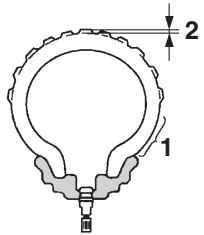

ZAUE0044

1. Tire sidewall
2. Tire tread depth

The tires must be checked before each ride. If a tire tread shows crosswise lines (minimum tread depth), if the tire has a nail or glass fragments in it, or if the sidewall is cracked, contact a Yamaha dealer immediately and have the tire replaced.

Minimum tire tread depth (front and rear):
1.0 mm (0.04 in)

EWA10583

⚠ WARNING

- **It is dangerous to ride with a worn-out tire. When a tire tread begins to show crosswise lines, have a Yamaha dealer replace the tire immediately.**
- **The replacement of all wheel and brake-related parts, including the tires, should be left to a Yamaha dealer, who has the necessary professional knowledge and experience to do so.**
- **Ride at moderate speeds after changing a tire since the tire surface must first be "broken in" for it to develop its optimal characteristics.**

Tire information

This model is equipped with tubeless tires and tire air valves.

Tires age, even if they have not been used or have only been used occasionally. Cracking of the tread and sidewall rubber, sometimes accompanied by carcass deformation, is an evidence of ageing. Old and aged tires shall be checked by tire specialists to ascertain their suitability for further use.

EWA10462

⚠ WARNING

The front and rear tires should be of the same make and design, otherwise the handling characteristics of the vehicle may be different, which could lead to an accident.

After extensive tests, only the tires listed below have been approved for this model by Yamaha.

Front tire:
Size:
100/80-17M/C 52P
Manufacturer/model:
MRF/NYLOGRIP ZAPPER-FX1
CEAT/ZOOM PLUS F

Rear tire:
Size:
140/60R17M/C 63P
Manufacturer/model:
MRF/REVZ-Y
CEAT/ZOOM RAD

EAU21963

Cast wheels

To maximize the performance, durability, and safe operation of your vehicle, note the following points regarding the specified wheels.

- The wheel rims should be checked for cracks, bends, warpage or other damage before each ride. If any damage is found, have a Yamaha dealer replace the wheel. Do not attempt even the smallest repair to the wheel. A deformed or cracked wheel must be replaced.
- The wheel should be balanced whenever either the tire or wheel has been changed or replaced. An unbalanced wheel can result in poor performance, adverse handling characteristics, and a shortened tire life.

EAU22038

Adjusting the clutch lever free play

Measure the clutch lever free play as shown.

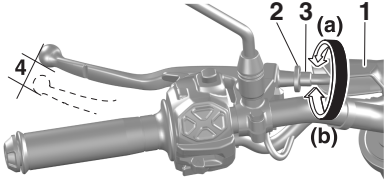

ZAUE5608

1. Rubber cover
2. Locknut
3. Clutch lever free play adjusting bolt
4. Clutch lever free play

Clutch lever free play:
10.0–15.0 mm (0.39–0.59 in)

Periodically check the clutch lever free play and, if necessary, adjust it as follows.

1. Slide the rubber cover back at the clutch lever.
2. Loosen the locknut.
3. To increase the clutch lever free play, turn the clutch lever free play adjusting bolt in direction (a). To decrease the clutch lever free play, turn the adjusting bolt in direction (b).

TIP

If the specified clutch lever free play could be obtained as described above, skip steps 4–8.

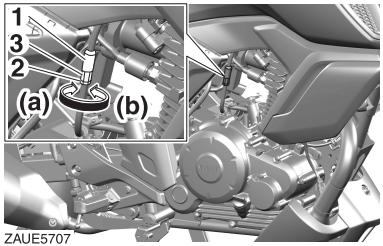

ZAUE5707

1. Rubber cover
2. Locknut
3. Clutch lever free play adjusting nut

4. Fully turn the adjusting bolt in direction (a) to loosen the clutch cable.
5. Slide the rubber cover back at the clutch cable.

9

6. Loosen the locknut further down the clutch cable.
7. To increase the clutch lever free play, turn the clutch lever free play adjusting nut in direction (a). To decrease the clutch lever free play, turn the adjusting nut in direction (b).
8. Tighten the locknut at the clutch cable, and then slide the rubber cover to its original position.
9. Tighten the locknut at the clutch lever, and then slide the rubber cover to its original position.

EAU22275

Brake light switches

The brake light is activated by switches connected to the brake lever and brake pedal. Check that the brake light comes on just before braking takes effect. If necessary, adjust the rear brake light switch as follows.

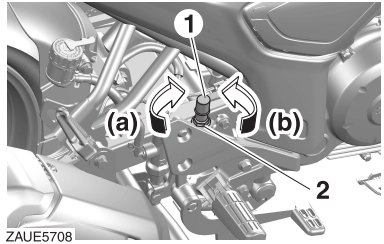

ZAUE5708

1. Rear brake light switch
2. Rear brake light switch adjusting nut

Turn the rear brake light switch adjusting nut while holding the rear brake light switch in place. To make the brake light come on earlier, turn the adjusting nut in direction (a). To make the brake light come on later, turn the adjusting nut in direction (b).

TIP

The front brake light switch should be serviced by a Yamaha dealer.

EAU22393

Checking the front and rear brake pads

The front and rear brake pads must be checked for wear at the intervals specified in the periodic maintenance and lubrication chart.

EAU22421

Front brake pads

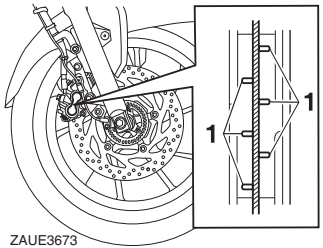

ZAUE3673

1. Brake pad wear indicator groove

Each front brake pad is provided with a wear indicator groove, which allows you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator groove. If a brake pad has worn to the point that the wear indicator groove has almost disappeared, have a Yamaha dealer replace the brake pads as a set.

EAU36721

Rear brake pads

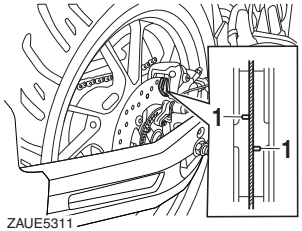

ZAUE5311

1. Brake pad wear indicator groove

Each rear brake pad is provided with wear indicator grooves, which allow you to check the brake pad wear without having to disassemble the brake. To check the brake pad wear, check the wear indicator grooves. If a brake pad has worn to the point that the wear indicator grooves have almost disappeared, have a Yamaha dealer replace the brake pads as a set.

EAU60682

Checking the brake fluid level

Before riding, check that the brake fluid is above the minimum level mark.

TIP

Make sure the reservoir is level with the ground when checking the fluid level.

Front brake

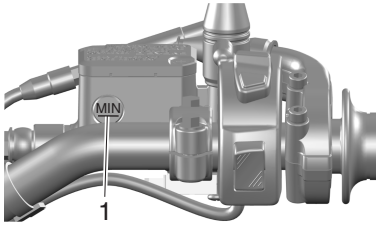

ZAUE5609

1. Minimum level mark

9

Rear brake

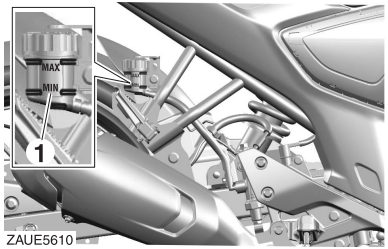

ZAUE5610

1. Minimum level mark

Specified brake fluid:
YAMAHA GENUINE BRAKE FLUID (DOT 4)

EWA15991

⚠ WARNING

Improper maintenance can result in loss of braking ability. Observe these precautions:

- **Insufficient brake fluid may allow air to enter the brake system, reducing braking performance.**
- **Clean the filler cap before removing. Use only DOT 4 brake fluid from a sealed container.**
- **Use only the specified brake fluid; otherwise, the rubber seals may deteriorate, causing leakage.**
- **Refill with the same type of brake fluid. Adding a brake fluid other than DOT 4 may result in a harmful chemical reaction.**
- **Be careful that water does not enter the brake fluid reservoir when refilling. Water will significantly lower the boiling point of the fluid and may result in vapor lock.**

ECA17641

NOTICE

Brake fluid may damage painted surfaces or plastic parts. Always clean up spilled fluid immediately.

As the brake pads wear, it is normal for the brake fluid level to gradually go down. A low brake fluid level may indicate worn brake pads and/or brake system leakage; therefore, be sure to check the brake pads for wear and the brake system for leakage. If the brake fluid level goes down suddenly, have a Yamaha dealer check the cause before further riding.

EAU22725

Changing the brake fluid

Have a Yamaha dealer change the brake fluid at the intervals specified in the periodic maintenance and lubrication chart. In addition, have the oil seals of the brake master cylinder and caliper as well as the brake hose replaced at the intervals listed below or whenever they are damaged or leaking.

- Brake seals: Replace every two years.
- Brake hose: Replace every four years.

EAU22762

Drive chain slack

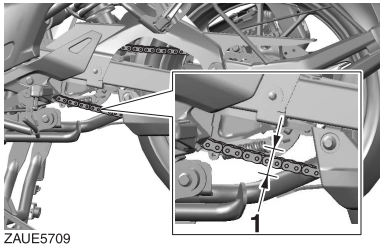

ZAUE5709

1. Drive chain slack

The drive chain slack should be checked before each ride and adjusted if necessary.

EAU22799

To check the drive chain slack

1. Place the motorcycle on the centerstand.
2. Shift the transmission into the neutral position.
3. Measure the drive chain slack as shown.

Drive chain slack:
30.0–40.0 mm (1.18–1.57 in)

4. If the drive chain slack is incorrect, adjust it as follows. ***NOTICE:*** **Improper drive chain slack will overload the engine as well as other vital parts of the motorcycle and can lead to chain slippage or breakage. To prevent this from occurring, keep the drive chain slack within the specified limits.** [ECA10572]

EAU22938

To adjust the drive chain slack

Consult a Yamaha dealer before adjusting the drive chain slack.

1. Loosen the axle nut, then loosen the locknut at each end of the swingarm.
2. To tighten the drive chain, turn the drive chain slack adjusting nut at each end of the swingarm in direction (a). To loosen the drive chain, turn the adjusting nut at each end of the swingarm in direction (b), and then push the rear wheel forward.

9

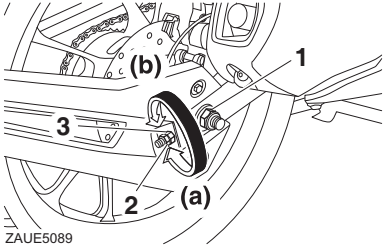

ZAUE5089

1. Axle nut
2. Drive chain puller locknut
3. Drive chain slack adjusting nut

TIP

Using the alignment marks on each side of the swingarm, make sure that both adjusting nuts are in the same position for proper wheel alignment.

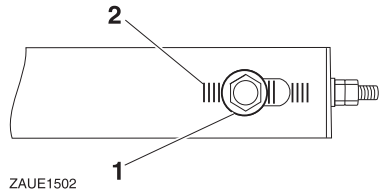

ZAUE1502

1. Washer
2. Alignment marks

3. Tighten the drive chain puller locknuts, and then tighten the axle nut to the specified torques.

Tightening torques:
Locknut:
14 N·m (1.4 kgf·m, 10 lb·ft)
Axle nut:
59 N·m (5.9 kgf·m, 44 lb·ft)

4. Make sure that the drive chain pullers are in the same position, the drive chain slack is correct, and the drive chain moves smoothly.

EAUE0141

Cleaning and lubricating the drive chain

The drive chain must be cleaned and lubricated at the intervals specified in the periodic maintenance and lubrication chart, otherwise it will quickly wear out, especially when riding in dusty or wet areas. Service the drive chain as follows.

ECA10584

NOTICE

The drive chain must be lubricated after washing the motorcycle, riding in the rain or riding in wet areas.

1. Clean the drive chain with soap water to remove the accumulated dust & mud and then dry off.
2. Apply the cleaning spray on all the links and plates of chain, then wipe the chain. ***NOTICE:*** **To prevent damaging the O-rings, do not clean the drive chain with steam cleaners, high-pressure washers or inappropriate solvents.** [ECA11122]

3. Thoroughly lubricate the drive chain with a special O-ring chain lubricant.

EAUE1151

Checking and lubricating the cables

The operation of all control cables and the condition of the cables should be checked before each ride, and the cable ends should be lubricated if necessary. If a cable is damaged or does not move smoothly, have a Yamaha dealer check or replace it. **WARNING! Damage to the outer housing of cables may result in internal rusting and cause interference with cable movement. Replace damaged cables as soon as possible to prevent unsafe conditions.** [EWA10712]

Recommended lubricant:
Lithium-soap-based grease

EAUE1191

Checking and lubricating the throttle grip and cable end

The operation of the throttle grip should be checked before each ride. In addition, the cable end should be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance chart.

The throttle cable is equipped with a rubber cover. Make sure that the cover is securely installed. Even though the cover is installed correctly, it does not completely protect the cable from water entry. Therefore, use care not to pour water directly onto the cover or cable when washing the vehicle. If the cable or cover becomes dirty, wipe clean with a moist cloth.

EAU44276

Checking and lubricating the brake and shift pedals

The operation of the brake and shift pedals should be checked before each ride, and the pedal pivots should be lubricated if necessary.

Recommended lubricant:
Lithium-soap-based grease

Brake pedal

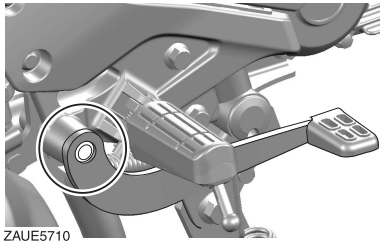

ZAUE5710

Shift pedal

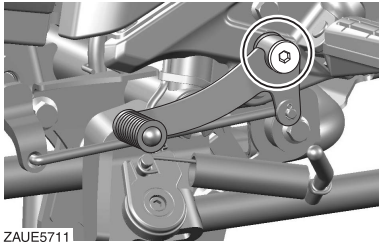

ZAUE5711

EAU23145

Checking and lubricating the brake and clutch levers

The operation of the brake and clutch levers should be checked before each ride, and the lever pivots should be lubricated if necessary.

Brake lever

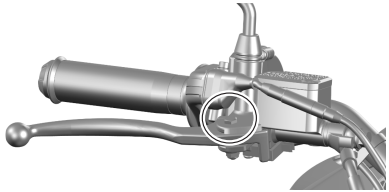

ZAUE5611

Clutch lever

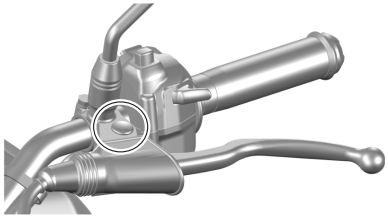

ZAUE5612

Recommended lubricants:
Brake lever:
Silicone grease
Clutch lever:
Lithium-soap-based grease

EAU23215

Checking and lubricating the centerstand and sidestand

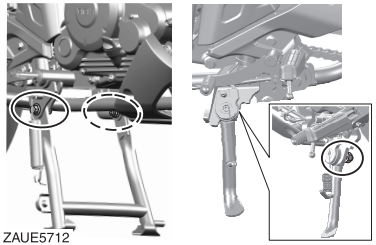

ZAUE5712

The operation of the centerstand and sidestand should be checked before each ride, and the pivots and metal-to-metal contact surfaces should be lubricated if necessary.

EWA10742

⚠ WARNING

If the centerstand or sidestand does not move up and down smoothly, have a Yamaha dealer check or repair it. Otherwise, the centerstand or sidestand could contact the ground and distract the operator, resulting in a possible loss of control.

Recommended lubricant:
Lithium-soap-based grease

9

EAUM1653

Lubricating the swingarm pivots

The swingarm pivots must be lubricated by a Yamaha dealer at the intervals specified in the periodic maintenance and lubrication chart.

Recommended lubricant:
Lithium-soap-based grease

EAU23273

Checking the front fork

The condition and operation of the front fork must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

To check the condition

Check the inner tubes for scratches, damage and excessive oil leakage.

To check the operation

1. Place the vehicle on a level surface and hold it in an upright position. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. While applying the front brake, push down hard on the handlebars several times to check if the front fork compresses and rebounds smoothly.

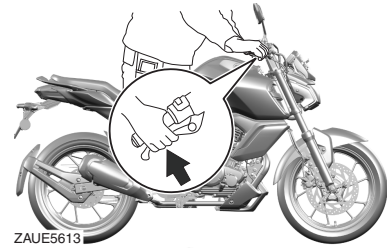

ZAUE5613

ECA10591

NOTICE

If any damage is found or the front fork does not operate smoothly, have a Yamaha dealer check or repair it.

9

EAU45512

Checking the steering

Worn or loose steering bearings may cause danger. Therefore, the operation of the steering must be checked as follows at the intervals specified in the periodic maintenance and lubrication chart.

1. Place the vehicle on the centerstand. **WARNING! To avoid injury, securely support the vehicle so there is no danger of it falling over.** [EWA10752]
2. Hold the lower ends of the front fork legs and try to move them forward and backward. If any free play can be felt, have a Yamaha dealer check or repair the steering.

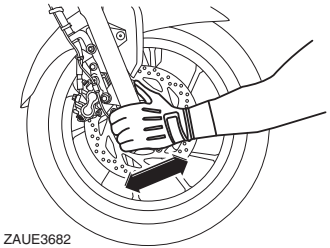

ZAUE3682

EAU23292

Checking the wheel bearings

The front and rear wheel bearings must be checked at the intervals specified in the periodic maintenance and lubrication chart. If there is play in the wheel hub or if the wheel does not turn smoothly, have a Yamaha dealer check the wheel bearings.

EAU2338A

Battery

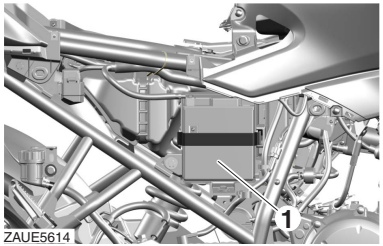

ZAUE5614

1. Battery

The battery is located behind panel B. (See page 9-7.)

This model is equipped with a VRLA (Valve Regulated Lead Acid) battery. There is no need to check the electrolyte or to add distilled water. However, the battery lead connections need to be checked and, if necessary, tightened.

EWA10761

⚠ WARNING

- **Electrolyte is poisonous and dangerous since it contains sulfuric acid, which causes severe burns. Avoid any contact with skin, eyes or clothing and al-**

9

ways shield your eyes when working near batteries. In case of contact, administer the following FIRST AID.
- **EXTERNAL: Flush with plenty of water.**
- **INTERNAL: Drink large quantities of water or milk and immediately call a physician.**
- **EYES: Flush with water for 15 minutes and seek prompt medical attention.**

- **Batteries produce explosive hydrogen gas. Therefore, keep sparks, flames, cigarettes, etc., away from the battery and provide sufficient ventilation when charging it in an enclosed space.**
- **KEEP THIS AND ALL BATTERIES OUT OF THE REACH OF CHILDREN.**

ECA10621

NOTICE

Never attempt to remove the battery cell seals, as this would permanently damage the battery.

To charge the battery

Have a Yamaha dealer charge the battery as soon as possible if it seems to have discharged. Keep in mind that the battery tends to discharge more quickly if the vehicle is equipped with optional electrical accessories.

ECA16522

NOTICE

To charge a VRLA (Valve Regulated Lead Acid) battery, a special (constant-voltage) battery charger is required. Using a conventional battery charger will damage the battery.

To store the battery

1. If the vehicle will not be used for more than one month, remove the battery, fully charge it, and then place it in a cool, dry place. ***NOTICE:*** **When removing the battery, be sure to turn the main switch off, then disconnect the negative lead before disconnecting the positive lead.** [ECA16304]
2. If the battery will be stored for more than two months, check it at least once a month and fully charge it if necessary.
3. Fully charge the battery before installation. ***NOTICE:*** **When installing the battery, be sure to turn the main switch off, then connect the positive lead before connecting the negative lead.** [ECA16842]
4. After installation, make sure that the battery leads are properly connected to the battery terminals.

ECA16531

NOTICE

Always keep the battery charged. Storing a discharged battery can cause permanent battery damage.

EAUE6040

Replacing the fuses

The fuse box is located behind panel B. (See page 9-7.)

If the fuse is blown, replace it as follows.

1. Turn the main switch to “OFF” and turn off all electrical circuits.
2. Remove panel B. (See page 9-7.)
3. Remove the fuse box from fuse box holder by pulling it outward.

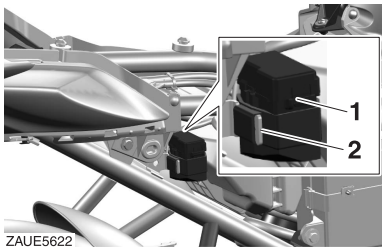

ZAUE5622

1. Fuse box
2. Fuse box holder

4. Open fuse box cover by pressing lock as shown.

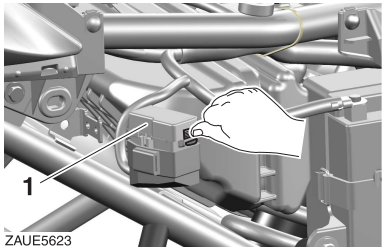

ZAUE5623

1. Fuse box cover

5. Remove the blown fuse, and then install a new fuse of the specified amperage. **WARNING! Do not use a fuse of a higher amperage rating than recommended to avoid causing extensive damage to the electrical system and possibly a fire.** [EWA15132]

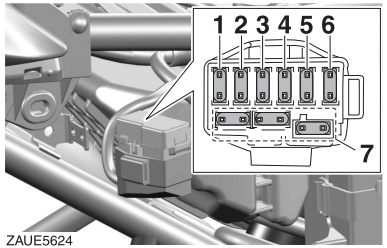

ZAUE5624

1. ABS motor fuse
2. ABS solenoid fuse
3. Main fuse
4. Signal fuse
5. Headlight fuse
6. Ignition fuse
7. Spare fuses

Specified fuses:
Main fuse:
15.0 A
ABS motor fuse:
10.0 A
ABS solenoid fuse:
7.5 A
Signal fuse:
7.5 A
Headlight fuse:
7.5 A
Ignition fuse:
7.5 A

9

6. Close the fuse box cover.
7. Install fuse box into fuse box holder.
8. Install the panel.
9. Turn the main switch to “ON” and turn on the electrical circuits to check if the devices operate.

TIP

If a fuse immediately blows again, have your Yamaha dealer check the vehicle.

EAU72980

Vehicle lights

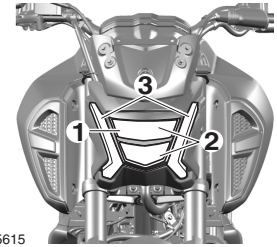

ZAUE5615

1. Headlight (low beam)
2. Headlight (high beam)
3. Auxiliary light

This model is equipped with full-LED lighting. There are no user replaceable bulbs.
If a light does not come on, check the fuses and then have a Yamaha dealer check the vehicle.

ECA16581

NOTICE

Do not affix any type of tinted film or stickers to the headlight lens.

EAUE3880

Front wheel

The front wheel contains components that are part of the anti-lock brake system. To prevent ABS malfunction due to wheel damage or improper installation, Yamaha recommends the wheel be professionally serviced.

EWAE0050

⚠ WARNING

Have a Yamaha dealer remove and install the wheel.

9

EAUE5290

Rear wheel

The rear wheel is equipped with a wheel sensor and wheel sensor rotor. To prevent any damage from improper installation, have a Yamaha dealer perform any service which requires removal/installation of the rear wheel.

EWAE0050

⚠ WARNING

Have a Yamaha dealer remove and install the wheel.

EAU25853

Troubleshooting

Although Yamaha motorcycles receive a thorough inspection before shipment from the factory, trouble may occur during operation. Any problem in the fuel, compression, or ignition systems, for example, can cause poor starting and loss of power.

The following troubleshooting chart represents a quick and easy procedure for checking these vital systems yourself. However, should your motorcycle require any repair, take it to a Yamaha dealer, whose skilled technicians have the necessary tools, experience, and know-how to service the motorcycle properly.

Use only genuine Yamaha replacement parts. Imitation parts may look like Yamaha parts, but they are often inferior, have a shorter service life and can lead to expensive repair bills.

EWA15142

⚠ WARNING

When checking the fuel system, do not smoke, and make sure there are no open flames or sparks in the area, including pilot lights from water heaters or furnaces. Gasoline or gasoline vapors can ignite or explode, causing severe injury or property damage.

EAUE6011

Stop and Start System troubleshooting

If a problem occurs, check the following before taking the vehicle to a Yamaha dealer.

The Stop and Start System indicator light does not come on.

1. Is the main switch turned on?
2. Is the Stop and Start System switch set to "Ⓐ"?
3. Was the engine warmed up sufficiently after starting?
4. Did the vehicle travel at a speed of 10 km/h or higher?

Even if the preceding conditions are met, the Stop and Start System may not activate in order to preserve battery power. In this case, continue to drive the vehicle.

In addition, the Stop and Start System indicator light does not come on if the engine trouble warning light is on.

If the Stop and Start System indicator light still does not come on after you checked the preceding conditions, have a Yamaha dealer check the vehicle as soon as possible.

The Stop and Start System indicator light comes on, but the engine does not stop as intended.

1. Was the vehicle stopped completely?
   The engine may not stop until the vehicle is stopped for a certain period of time. Try bringing the vehicle to a complete stop.
2. Is the throttle grip turned?
   The engine does not stop automatically if the throttle grip is not in the fully closed position.
   Turn the throttle grip to the fully closed position.
3. Was the neutral indicator light on?
   The engine does not stop unless the transmission is in neutral. Try shifting the transmission into neutral.
4. Was the clutch lever fully released?
   The engine does not stop unless the clutch is fully engaged. Try fully releasing the clutch lever.

If the engine still does not stop after you checked the preceding conditions, have a Yamaha dealer check the vehicle.

After the engine was stopped by the Stop and Start System, the engine does not restart even if the clutch lever is fully pulled.

1. Is the Stop and Start System switch set to "Ⓐoff"?
   If the Stop and Start System switch is set to "Ⓐoff" while the Stop and Start System is activated, the Stop and Start System will be turned off.
2. Was the stop/run/start switch pressed while the engine was off?
   If the stop/run/start switch is pressed while the engine is off, the Stop and Start System is deactivated.
3. Was the sidestand operated?
   When the sidestand is lowered, the Stop and Start System is deactivated.
4. Was the engine left stopped by the Stop and Start System for a long period of time?
   If the engine is left stopped by the Stop and Start System for a long period of time, the battery could become discharged.

If the engine still does not restart after you checked the preceding conditions, have a Yamaha dealer check the vehicle as soon as possible.

EAUT1985

Troubleshooting chart

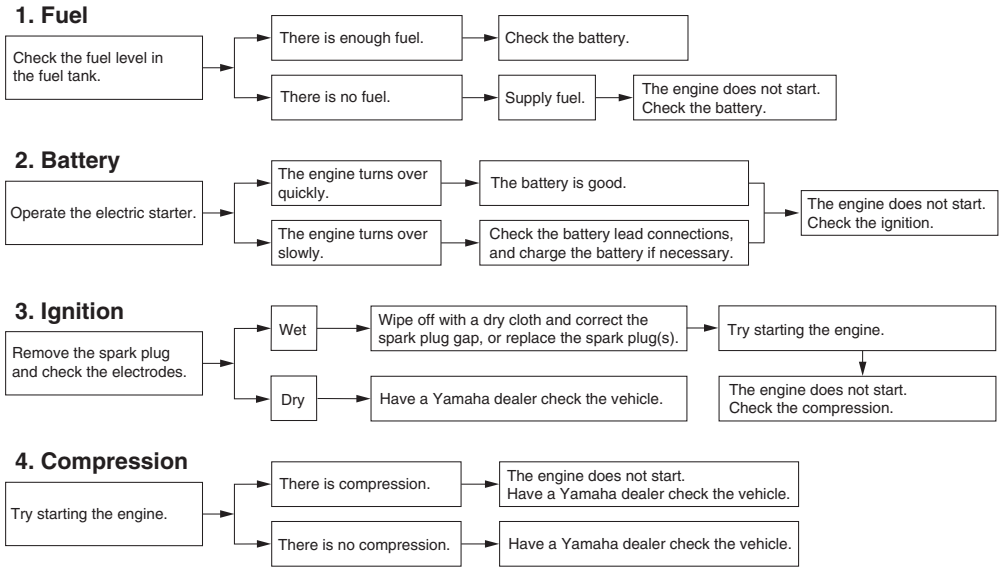

EAU37834

Matte color caution

ECA15193

NOTICE

Some models are equipped with matte colored finished parts. Be sure to consult a Yamaha dealer for advice on what products to use before cleaning the vehicle. Using a brush, harsh chemical products or cleaning compounds when cleaning these parts will scratch or damage their surface. Wax also should not be applied to any matte colored finished parts.

EAU84992

Care

Frequent, thorough cleaning of the vehicle will not only enhance its appearance but also will improve its general performance and extend the useful life of many components. Washing, cleaning, and polishing will also give you a chance to inspect the condition of the vehicle more frequently. Be sure to wash the vehicle after riding in the rain or near the sea, because salt is corrosive to metals.

Special care in winter

ECA28181

NOTICE

In cold weather, when roads may be salted as a de-icing method, it's important to clean the vehicle thoroughly to remove road salt and avoid corrosion. Wheel spokes, bolts/nuts and other unpainted metal parts can be especially vulnerable to corrosion from road salt. Apply an anti-corrosion product to any vulnerable parts after washing and drying the vehicle.

TIP

- The roads of heavy snowfall areas may be sprayed with salt as a de-icing method. This salt can stay on the roads well into spring, so be sure to wash the underside and chassis parts after riding in such areas.
- Genuine Yamaha care and maintenance products are sold under the YAMALUBE brand in many markets worldwide.
- See your Yamaha dealer for additional cleaning tips.

ECA26280

NOTICE

Improper cleaning can cause cosmetic and mechanical damage. Do not use:

- **high-pressure washers or steam-jet cleaners. Excessive water pressure may cause water seepage and deterioration of wheel bearings, brakes, transmission seals and electrical devices. Avoid high-pressure**

detergent applications such as those available in coin-operated car washers.

- **harsh chemicals, including strong acidic wheel cleaners, especially on spoke or magnesium wheels.**
- **harsh chemicals, abrasive cleaning compounds, or wax on matte-finished parts. Brushes can scratch and damage the matte-finish, use soft sponge or towel only.**
- **towels, sponges, or brushes contaminated with abrasive cleaning products or strong chemicals such as, solvents, gasoline, rust removers, brake fluid, or antifreeze, etc.**

Before washing

1. Park the vehicle out of direct sunlight and allow it to cool. This will help avoid water spots.
2. Make sure all caps, covers, electrical couplers and connectors are tightly installed.
3. Cover the muffler end with a plastic bag and a strong rubber band.
4. Pre-soak stubborn stains like insects or bird droppings with a wet towel for a few minutes.
5. Remove road grime and oil stains with a quality degreasing agent and a plastic-bristle brush or sponge. ***NOTICE:*** **Do not use degreasing agent on areas requiring lubrication such as seals, gaskets, and wheel axles. Follow product instructions.** [ECA26290]

Washing

1. Rinse off any degreaser and spray down the vehicle with a garden hose. Use only enough pressure to do the job. Avoid spraying water directly into the muffler, instrument panel, air inlet, or other inner areas such as underseat storage compartments.
2. Wash the vehicle with a quality automotive-type detergent mixed with cool water and a soft, clean towel or sponge. Use an old toothbrush or plastic-bristle brush for hard-to-reach places. ***NOTICE:*** **Use cold water if the vehicle has been exposed to salt. Warm water will increase salt's corrosive properties.** [ECA26301]
3. For windshield-equipped vehicles: Clean the windshield with a soft towel or sponge dampened with water and a pH neutral detergent. If necessary, use a high-quality windshield cleaner or polish for motorcycles. ***NOTICE:*** **Never use any strong chemicals to clean the windshield. Additionally, some cleaning compounds for plastic may scratch the windshield, so be sure to test all cleaning products before general application.** [ECA26310]
4. Rinse off thoroughly with clean water. Be sure to remove all detergent residues, as they can be harmful to plastic parts.

After washing

1. Dry the vehicle with a chamois or absorbent towel, preferably microfiber terrycloth.
2. For drive chain-equipped models: Dry and then lubricate the drive chain to prevent rust.

3. Use a chrome polish to shine chrome, aluminum, and stainless steel parts. Often the thermally induced discoloring of stainless steel exhaust systems can be removed through polishing.
4. Apply a corrosion protection spray on all metal parts including chrome or nickel-plated surfaces. **WARNING! Do not apply silicone or oil spray to seats, hand grips, rubber foot pegs or tire treads. Otherwise these parts will become slippery, which could cause loss of control. Thoroughly clean the surfaces of these parts before operating the vehicle.** [EWA20651]
5. Treat rubber, vinyl, and unpainted plastic parts with a suitable care product.
6. Touch up minor paint damage caused by stones, etc.
7. Wax all painted surfaces using a non-abrasive wax or use a detail spray for motorcycles.
8. When finished cleaning, start the engine and let it idle for several minutes to help dry any remaining moisture.
9. If the headlight lens has fogged up, start the engine and turn on the headlight to help remove the moisture.
10. Let the vehicle dry completely before storing or covering it.

ECA26320

NOTICE

- **Do not apply wax to rubber or unpainted plastic parts.**
- **Do not use abrasive polishing compounds as they will wear away the paint.**
- **Apply sprays and wax sparingly. Wipe off excess afterwards.**

EWA20660

⚠ WARNING

Contaminants left on the brakes or tires can cause loss of control.

- **Make sure there is no lubricant or wax on the brakes or tires.**
- **If necessary, wash the tires with warm water and a mild detergent.**
- **If necessary, clean the brake discs and pads with brake cleaner or acetone.**
- **Before riding at higher speeds, test the vehicle's braking performance and cornering behavior.**

EAU83472

Storage

Always store the vehicle in a cool, dry place. If necessary, protect it against dust with a porous cover. Be sure the engine and the exhaust system are cool before covering the vehicle. If the vehicle often sits for weeks at a time between uses, the use of a quality fuel stabilizer is recommended after each fill-up.

ECA21170

NOTICE

- **Storing the vehicle in a poorly ventilated room or covering it with a tarp, while it is still wet, will allow water and humidity to seep in and cause rust.**
- **To prevent corrosion, avoid damp cellars, stables (because of the presence of ammonia) and areas where strong chemicals are stored.**

Long term storage

Before storing the vehicle long term (60 days or more):

1. Make all necessary repairs and perform any outstanding maintenance.
2. Follow all instructions in the Care section of this chapter.
3. Fill up the fuel tank, adding fuel stabilizer according to product instructions. Run the engine for 5 minutes to distribute treated fuel through the fuel system.
4. For vehicles equipped with a fuel cock: Turn the fuel cock lever to the off position.
5. For vehicles with a carburetor: To prevent fuel deposits from building up, drain the fuel in the carburetor float chamber into a clean container. Retighten the drain bolt and pour the fuel back into the fuel tank.
6. Use a quality engine fogging oil according to product instructions to protect internal engine components from corrosion. If engine fogging oil is not available, perform the following steps for each cylinder:
   a. Remove the spark plug cap and spark plug.
   b. Pour a teaspoonful of engine oil into the spark plug bore.
   c. Install the spark plug cap onto the spark plug, and then place the spark plug on the cylinder head so that the electrodes are grounded. (This will limit sparking during the next step.)
   d. Turn the engine over several times with the starter. (This will coat the cylinder wall with oil.) **WARNING! To prevent damage or injury from sparking, make sure to ground the spark plug electrodes while turning the engine over.** [EWA10952]
   e. Remove the spark plug cap from the spark plug, and then install the spark plug and the spark plug cap.
7. Lubricate all control cables, pivots, levers and pedals, as well as the sidestand and centerstand (if equipped).
8. Check and correct the tire air pressure, and then lift the vehicle so that all wheels are off the ground. Otherwise, turn the

wheels a little once a month in order to prevent the tires from becoming degraded in one spot.

9. Cover the muffler outlet with a plastic bag to prevent moisture from entering it.
10. Remove the battery and fully charge it, or attach a maintenance charger to keep the battery optimally charged. ***NOTICE:*** **Confirm that the battery and its charger are compatible. Do not charge a VRLA battery with a conventional charger.** [ECA26330]

TIP

- If the battery will be removed, charge it once a month and store it in a temperate location between 0-30 °C (32-90 °F).
- See page 9-27 for more information on charging and storing the battery.

Dimensions:
Overall length:
2000 mm (78.7 in)
Overall width:
780 mm (30.7 in)
Overall height:
1090 mm (42.9 in)
Seat height:
790 mm (31.1 in)
Wheelbase:
1330 mm (52.4 in)
Ground clearance:
165 mm (6.50 in)
Minimum turning radius:
2.6 m (8.53 ft)

Weight:
Curb weight:
138 kg (304 lb)

Engine:
Combustion cycle:
4-stroke
Cooling system:
Air cooled
Valve train:
SOHC
Number of cylinders:
Single cylinder
Displacement:
149 cm^3
Bore × stroke:
57.3 × 57.9 mm (2.26 × 2.28 in)
Starting system:
Electric starter

Engine oil:
Recommended brand:



SAE viscosity grades:
10W-40
Recommended engine oil grade:
API service SL type, JASO standard MA
Engine oil quantity:
Oil change:
1.00 L (1.06 US qt, 0.88 Imp.qt)
With oil filter removal:
1.10 L (1.16 US qt, 0.97 Imp.qt)

Fuel:
Recommended fuel:
Unleaded gasoline (E20 acceptable)
Octane number (RON):
90
Fuel tank capacity:
13 L (3.4 US gal, 2.9 Imp.gal)
Fuel reserve amount:
1.5 L (0.40 US gal, 0.33 Imp.gal)

Fuel injection:
Throttle body:
ID mark:
B9P1

Drivetrain:
Gear ratio:
1st:
2.714 (38/14)
2nd:
1.789 (34/19)
3rd:
1.318 (29/22)
4th:
1.045 (23/22)
5th:
0.875 (21/24)

Front tire:
Type:
Tubeless
Size:
100/80-17M/C 52P
Manufacturer/model:
MRF/NYLOGRIP ZAPPER-FX1
Manufacturer/model:
CEAT/ZOOM PLUS F

Rear tire:
Type:
Tubeless
Size:
140/60R17M/C 63P
Manufacturer/model:
MRF/REVZ-Y
Manufacturer/model:
CEAT/ZOOM RAD

Loading:
Maximum load:
164 kg (362 lb)
(Total weight of rider, passenger, cargo and accessories)

Front brake:
Type:
Hydraulic single disc brake

Specifications

Rear brake:
Type:
Hydraulic single disc brake
Front suspension:
Type:
Telescopic fork
Rear suspension:
Type:
Swingarm
Electrical system:
System voltage:
12 V
Battery:
Model:
YTZ7
Voltage, capacity:
12 V, 6.0 Ah (10 HR)
Bulb wattage:
Headlight:
LED
Brake/tail light:
LED
Front turn signal light:
LED
Rear turn signal light:
LED
Auxiliary light:
LED
License plate light:
LED

EAU26366

Identification numbers

Record the vehicle identification number and the engine serial number in the spaces provided below for assistance when ordering spare parts from a Yamaha dealer or for reference in case the vehicle is stolen.

VEHICLE IDENTIFICATION NUMBER:

ENGINE SERIAL NUMBER:

EAU26401

Vehicle identification number

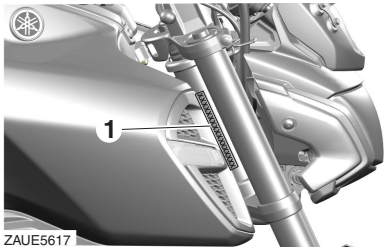

ZAUE5617

1. Vehicle identification number

The vehicle identification number is stamped into the steering head pipe. Record this number in the space provided.

TIP

The vehicle identification number is used to identify your motorcycle and may be used to register your motorcycle with the licensing authority in your area.

EAU26442

Engine serial number

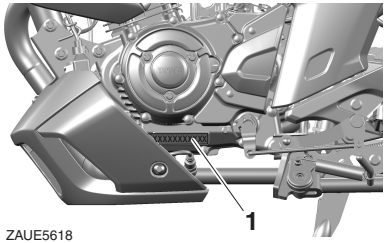

ZAUE5618

1. Engine serial number

The engine serial number is stamped into the crankcase.

12

EAU69910

Diagnostic connector

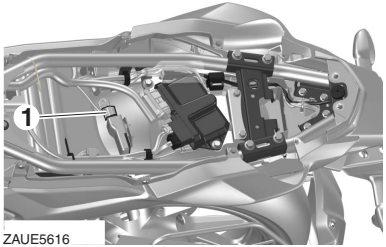

ZAUE5616

1. Diagnostic connector

The diagnostic connector is located as shown.

EAUE5491

Use of your data

For India
This is a brief summary of how Yamaha (Yamaha Motor Co., Ltd., and and India Yamaha Motor Pvt. Ltd.) uses your data. For more details for Yamaha's use of your data, please see our Privacy Policy.
https://www.yamaha-motor-india.com/privacy-index.html

What data we collect? and How we collect your data?
This vehicle collects three types of data through integrated Engine Control Units (ECU).:
(1) Vehicle Identification Number (VIN); (2) live data showing the performance of the vehicle such as engine/motor operating state, vehicle speed, mileage; and (3) other data showing the status of the vehicle such as diagnostic trouble code (DTC).
The collected data will be uploaded to server at Yamaha Motor Co., Ltd. by attaching a special Yamaha diagnostic tool to the vehicle, only when maintenance checks or service procedures are performed.

How will we use your data?
Yamaha use collected data from your vehicle, (1) to conduct adequate maintenance service including diagnostics, (2) to implement proper warranty claim judgement, (3) to conduct research and development of vehicle, (4) to provide and improve quality of products, features, and services, (5) to ensure our business purpose, and (6) to comply with legal obligations or lawful orders, and to establish or defend legal claims.

How we share your data?
We may share your data with: (i) our subsidiaries, affiliates, and business partners; (ii) dealers and distributors in your country or region, and (iii) contractors within the scope necessary to achieve the purpose of use described above.

How to contact us
If you have any questions or complaints regarding the processing of your Personal Data, you can contact us toll free at 1800 420 1600 or in writing to the following adress:

Consumer information

Back Office, India Yamaha Motor Pvt. Ltd., A-3, Surajpur Industrial Area, Noida-Dadri Road, Greater Noida, Gautam Budh Nagar, Uttar Pradesh-201306.

The SOLE PURPOSE of above provided contact information is TO RESPOND DATA PROCESSING INQUIRY AND OTHER KINDS OF INQUIRIES **WILL NOT BE RESPONDED**. Please provide the following information for the proper handling of your inquiry: **(1) Your Name; (2) Your Email Address; (3) Your Country of Residence; and (4) Your VIN.** We will use your personal information provided only for the purpose of supporting your data processing inquiry.

For other than India
This is a brief summary of how Yamaha (Yamaha Motor Co., Ltd., and the local subsidiaries) uses your data. For more details for Yamaha's use of your data, please see our Privacy Policy.
https://global.yamaha-motor.com/en/privacy/

What data we collect? and How we collect your data?
This vehicle collects three types of data through integrated Engine Control Units (ECU).:
(1) Vehicle Identification Number (VIN); (2) live data showing the performance of the vehicle such as engine/motor operating state, vehicle speed, mileage; and (3) other data showing the status of the vehicle such as diagnostic trouble code (DTC).
The collected data will be uploaded to server at Yamaha Motor Co., Ltd. by attaching a special Yamaha diagnostic tool to the vehicle, only when maintenance checks or service procedures are performed.

How will we use your data?
Yamaha use collected data from your vehicle, (1) to conduct adequate maintenance service including diagnostics, (2) to implement proper warranty claim judgement, (3) to conduct research and development of vehicle, (4) to provide and improve quality of products, features, and services, (5) to ensure our business purpose, and (6) to comply with requirements of laws and regulations.

How we share your data?
We may share your data with: (i) our subsidiaries, affiliates, and business partners; (ii) dealers and distributors in your country or region, and (iii) contractors within the scope necessary to achieve the purpose of use described above.

How to contact us
Any questions or complaints regarding the processing of your Personal Data can be submitted in writing to the local subsidiaries.
https://global.yamaha-motor.com/link/

The SOLE PURPOSE of above provided contact information is TO RESPOND DATA PROCESSING INQUIRY AND OTHER KINDS OF INQUIRIES **WILL NOT BE RESPONDED**. Please provide the following information for the proper handling of your inquiry: **(1) Your Name; (2) Your Email Address; (3) Your Country of Residence; and (4) Your VIN.** We will use your personal information provided only for the purpose of supporting your data processing inquiry.

Index

A

ABS 6-20
ABS warning light 6-3
Accessing the CCU QR code 5-4
Activating the Stop and Start System 4-2
Air filter element and check hose, cleaning 9-13

B

Battery 9-27
Brake and clutch levers, checking and lubricating 9-24
Brake and shift pedals, checking and lubricating 9-24
Brake fluid, changing 9-21
Brake fluid level, checking 9-19
Brake lever 6-19
Brake light switches 9-18
Brake pedal 6-20

C

Cables, checking and lubricating 9-23
Canister 9-9
Care 10-1
Catalytic converter 6-25
CCU (Communication Control Unit) 5-1
Centerstand and sidestand, checking and lubricating 9-25
Clutch lever 6-19
Clutch lever free play, adjusting 9-17

D

DC connectors 6-27
Diagnostic connector 12-2
Dimmer/Pass switch 6-17
Display 6-4
Display, main screen 6-5
Drive chain, cleaning and lubricating ... 9-22
Drive chain slack 9-21

E

Engine break-in 8-1
Engine idling speed 9-13
Engine oil and oil filter element 9-10
Engine serial number 12-1
Exhaust emission control system 6-25

F

Front and rear brake pads, checking ... 9-19
Front fork, checking 9-26
Fuel 6-23
Fuel consumption, tips for reducing 8-3
Fuel tank cap 6-22
Fuse, replacing 9-29

H

Handlebar switches 6-17
Hazard lights switch 6-18
Helmet holder 6-26
High beam indicator light 6-2
Horn switch 6-18

I

Identification numbers 12-1
Ignition circuit cut-off system 6-28
Indicator lights and warning light 6-2
Initial setup: Turn by Turn navigation 5-3
Initial setup: Yamaha Motorcycle Connect app 5-2

L

Labels, location 1-1

M

Main switch/steering lock 6-1
Maintenance and lubrication, periodic ... 9-3
Maintenance, emission control system 9-2
Malfunction indicator light (MIL) 6-2
Matte color, caution 10-1
Menu 6-8
Menu switches 6-18

N

Neutral indicator light 6-2

P

Panels, removing and installing 9-7
Parking 8-4
Part locations 3-1
Precautions when using the Stop and Start System 4-3

S

Safety information 2-1
Seat 6-25
Shifting 8-3
Shift pedal 6-19
Sidestand 6-27
SMG (Smart Motor Generator) 4-1
Spark plug, checking 9-8
Special features 4-1
Specifications 11-1
Starting the engine 8-2
Steering, checking 9-27
Stop and Start System 4-1
Stop and Start System indicator light 6-3
Stop and Start System operation 4-2
Stop and Start System switch 6-18
Stop and Start System troubleshooting 9-31
Stop/Run/Start switch 6-18
Storage 10-4

Swingarm pivots, lubricating 9-26
T
Throttle grip and cable, checking and lubricating 9-23
Throttle grip free play, adjusting 9-14
Tires 9-15
Tool kit 9-1
Traction control system 6-21
Troubleshooting 9-31
Troubleshooting chart 9-33
Turn signal indicator lights 6-2
Turn signal switch 6-17
U
Use, your vehicle data 12-3
V
Valve clearance 9-15
Vehicle identification number 12-1
Vehicle lights 9-30
W
Wheel bearings, checking 9-27
Wheel (front) 9-30
Wheel, rear 9-31
Wheels 9-17
Y
Yamalube 9-12

SERVICE & WARRANTY HANDBOOK

INTRODUCTION

India Yamaha Motor Pvt. Ltd. wish to take this opportunity to thank you for purchasing a Yamaha product. The advanced engineering and construction methods employed during both design and production of the YAMAHA product with the commitment to provide a high quality product is supported by a comprehensive after sales and warranty service of which we are equally proud.

This Service and warranty handbook will introduce the operating and maintenance requirements for the vehicle including free & paid service and warranty terms and condition. It is recommended that it is carefully read to ensure that the maximum performance and durability along with safe and satisfactory operation are obtained. The recommended routine maintenance servicing along with any running repairs that may be required should be entrusted to YAMAHA authorized dealer to ensure that only the latest methods and YAMAHA genuine parts are used for the continuous reliability, safety and performance of the vehicle. Should any question or query exist regarding any aspect of your YAMAHA vehicle please contact the nearest YAMAHA dealer who will be only too pleased to assist wherever possible.

TABLE OF CONTENTS

SERVICE AND WARRANTY GUIDELINE..... 1-1
Validity of warranty 1-1
Warranty on proprietary items 1-1

DETACHMENTS..... 2-1
Tenth paid service coupon..... 2-1
Ninth paid service coupon..... 2-2
Eighth paid service coupon..... 2-3
Seventh paid service coupon..... 2-4
Sixth paid service coupon 2-5
Fifth paid service coupon..... 2-6
Fourth free service coupon..... 2-7
Third free service coupon..... 2-8
Second free service coupon..... 2-9
First free service coupon..... 2-10

PRE-DELIVERY INSPECTION..... 3-1

INSTALLATION..... 4-1

SERVICE RECORD 5-1

BIKE & OWNER CARE KIT 6-1

GREEN BOOK..... 7-1
Government regulations 7-2
Action by India Yamaha Motor Pvt. Ltd..... 7-2
Guidelines to be followed by the owners/users of motorcycles 7-2
DO'S & DON'TS for the motorcycle 7-4
Procedure for measurement of 'CO' emission level 7-6
List of components impacting emission 7-7
Log sheets 7-8

ADDRESSES OF AREA OFFICES

FREE SERVICE & WARRANTY

Validity of warranty

This warranty coverage on the Motorcycle shall be valid only if the customer avails all Free and Paid Services from Authorized YAMAHA dealer as per Recommended Service Schedule and only genuine Spare parts must be used. The customer shall ensure that each service is availed within 120 days from the date of previous service or as per recommended service schedule which ever is earlier.

India Yamaha Motor Pvt. Ltd. (hereinafter referred to as YAMAHA) thank you for having purchased this YAMAHA motorcycle. In the unlikely event of your YAMAHA motorcycle requiring warranty service. So, please contact the nearest authorized dealer. We advice that you read this handbook carefully before you get in touch with our Authorized Dealer to avoid any inconvenience.

YAMAHA will replace or repair at its Authorized Dealership free of charge, those parts which may be found on examination to have manufacturing defect, within 2 years from the date of sale of Motorcycle or first 30,000 kilometers of its operation, whichever occurs first, to the purchaser. YAMAHA warrants the products to be free from manufacturing defects for a period of two years from the date of sale of the Motorcycle or first 30,000 kilometers of its operation, whichever occurs first. If during this period of warranty the Motorcycle proves to be defective due to material or workmanship, YAMAHA through its Authorized Dealers will repair the Motorcycle without charging the labour or parts value as per the terms and conditions mentioned below:

The claim for replacement or repair of part (s) shall be considered only when:

1. The Customer ensures that immediately upon occurrence of the defect he approach the nearest YAMAHA Authorized Dealer with the affected Motorcycle. The expenses if any, to bring the Motorcycle to YAMAHA'S Authorized Dealer shall be borne by the customer.
2. The Customer produces the Service & warranty handbook in original to enable YAMAHA'S Authorized Dealer to verify the Motorcycle details and servicing details. YAMAHA reserves the right to refuse warranty, if the Service & warranty handbook is not presented or if the information contained in is incomplete or tempered.

Warranty on proprietary items

Warranty claims in respect of proprietary items like Tires, Tubes, Battery, Spark Plug and Helmet are warranted by their respective manufacturers and shall be claimed on directly by the customer as per their warranty terms. YAMAHA and its Authorised Dealers will give all assistance in taking up such claims with the manufacturer of said items.

This warranty shall not be applicable to

1. Normal maintenance operations such as Engine tune-up, Decarbonising, Fuel System Cleaning, Wheels, Brakes and Clutch adjustments as well as any other normal adjustment.
2. Consumable (wear and tear) items, i.e. Brake Shoes, Fasteners/ Shims/ Washers, Gaskets and Rubber or Plastic Components, (other than tires & tubes) oil seals, Cables, electrical wiring and Electrical Items like Bulbs, filters, spark plugs, Drive Chain, Sprocket, Clutch plate, Race Bearing & Element Air Cleaner and wheel rim misalignment or bend.

FREE SERVICE & WARRANTY

3. Part(s) of the Motorcycle that have been subjected to misuse, accident, negligent treatment or which have been used in conjunction with parts and equipment not manufactured or recommended for use by YAMAHA such use prematurely affects the performance and reliability of the motorcycle.
4. Use of non-genuine parts, non-genuine oil and lubricants.
5. Parts of the Motorcycle getting rusty due to atmospheric effects because of Industrial Pollution.
6. Parts of Motorcycle that have been altered and modified or replaced in unauthorised manner and which in the sole judgement of YAMAHA affects its performance and reliability.
7. Motorcycle that has not been got serviced by YAMAHA'S Authorised Dealers as per the service schedule described in this hand book contains 4 Free Services, 6 Paid Service Coupons (attached in this book) or which has not been operated or maintained in accordance with the instructions mentioned in this Manual (especially during Break-in Period).
8. Motorcycle used for any competition or race and/or for attempting to set up any kind of record. YAMAHA undertakes no liability in the matter of any consequential loss or damage caused due to failure of the part(s).
9. For motorcycles which have been used for any commercial purposes & Loading such as taxi etc.
10. For normal phenomenon like noise, vibration, oil seepage, which do not affect the performance of the Motorcycle?
11. For maintenance repairs required due to misuse while driving or due to adulteration of oil, petrol or due to bad road conditions.
12. If any part of the vehicle is tampered / repaired by unauthorized persons/workshops etc.
13. For consumables like oil, grease etc. used during free services or used during warranty repairs.
14. If there is any damage due to modification or fitting of accessories other than the ones recommended by YAMAHA.
15. For claims made for any consequential damage due to any previous malfunction.
16. If there is any damaged caused due to usage of improper oil/grease, non genuine parts.
17. This warranty does not cover the risks like accidents, lightening, water, fire other acts of God, improper handling or any external cause beyond the control of YAMAHA.
18. This warranty does not affect the customer's statutory rights under applicable Indian laws, nor the consumer's rights against the Dealer arising from their sales/purchase contract.

This Warranty is the entire written warranty given by YAMAHA for the Motorcycle and no other person, including the Authorized Dealer or his agent or employee is authorised to extend or enlarge terms or this Warranty.

GAUTAM BUDH NAGAR (NOIDA) COURTS SHALL HAVE EXCLUSIVE JURISDICTION TO ENTERTAIN ANY DISPUTES ARISING OUT OR IN ANY WAY TOUCHING OR CONCERNING THIS WARRANTY POLICY.

TENTH PAID SERVICE COUPON

VALIDITY : 28000 KMS OR 1110 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

10

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

NINTH PAID SERVICE COUPON

VALIDITY : 25000 KMS OR 990 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

9

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

EIGHTH PAID SERVICE COUPON

VALIDITY : 22000 KMS OR 870 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

8

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

SEVENTH PAID SERVICE COUPON

VALIDITY : 19000 KMS OR 750 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

7

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :**
- All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
- Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

SIXTH PAID SERVICE COUPON

VALIDITY : 16000 KMS OR 630 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

6

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

FIFTH PAID SERVICE COUPON

VALIDITY : 13000 KMS OR 510 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the paid service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

5

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

NOT CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-3.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

FOURTH FREE SERVICE COUPON

VALIDITY : 10000 KMS OR 390 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

4

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

THIRD FREE SERVICE COUPON

VALIDITY : 7000 KMS OR 270 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

3

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :**
- All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
- Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

SECOND FREE SERVICE COUPON

VALIDITY : 4000 KMS OR 150 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

2

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE :** • All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
• Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

FIRST FREE SERVICE COUPON

VALIDITY : 1000 KMS OR 30 DAYS FROM THE DATE OF PURCHASE OF MOTORCYCLE WHICHEVER IS EARLIER.

COUPON NO.	

This coupon entitles the owner to the free service as per maintenance chart mentioned in Owner's manual and is mandatory for ***eligibility of warranty benefits.***

1

FRAME NO. :

ENGINE NO. :

CUSTOMER MOBILE NO. :

DATE OF SALE :

JOB CARD NO. :

SERVICE DATE :

KILOMETERS :

SELLING DLR'S STAMP SIGN & CODE

SERVICING MAIN DLR'S/ YBC/ BRANCH/ YAMAHA POINT'S STAMP SIGN & CODE

COUPON PUNCHING STAMP SIGN & CODE

CLAIMABLE

CUSTOMER'S CERTIFICATION

The jobs as per periodic maintenance chart in Owner's manual have been executed to my entire satisfaction.

Signature : _____

Name : _____

***NOTE** :
- All information of this coupon is mandatory to fill up before submission to Yamaha for reimbursement.
- Service warranty handbook should be retained by Customer and to be shown to dealer staff at the time of Service only.

SERVICING DEALER TO ENSURE THAT SERVICE RECORD IS DULY ENTERED ON PAGE 5-2.

JOBS TO BE CARRIED OUT DURING SERVICE

INSPECTION CHECK POINT:

1. Clean Spark Plug and reset the gap if necessary.
2. Check Valve clearance, adjust if necessary.
3. Set the idle RPM, as recommended.
4. Check for any cracks or damage on Fuel Hose.
5. Replace Air Filter Element as recommended.
6. Check operation of Front, Rear Brakes & Level of brake fluid in reservoir. (if applicable).
7. For proper Clutch functioning, check alignment marks on Crank Case L.H, Adjust if necessary. (if applicable).
8. Check for Wheel Runout, repair if necessary.
9. Check Wheel Bearings (Front & Rear) for looseness, damage.
10. Check for Steering looseness / tightness, adjust if required.
11. Check Front Fork and Rear Shock Absorber operation / oil leakages, repair if required.
12. Check Chain Slackness, alignment Adjust if necessary, Clean and lubricate as recommended. (if applicable).
13. Check all LED, Bulb and electrical operations.
14. Check and correct air pressure in Front and Rear Tires.
15. Check exhaust emission for 'CO' level at idling, correct if required.
16. Check and lubricate all the Pivot points / Side Stand.
17. Check Front and Rear Brake Switch.
18. Check and lubricate the Clutch and Throttle Cable end.
19. Check sidestand switch operation.

PARTS/OIL TO BE REPLACE:

PART NAME :

Engine Oil :
YAMALUBE SAE10W-40,
API service SL type,
JASO standard MA



IMPORTANT:

- **Note down the customer's observations.**
- **Wash Motorcycle and blow it dry with compressed air.**
- **Clean and polish Motorcycle after taking ROAD TEST.**
- **Tighten all Nuts and Bolts.**

PRE-DELIVERY INSPECTION REPORT

(To be filled in by the Dealer on receipt of the Motorcycle from Yamaha)

No.	

Frame No.	Engine No.	Odometer Reading	Date of Inspection	Date of Sale

1. Check

a. Check for any missing item(s), scratches in painted/plated part(s), saddle or other external visual damages and take corrective action.
Check each of the following items individually and mention the corrective action (as per the recommended specifications) in the boxes provided.

☑ Found OK S Set right R Replaced C Cleaned L Lubricated

b. Check engine oil for leakage ☐
c. Check engine oil level and correct (if necessary) ☐
d. Wash the motorcycle and dry. (use Yamalube shampoo only) ☐
e. Check brake fluid level and correct (if necessary) ☐

2. Check for looseness and movement of

a. Fuel tank mounting bolt ☐
b. Saddle lock ☐
c. Tail and side covers ☐
d. Rear wheel axle nut ☐
e. Front wheel axle nut ☐
f. Steering movement ☐
g. Check for front fork movement ☐
h. Rear shock absorber ☐

PRE-DELIVERY INSPECTION REPORT

3. Free play and adjustment

a. Clutch lever free play (10-15 mm) ☐
b. Throttle free play (3-5 mm) ☐
c. Drive chain slackness (30-40 mm) ☐

4. Lock operation

a. Ignition ☐
b. Steering ☐
c. Fuel tank ☐
d. Saddle ☐

5. Wheel & Tire

Tire pressure :

Front 200 kPa (2.00 kgf/cm^2, 29 psi) ☐
Rear 225 kPa (2.25 kgf/cm^2, 33 psi) ☐

Radial wheel runout limit - 1.0 mm ☐
Lateral wheel runout limit - 0.5 mm ☐

6. Engine

Adjust engine idling speed (if needed) 1200-1600 r/min ☐

7. Electrical

a. Ignition switch operation ☐
b. Clutch switch operation ☐
c. Brake switch operation ☐
d. Sidestand switch operation ☐

e. Left handlebar switch operation
- Pass/Dimmer switch ☐
- Turn signal switch ☐
- Horn switch ☐
- Menu switches ☐
- Hazard lights switch ☐

f. Right handlebar switch operation
- Stop and start system switch ☐
- Stop/run/start switch ☐

g. Meter Panel lights/LEDs ☐

h. Battery
- Voltage ☐
- Fuse ☐

8. Road Test

a. Starting ☐
b. Gear shifting operation ☐
c. Clutch operation ☐
d. Application of brakes (front and rear) ☐
e Speedometer / Odometer operation ☐
f. Fuel meter / Trip meter operation ☐
g. Engine abnormal noise/vibration ☐
h. Check ABS and TCS function ☐
i. Check no Malfunction indicator light (MIL) glow/flashes in meter ☐

9. Polish the vehicle

(Use only Yamalube polish) Do not apply polish directly on painted surface. ☐

EXPLAINED BY	
SIGNATURE _____ NAME	
MAIN SELLING DLR'S STAMP, SIGN & CODE	

CUSTOMER'S SIGN.

Procedures to be explained to the customer on delivery of the Motorcycle by the Dealer's Representative

1. Operation of all the locks (Ignition, Steering, Fuel tank cap & Saddle).
2. Fuel meter display operation in all the condition.
3. Operation of throttle.
4. Operation of handlebar switches, their functions and pass beam.
5. Operation of Start switch / engine stop switch & its functioning.
6. Disadvantages of riding on half clutch (Never ride with clutch pressed).
7. Gear shifting pattern.
8. Tire air pressure : **Front** - 200 Kpa (29 Psi) **Rear** - 225 Kpa (33Psi)
9. Never give sudden acceleration, always accelerate gradually.
10. Simultaneous use of front and rear brakes.
11. Checking of brake fluid at regular intervals.
12. Never ride with your foot on rear brake pedal.
13. Sidestand switch operation.
14. Use of helmet holder.
15. Function of all the multifunction display on meter panel.

16. Never keep the ignition switch on when vehicle is not in use.
17. Check the operation of odometer, trip meter and fuel meter.
18. Location of storage and tool kit compartments and their use.
19. Procedure of opening and closing of side covers.
20. Correct drive chain slackness (30-40 mm).
21. Correct type of spark plug and spark plug gap.
22. Engine oil level checking and explaining the importance of **replacing the engine oil in every service Always use YAMALUBE SAE 10W-40, API service SL type, JASO standard MA.**
23. Break-in period/ preventive maintenance schedule instructions.
24. Information of emission and safety norms.
25. Importance of first service at 1000 kms and schedule of free services.
26. Warranty terms and conditions.
27. Function of Yamaha motorcycle connect app. (Music, Weather, Navigation etc.

IMPORTANT

EXPLAINED BY	**CUSTOMER'S SIGN.**
SIGNATURE : _____ NAME :	
MAIN SELLING DLR'S STAMP, SIGN & CODE	

SERVICE RECORD

Customer ID	

No.	

CUSTOMER'S NAME & ADDRESS: _____

_____

TELEPHONE / MOBILE / E-MAIL: _____

MOTORCYCLE IDENTIFICATION

FRAME NO. : | | | | | | | | | | | | | | | | |

ENGINE NO. : | | | | | | | | | | | |

DATE OF SALE : |

SELLING DLR'S
STAMP, SIGN & CODE

SERVICE RECORD

Service / warranty record

FREE SERVICE RECORD

S.NO.	VALIDITY*		SERVICED AT	JOB DETAILS/ CARD NO	SERVICING DEALER'S NAME & ADDRESS
	KMS OR DAY	DATE	KMS / ON DATE		
1	1000 OR 30				
2	4000 OR 150				
3	7000 OR 270				
4	10000 OR 390				

*Kilometers or days from date of purchase whichever comes first.

PAID SERVICE RECORD

S.NO.	VALIDITY*		SERVICED AT	JOB DETAILS/ CARD NO	SERVICING DEALER'S NAME & ADDRESS
	KMS OR DAY	DATE	KMS / ON DATE		
5	13000 OR 510				
6	16000 OR 630				
7	19000 OR 750				
8	22000 OR 870				
9	25000 OR 990				
10	28000 OR 1110				

*Kilometers or days from date of purchase whichever comes first.

SERVICE RECORD

Important

(I) Cost of oil and consumables for the free services will be chargeable at actual and to be borne by the customer.

(ii) Please ensure that the servicing dealer column is duly stamped & signed by the servicing dealer.

(iii) For the validity of “Warranty” benefits, it is mandatory that all services are availed by the customer as per the recommended schedule, as given in the Service & warranty handbook.

(iv) Please ensure that each service is availed as per the recommended service schedule, kilometers or days from date of purchase whichever comes first.

BIKE & OWNER CARE KIT - BENEFIT TO CUSTOMER

	Attachments & Their Benefits
	**Tool Kit :** **Benefit -** Containing tools for minor adjustments
	**Rear View Mirror :** **Benefit -** Legal part enhancing your safety
	**Owner's manual with Service and warranty handbook :** **Benefit -** • Introduction of product and operations • Warranty and service schedule explanation

	Attachments & Their Benefits
	**First Aid Kit :** *Applicable for IND only **Benefit -** Containing necessary first aid treatment

Note **:** Before every ride, ensure your bike is fully equipped with Bike & customer care kit.

BIKE & OWNER CARE KIT - NEW VEHICLE

S. NO.	Items	Availability
1	Tool kit	√
2	Rear view mirror	√
3	Owner's manual & Service and warranty handbook	√
4	First aid kit	√

All the items mentioned above are received free of charge with my Motorcycle.

Frame number of the vehicle	Delivering person's signature	Customer's signature

Note **: This items mentioned above are supplied by YAMAHA free of charge with each vehicle, YAMAHA can change / modify the items in the above kit without prior notice.**

GREEN BOOK

LET US KEEP OUR ENVIRONMENT CLEAN

(PLEASE READ THIS BOOK CAREFULLY)

IMPORTANT GUIDELINES

1. Government regulations

1.1 Exhaust emission has harmful effect on our environment / public health.

1.2 To safeguard environment from getting polluted, Govt. of India has enforced specific regulations to control Automobile exhaust emission.

1.3 The Center Motor Vehicle Rule (CMVR) states that for **Motorcycles, Carbon monoxide emission, during idling shall always be less than 0.5% (By Volume).**

1.4 **Non compliance with above standard is a punishable offence.**

2. Action by India Yamaha Motor Pvt. Ltd.

2.1 **YAMAHA** as a manufacturer ensures that all Motorcycles leaving the factory meet the exhaust emission norms as specified by CMVR.

2.2 Special note has been included in the "Owner's Manual" for reference and attention by the Owner / User.

2.3 Vehicle has a factory tuned throttle body, which is optimally adjusted to meet the requirement of exhaust emission. This adjustment not be tampered as it may cause variation in pre-controlled "CO" emission levels. Subsequently, it becomes very important that it should always be within the recommended limit, when checked by a properly calibrated "CO" measuring equipment.

3. Guidelines to be followed by the owners/users of motorcycles.

3.1 Please ensure that the "CO" emission is got checked by authorised agencies registered with the appropriate authorities.

3.2 Please ensure that the "CO" is within specified limits of 0.5% (by volume). If it is not so, it should be got reset by **YAMAHA** Authorised dealer.

3.3 Do not tamper with the throttle body settings done by the Factory/**YAMAHA** Authorised dealer.

3.4 Please maintain the log sheet provided in the green book.

3.5 **Proper Installation :** The Owner/User must clearly understand, from the dealer, all the points related to proper installation of the motorcycle as described in the Service and warranty hand book.

If the owner of the Vehicle does not comply with above legal requirement, the Vehicle may be deregistered or penalty may be imposed by the authorities.

The following points may be checked and suitable corrective action should be taken if required, to ensure emission levels to remain within acceptable limits.

1. Clean air filter element periodically and replace it when required.
2. Clean, inspect and adjust spark plug gap periodically.
3. Use only recommended spark plug. Replace it as per recommendations.
4. Use only recommended grade (SL Type) of genuine engine oil of superior quality.
5. Replace oil filter as per recommendations.
6. Get your vehicle serviced and tuned periodically as per recommended schedule.
7. Use unadulterated petrol.

As per CMVR rules certain safety norms have been mandated for the two wheelers to prevent accidents. The following items have been provided in the vehicle for your safety.

1. Horn
2. Rear view mirror
3. Efficient front & rear brakes (To be applied simultaneously)
4. Grip for pillion rider
5. Head Light / Tail Light
6. Helmet holder
7. Indicators

It is recommended to use a Protective head gear (Helmet) conforming to specification of B.I.S. (Bureau of Indian Standards).

In the interest of your own safety you are requested to always keep the above items (and the vehicle in general) in good working condition to avoid any accident.

DO'S AND DON'TS FOR THE MOTORCYCLE

DO'S (✓)

✓ 1 Always use genuine 'spare parts' purchased from **YAMAHA** Authorised dealers.

✓ 2 Always use only genuine oils.

- YAMALUBE SAE10W-40, API service SL type, JASO standard MA

✓ 3 Always keep your engine well tuned. Save environment and also improve fuel efficiency.

✓ 4
- ALWAYS GET YOUR MOTORCYCLE REPAIRED AND MAINTAINED ONLY AT **YAMAHA** AUTHORISED DEALER.
- **YAMAH**A serves you through a wide network of Authorised dealers.

✓ 5 Check the following at every scheduled service:-

a)	Spark plug	:	Check / Reset gap / Replace as per the recommendations in the Owner's Manual.
b)	Air filter	:	Replace every 16000 kms or as per the environment conditions.
c)	Piston / Rings / Cylinder	:	Check / Clean / Replace if necessary.
d)	Exhaust system	:	Check / Replace if necessary.
e)	Valve timing	:	Check / Adjust according to maintenance schedule.
f)	Compression pressure	:	Check / Diagnose.

- ✓ 6 If misfiring, get your Motorcycle diagnosed & attended immediately without running even for a KM.
- ✓ 7 Get Motorcycle maintained regularly as per details and schedule given in Service & warranty hand book.
- ✓ 8 Get emission of your Motorcycle inspected at least once every 3 months.
- ✓ 9 Please follow good driving habits in varying traffic conditions.
- ✓ 10 Switch "OFF" the engine while waiting at signal point.

DON'TS (×)

- × 1. Don't overload/overspeed your motorcycle.
- × 2. Don't alter or modify your Motorcycle.
- × 3. Never drive with Ignition "OFF" while moving down a slope.
- × 4. Don't turn off the engine or interrupt the ignition when the transmission is in gear & the Motorcycle is in motion.
- × 5. Don't idle the engine for a prolonged period.
- × 6. Don't use Non-Genuine parts.
- × 7. Don't buy adulterated petrol / oil.

‘CO’ EMISSION LEVEL MEASUREMENT

4. Procedure for measurement of “CO” emission level

4.1 **IMPORTANT :** “CO” measurement equipment must be duly calibrated.

4.2 Check for “NO LEAKAGE” from exhaust system.

4.3 All electricals should be in OFF position.

4.4 Set the idle speed of the engine in warmed up condition of motorcycle as specified.

IDLE RPM : 1200 - 1600 RPM

4.5 Insert the sampling probe of the exhaust gas analyser inside the tailpipe of muffler.

4.6
- If the reading is within specified limits then it is acceptable.
- If the reading exceeds the norm of 0.5% (by volume) have it adjusted by **YAMAHA** Authorised dealer.

4.7 **YAMAHA** serve you through an extensive network of
- Yamaha authorised dealers
- Yamaha bike corners
- Yamaha points

5. List of components impacting “emission”

a. Air filter
b. Throttle body
c. Cylinder
d. Piston ring & piston
e. Cylinder head
f. Rocker arm
g. Valves
h. Cam shaft
i. Valve seals
j. Timing chain
k. Ignition coil, SGCU, SMG
l. Spark plug
m. Exhaust system
n. Canister
o. Rollover valve

LOG SHEET (To be Filled in by Owner/User)

Customer Name :

Address :

Selling Dealer :

Date of Purchase :

Vehicle Reg. No. :

S. No.	Date	KM Reading	Job card no.	Service (Free/Paid)	Parts Replaced	Oil Fill Qty.	CO Level (Date/Value)	Serv. Dealer

We promise to give hassle free service all the time. Please give us your valuable feedback, suggestion or complaint on :
Contact no. : 1800-420-1600 (Toll free 8 am to 5 pm) e-mail us : yes@yamaha-motor-india.com. Enjoy the ride with YAMAHA !

This Owner's manual is also available online at the Yamaha Owner's Manual Library.
https://library.ymcapps.net/library/om/app/index.html?baseCode=6C97&langId=02



SCAN FOR
PARTS & ACCESSORIES CATALOGUE

ALWAYS USE
YAMAHA GENUINE SPARE PARTS

YAMAHA
GENUINE
Parts & Accessories

BST-F819V-E1
PRINTED IN INDIA
YAMAHA
1Y376(OM-01)1940-07-26-E